

Type 01T with Terminal Block

VFR2000 Series


- Remove junction cover of manifold, exposing terminal block attached to the manifold block. Lead wires from solenoid valve are connected with the terminals on upper side of terminal block. (On the terminal block, lead wire is connected with both A and B sides of solenoid valve in accordance with the corresponding markings A and B on the block.)

Connect each lead wire of power side corresponding to respective solenoid valve on the lower terminal block.

Terminal block wiring specifications is in accordance with COM.

Model	Terminal block marking		
	A -	B +	B -
VFR2100	A side	COM	
VFR2200	A side	COM	B side
VFR ³ ₄ ⁰⁰ ₅	A side	COM	B side

- Applicable terminal: 1.25-3, 1.25-3S, 1.25Y-3N, 1.25Y-3S
- Although "A-", "B+" and "B-" marks are indicated on the terminal block, VFR2000 can be used as either "+COM" or "-COM".

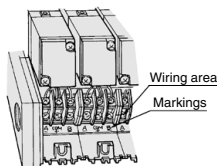

VFR4000 Series

Model	Terminal block marking		
	A -	B +	B -
VFR4100	A side	COM	
VFR4200	A side	COM	B side
VFR ³ ₄ ⁰⁰ ₅	A side	COM	B side

- Applicable terminal: 1.25-3.5M, 1.25Y-3L, 1.25-3M
- Although "A-", "B+" and "B-" marks are indicated on the terminal block, VFR4000 can be used as either "+COM" or "-COM".

VFR5000 Series

Model	Terminal block marking		
	A -	B +	B -
VFR5100	A side	COM	
VFR5200	A side	COM	B side
VFR ³ ₄ ⁰⁰ ₅	A side	COM	B side

- Applicable terminal: 1.25-3.5M, 1.25Y-3L, 1.25-3M
- Although "A-", "B+" and "B-" marks are indicated on the terminal block, VFR5000 can be used as either "+COM" or "-COM".

VFR3000 Series

Model	Terminal block marking		
	A -	COM +	B -
VFR3100	A side	COM	
VFR3200	A side	COM	B side
VFR ³ ₄ ⁰⁰ ₅	A side	COM	B side

- Applicable terminal: 1.25-3.5M, 1.25Y-3L, 1.25-3M
- Although "A-", "COM+" and "B-" marks are indicated on the terminal block, VFR3000 can be used as either "+COM" or "-COM".