
Precision Regulator

IR1000-A/2000-A/3000-A Series

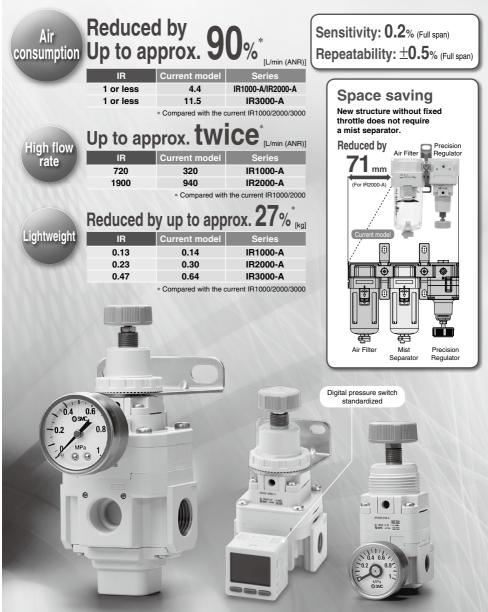





Reduction in air consumption

Air consumption is reduced with a new original structure.

With this new original structure, running costs are reduced.

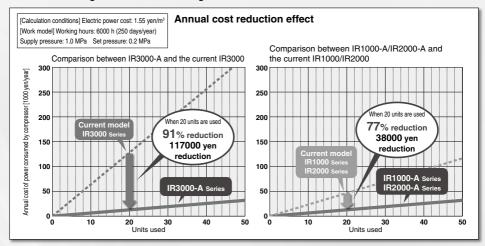


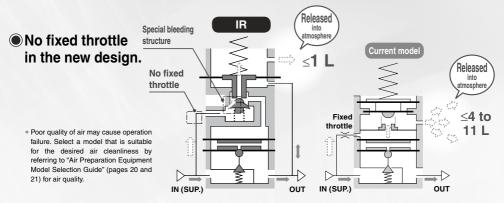

Flow rate: Up to approx. twice


(Compared to the) [L/min(ANR)]	
IR	Current model	Series
720	320	IR1000-A
1900	940	IR2000-A

Supply pressure: 0.7 MPa

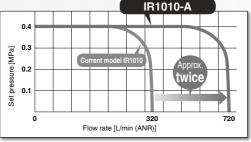


Supply pressure: 0.7 MPa



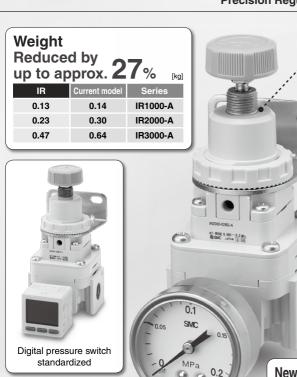


Hexagon panel nut mounting * Interchangeable with the current SMC product

Hexagon panel nut

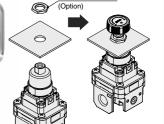


Sensitivity: 0.2% (Full span) Repeatability: ±0.5% (Full span)

 
Mounting is interchangeable with the current SMC model. New IR can be used between a cylinder and solenoid valve.




Note) The set pressure may vary depending on the elapsed time and change in ambient temperature after pressure setting. If the setting value varies, adjust the pressure with the knob.

Exhaust (EXH) directions can be selected. (IR3000-A series) Bottom and front exhaust added.

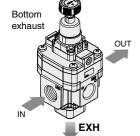


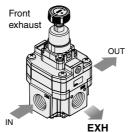



Pressure gauge

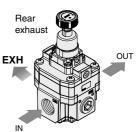



Application Examples

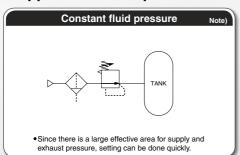


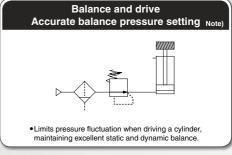


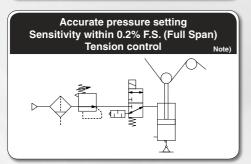


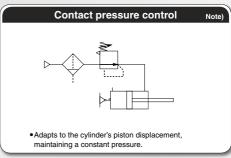


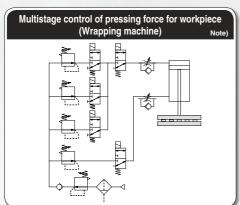

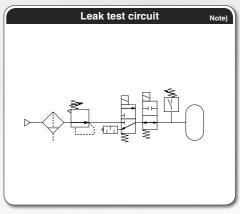

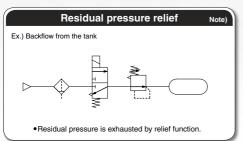

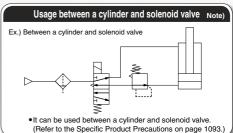

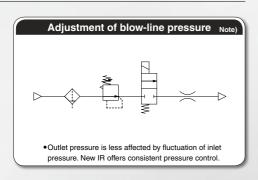

Note) The set pressure may vary depending on the elapsed time and change in ambient temperature after pressure setting. If the setting value varies, adjust the pressure with the knob.



Series Variations

		Series	Model	Set pressure range (MPa)	Port size
	IR1000-A	7	IR1000-A	0.005 to 0.2	
		G Pro	IR1010-A	0.01 to 0.4	1/8
(qo		10010	IR1020-A	0.01 to 0.8	
Basic Type (Knob)	IR2000-A		IR2000-A	0.005 to 0.2	
Тур		G WELD CO	IR2010-A	0.01 to 0.4	1/4
Basid			IR2020-A	0.01 to 0.8	
	IR3000-A		IR3000-A	0.01 to 0.2	
		Wash .	IR3010-A	0.01 to 0.4	1/4, 3/8, 1/2
		6	IR3020-A	0.01 to 0.8	



Basic type (Knob)

Standard Specifications

	Basic type (Knob)				
Model	IR10□0-A	IR20□0-A	IR30□0-A		
Fluid	Air				
Proof pressure		1.5 MPa			
Max. supply pressure		1.0 MPa			
Min. supply pressure Note 1)	Set pressure	+ 0.05 MPa	Set pressure + 0.1 MPa		
	IR1000-A: 0.005 to 0.2 MPa	IR2000-A: 0.005 to 0.2 MPa	IR3000-A: 0.01 to 0.2 MPa		
Set pressure range	IR1010-A: 0.01 to 0.4 MPa	IR2010-A: 0.01 to 0.4 MPa	IR3010-A: 0.01 to 0.4 MPa		
	IR1020-A: 0.01 to 0.8 MPa	IR2020-A: 0.01 to 0.8 MPa	IR3020-A: 0.01 to 0.8 MPa		
Sensitivity	Within 0.2% of full span				
Repeatability Note 2)	Within ±0.5% of full span				
Air consumption Note 3)		1 L/min (ANR) or less			
Port size	1/8	1/4	1/4, 3/8, 1/2		
Pressure gauge port		1/8 (2 locations)			
Ambient and fluid temperature Note 4)	−5 to 60°C (No freezing)				
Weight (kg) Note 5)	0.13	0.23	0.47		

Note 1) When there is no flow rate on the outlet. (Refer to Operation (3) on page 1093.)

Note 2) Other characteristics such as aging deterioration and temperature characteristics are not included.

Note 3) Measuring conditions: supply pressure 1.0 MPa, set pressure 0.2 MPa

Note 4) -5 to 50°C for the products with the digital pressure switch Note 5) Without accessories

Accessories (Option)/Part No.

Description		IR10□0-A	IR20□0-A	IR30□0-A	
Bracket as	Bracket assembly Note 1)		IR20P-501AS	IR30P-501AS	
Hexagon panel nut		IR10P-600S	IR20P-600S	IR20P-600S	
Round type	0.2 MPa setting	G33-2-□01	G43-2-□01	G43-2-□01	
pressure	0.4 MPa setting	G33-4-□01	G43-4-□01	G43-4-□01	
gauge Note 2)	0.8 MPa setting	G33-10-□01	G43-10-□01	G43-10-□01	
	NPN 1 output	15	SE20-N-M-□01-	L	
Digital pressure	PNP 1 output	ISE20-P-M-□01-L			
switch Note 3)	NPN 2 outputs/ Voltage output	ISE20A-R-M-□01-J			
	NPN 2 outputs/	IS	E20A-S-M-□01	-J	

Note 1) This is an assembly of the bracket and set nut.

Note 2) ☐ in part numbers for a round type pressure gauge indicates a type of connection thread. No indication is necessary for R; however. indicate N for NPT.

> A 1.0 MPa pressure gauge is fitted for 0.8 MPa setting. Please contact SMC regarding the supply of pressure gauge with psi unit specifications.

Note 3) ☐ in part numbers for a digital pressure switch indicates a type of connection thread. No indication is necessary for R; however, indicate N for NPT. For details on handling digital pressure switch and specifications, refer to the Web Catalog.
Please contact SMC regarding the supply of digital pressure switch with unit conversion function.


Modular Products and Accessories

Applicable products	Applicable size				
and accessories	IR1000-A series	IR2000-A series	IR3000-A series		
Filter	AF20-A	AF30-A	AF40-A		
Spacer	Y200-A	Y300-A	Y400-A		
Spacer with bracket	Y200T-A	Y300T-A	Y400T-A		

Refer to pages 683 and 686 for details of the modular applicable products and accessories. The former modular and mounting brackets can be used.



 How to Order



- Option/Semi-standard: Select one each for a to e.
- Option/Semi-standard symbol: When more than one specification is required, indicate in alphanumeric order.



Made to Order (Refer to page 1091)

Symbol	Specifications/Content
10-	Clean series
25A-	Secondary battery compatible
-X1155	Fluororubber specification
-X1	Non-grease specifications
IRM□-	Manifold specifications

							•	Manifold spe	ecifications
	_	_		Symbol	Description			Body size	
	3,				1		2	3	
				_	0.005 to 0.2 MPa	•		•	_
				0	0.01 to 0.2 MPa				•
2	8	Set pressure range		1	0.01 to 0.4 MPa	•		•	•
				2	0.01 to 0.8 MPa			•	•
				+					
				0	Bottom exhaust	•	1	•	•
8		Exha	aust direction	1	Front exhaust	_		_	•
_				2	Rear exhaust	_		_	•
				+					
				Nil	Rc	•		•	•
4		Pipe	thread type	N	NPT	•		•	•
				F	G	•		•	•
				+					
				01	1/8	•		_	_
6			Port size	02	1/4	_		•	•
9	03			3/8	_		_	•	
				1/2	_		_	•	
	_	_		+					
				Nil	Without mounting option	•	1	•	•
		а	Mounting	B Note 2)	With bracket	•	1	•	•
	=			Н	With hexagon panel nut (for panel mount)		1	•	•
	Option Note 1)			+					1
6	Z L		Pressure gauge	Nil	Without pressure gauge	•		•	•
	읉			G	Round type pressure gauge	•		•	•
	ŏ	b		EA	NPN open collector 1 output	_		•	•
			With digital	EB	PNP open collector 1 output		1	•	•
			pressure switch		NPN open collector 2 outputs + Analog voltage output	•		•	•
				ED	NPN open collector 2 outputs + Analog current output			•	
Т				+ Nil	Flow direction: Left to right	_		•	
		С	Flow direction	R	Flow direction: Left to right Flow direction: Right to left			-	_
	9			h +	Flow direction. Flight to left				
	dail			Nil	Upward				
0	Semi-standard	d	Knob	V	Downward				
•	9			+	Downwaru				
	em			Nil	Name plate and pressure gauge in imperial units: MPa	•		•	•
	S	е	Pressure unit Note 3)		Name plate and pressure gauge in imperial units: MFa Name plate and pressure gauge in imperial units: psi				
		e	riessure utili (1000 0)	ZA	Digital pressure switch: With unit conversion function				
				LA.	Digital pressure switch. With unit conversion function				

Note 1) Options are shipped together with the product, but not assembled. B and H cannot be selected at the same time. The current bracket cannot be used for this product. Note 2) Assembly of a bracket and set nuts.

Note 3) See pressure unit table below.

Note 3) Se	Note 3) See pressure unit table below.					
	Pipe thread	Name plate	Pressure gauge	in imperial units	Sales Note 6)	1
	type	in imperial units	G	EA, EB, EC, ED	Sales (4016 0)	l
	Rc				lanan	1
Nil	NPT	MPa	MPa	Fixed SI unit	Japan, Overseas	l
	G				Overseas	
	Rc	_	_	_		l
Z Note 4)	NPT	psi	psi	With unit conversion function (Initial value psi)	Only overseas	
	G	_	_	_		l
	Rc			With unit conversion		l
ZA Note 5)	NPT	MPa	_	function	Only overseas	l
	G			lanction		ı


Note 4) For pipe thread type: NPT


Note 5) For options: EA, EB, EC, ED

Note 6) According to the new Measurement Law, only the SI unit type is provided for use in Japan.


IR1000-A Series


* The data shown below are representative values, and are not guaranteed.

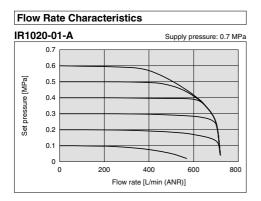


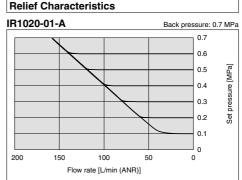

Pressure Characteristics

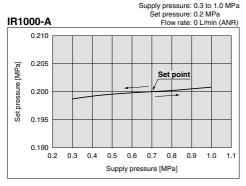


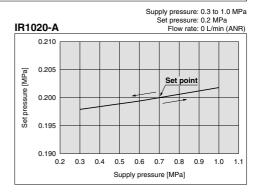


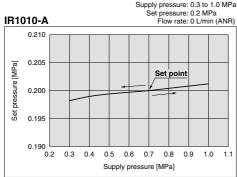


IR2000-A Series


* The data shown below are representative values, and are not guaranteed.

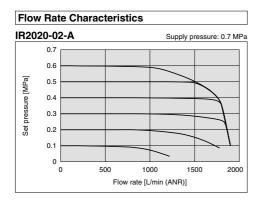


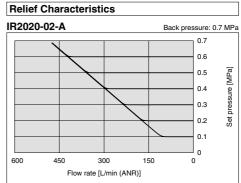

Pressure Characteristics

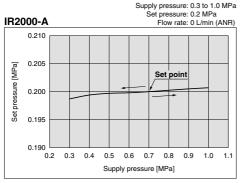

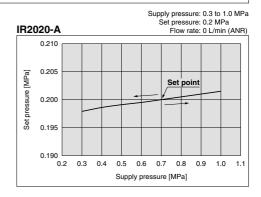


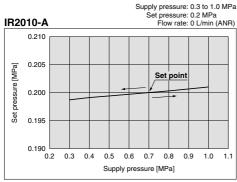


SMC


IR3000-A Series


* The data shown below are representative values, and are not guaranteed.

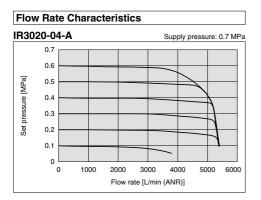


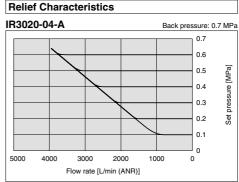

Pressure Characteristics

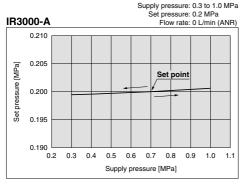


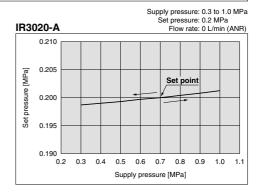

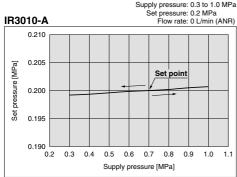

Construction

Basic type (Knob): IR20 □ 0-A

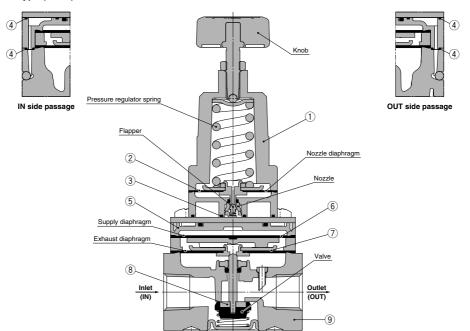

Working principle

When the knob is rotated, the flapper is pushed through the spring, and a gap is generated between the nozzle and flapper. The supply pressure flows to the inlet passes through the path between the nozzle and flapper and acts on the supply diaphragm as nozzle back pressure. The force generated by the diaphragm pushes down the valve, and the supply pressure flows to the outlet. The discharged air pressure acts on the exhaust diaphragm, and counteracts against the force generated by the supply diaphragm. The air pressure acts on the nozzle diaphragm at the same time, and counteracts against the compression force of the spring to adjust the set pressure. When the set pressure increases too much, the nozzle diaphragm is pushed up, and a gap is generated between the flapper and nozzle diaphragm after the flapper is closed. The balance of the supply diaphragm and exhaust diaphragm is lost when the nozzle back pressure flows into the atmosphere. The exhaust valve is open after the valve is closed, and excess pressure on the outlet is released to the air. Due to this pilot mechanism, fine pressure variations are detected and precise pressure adjustment is possible.

Component Parts

No.	Description	Material			
INO.	Description	IR1000-A	IR2000-A	IR3000-A	
1	Bonnet	Aluminum die-casted			
2	Nozzle diaphragm assembly	Aluminum, Weather resistant NBR			
3	Seal	HNBR			
4	Seal	NBR			
5	Diaphragm spacer	Polyacetal			
6	Supply diaphragm	Weather resistant NBR —			
7	Exhaust diaphragm assembly	Steel, Aluminum, Weather resistant NBR Aluminum, Weather resistant NBR, HNE			
8	Valve assembly	Stainless steel, Aluminum, HNBR Aluminum, HNBR			
9	Body		Aluminum die-casted		




Construction

Basic type (Knob): IR10□0-A



IN side passage

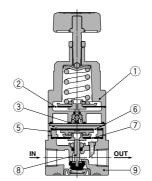




OUT side passage

Basic type (Knob): IR30 □ 0-A



IN side passage

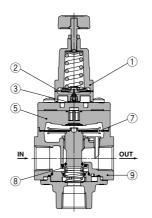




OUT side passage

Basic type (Knob): IR30□2-A



IN side passage

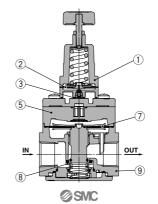




OUT side passage

Dimensions

 
Basic type (Knob): IR10□0-□01□-A







hexagon panel nut



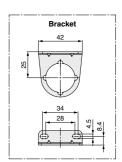


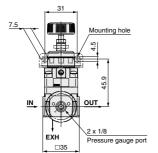


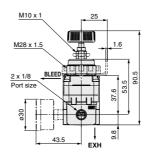

When connecting to the EXH port, contact your SMC sales representative separately.

With digital pressure switch: IR10□0-□01□E□-A

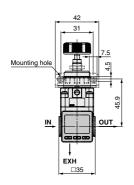

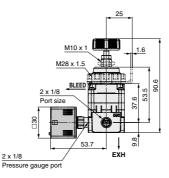

Dimensions Basic type (Knob): IR20□0-□02□-A Bracket Mounting hole for Bracket hexagon panel nut (Option) Pressure gauge (Option) Panel ATTA 32 9.5 M12 x 1 Mounting hole M28 x 1.5 2 x 1/4 63 45.6

60.5

When connecting to the EXH port, contact your SMC sales representative separately.

EXH


With digital pressure switch: IR20□0-□02□E□-A

EXH

OUT


2 x 1/8

Pressure gauge port

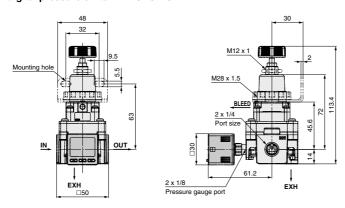

Dimensions

Basic type (Knob): IR30□0-□0□□-A

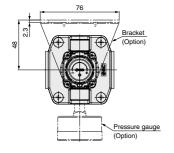



53








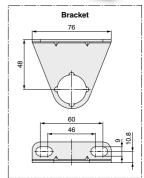

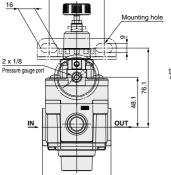


EXH

□66

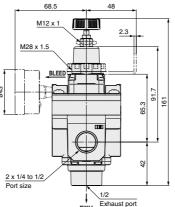


EXH

With digital pressure switch: IR30□0-□0□□E□-A

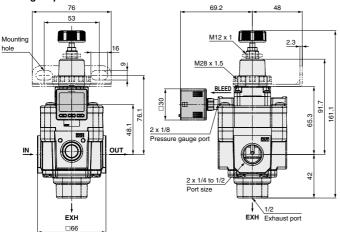


Dimensions

Basic type (Knob): IR30□2-□0□□-A

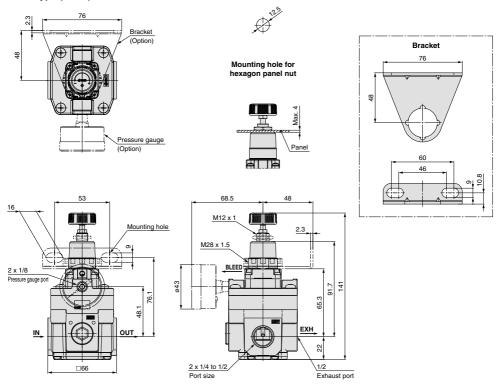

With digital pressure switch: IR30□1-□0□□E□-A

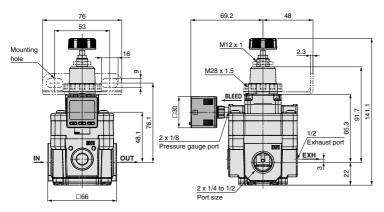

Made to Order





Grease Fluorine grease 2 Secondary Battery Compatible 25A − IR □ 0 □ 0 − □ □ □ − A Secondary battery compatible Specifications

Specifications

 Parts material
 Material mainly composed of copper or zinc is not used.

 Parts surface treatment
 Zinc chromate or copper-based plating is not used.

 Grease
 Grease compatible with low dew point

Note 1) Electroless nickel plating is used.

Note 2) Combinations with the pressure gauge are not available.

3 Fluororubber Specification

Fluororubber is used for rubber seal materials



specification

4 Non-grease Specifications


IR ___0 __0 - _____ - A - <u>X1</u>

Non-grease specifications

Note 1) Assembly is performed in a general assembly environment.

Note 2) Parts are not washed.

Note 3) Fluorine grease is used on some of the wetted parts (sliding parts) and non-wetted parts (threaded part on the setting knob).

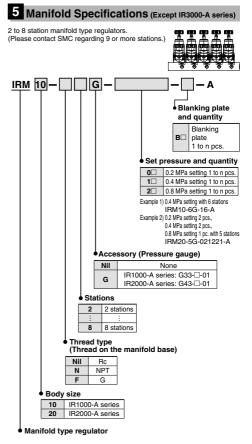

Specifications

Specifications				
Stations		2 to 8 stations		
	Common SUP	IR1000-A series: 1/4, IR2000-A series: 1/2		
Port	Individual OUT	IR1000-A series: 1/8, IR2000-A series: 1/4		
	Individual EXH (From IR body)			
Set pressure	0.2 MPa, 0.4 MPa and 0.8 MPa settings can be combined.			
Accessory (Pressure gauge)	G33-□-01(IR1000-A series), G43-□-01(IR2000-A series)			

Note 1) Regulators to be manifolded are counted starting from stations 1 on the left side with the OUT ports in front.

Note 2) When regulators with a different set pressure are manifolded, viewing OUT ports from front, the low pressure range is installed on the left side and high pressure range is on the right side. In case of the Example 2) above mentioned, stations 1 and 2 are of 0.2 MPa setting, stations 3 and 4 are of 0.4 MPa setting, and station 5 is of 0.8 MPa setting.

Note 3) For the model with pressure gauge (G), the pressure gauge is shipped together, but not assembled.





IR1000-A/2000-A/3000-A Series Specific Product Precautions 1

Be sure to read this before handling the products.

Refer to page 9 for safety instructions and pages 13 to 17 for F.R.L. precautions.

Piping

⚠Warning


 Screw piping together with the recommended proper torque while holding the side with the female threads.

Looseness or faulty sealing will occur if tightening torque is insufficient, while thread damage will result if the torque is excessive

Furthermore, if the side with the female threads is not held while tightening, excessive force will be applied directly to piping brackets, etc., causing damage or other problems.


Recomme	[N·m]			
Connection thread	1/8	1/4	3/8	1/2 Note)
Torque	7 to 9	12 to 14	22 to 24	28 to 30

 Note) Tightening force for connecting to the EXH port of IR30 \square_2^1 -A is 8 to 10 N·m.



Do not allow twisting or bending moment to be applied other than the weight of the equipment.

 Provide separate support for external piping, as damage may otherwise occur.



Piping materials without flexibility such as steel tube piping are prone to be effected by excess moment load and vibration from the piping side. Use flexible tubing in between to avoid such an effect.

↑ Caution

1. Preparation before piping

Before piping is connected, it should be thoroughly blown out with air (flushing) or washed to remove chips, cutting oil and other debris from inside the pipe.

Piping

. Caution

2. Winding of sealant tape

When screwing piping or fittings into ports, ensure that metal chips from the pipe threads or sealing material do not enter the piping. Also, when the sealant tape is used, leave 1.5 to 2 thread ridges exposed at the end of the threads.



Operating Environment

∧ Warning

- Do not use in an atmosphere having corrosive gases, chemicals, sea water, water, water steam, or where there is direct contact with any of these.
- 2. Do not operate in locations where vibration or impact occurs.
- In locations which receive direct sunlight, provide a protective cover, etc.
- In locations near heat sources, block off any radiated heat.
- In locations where there is contact with spatter from water, oil or solder, etc., implement suitable protective measures.

Air Supply

.⚠Warning

- 1. Please consult with SMC when using the product in applications other than compressed air.
- Do not use compressed air which includes chemicals, synthetic oils containing organic solvents, salt or corrosive gases, etc., as this can cause damage or malfunction.
- If condensate in the drain bowl is not emptied on a regular basis, the bowl will overflow and allow the condensate to enter the outlet side. This will cause a malfunction of pneumatic equipment.

When removing drain is difficult, use of a filter with an auto drain is recommended.

⚠ Caution

- Condensate or dust, etc. in the supply pressure line can cause malfunctions. In addition to an air filter (SMC AF series, etc.), please use a mist separator (SMC AM, AFM series) depending on the conditions. Refer to "Air Preparation Equipment Model Selection Guide"
 - Refer to "Air Preparation Equipment Model Selection Guide (pages 20 and 21) for air quality.
- 2. When a lubricator is used at the supply side of the product, it can cause malfunctions. Do not use a lubricator at the supply side of the product. If lubrication is required for terminal devices, connect a lubricator on the output side of the regulator.



IR1000-A/2000-A/3000-A Series Specific Product Precautions 2

Be sure to read this before handling the products.

Refer to page 9 for safety instructions and pages 13 to 17 for F.R.L. precautions.

Maintenance

⚠ Warning

- When the product is removed for maintenance, reduce the set pressure to "0" and shut off the supply pressure completely beforehand.
- 2. When a pressure gauge is to be mounted, remove the plug after reducing the set pressure to "0".
- When using the regulator between a solenoid valve and an actuator, check the pressure gauge periodically. Sudden pressure fluctuations may shorten the durability of the pressure gauge.
 - A digital pressure gauge is recommended for such situation or as deemed necessary.

Handling

⚠ Caution

 When the precision regulator with pressure gauge is used, do not apply impact to the product by dropping it, etc. during transportation or installation.

This may cause misalignment of the pressure gauge pointer.

Operation

∧ Caution

- Do not use a precision regulator outside the range of its specifications as this can cause failure. (Refer to the specifications.)
- 2. When mounting is performed, make connections while confirming port indications.
- When mounting the bracket or tightening the hexagon panel nut on the panel, tighten them to the recommended proper torque.

Looseness or faulty sealing will occur if tightening torque is insufficient, while thread damage will result if the torque is excessive

Recommended Proper Torque (N·m)

Set nut (for bracket)

IR10□0-A	IR20□0-A	IR30□□-A
	2.0±0.2	

Hexagon panel nut (for knob type only)

3 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1		
IR10□0-A	IR20□0-A	IR30□□-A
3.5±0.5		

- After pressure adjustment, be sure to tighten the lock nut. When tightening the nut, tighten so that the knob does not move due to friction caused by tightening.
- When pressure is applied to the inlet of a regulator, make sure that the output is connected to the circuit. Air blow occurs from the outlet and it depends on the operating conditions.
- The set pressure may vary depending on the elapsed time and change in ambient temperature after pressure setting. If the setting value varies, adjust with the knob.

Operation

⚠ Caution

- If the directional control valve (solenoid valve, mechanical valve, etc.) is mounted and ON-OFF is repeated for a long time, the set pressure may vary. If the setting value varies, adjust with the knob.
- There may be pulsation or noise depending on the pressure conditions, piping conditions and ambient environment. In this case, it is possible to improve the problem by changing the pressure conditions and piping conditions.

 The problem is not improved contact your SMC calculations.
 - If the problem is not improved, contact your SMC sales representative.
- The capacity of the output side is large, and when used for the purpose of a relief function, the exhaust sound will be loud when being relieved. Therefore, operate with a silencer (SMC AN series, etc.) mounted on the exhaust port (EXH port).
 - When using the IR1000-A and 2000-A series, contact your SMC sales representative.
- When installing a pressure gauge to the product, do not apply pressure more than the maximum display pressure. This will cause a malfunction.
- When using a precision regulator between a solenoid valve and cylinder, caution should be taken regarding the following points.
 - The residual pressure of the cylinder will be exhausted from the regulator's exhaust port. (Depending on the conditions, partial backflow may occur.)
 - When holding pressure at the intermediate position of a closed center solenoid valve, due to reduced pilot pressure the pressure inside the cylinder will not be able to be held because the regulator will perform an exhaust operation. If it is necessary for the pressure inside the cylinder to be held, please consider using in combination with a separate shut-off valve.
 - When releasing pressure at the intermediate position of an exhaust center solenoid valve, depending on the conditions, vacuum pressure may remain inside the cylinder. If the introduction of atmospheric pressure is required, please consider using in combination with a separate atmospheric pressure introduction valve.
- 12. When using the IR3000-A series in balancing applications, abnormal noises may occur depending on the pressure and circuit conditions. In such cases, the noise will often cease if changes are made to the pressure or piping conditions or if a high noise reduction type silencer (such as SMC's ANA1 series, etc.) is installed.
- 13. The min. supply pressure is the min. required supply pressure for when there is no flow on the output side. If flow is to be used, or if the volume on the outlet side is large, supply pressure with sufficient margins in regards to the set pressure if responsiveness is required.
- 14. When a precision regulator is used in applications in which back pressure is frequently applied or when it is used in environments where vibration is present or pulsations are present in the set pressure, wear of the exhaust valve may be accelerated, resulting in increased premature exhaust leakage.

