SP121X-009E P: QY

SNC P.G.Information (Specialized Product)

SMC CORPORATION 4-14-1,SOTO-KANDA, CHIYODA-KU, TOKYO 101-0021, JAPAN URL http://www.smcworld.com

Spacer with Light for DIN Connector / V200-61-21

■Features:

For maintenance

- The light with spacer can be used when the old VF or VP series is replaced with the DIN connector type of the new VF and VP series.




Note:

The indicator light is not available for the DIN connector type of the new VF and VP series because of the valve construction. Refer to Table 1.

Table 1 Location of light for new and old series

Combination of new and old series specifications		Leastion of light	
Valve	DIN connector	Location of light	
New series	New type	DIN connector side	
Old series	Old type	Valve side	
New series	Old type	No light	

Model no.	Description	
V200-61-21	Spacer with light	

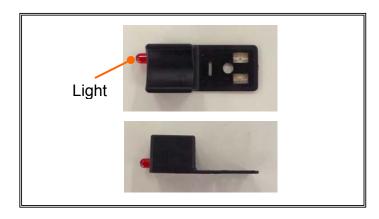

Specifications:

Applicable models	VF1000/3000/5000 series VP300/500/700 series
	VF*****-*DO(S/R)*1-**-*
Applicale part numbers ^{*1}	+ Old type DIN connector VP*****-*DO(S/R)*1-***
	+ Old type DIN connector
Rated voltage	AC/DC70 to 250V
Enclosure	IP40/IP65 ^{*2}
Power	0.25W
consumption	


*1 The voltage is limited to AC/DC70 to 250V.

*2 Enclosure of the spacer with light is IP40. It will be IP65 when the specific gasket is combined.


■How to Order:


Specifications	Model no.	Description	Quantity
IP65	V200-61-21	Spacer with light	1
	V200-71-1	Gasket	2
IP40	V200-61-21	Spacer with light	1


■How to Assemble (IP65):

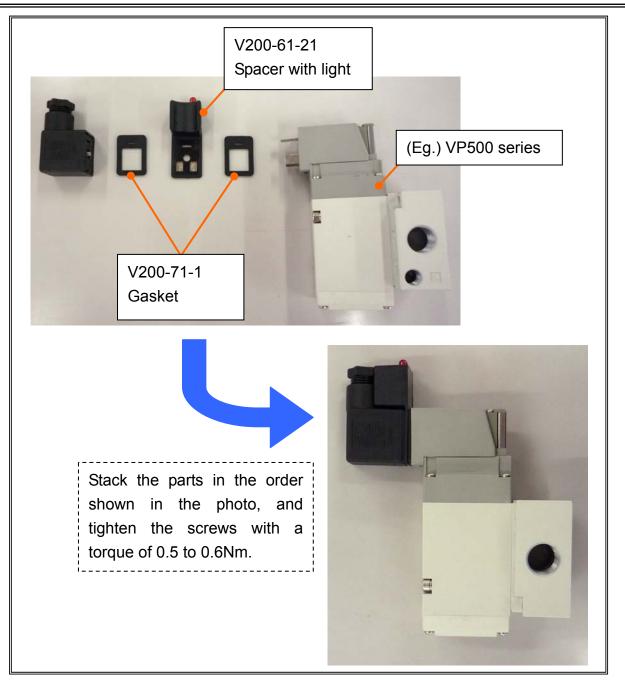


Dimensions: mm

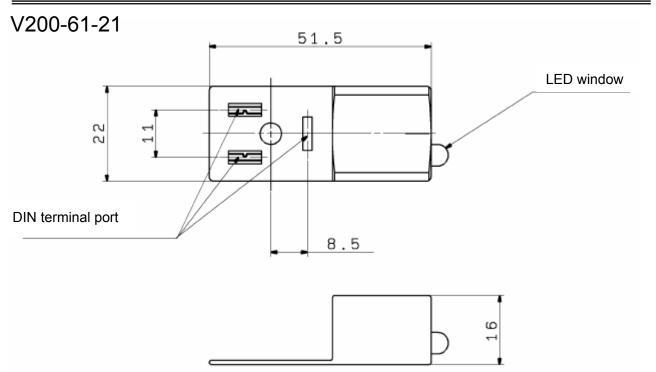

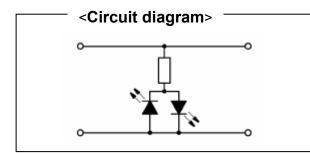

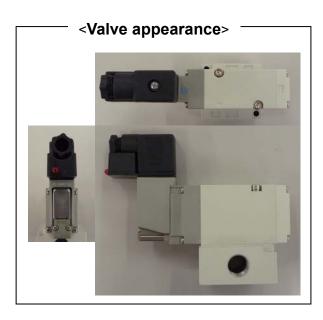

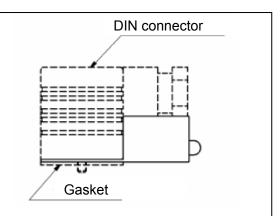

Assemble the spacer with light between the DIN connector and gasket for IP40.

Caution To ensure the safest possible operation of this product, please be sure to thoroughly read the "Safety Instructions" in our "Best Pneumatics" catalog before use.