# Multistage Ejector





# Max. suction flow rate

# 3 types available: 100, 300, and 600 L/min (ANR)

New

 An N.O. specification has been added to the pressure switch for vacuum with energy saving function.
 Can hold vacuum\*1 even when the power goes out or is turned off Prevents the sudden dropping of workpieces\*1

\*1 Supposing the supply pressure is being maintained

# Air consumption

Suction: 300 L ZL3

91% reduction

Suction: 600 L

(Under SMC's measurement conditions)
Reduced by the pressure switch for vacuum with energy saving function and efficient ejectors

Suction: 100 L ZL1 10% reduction

Reduction due to improved ejector efficiency (Comparison with the existing ZL112)

# Weight

Suction: 300 L
ZL3
Suction: 600 L

ZL6

Max. 44% reduction

**ZL212** (Existing model): 700 g → **ZL3**: **390** g

Suction: 100 L

Max. 60% reduction

ZL112 (Existing model): 450 g → ZL1: 180 g



Series	Vacuum pressure [kPa]	Max. suction flow rate [L/min (ANR)]	Air consumption [L/min (ANR)]	Weight*3 [g]	Page
ZL1	-84	100	57	180	p. 7
ZL3	-93* <sup>1</sup>	300*2	135* <sup>1</sup>	390	p. 19
ZL6	-93*1	600*2	270*1	470	p. 19

- \*1 ZL3H, ZL6H (Standard supply pressure: 0.5 MPa)
- \*2 Branch + Port exhaust
- \*3 Without valve

ZL1/ZL3/ZL6 Series



# **Energy saving**


ZL3

ZL6


More efficient

Air consumption
91% reduction\*1

\*1 Under SMC's measurement conditions. When equipped with a pressure switch for vacuum with energy saving function

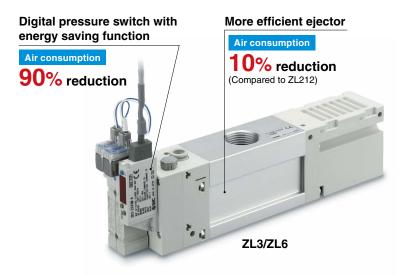

When the suction signal is ON, the ON/OFF operation of the supply valve is performed automatically within the set value by the pressure switch for vacuum with energy saving function.

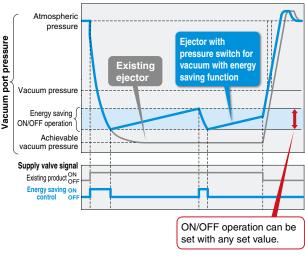

Energy

# **Energy saving efficiency: 91% reduction**

Power consumption cost per year reduced by 15,356 JPY/year\*

Tower consumption cost per year reduced by 10,000 or 17 year			saving function	ejector
	Power consumption cost per year	Annual air consumption	Exhaust time	Air consumption
ZL3/With energy saving function	1,519 JPY/year	1,013 m <sup>3</sup> /year	1.5 s	135 L/min (ANR)
Existing product (ZL212)	16,875 JPY/year	11,250 m <sup>3</sup> /year	15 s	150 L/min (ANR)

<sup>\*1</sup> Cost conditions · Air unit 1.5 JPY/m³ (ANR), Annual operating cycles: 300000 (Operating hours: 10 hours/day, Operating days: 250 days/year, 120 cycles/h, when 1 unit is used)


#### High efficiency (Suction flow rate/Air consumption) ZL1 ZL3 ZL6 Max. suction Efficiency ZL1 consumption flow rate **ZL112** ZL1 100 57 1.75 Approx. 10% (Existing model) **ZL112** 100 63 1.59 increase ZL3 300 135 2.22 ZL3 2.22 **ZL212** 250 150 1.67 ZL6 **ZL212** 600 270 2.22 (Existing model) increase ZL1 (Standard supply pressure: 0.33 MPa) ZL3H (Standard supply pressure: 0.5 MPa) 2.22

# 3-stage diffuser construction

ZL1


ZL3


ZL6

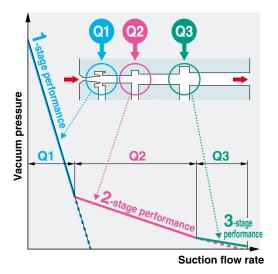


#### ZL1/ZL3


Max. suction flow rate 100/300 L/min (ANR)

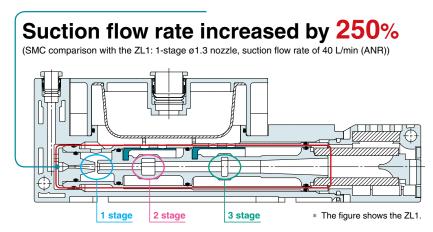

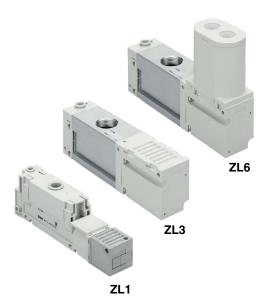

#### ZL6

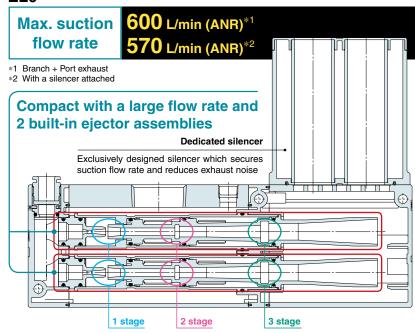

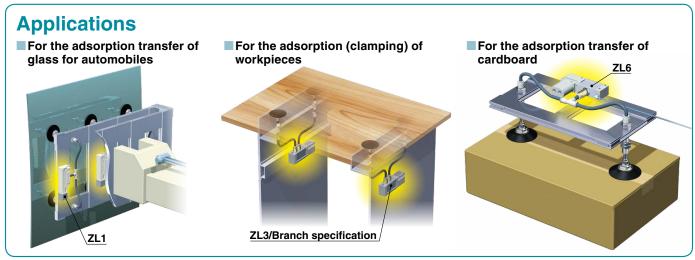


# Various vacuum pressure sensors

ZL1


ZL3

ZL6

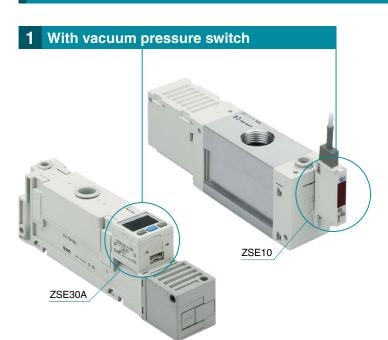

# 2 With pressure gauge

- Pressure range:
  - -100 to 100 kPa (When the port is metric spec.)
  - -30 inHg to 14 psi (When the port is inch spec.)

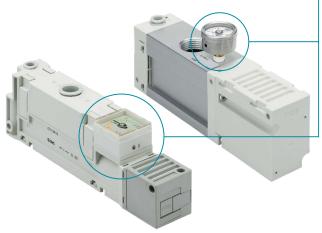

#### 3 With vacuum pressure detection port



#### Without vacuum pressure sensor





# Vacuum port: A branch specification is selectable.

ZL3

ZL6

- Easy connection of branch piping
- One-touch fittings can be connected without a bushing.

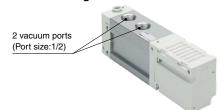

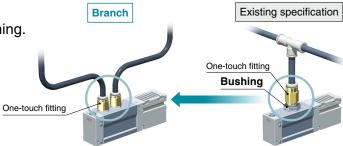

# Standard supply pressure: A 0.35 MPa specification has been added.


ZL3

ZL6


Supports the adoption of low supply pressure

# No tools are required! Reduced maintenance labor


#### Filter element

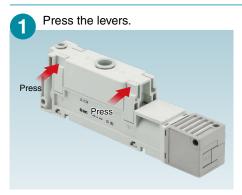




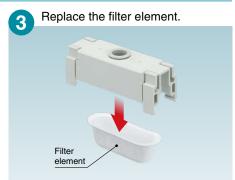


## Sound absorbing material

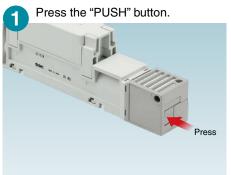




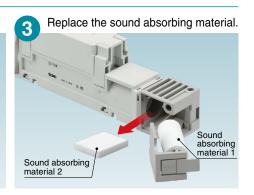

# Supply valve/Release valve

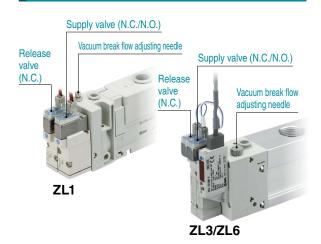

# 2 types of Exhaust methods

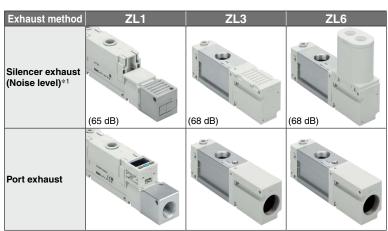

\*1 Actual values under SMC's measurement conditions

#### ZL3 ZL1 **Mounting option** An adapter assembly is required for Bottom mounting for the ZL1 ← ZL112 (Existing model) Bottom mounting for the ZL3 - ZL212 (Existing model) bottom mounting interchangeability with the existing model. The mounting holes on the top and on the side are interchangeable as standard. Example) For the ZL3 Adapter assembly for Adapter assembly for bottom mounting bottom mounting Mounting hole (Interchangeable) ZL1 ZL3

# Multistage Ejector ZL1/ZL3/ZL6 Series

# Variations

		ZL1	ZL3M	ZL3H	ZL6M	ZL6H
s	Geries					
	I nozzle size [mm]	1.2	1.9	1.5	1.9 x 2	1.5 x 2
Standard su	upply pressure*1 [MPa]	0.33	0.35	0.50	0.35	0.50
Vacuui	m pressure [kPa]	-84	-91	-93	-91	-93
	tion flow rate in (ANR)]	100	30	0*2	60	00*2
Air co	nsumption in (ANR)]	57	150	135	300	270
Port size	Supply port	ø6 ø1/4"			98 /16"	
Port size	Vacuum port	ø12 ø1/2"		3/4 (Rc, 2 x 1/2 (Rc, NPT, G)	NPT, G) (Branch specification)	
	With supply valve and release valve	•	•	•	•	•
With or without valve	Supply valve	•	•	•	•	•
	None	•	•	•	•	•
Evhauat tuna	Silencer exhaust	•	•	•	•	•
Exhaust type	Port exhaust	•	•	•	•	•
Pressure switch for vacuum with	N.C. specification		•	•	•	•
energy saving function	N.O. specification		•	•	•	•
	With vacuum pressure switch	•	•	•	•	•
Vacuum pressure	With pressure gauge	•	•	•	•	•
sensor	With detection port (With port: Rc1/8)	•	•	•	•	•
	None	•	•	•	•	•

<sup>\*1</sup> Without valve \*2 Branch specification + Port exhaust



# CONTENTS

# Multistage Ejector ZL1/ZL3/ZL6 Series



# Multistage Ejector ZL1 Series

How to Order p. 7
Ejector Specificationsp. 8
Supply Valve/Release Valve Specificationsp. 8
Pressure Gauge Specificationsp. 8
Vacuum Pressure Switch Specificationsp. 9
Weightp. 9
Vacuum Pressure Switch/Internal Circuits and Wiring Examplesp. 10
Exhaust Characteristics/Flow Rate Characteristics/Time to Reach Vacuump. 11
Vacuum Break Flow Rate Characteristicsp. 11
Constructionp. 12
How to Order Replacement Partsp. 13
Dimensionsp. 15



# Multistage Ejector ZL3/ZL6 Series

How to Order p. 19
Ejector Specifications ——p. 20
Supply Valve/Release Valve Specificationsp. 20
Pressure Gauge Specificationsp. 20
Vacuum Pressure Switch Specificationsp. 21
Weightp. 21
Internal Circuits and Wiring Examplesp. 22
Exhaust Characteristics/Flow Rate Characteristicsp. 23
Time to Reach Vacuum/Break Flow Rate Characteristics/Vacuum Breaking Timep. 24
Constructionp. 25
How to Order Replacement Partsp. 26
Dimensions ——p. 27
Specific Product Precautionsp. 31


Safety Instructions-------Back cover



# **Multistage Ejector**


Max. suction flow rate: 100 L/min (ANR)

# ZL1 Series

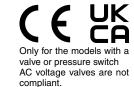



#### **How to Order**

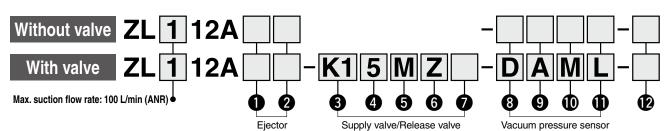

#### Supply (P), Vacuum (V) port/ One-touch fitting connection size

	Symbol	Supply (P) port	Vacuum (V) port	Pressure gauge unit*1
	Nil	ø6 (Metric)	ø12 (Metric)	kPa
	N	ø1/4" (Inch)	ø1/2" (Inch)	inHg⋅psi

\*1 When the vacuum pressure gauge (Symbol: G) is selected for 8, these are the unit specification options. Under the New Measurement Act, products with inHg psi unit specifications are not permitted for use in Japan.

# 2 Exhaust method

— =xiiaaot iiiotiioa		
Nil	Nil Silencer exhaust	
P Rc1/2 port exhaust		
PF	G1/2 port exhaust*2	
PN	1/2-14NPT port exhaust	

\*2 The thread ridge shape is in compliance with G thread standard ISO 228-1, but the other shapes are not in compliance with ISO 16030 or ISO 1179.

#### Supply valve/Release valve combination

K1	Supply valve (N.C.), Release valve (N.C.)
K2	Supply valve (N.C.)
B1	Supply valve (N.O.), Release valve (N.C.)
B2	Supply valve (N.O.)

#### Rated voltage

DC		CE/UKCA-compliar
5	24 VDC	•
6	12 VDC	•
٧	6 VDC	•
S	5 VDC	•
R	3 VDC	•

AC (	50/60 Hz)	CE/UKCA-compliant		
1	100 VAC	_		
2	200 VAC	_		
3	110 VAC [115 VAC]	_		
4	220 VAC [230 VAC]	_		

\* CE/UKCA-compliant: For DC only

### 5 Electrical entry

24, 12, 6, 5, 3 VDC/100, 110, 200, 220 VAC			
Grommet	L plug connector	M plug c	onnector
G: Lead wire		M: With lead wire	
length 300 mm	(300 mm)	(300 mm)	lead wire
H: Lead wire length 600 mm	LN: Without lead wire	LO: Without connector	MO: Without connector

- LN and MN types: With 2 sockets per valve
- Refer to page 13 for the lead wire length of L and M plug connectors.

#### 6 Light/Surge voltage suppressor

Nil	Without light/surge voltage suppressor
S	With surge voltage suppressor
Z	With light/surge voltage suppressor
U	With light/surge voltage suppressor
U	(Non-polar type)

- For type "U," only DC voltage is available. There is no "S" option for AC voltage
- valves because the generation of surge voltage is prevented by a rectifier.

# Manual override

Nil	Non-locking push type
D	Push-turn locking slotted type

## 8 Vacuum pressure sensor

Nil	None
GN	With vacuum pressure detection port (Rc1/8)
G	Pressure gauge*3
D	Vacuum pressure switch

\*3 For 1, the units for metric spec. fittings are in kPa. The units for inch spec. fittings are in inHg.psi. (Under the New Measurement Act, products with these unit specifications are not permitted for use in Japan.)

## (Included)

Nil	None
В	Adapter assembly for bottom mounting (ZL112A-AD1-A)

\* Bottom mounting screw pitch = 28 mm (Interchangeable with the existing ZL112 model)

2 pcs./set, with 4 bolts

\* The mounting holes on the top and on the side are interchangeable as standard.

Adapter assembly for bottom mounting

#### Applicable only when "D" is selected for 8 Vacuum pressure sensor

#### Output NPN open collector 1 output PNP open collector 1 output NPN open collector 2 outputs PNP open collector 2 outputs NPN open collector 1 output + Analog voltage output NPN open collector 1 output + Analog current output PNP open collector 1 output + Analog voltage output

PNP open collector 1 output + Analog current output

🕡 Unit Nil With unit switching function SI unit only (kPa) М With unit switching function (Initial value psi)

Under the New Measurement Act, switches with the unit switching function are not permitted for use in Japan.

## Lead wire

Nil	Without lead wire
L	Lead wire with connector (2 m)

For output types "N" and "P," a 3-core lead wire is included. For other output types, a 4-core lead wire is included.



# Without valve With valve With vacuum pressure switch With pressure gauge With vacuum pressure detection port Port exhaust

#### **Ejector Specifications**

Model		ZL1	
Nozzle size [mm]		1.2	
Standard supply	Without valve	0.33	
pressure [MPa]	With valve	0.35	
Max. vacuum pres	sure [kPa]*1	-84	
Max. suction flow rate [L/min (ANR)]*1		100	
Air consumption [L/min (ANR)]*1		57	
Supply pressure range [MPa]		0.2 to 0.5	
Operating tempera	ature range [°C]	5 to 50 (No condensation)	
Fluid		Air	
Vibration resistance	Without pressure switch	30	
[m/s <sup>2</sup> ]*2	With pressure switch	20	
Impact resistance	Without pressure switch	150	
[m/s <sup>2</sup> ]*3	With pressure switch	100	

- Values are at the standard supply pressure and based on SMC's measurement standards. They depend on atmospheric pressure (weather, altitude, etc.) and the measurement method. \*2 10 to 500 Hz for 2 hours in each direction of X, Y, and Z (De-energized, Initial value) \*3 3 times in each direction of X, Y, and Z (De-energized, Initial value)

# **Supply Valve/Release Valve Specifications**

	OV 15 - 4	
Model	SYJ5□4	
Response time (at 0.5 MPa)*1	25 ms or less	
Max. operating frequency	5 Hz	
Manual override	Non-locking push type, Push-turn locking slotted type	

- Based on JIS B 8419: 2010 dynamic performance test (Standard type: Coil temperature 20°C, at rated voltage, without surge voltage suppressor
- \* Refer to the **Web Catalog** for details on the SYJ500 series.

# **Pressure Gauge Specifications**

Model	ZL112A-PG1-A	ZL112A-PG2-A	
Fluid	Air		
Pressure range	-100 to 100 kPa -30 inHg to 14 psi		
Scale range (Angular)	230°		
Accuracy	±3% F.S. (Full span)		
Operating temperature range	0 to 50°C		
Material	Housing: Polycarbonate/ABS resin		

# Noise Level (Reference values)

Model	ZL1
Noise level [dB(A)]	65

Actual values under SMC's measurement conditions (Not guaranteed values)

#### The solenoid valve mounted on this product is the SMC 3-port solenoid valve SYJ500 series. For details on solenoid valve functions, refer to the Operation Manual of the SYJ500 series on the SMC website (https://www.smcworld.com). 3-port solenoid valve SYJ500 series SYJ5 4 - 4-CE/UKCA-compliant Multistage ejector Nil AC ZL1 series Q DC ZL112A 🗌 🗌 – Manual override Light/Surge voltage Supply valve/Release valve suppressor ZL112A□□-K1 Select "1" for both supply Electrical entry and release valve. Rated voltage ZL112A□□-K2 Select "1" for supply valve. 7I 112A□□-B1 Select "2" for supply valve. Select "1" for release valve. ZL112A□□-B2 Select "2" for supply valve. Refer to page 13.

# **Vacuum Pressure Switch Specifications**

		Model	ZL-ZSE30A		
Rated pressure range		pressure range	0.0 to -101.0 kPa		
Set pressure range			10.0 to -105.0 kPa		
Withstand pressure		and pressure	500 kPa		
Smallest settable increment		st settable increment	0.1 kPa		
Applicable fluid		able fluid	Air, Non-corrosive gas, Non-flammable gas		
Power supply voltage		supply voltage	12 to 24 VDC ±10% (with power supply polarity protection)		
Cui	rent	t consumption	40 mA (at no load)		
Switch output		output	NPN or PNP open collector 1 output NPN or PNP open collector 2 outputs (selectable)		
	Max	x. load current	80 mA		
	Max	x. applied voltage	28 V (at NPN output)		
	Res	sidual voltage	1 V or less (with load current of 80 mA)		
	Res	sponse time	2.5 ms or less (with anti-chattering function: 20, 100, 500, 1000, 2000 ms)		
	Sho	ort-circuit protection	Yes		
	eat	ability	±0.2% F.S. ±1 digit		
Hysteresis	Hys	steresis mode	Variable (0 to variable)		
Hyst	Wir	ndow comparator mode	,		
	*1 •	Output voltage (Rated pressure range)	1 to 5 V ±2.5% F.S.		
=	oltag	Linearity Output impedance	±1% F.S. or less		
Analog output	००		Approx. 1 kΩ		
) or		Output current (Rated pressure range)	4 to 20 mA ±2.5% F.S.		
ole	*2 # # # #	Linearity	±1% F.S. or less		
Ana	Current output	Load impedance	$\label{eq:maximum load impedance:} \text{Power supply voltage 12 V: } 300~\Omega,~\text{Power supply voltage 24 V: } 600~\Omega$ $\text{Minimum load impedance: } 50~\Omega$		
Dis	play	1	4-digit, 7-segment, 2-color LCD (Red/Green) Sampling cycle: 5 times/s		
Dis	play	accuracy	±2% F.S. ±1 digit (Ambient temperature of 25°C)		
Ind	icato	or light	Lights up when switch output is turned ON. (OUT1: Green, OUT2: Red)		
	End	closure	IP40		
Environmental resistance	Operating temperature range		Operating: 0 to 50°C, (No freezing or condensation) Stored: –10 to 60°C		
viror	Operating humidity range		Operating/Stored: 35 to 85% RH (No condensation)		
Ę	Wit	hstand voltage	1000 VAC for 1 minute between terminals and housing		
Insulation resistance		ulation resistance	$50~\text{M}\Omega$ or more (500 VDC measured via megohmmeter) between terminals and housing		
Ter	npei	rature characteristics	±2% F.S. (25°C standard)		
Lead wire		ire	Oilproof heavy-duty vinyl cable, 3 cores ø3.5, 2 m 4 cores Conductor area: 0.15 mm² (AWG26) Insulator O.D.: 1.0 mm		
Standards		rds	CE/UKCA, RoHS compliant		

- $\ast 1$  When analog voltage output is selected, analog current output cannot be used together.
- \*2 When analog current output is selected, analog voltage output cannot be used together.


# Weight

	[g]
Model	ZL1
Basic type	180
Port exhaust	+70
Vacuum pressure switch (Excluding lead wire)	+25
Vacuum pressure switch (Including 3 cores lead wire)	+56
Vacuum pressure switch (Including 4 cores lead wire)	+60
With supply valve and release valve	+105
With supply valve and without release valve	+65




## **Vacuum Pressure Switch/Internal Circuits and Wiring Examples**


# Output specification "N" NPN (1 output)

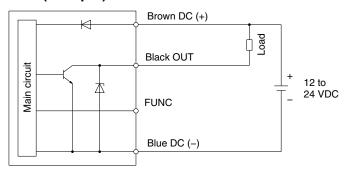


# Output specification "P" PNP (1 output)

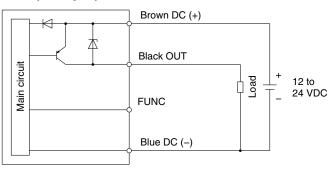


# Output specification "A" NPN (2 outputs)

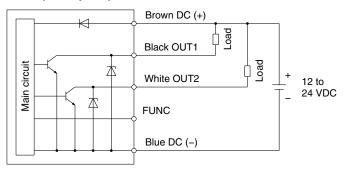


# Output specification "B" PNP (2 outputs)

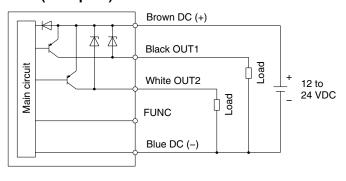


### Output specification "C" NPN (1 output) + Analog voltage output

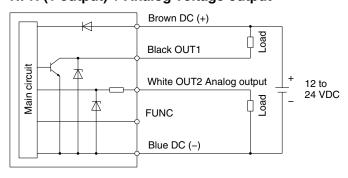


# Output specification "D" NPN (1 output) + Analog current output

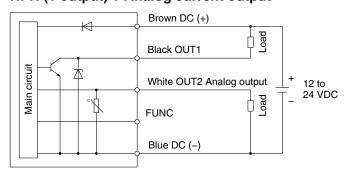

# Output specification "E" PNP (1 output) + Analog voltage output

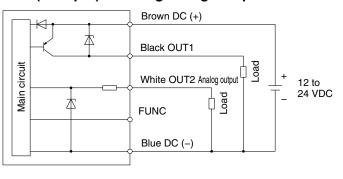


# Output specification "F" PNP (1 output) + Analog current output

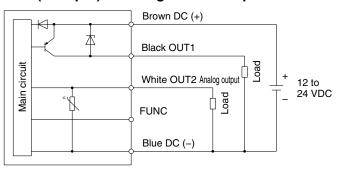


<sup>\*</sup> Refer to the **Web Catalog** for details on pressure switches.

## Exhaust Characteristics/Flow Rate Characteristics/Time to Reach Vacuum (Representative value)

#### **Exhaust Characteristics (Without valve)**

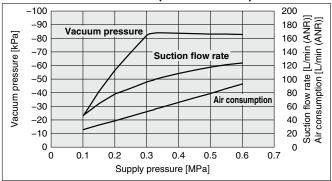


#### **Exhaust Characteristics (With valve)**

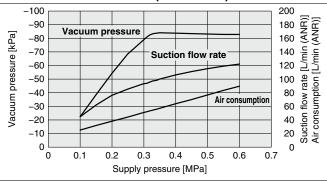


#### Standard supply pressure: 0.33 MPa (Without valve)

## Flow Rate Characteristics 0.35 MPa (With valve)

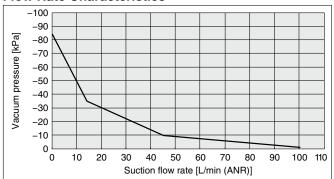

#### **Time to Reach Vacuum**


Tank capacity: 1 L

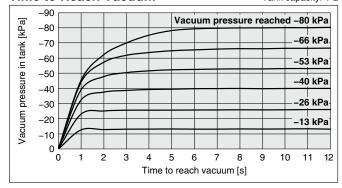

# Vacuum Break Flow Rate Characteristics\*1 (Representative value)


\*1 Silencer exhaust specification

The graph shows the flow rate characteristics at different supply pressures when the vacuum break flow adjusting needle is open from the fully closed state.

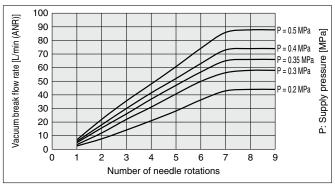

\* The flow rates shown in this graph are representative values for the ejector with silencer exhaust specification, and the suction flow may vary depending on the piping conditions at the vacuum (V) port and exhaust (EXH) port, etc.

#### **How to Read the Flow Rate Characteristics**

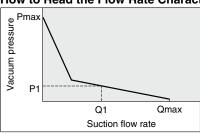

The flow rate characteristics indicate the relationship between the vacuum pressure and the suction flow rate of the ejector. They also show that when the suction flow rate changes, the vacuum pressure also changes. In general, this indicates the relationship at the ejector's standard operating pres-

In the graph, Pmax indicates the max. vacuum pressure, and Qmax indicates the max. suction flow rate. These are the values that are published as specifications in catalogs, etc. Changes in vacuum pressure are explained below.


- 1. If the ejector's suction port is closed and sealed tight, the suction flow rate becomes "0," and the vacuum pressure increases to the max. (Pmax).
- If the suction port is opened and air is allowed to flow (the air leaks), the suction flow rate increases, and the vacuum pressure decreases. (The condition of P1 and Q1)
- 3. If the suction port is opened completely, the suction flow rate increases to the max. (Qmax), while the vacuum pressure then drops almost to "0" (atmospheric pressure). When adsorbing workpieces which are permeable, subject to leakage, etc., caution is required as the vacuum pressure will not be very high.

#### How to Read the Time to Reach Vacuum


The graph indicates the time required to reach a vacuum pressure determined by adsorption conditions for workpieces, etc., starting from atmospheric pressure in a 1 L sealed tank. For the ZL1, approximately 7.0 seconds are necessary to attain a vacuum pressure of –80 kPa.

# Construction

# Without valve or vacuum pressure switch, Silencer exhaust

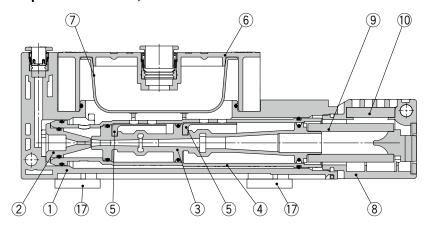

# With valve and vacuum pressure switch, Port exhaust

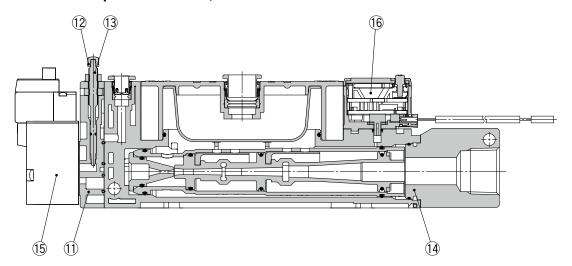


#### **Component Parts**

No.	Description	Material	Note	
1	Body	PBT	_	
2	Nozzle	РОМ		
3	Diffuser	PBT	Defeate Borrows 44 for male consistency	
4	Attachment	POM	Refer to 6 on page 14 for replacement parts.	
5	Check valve	FKM		
6	Suction cover	PBT	Refer to 3 on page 13 for replacement parts.	
7	Filter element	Non-woven fabric	Refer to 8 on page 14 for replacement parts.	
8	Silencer case assembly	PBT/Stainless steel	Refer to 4 on page 14 for replacement parts.	
9	Sound absorbing material 1	Resin	Refer to 9 on page 14 for replacement part	
10	Sound absorbing material 2	Resin	neier to or page 14 for replacement parts.	
11	Valve plate	PBT	Refer to 7 on page 14 for replacement parts.	
12	Knob	POM		
13	Needle	Brass (Electroless nickel plating)		
14	Port block assembly	Aluminum alloy/NBR/Stainless steel	Refer to 5 on page 14 for replacement parts.	
15	Supply valve, Release valve	_	Refer to 1 on page 13 for replacement parts.	
16	Vacuum pressure switch	_	Refer to 2 on page 13 for replacement parts.	
17	Adapter assembly for bottom mounting	Brass (Electroless nickel plating)	Refer to 10 on page 14 for replacement parts.	
_	Seal material (O-ring, etc.)	HNBR/NBR	_	
_	Screws for assembly	Steel	_	



## **How to Order Replacement Parts**

# 1 How to Order Supply Valve/Release Valve

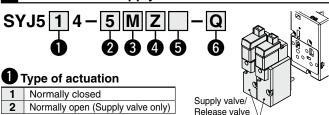

2 Rated voltage

		<u> </u>			
DC		CE/UKCA-compliant	AC	(50/60 Hz)	CE/UKCA-compliant
5	24 VDC	•	1	100 VAC	_
6	12 VDC	•	2	200 VAC	_
٧	6 VDC	•	3	110 VAC [115 VAC]	_
S	5 VDC	•	4	220 VAC [230 VAC]	_
R	3 VDC	•			

\* CE/UKCA-compliant: For DC only

#### Flectrical entry

Electrical entry					
24, 12, 6, 5, 3 VDC/100, 110, 200, 220 VAC					
Grommet	L plug connector	M plug connector			
<b>G</b> : Lead wire length 300 mm	L: With lead wire (300 mm)	M: With lead wire (300 mm)	MN: Without lead wire		
H: Lead wire length 600 mm	LN: Without lead wire	LO: Without connector	MO: Without connector		

- \* LN and MN types: With 2 sockets
- \* For the lead wire length of the L and M plug connectors, refer to the lead wire with connector assembly for supply valves and release valves.

# 4 Light/Surge voltage suppressor

(Electrical entry: G, H, L, or M)

Nil	Without light/surge voltage suppressor
S	With surge voltage suppressor
Z	With light/surge voltage suppressor
U	With light/surge voltage suppressor (Non-polar type)

- \* There is no "S" option for AC voltage valves because the generation of surge voltage is prevented by a rectifier.
- For type "U," only DC voltage is available.

#### Manual override

Nil	Non-locking push type
D	Push-turn locking slotted type

#### 6 CE/UKCA-compliant


Nil	— (For AC)	
Q	CE/UKCA-compliant (For DC)	

#### How to Order Connector and Socket for Supply Valve/Release Valve

#### SY100 - 30 - A

\* With connector and 2 sockets only

#### How to Order Lead Wire with Connector Assembly for Supply Valve/Release Valve

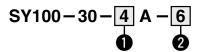


#### Power supply voltage

<u> </u>	ower supply voltage
1	100 VAC
2	200 VAC
3	Other VAC
4	DC

#### 2 Lead wire length


Nil	300 mm
6	600 mm
10	1000 mm
15	1500 mm
20	2000 mm
25	2500 mm
30	3000 mm
50	5000 mm

# 2 How to Order Vacuum Pressure Switch

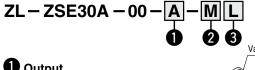

1 Output			
N	NPN open collector 1 output		
Р	PNP open collector 1 output		
Α	NPN open collector 2 outputs		
В	PNP open collector 2 outputs		
С	NPN open collector 1 output +		
C	Analog voltage output		
D	NPN open collector 1 output +		
U	Analog current output		
Е	PNP open collector 1 output +		
_	Analog voltage output		
F	PNP open collector 1 output +		
	Analog current output		

Vacuum pressure switch

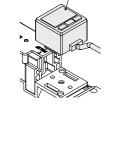

## 2 Unit

Nil	With unit switching function*1	
M	SI unit only*2	
Р	With unit switching function (Initial value psi)*1	


- \*1 Under the New Measurement Act, switches with the unit switching function are not permitted for use in Japan.
- \*2 Fixed unit: kPa

## Connector/Lead wire


Nil	Without lead wire	
L	Lead wire with connector (Length: 2 m)	

\* For output types "N" and "P," a 3-core lead wire is included. For other output types, a 4-core lead wire is included.


#### **How to Order Lead Wire Assembly with Connector**

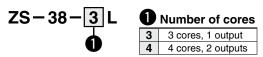

#### 3 How to Order Suction Cover Assembly

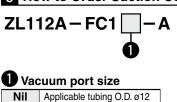

cuum port size			
	Applicable tubing O.D. ø12		
	Applicable tubing O.D. ø1/2"		

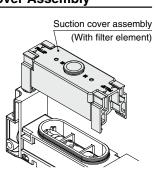


Ν

#### **How to Order Replacement Parts**

### 4 How to Order Silencer Case Assembly



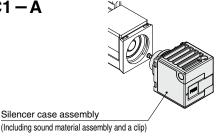


# 5 How to Order Port Block Assembly





## Thread type

	, · · · · · · · · · · · · · · · · · · ·	
Nil	Rc thread	
F	G thread	
N	NPT thread	

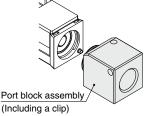

# 6 How to Order Ejector Assembly

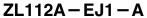

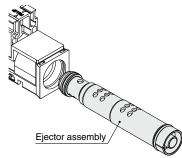


# 7 How to Order Valve Plate Assembly\*1






2 Supply valve only

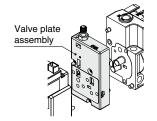


\*1 It is not possible to switch between models with valves and models without valves.


#### 8 How to Order Filter Element

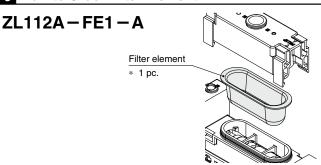

# 9 How to Order Sound Absorbing Material Assembly

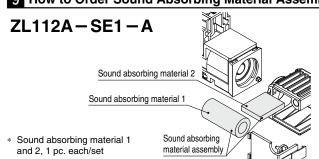


## 10 How to Order Adapter Assembly for Bottom Mounting

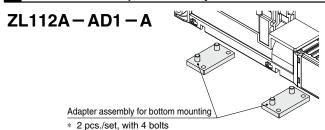

### How to Order Vacuum Port Adapter Assembly\*2


#### **ZL112A - AD2 - A**

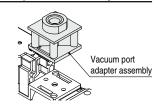


\*2 A vacuum port adapter cannot be installed when "Nii" is selected for the pressure sensor.

#### How to Order Pressure Gauge Assembly\*3




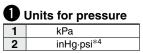


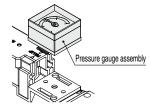

- \*4 Under the New Measurement Act, products with inHg-psi unit specifications are not permitted for use in Japan.
- \*3 A pressure gauge cannot be installed when "Nil" is selected for the pressure sensor.

#### **How to Order O-ring for Suction Cover**

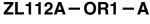

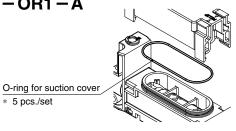




# **ZL1** Series

#### **Dimensions**

#### ZL112A(N) Without valve Circuit diagram 53.2 114 Vacuum (V) port Air pressure supply (P) port Applicable tubing O.D. B Applicable tubing O.D. A 33 20 an Trìna 166 4.5 Exhaust direction $\Omega$ 58.4 26 Exhaust 35 35 8 direction 四月 4 Adapter assembly for bottom mounting 33 166 4.5 Adapter assembly 175 for bottom mounting 4 x M4 x 0.7 Thread depth 6 (Mounting hole) (Recommended tightening torque: 0.60 to 0.76 N·m) **Port Size** В $\oplus$ ZL112A 12 6 ZL112AN 1/4" 1/2" 85 69 **Release Button**

## **Option**

#### ZL112A(N)-B With adapter assembly for bottom mounting

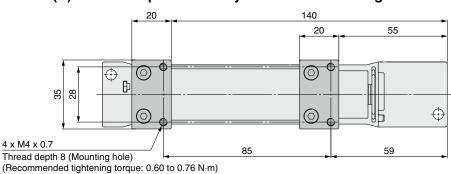

<sup>\*</sup> Tighten to the recommended torque to mount the body. Tightening with excessive force may damage the product.

P port

Color Type

Light gray

**ZL112A** 

ZL112AN


V port


Color Type

Oval Light gray Round

Orange Round Orange Round



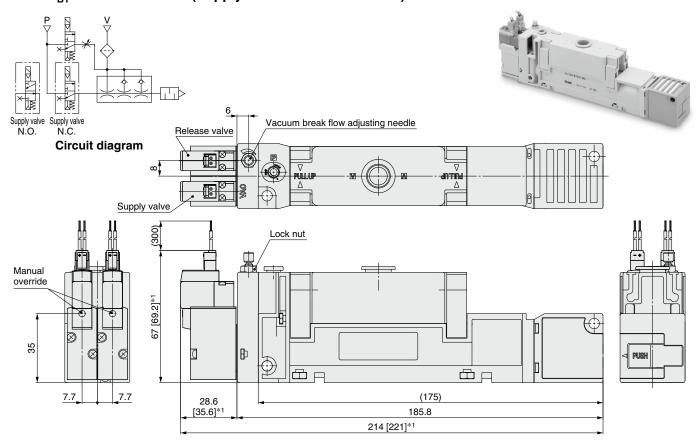

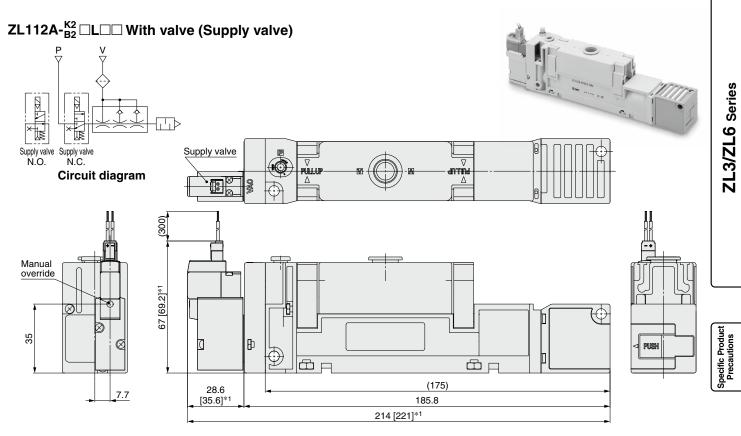


<sup>\*1 []</sup> for AC

<sup>\*</sup> Tighten to the recommended torque on pages 15 and 17 to mount the body. Tightening with excessive force may damage the product.

# **ZL1** Series

#### **Dimensions**

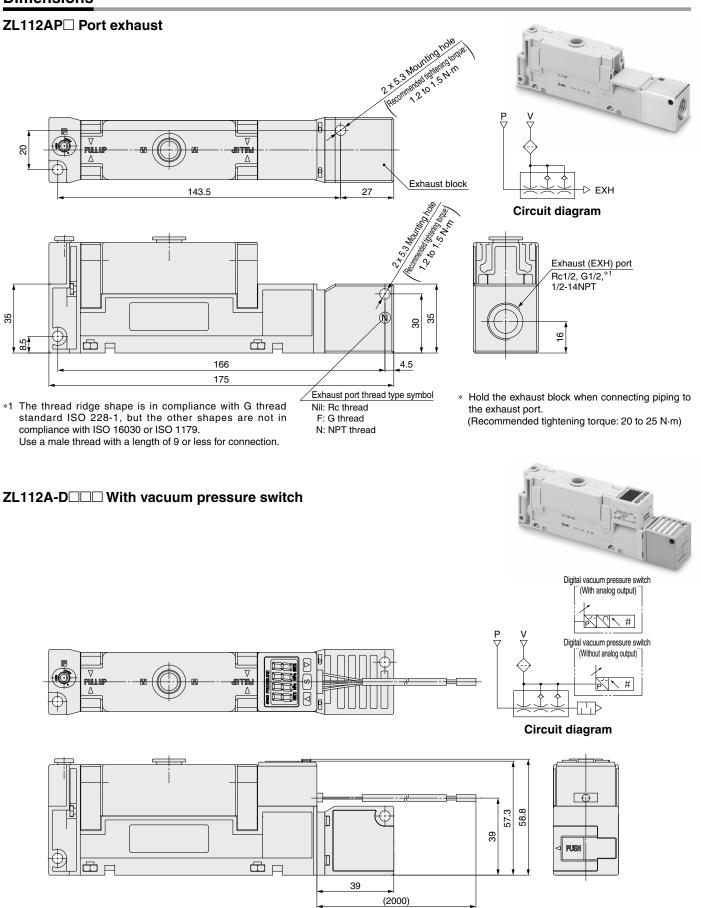


<sup>\*</sup> Tighten to the recommended torque to mount the body. Tightening with excessive force may damage the product.


#### **Dimensions**


#### **Options**


### ZL112A-GN With vacuum pressure detection port

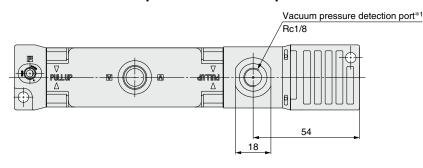



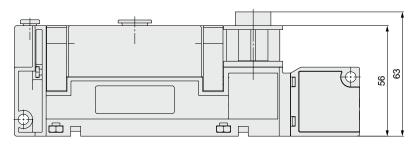


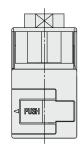

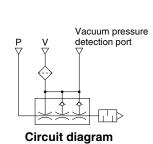



\*1 Hold across the flats (18) when mounting a fitting to the vacuum pressure detection port. (Recommended tightening torque: 3 to 5 N·m)


#### **ZL112A-G With pressure gauge**

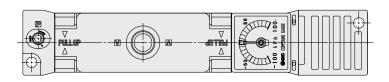



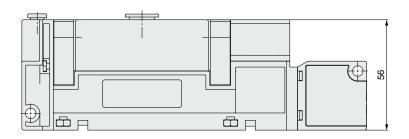

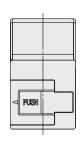

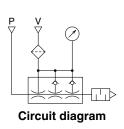

\* Tighten to the recommended torque on pages 15 and 17 to mount the body. Tightening with excessive force may damage the product.





# **Multistage Ejector**


Max. suction flow rate: 300 L/min (ANR)

Max. suction flow rate:

# ZL3/ZL6 Series



#### **How to Order**

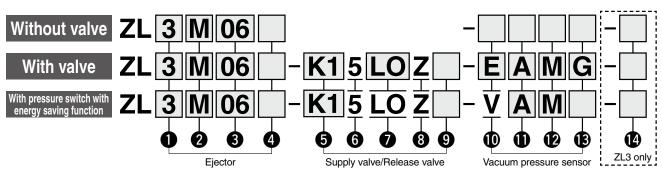

# Max. suction flow rate

_		
3	300 L/min (ANR)*1	
6	600 L/min (ANR)*1	
		_

\*1 Branch specification + Port exhaust

#### 2 Standard supply pressure 0.35 MPa 0.50 MPa

# Telectrical entry

L plug connector	M plug connector
L: Lead wire length 0.3 m	M: Lead wire length 0.3 m
LO: Without connector*5	MO: Without connector

\*5 Only "LO" is selectable when the pressure switch with energy saving function is selected.

## Manual override

Nil	Non-locking push type
D	Push-turn locking slotted type
E	Push-turn locking lever type

# Wacuum pressure sensor

Nil	None
GN	With vacuum pressure detection (G) port (Rc1/8, G1/8, NPT1/8)*6
G	Pressure gauge*7
Е	Vacuum pressure switch (Vacuum 2 outputs)
F	Vacuum pressure switch (Compound pressure 2 outputs)
V	Pressure switch for vacuum with energy saving function (Compound pressure 1 output)*8

- \*6 The same thread type selected for 3 is used for the port. \*7 Not selectable when "F06" or "F04" is selected for 3 When "06" or "04" is selected for 3, the units of the pressure gauge are displayed in kPa. When "N06" or "N04" is selected, the units are displayed in inHg.psi (Under the New Measurement Act, products with these unit specifications are not permitted for use in Japan.).
- \*8 When "V" is selected, only "K1" or "B1" can be selected for **5**, and only "LO" can be selected for **7**.

#### 3 Vacuum (2/V) port size/ Supply (1/P) port applicable tubing O.D.

Symbol	Vacuum (2/V) port	Supply (1/P) port
06	Rc3/4	
04	2 x Rc1/2 (Branch specification)	Q (Motrio)
F06	G3/4* <sup>2</sup>	8 (Metric)
F04	2 x G1/2*2 (Branch specification)	
N06	NPT3/4	5/16" (Inch)
N04	2 x NPT1/2 (Branch specification)	5/16 (IIICII)

\*2 The thread ridge shape is in compliance with G thread standard ISO 228-1, but the other shapes are not in compliance with ISO 16030 or ISO 1179.

## 4 Exhaust method

Exhibitation		
Nil	il Silencer exhaust	
Р	Port exhaust (Rc1, G1, NPT1)*3	

\*3 The same thread type selected for 3 is used for the port.

combination		Without pressure switch with energy saving function	With pressure switch with energy saving function
K1	Supply valve (N.C.), Release valve (N.C.)*4	•	•
K2	Supply valve (N.C.)	•	_
B1	Supply valve (N.O.), Release valve (N.C.)	•	•

\*4 Only "K1" or "B1" is selectable when the pressure switch with energy saving function is selected.

#### Rated voltage 24 VDC

**B2** Supply valve (N.O.)

Light/Surge voltage suppressor With light/surge voltage suppressor

#### Applicable only when "E," "F," or "V" is selected for **(1)** Vacuum pressure sensor

÷	<b>(ii)</b> Output			
+	Α	NF	NPN open collector	
-	В	P١	NP open collector	
	<b>1</b> Unit			
į	Nil With unit switching function*9		With unit switching function*9	
;	M SI unit only (kPa)			
	P With unit switching function (Initial value psi)*9, *10			
	*9 Under the New Measurement Act, switches with the unit switching function are not permitted for			

use in Japan (implemented October 1999). \*10 When "V" is selected for (0, "P" cannot be selected.

#### 13 Lead wire

Nil	Without lead wire with connector	
G	Lead wire with connector (Length: 2 m) (Included)	
w	Lead wire for switch with energy saving function (Length: 2 m) (Included)	

#### Only applicable to ZL3


#### 🕜 Option None Adapter assembly for bottom mounting\*11 (Included)

\*11 This adapter assembly is for adjusting the product to the 27 mm pitch of the bottom mounting thread of the existing ZL212 series model.


This is required when replacing an existing bottom-mounted ZL212 series model. (2 pcs./set, with 4 bolts)

The mounting holes on the top and on

the side are interchangeable as standard.

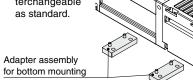




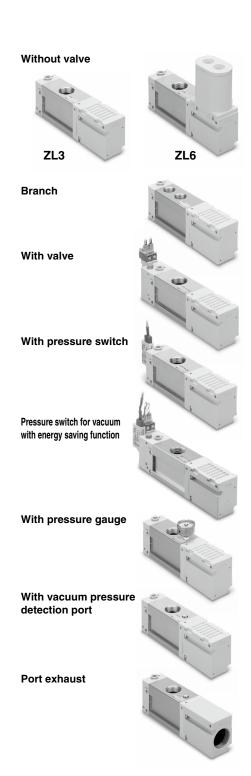

#### The solenoid valve mounted on this product is the SMC 5-port solenoid valve JSY3000 series.

For details on solenoid valve functions, refer to the Operation Manual of the JSY3000 series on

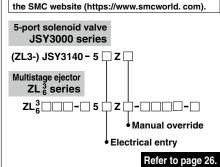

## **Ejector Specifications**

#### ZL3

Model	ZL3M□□	ZL3H□□	
Nozzle size [mm]	1.9	1.5	
Standard supply pressure [MPa]	0.35	0.50	
Max. vacuum pressure [kPa]*1	-91	-93	
Max. suction flow rate [L/min (ANR)]	280		
Branch/Port exhaust	30	00	
Air consumption [L/min (ANR)]	150 135		
Supply pressure range [MPa]	0.2 to 0.6		
Operating temperature range [°C]	-5 to 50 (No freezing or condensation)		
Fluid	Air		
Vibration resistance [m/s <sup>2</sup> ]* <sup>2</sup>	ice [m/s <sup>2</sup> ]*2 20		
Impact resistance [m/s <sup>2</sup> ]*3 100			

- Values are at the standard supply pressure and based on SMC's measurement standards. They depend on atmospheric pressure (weather, altitude, etc.) and the measurement method. 10 to 500 Hz for 2 hours in each direction of X, Y, and Z (De-energized, Initial value)
- \*3 3 times in each direction of X, Y, and Z (De-energized, Initial value)

#### ZL6

Model		ZL6M□□	ZL6H□□	
Nozzle size [mm]		1.9 x 2	1.5 x 2	
Standard supply pressure	Without valve	0.35	0.50	
[MPa]	With valve	0.37	0.52	
Max. vacuum pressure [kPa]	*1	-91	-93	
Max. suction flow rate [L/mir	n(ANR)]	58	580	
Branch/Port exhaust		600		
Air consumption [L/min(ANR)]		300	270	
Supply pressure range [MPa	]	0.2 to 0.6		
Operating temperature range	e [°C]	-5 to 50 (No freezing or condensation)		
Fluid		Air		
Vibration resistance [m/s <sup>2</sup> ]*2		2	20	
Impact resistance [m/s <sup>2</sup> ]*3		10	00	

- Values are at the standard supply pressure and based on SMC's measurement standards. They depend on atmospheric pressure (weather, altitude, etc.) and the measurement method. 10 to 500 Hz for 2 hours in each direction of X, Y, and Z (De-energized, Initial value)
- \*3 3 times in each direction of X, Y, and Z (De-energized, Initial value)

## Supply Valve/Release Valve Specifications

Model ZL3-JSY3140		
Response time (at 0.5 MPa)	27 ms or less*1	
Max. operating frequency	5 Hz	
Manual override  Non-locking push type, Push-turn locking slotted to Push-turn locking lever type		
Rated coil voltage	24 VDC	
Allowable voltage range	Rated voltage ±10%	
Power consumption	0.4 W	

- \*1 Based on JIS B 8419: 2010 dynamic performance test (Coil temperature 20°C, at rated voltage)
- \*2 Refer to the **Web Catalog** for details on the JSY3000 series.

#### **Pressure Gauge Specifications**

Model	GZ33-K1K-01-X56	GZ33-P1C-N01-X55	
Pressure unit	kPa	inHg/psi dual scale	
Pressure range	-100 to 100 kPa	–30 inHg to 14 psi	
Connection thread	R1/8	NPT1/8	
Accuracy	Vacuum ±3% F.S., Positive pressure ±5% F.S.		
Weight	30 g		
	-		


## Noise Level (Reference values)

Model	ZL3	ZL6
Noise level [dB(A)]	6	8

Actual values under SMC's measurement conditions (Not guaranteed values)



# **ZL3/ZL6** Series

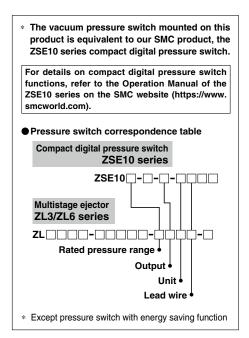

# **Vacuum Pressure Switch Specifications**

Model		ZSE10		
		Vacuum	Compound	Pressure switch for vacuum
		pressure switch	pressure switch	with energy saving function
Ra	ted pressure range	0 to -101 kPa	–100 to	100 kPa
Set	pressure range/Display pressure range	10 to -101 kPa -105 to 105 kPa		105 kPa
Wi	thstand pressure		500 kPa	
Sm	allest settable increment		0.1 kPa	
Αp	plicable fluid	·	orrosive gas, Non-flam	
	wer supply voltage	12 to 24 VDC ±10%, Ripple	(p-p) 10% or less (with power	er supply polarity protection)
Cu	rrent consumption		40 mA or less	
Switch output		NPN or PNP open collector 2 outputs (selectable)		NPN or PNP open collector OUT1: General purpose OUT2: Valve control
	Max. load current		80mA	
	Max. applied voltage	28 V (at N	PN output)	26.4 V (at NPN output)
	Residual voltage	2 V or less (with load current of 80 mA)		
	Response time	2.5 ms or less (with anti-chattering function: 20, 100, 500, 1000, 2000 ms)		
	Short-circuit protection		Yes	
Re	peatability		±0.2% F.S. ±1 digit	
resis	Hysteresis mode Window comparator mode	Variable (0 or above)*1		
Hyste	Window comparator mode	Variable (0	or above)*1	_
Dis	splay	3 1/2 digit, 7-segment LED, 1-color display (Red)		
Di	splay accuracy	±2% F.S. ±1 d	igit (Ambient temperatu	re of 25 ±3°C)
Inc	licator light	Lights up when switch	output is turned ON. OU	T1: Green, OUT2: Red
nce	Enclosure		IP40	
Environmental resistance	Operating temperature range	Operating: -: Stored: -10 t		or condensation)
nent	Operating humidity range	Operating/Stor	red: 35 to 85% RH (No	condensation)
ion	Withstand voltage	1000 VAC for 1 minute between terminals and ho		als and housing
Ē	Insulation resistance	50 MΩ or more (500 VDC me	easured via megohmmeter) be	tween terminals and housing
Te	mperature characteristics	±2% F.S. ±1 digit (at 25	5°C in an ambient tempe	erature of -5 and 50°C)
	ad wire	Oilproof heavy-duty vinyl cable 5 cores Conductor area: 0.15 mm² (AWG26) Insulator O.D.: 1.0 mm		<sup>2</sup> (AWG26)
Sta	Standards CE/UKCA, RoHS compliant			ant

<sup>\*1</sup> If the applied pressure fluctuates around the set value, the hysteresis must be set to a value more than the fluctuating width. Otherwise, chattering will occur.


#### Weight

		[g]
Model	ZL3	ZL6
Basic type	390	470
Port exhaust	+80	+25
Vacuum pressure switch (Excluding lead wire)	+20	+20
Vacuum pressure switch (Including lead wire)	+60	+60
With supply valve and release valve	+120	+120
With supply valve and without release valve	+80	+80
With pressure gauge	+30	+30
With adapter assembly for bottom mounting	+60	_




## **Internal Circuits and Wiring Examples**

# ■ Vacuum pressure switch NPN (2 outputs)

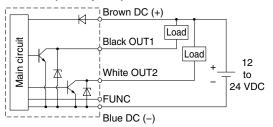

Max. 28 V, 80 mA Residual voltage 2 V or less

#### PNP (2 outputs)

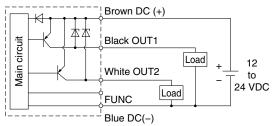

Max. 80 mA Residual voltage 2 V or less


\* The FUNC terminal is connected when using the copy function.

(For details, refer to the Operation Manual for the ZSE10/ISE10 on the SMC website. Click here for details.)

### ■ Pressure switch for vacuum with energy saving function NPN (1 output)

#### Pressure switch (NPN output) Brown Black Load OUT1 Main circuit OUT2 24 VDC Gray\*1 FUNC Blue Supply valve Release White valve Connector cord assembly (ZL3-LW1-N-A)


#### PNP (1 output)

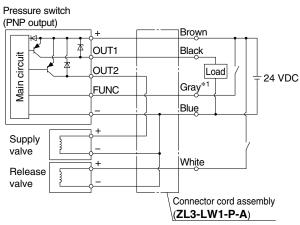



\*1 The gray wire (FUNC) is connected when operating the supply valve by energy saving control (for workpiece adsorption). (For details, refer to the Operation Manual for the ZSE10 (For ZL3, ZL6 series) on the SMC website. Click here for details.)


# ZL3/ZL6 Series


#### **Exhaust Characteristics (Representative value)**

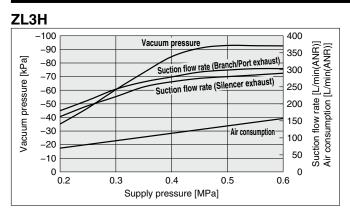


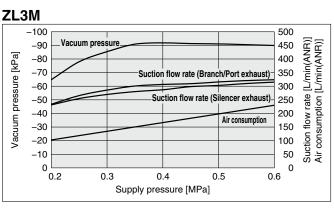

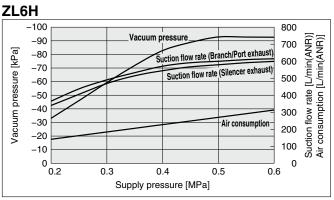


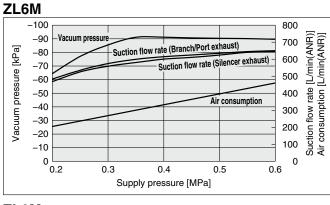


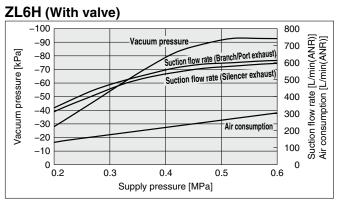

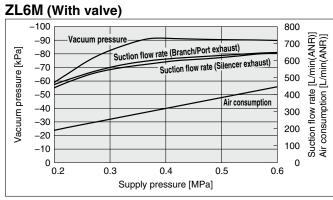



# Flow Rate Characteristics (Representative value)

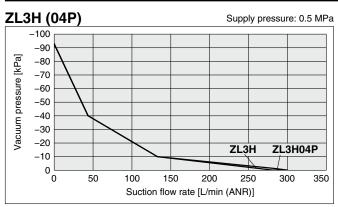

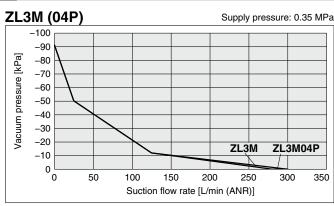



## Flow Rate Characteristics (Representative value)

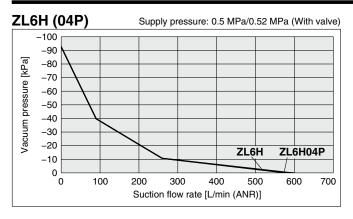

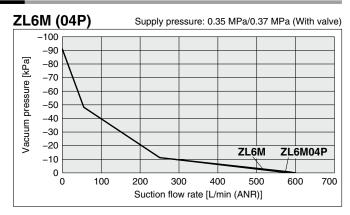


## Time to Reach Vacuum (Representative value)

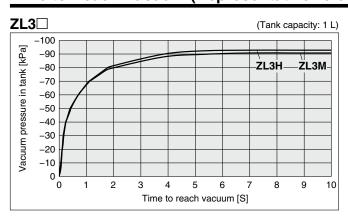

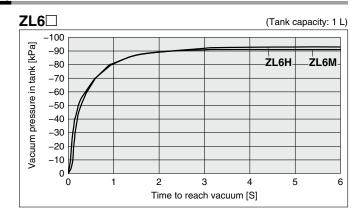

#### **Break Flow Rate Characteristics (Representative value)**

Break flow rate supplied to vacuum area at different needle openings and at each supply pressure

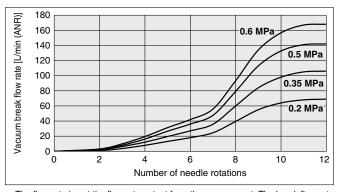


The flow rate is not the flow rate output from the vacuum port. The break flow rate is also output on the exhaust side of the product, and the output flow rate from the vacuum port fluctuates depending on the piping conditions of the vacuum port.


# Vacuum Breaking Time (Representative value)

Max. vacuum pressure → Time to reach -10 kPa

(Tank capacity: 1 L)

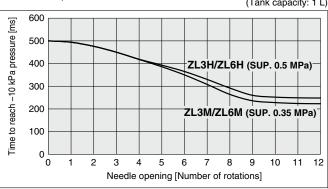

#### **How to Read the Flow Rate Characteristics**

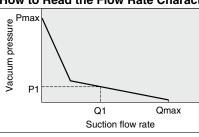

The flow rate characteristics indicate the relationship between the vacuum pressure and the suction flow rate of the ejector. They also show that when the suction flow rate changes, the vacuum pressure also changes. In general, this indicates the relationship at the ejector's standard operating pres-

In the graph, Pmax indicates the max. vacuum pressure, and Qmax indicates the max. suction flow rate. These are the values that are published as specifications in catalogs, etc. Changes in vacuum pressure are explained below.

- 1. If the ejector's suction port is closed and sealed tight, the suction flow rate becomes "0," and the vacuum pressure increases to the max. (Pmax).
- 2. If the suction port is opened and air is allowed to flow (the air leaks), the suction flow rate increases, and the vacuum pressure decreases. (The condition of P1 and Q1)
- 3. If the suction port is opened completely, the suction flow rate increases to the max. (Qmax), while the vacuum pressure then drops almost to "0" (atmospheric pressure). When adsorbing workpieces which are permeable, subject to leakage, etc., caution is required as the vacuum pressure will not be very high.

#### How to Read the Time to Reach Vacuum


The graphs indicate the time required to reach a vacuum pressure determined by adsorption conditions for workpieces, etc., starting from atmospheric pressure in a 1 L sealed tank. For the ZL3H, approximately 4.0 seconds are necessary to attain a vacuum pressure of -90 kPa.




# **ZL3/ZL6** Series

## Construction

**ZL3**Without valve or pressure switch, Silencer exhaust

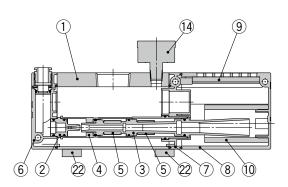


**ZL6**Without valve or pressure switch, Silencer exhaust

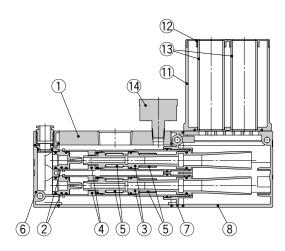


**Component Parts** 

No.	Description	Material	Note	
1	Body	Aluminum alloy (Anodized)	_	
2	Nozzle	POM		
3	Diffuser	PBT	Refer to 2 on page 26 for replacement parts.	
4	Attachment	POM	neier to 🖪 on page 20 for replacement parts.	
5	Check valve	FKM		
6	Front adapter	PBT	_	
7	End adapter	PBT	_	
8	Silencer case 1	PBT	Refer to 3 on page 26 for replacement parts.	
9	Sound absorbing material 1	Resin	Refer to 4 on page 26	
10	Sound absorbing material 2	Non-woven fabric	for replacement parts.	
11	Silencer case 2	PBT	Refer to 5 on page 26	
12	Silencer cap	POM	for replacement parts.	
13	Sound absorbing material 3	Non-woven fabric	(Disassembly is not possible. The silencer assembly must be replaced.)	

ZL3 With valve and pressure switch, Port exhaust

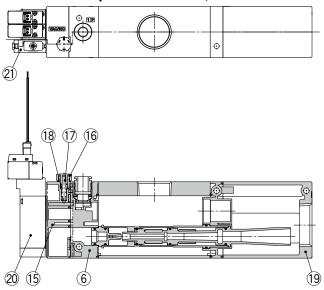


ZL6
With valve and pressure switch, Port exhaust

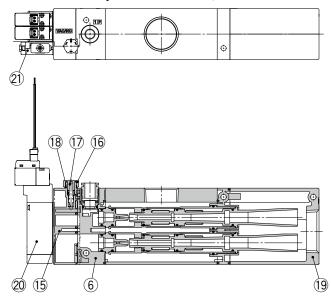

No.	Description	Material	Note
14	Pressure gauge	_	Refer to 7 on page 26 for replacement parts.
15	Valve plate	PBT	_
16	Knob	POM	_
17	Needle	PBT	_
18 Needle guide		Brass (Electroless nickel plating)	_
19 Exhaust block		Aluminum alloy (Chromated, Painted)	Refer to 6 on page 26 for replacement parts.
20	Supply valve, Release valve	_	Refer to 1 on page 26 for replacement parts.
21	Vacuum pressure switch	_	_
22	Adapter assembly for bottom mounting	Brass (Electroless nickel plating)	Refer to  on page 26 for replacement parts.
_	Seal material (O-ring, etc.)	HNBR/NBR	_
Screws for assembly		Steel (Trivalent chromated)	_

## **How to Order Replacement Parts**




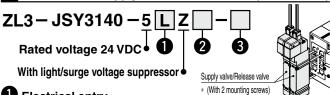

Electrical entry

L plug con	nector	M plug connector	
L	LO	M	MO
L: With lead wire (300 mm)	LO: Without connector	M: With lead wire (300 mm)	MO: Without connector


# 2 Manual override

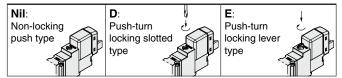

3 Supply valve/Release valve

Nil	Supply valve	
X12	Release valve	

How to Order Lead Wire with Connector Assembly for Supply Valve/Release Valve (For ZL3/ZL6)

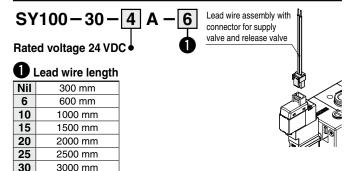

How to Order Connector and Socket for Supply Valve/Release Valve (For ZL3/ZL6)

#### SY100 - 30 - A

\* With connector and 2 sockets only

#### How to Order Lead Wire with Connector for Vacuum Pressure Switch (For ZL3/ZL6)

(When an individual lead wire is necessary, order with the part number below.)

• Lead wire with connector for vacuum pressure switch

ZS - 39 - 5G

Lead wire with connector for vacuum pressure switch

• Lead wire with connector for switch with energy saving function






Output		
N	NPN open collector	
Р	PNP open collector	

Lead wire with connector for switch with energy saving function



Note that the vacuum pressure switch cannot be replaced.

# 2 How to Order Ejector Assembly (For ZL3/ZL6)

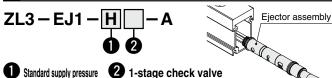


Standard supply pressure 0.35 MPa 0.50 MPa

2 1-stage check valve		
Nil	None	
V	Yes	

A 1-stage check valve is required for specifications with pressure switches with an energy saving function.

### 3 How to Order Silencer Assembly (With sound absorbing material) (For ZL3)


**ZL3-SC1-A** 

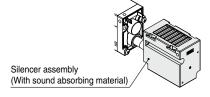


## 4 How to Order Sound Absorbing Material Assembly (For ZL3)




\* Sound absorbing material 1 and 2, 1 pc. each/set

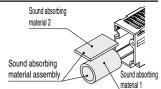

5 How to Order Silencer Assembly (With sound absorbing material) (For ZL6)

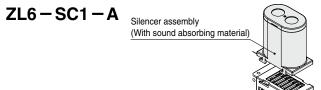


## 6 How to Order Exhaust Block Assembly (For ZL3/ZL6)

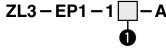



	Thread type		
Nil		Rc thread	
	F	G thread	
	N	NPT thread	

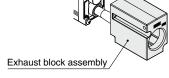


# 7 How to Order Pressure Gauge (For ZL3/ZL6)

GZ33 - K1K - 01 - X56(Displayed in kPa)

GZ33 - P1C - N01 - X55 (Displayed in inHg·psi)\*1


\*1 Under the New Measurement Act, products with inHg-psi

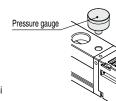

unit specifications are not permitted for use in Japan.

### 8 How to Order Adapter Assembly for Bottom Mounting (For ZL3)

**ZL3 – AD3 – A** 

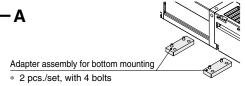














#### **Dimensions**

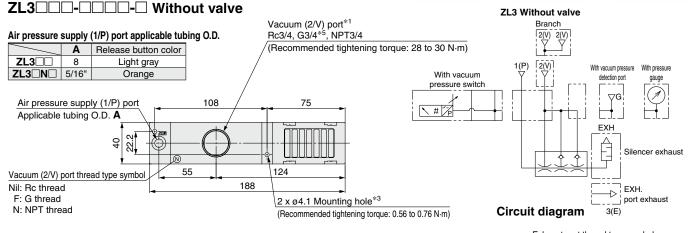

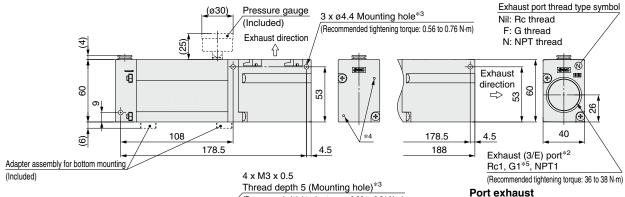

(Recommended tightening torque: 0.29 to 0.31 N·m) 87.5 73

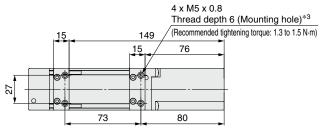

# Vacuum (2/V) port\*1 **Options** 2 x Rc1/2, G1/2\*5, NPT1/2 (Recommended tightening torque: 28 to 30 N·m) **Branch** 121

Vacuum pressure detection (G) port\*1 Rc1/8, G1/8, NPT1/8 (Recommended tightening torque: 3 to 5 N·m)

90

#### With vacuum pressure detection port \* Refer to the vacuum port figure

above for the branch specification.

# With pressure gauge 90

- With vacuum pressure switch (2000)몝 9 89 O @ 9.8 26.6 7.9 214.6
- \*1 To connect piping to the vacuum port and vacuum pressure detection port, hold the aluminum alloy body, then connect the piping.
- \*2 Hold the exhaust block when connecting piping to the exhaust port. It is recommended that piping with an inner diameter of 21.7 or more be used.
- \*3 Tighten to the recommended torque to mount the body. Tightening with excessive force may damage the product.
- These holes are required for the forming of the product. They are not exhaust ports.
- \*5 The thread ridge shape is in compliance with G thread standard ISO 228-1, but the other shapes are not in compliance with ISO 16030 or ISO 1179. Use a male thread with a length of 10.5 or less for the vacuum port and 11.5 or less for the exhaust port for connection.

Refer to the vacuum port figure above for the branch specification.






With pressure switch for vacuum

with energy saving function

With supply valve and release valve

# **Dimensions**

ZL3 D-K1 5 Z -E With valve (With supply valve, release valve and vacuum pressure switch)

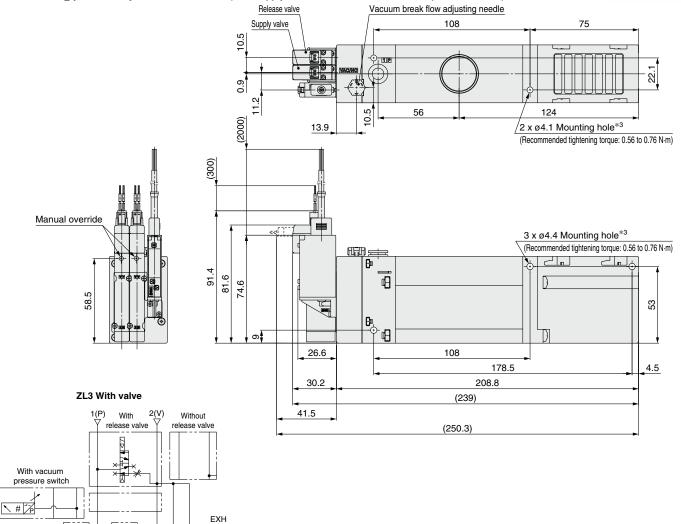

#### Circuit diagram

Pressure switch for vacuum with energy saving function

Supply valve N.O.

ZL3□□□- <sup>K2</sup> 5□Z□- <sup>E</sup> □□□	ZL3□□- <sup>K2</sup> 5□Z□	ZL3□□- <sup>K1</sup> 5□Z□	ZL3□□-K1 5L0Z-V□□W
With supply valve and vacuum pressure switch	With supply valve	With supply valve and release valve	With pressure switch for vacuum with energy saving function

# ZL3/ZL6 Series

#### **Branch**

#### With vacuum pressure detection port

#### With pressure gauge

#### With pressure switch












#### **Dimensions**

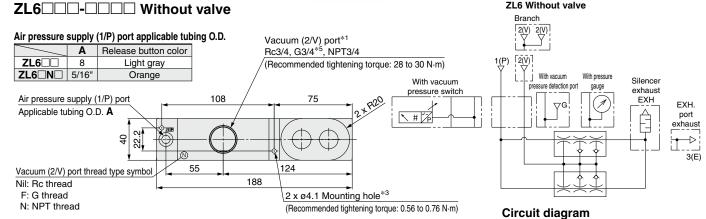

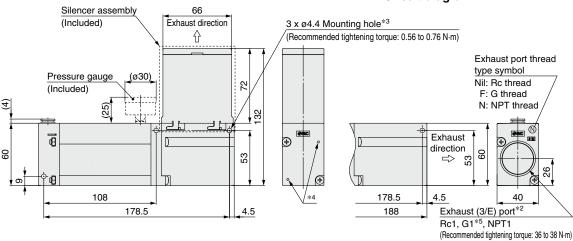


Thread depth 5 (Mounting hole)\*3 (Recommended tightening torque: 0.29 to 0.31 N·m) 1)| 87.5 73

Port exhaust

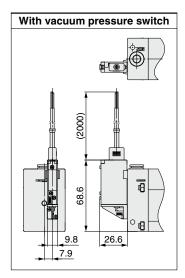

# **Options**

#### **Branch**

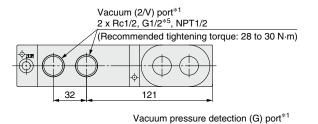


Rc1/8, G1/8, NPT1/8

4 x M3 x 0.5

With vacuum pressure detection port


\* Refer to the vacuum port figure above for the branch specification.

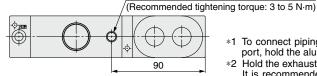

- \*1 To connect piping to the vacuum port and vacuum pressure detection port, hold the aluminum alloy body, then connect the piping.
  \*2 Hold the exhaust block when connecting piping to the exhaust port. It is recommended that piping with an inner diameter of 21.7 or more
- be used.
- \*3 Tighten to the recommended torque to mount the body. Tightening with excessive force may damage the product.
- These holes are required for the forming of the product. They are not exhaust ports.
- The thread ridge shape is in compliance with G thread standard ISO 228-1, but the other shapes are not in compliance with ISO 16030 or ISO 1179. Use a male thread with a length of 10.5 or less for the vacuum port and 11.5 or less for the exhaust port for connection.

#### With pressure gauge

\* Refer to the vacuum port figure above for the branch specification.

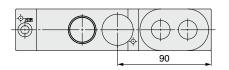

Multistage Ejector **ZL3/ZL6** Series

With supply valve


and release valve

Pressure switch for vacuum with energy saving function

### **Dimensions**

Circuit diagram

ZL6 D-R1 5 ZD-E DD With valve (With supply valve, release valve and vacuum pressure switch)

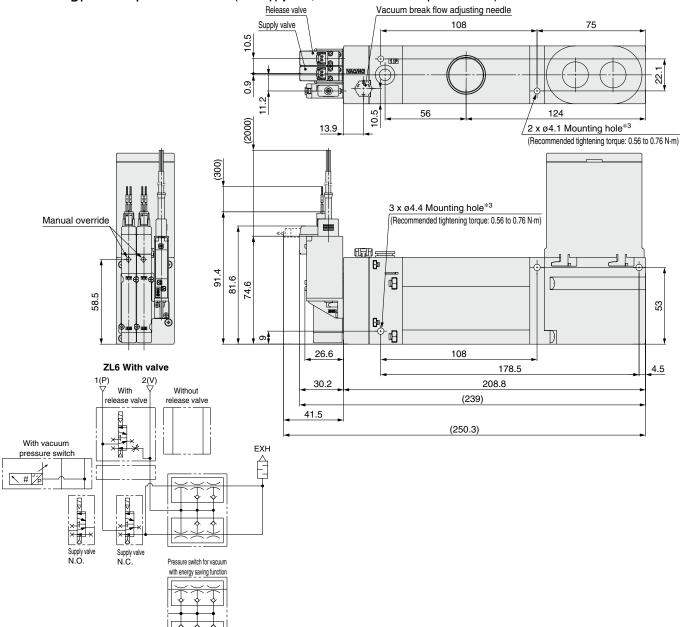

ZL6□□□- <sup>K2</sup> 5□Z□- <sup>E</sup> □□□	ZL6□□□- <sup>K2</sup> 5□Z□	ZL6□□□- <sup>K1</sup> 5□Z□	ZL6□□□-K1 5L0Z-V□□W
With supply valve and vacuum pressure switch	With supply valve	With supply valve and release valve	With pressure switch for vacuum with energy saving function



# **ZL1/ZL3/ZL6** Series Specific Product Precautions 1

Be sure to read this before handling the products. Refer to the back cover for safety instructions. For vacuum equipment precautions, refer to the "Handling Precautions for SMC Products" and the "Operation Manual" on the SMC website: https://www.smcworld.com

#### ■ Handling of Products

**Handling / Mounting** 

# 

- Do not drop, hit, or apply excessive impact to the product when handling it.
  - Even if the body looks undamaged, the internal components may be damaged, leading to a malfunction.
- 2. Use the product within the specified supply pressure range. Operation at a pressure which exceeds the specified supply pressure range can cause damage to the product.
- 3. Load to the ejector body

product to crack or break.

The ejector body is made of resin; therefore, do not apply load to the port after mounting. Prevent any kind of operation which generates moment as this may cause reduced performance or damage to the body.

4. The exhaust resistance should be as small as possible to obtain max. ejector performance.

There should be no shield around the exhaust port for the silencer exhaust specification.

Note that exhaust resistance may occur depending on the piping diameter and length for the port exhaust specification. DO NOT block the exhaust port. Doing so will cause the

5. If the sound absorbing material is clogged, it will cause reduced ejector performance.

In particular, if the product is used in a dusty environment, not only the filter element but also the sound absorbing material will become clogged. It is recommended that the sound absorbing material be replaced periodically.

#### ■ Piping


Piping to the Vacuum Port Adapter (ZL1)

# **⚠** Caution

1. When mounting or removing the fitting, etc., to or from the vacuum port adapter, hold the vacuum port adapter.

Recommended tightening torque: 3 to 5 N·m

The product may break if it is held directly during mounting or removal.

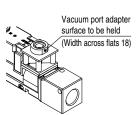


#### Piping to the Exhaust Port (ZL1)

# **⚠** Caution

1. When mounting or removing the piping to or from the exhaust port, hold the exhaust block.

Recommended tightening torque: 20 to 25 N·m

The product may break if it is held directly during mounting or removal.

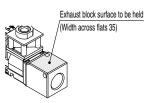


#### ■ Piping

Piping of Each Port (ZL3/ZL6)

# 

- 1. When mounting or removing the fitting to or from the vacuum port or vacuum pressure detection port, hold the aluminum alloy body.
- 2. When mounting or removing the piping to or from the exhaust port, hold the exhaust block.

Thread size	Recommended tightening torque [N·m]
1/8	3 to 5
1/2	28 to 30
3/4	28 to 30
1	36 to 38

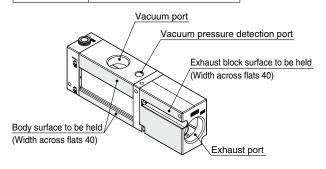

#### **Branch Port**

# **⚠** Warning

 When using the branch port specification to adsorb and transfer multiple workpieces using branch piping, if one workpiece detaches, the vacuum pressure will decrease and the other workpieces will also detach. When connecting branch piping, please take measures to prevent the dropping of workpieces.

#### **Other Tubing Brands**

# **⚠** Caution

- 1. When using tubing from a manufacturer other than SMC, be careful of the tolerance of the tubing O.D.
  - 1) Nylon tubing: Within ±0.1 mm
  - 2) Soft nylon tubing: Within ±0.1 mm
  - 3) Polyurethane tubing: Within +0.15 mm, within -0.2 mm

Do not use tubing which does not satisfy the specified tubing O.D. accuracy. It may cause difficulty when connecting the tubing, air leakage after connection, or the disconnection of the tubing.





# ZL1/ZL3/ZL6 Series Specific Product Precautions 2

Be sure to read this before handling the products. Refer to the back cover for safety instructions. For vacuum equipment precautions, refer to the "Handling Precautions for SMC Products" and the "Operation Manual" on the SMC website: https://www.smcworld.com

#### **■** Suction Cover

Replacement Procedure for Filter Element (ZL1)

# 


1. The suction cover can easily be attached or detached.

The suction cover can be removed by pushing the suction cover levers (2 pcs.) on the side. (It can be removed from the opposite side as well.)

Replace the filter element assembled in the filter case.

Check that the gasket is sitting correctly in the groove before mounting the suction cover.

Check that the lever hook is locked in the correct position when mounting the suction cover. If the hook or the lever is damaged or deformed, replace the suction cover assembly.

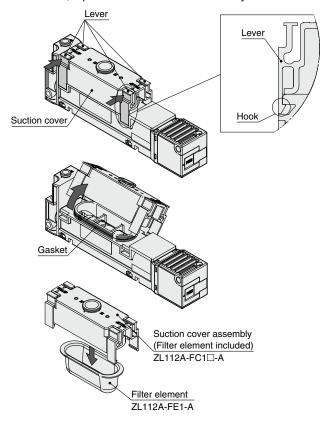

#### ■ Solenoid Valve / Pressure Switch

Wiring and Connection of Solenoid Valves and Vacuum Pressure Switches

# **⚠** Caution

- Incorrect wiring can damage the vacuum pressure switch and cause failure or malfunction. Connections should only be made when the power supply is turned OFF.
- Do not attempt to insert or pull out the connector while the power is ON. Doing so may cause malfunction.

#### ■ Solenoid Valve / Pressure Switch

Wiring and Connection of Solenoid Valves and Vacuum Pressure Switches

# **⚠** Caution


- Malfunctions stemming from noise may occur if the wire is installed in the same route as that of the power cable or another high-voltage cable. Wire the switch independently.
- 4. Be sure to ground the frame ground (FG) terminal when using a commercially available switching power supply. (Pressure switch)
- 5. The tensile force of the solenoid valve and vacuum pressure switch lead wire is 30 N. Exceeding this value can cause breakage. Hold the body when handling the product.
- Avoid repeatedly bending or stretching the lead wire of the solenoid valve or vacuum pressure switch.
   Lead wires will break if bending stress or tensile
  - force is applied to them repeatedly. If the lead wire moves around, secure it near the body of the product. The recommended bending radius is 40 mm or more. Please contact SMC for further details.

Mounting or Removal of the Vacuum Pressure Switch Connector (ZL1)

# 

1. Before the mounting or removal of the vacuum pressure switch connector, it is necessary to remove the silencer case assembly (port block assembly). Remove the silencer case assembly (port block assembly) following the procedure below before mounting or removing the pressure switch connector.


Remove the clip using a flat blade screwdriver from the bottom of the product. Remove the silencer case assembly (port block assembly) from the body. Mount or remove the pressure switch connector.

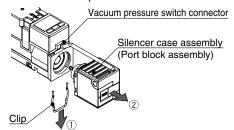


Mounting or Removal of the Vacuum Pressure Switch Connector (ZL3/ZL6)

# **⚠** Caution

- When mounting the connector to the switch housing, push the connector straight onto the pins until the lever locks into the housing slot.
- When removing the connector from the switch housing, push the lever (section A) down with your thumb to unlock it from the slot, and then lift the connector straight off of the pins.

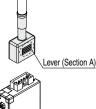

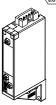



# **ZL1/ZL3/ZL6** Series Specific Product Precautions 3

Be sure to read this before handling the products. Refer to the back cover for safety instructions. For vacuum equipment precautions, refer to the "Handling Precautions for SMC Products" and the "Operation Manual" on the SMC website: https://www.smcworld.com

#### ■ Solenoid Valve / Pressure Switch

**Environment** 

# **⚠** Warning

 The solenoid valve and vacuum pressure switch are not designed to be explosion proof, dustproof, or drip proof. Never use in atmospheres which contain flammable or explosive gases.

# **⚠** Caution

1. The vacuum pressure switch and solenoid valve (DC type) are CE/UKCA-compliant but not immune to lightning strikes.

Take measures against lightning strikes in your system.

Do not use the product in places where static electricity is a problem. Doing so may result in system failure or malfunction.

#### Design

# **⚠** Caution

 Avoid energizing the solenoid valve for long periods of time.

If a solenoid valve is continuously energized for an extended period of time, the heat generated by the coil assembly may reduce the performance and life of the valve or have adverse effects on peripheral equipment.

Therefore, if the solenoid valve is to be continuously energized for an extended period of time or if the energized period per day will be longer than the de-energized period, use an N.O. (normally open) type product.

When the valve is mounted onto a control panel, take measures to radiate heat in order to keep the product temperature within the specified range.

- 2. Note that the vacuum pressure switch for the ZL3/ ZL6 cannot be replaced.
- 3. For specific product precautions on solenoid valves, refer to the solenoid valve catalog.

ZL1: SYJ500 Series ZL3/ZL6: JSY3000 Series

4. For specific product precautions on vacuum pressure switches, refer to the pressure switch catalog.

ZL1: ZSE30A Series ZL3/ZL6: ZSE10 Series

#### **■** Ejector Exhaust

Exhaust Air and How to Replace Sound Absorbing Material (ZL1)


# 

- 1. Air is exhausted from the connecting part between the silencer case and the silencer cover. This does not affect the performance of the product.
- 2. The sound absorbing material can be easily replaced.

Push the area where the word "PUSH" is printed on the silencer cover in the direction shown in Fig. 1.

The silencer cover will come out. (Refer to Fig. 2.) Remove sound absorbing material 1 and 2, and replace them. (Refer to Fig. 3.)

After replacing the sound absorbing material, align the end surface of sound absorbing material 1 with the end surface of the diffuser while engaging the hooks with the hook holes, and push the silencer cover back into place. (Refer to Fig. 4.)

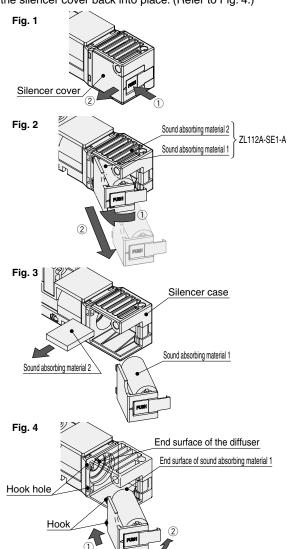

\* If the product is mounted with the silencer cover side facing a wall, the maintenance method shown in the figures above will not be possible.

Move the product away from the wall before conducting maintenance.



# $\triangle$

# ZL1/ZL3/ZL6 Series Specific Product Precautions 4


Be sure to read this before handling the products. Refer to the back cover for safety instructions. For vacuum equipment precautions, refer to the "Handling Precautions for SMC Products" and the "Operation Manual" on the SMC website: https://www.smcworld.com

#### **■** Ejector Exhaust

#### **How to Replace Sound Absorbing Material (ZL3)**


Loosen the assembly screws as shown in Fig. 1 to remove the silencer assembly.

Replace the sound absorbing material in the silencer assembly in the direction shown in Fig. 2. Assemble the silencer assembly using the assembly screws. Recommended tightening torque: 0.76 to 0.84 N·m

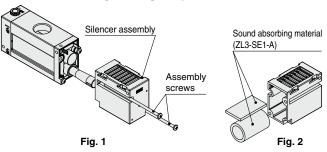

#### **How to Assemble and Replace Silencer Assembly (ZL6)**


The silencer assembly of the ZL6 series is not attached at the time of delivery. Please attach it before use. As shown in Fig. 1, align the hooks of the silencer assembly with the grooves on the body, and push in the direction of the arrow until it clicks.

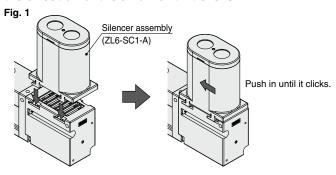

#### **Exhaust Noise**

# **∧** Caution

• When the vacuum ejector generates vacuum, noise can be heard from the exhaust port when the standard supply pressure is close to the pressure that generates peak vacuum pressure, making the vacuum pressure unstable. If the vacuum pressure range is adequate for adsorption, there should be no problem. If the noise causes a problem or affects the setting of the pressure switch, change the supply pressure slightly to avoid the pressure range of the noise.

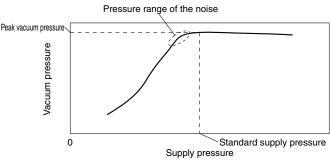

#### ■ Vacuum Break Flow Adjusting Needle

Vacuum Break Air

# 

1. The flow rate characteristics show the representative values of the product itself.

They may change depending on piping, circuit and pressure conditions, etc. The flow rate characteristics and the number of needle rotations will vary due to the range of the specifications of the product.

 When fully closed, leakage cannot be prevented completely. There is an allowance for a certain amount of leakage in the product's specifications. Tightening the needle to reduce leakage to zero may result in equipment damage.

Operation of Vacuum Break Flow Adjusting Needle (ZL1)

# 

1. The needle has a retaining mechanism, so it will not continue to rotate after it reaches the rotation stop position.

Turning the needle too far may cause damage.

- 2. Do not use tools, such as pliers, to rotate the knob.

  This can cause the idle rotation of the knob or damage.
- 3. Do not overtighten the lock nut.


It is possible to tighten the lock nut (hexagon) manually. When tightening further with tools, tighten by approximately 15° to 30°. Overtightening may cause breakage.

Operation of Vacuum Break Flow Adjusting Needle (ZL3/ZL6)

# **Marning**

1. After pushing the knob down to lock, confirm that it is locked.

It should not be possible to rotate the knob to the right or to the left. If the knob is pulled with force, it may break. Do not pull the knob with excessive force.

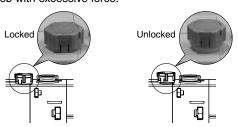

2. Check the number of rotations of the needle valve.

The needle valve has a retaining mechanism, so it will not continue to rotate any further. Turning the needle too far may cause damage.

**3. Do not use tools, such as pliers, to rotate the knob.** This can cause the idle rotation of the knob or damage.



# **⚠** Safety Instructions

These safety instructions are intended to prevent hazardous situations and/or equipment damage. These instructions indicate the level of potential hazard with the labels of "Caution," "Warning" or "Danger." They are all important notes for safety and must be followed in addition to International Standards (ISO/IEC)\*1), and other safety regulations.

Caution: Caution indicates a hazard with a low level of risk which, If not avoided, could result in minor or moderate injury.

------

Warning: Warning indicates a hazard with a medium level of risk which, if not avoided, could result in death or serious injury.

⚠ Danger: Danger if not avoided, will result in death or serious injury. **Danger** indicates a hazard with a high level of risk which, \*1) ISO 4414: Pneumatic fluid power - General rules relating to systems.

ISO 4413: Hydraulic fluid power – General rules relating to systems.

IEC 60204-1: Safety of machinery - Electrical equipment of machines. (Part 1: General requirements)

ISO 10218-1: Manipulating industrial robots - Safety.

## **⚠Warning**

1. The compatibility of the product is the responsibility of the person who designs the equipment or decides its specifications.

Since the product specified here is used under various operating conditions, its compatibility with specific equipment must be decided by the person who designs the equipment or decides its specifications based on necessary analysis and test results. The expected performance and safety assurance of the equipment will be the responsibility of the person who has determined its compatibility with the product. This person should also continuously review all specifications of the product referring to its latest catalog information, with a view to giving due consideration to any possibility of equipment failure when configuring the equipment.

2. Only personnel with appropriate training should operate machinery and equipment.

The product specified here may become unsafe if handled incorrectly. The assembly, operation and maintenance of machines or equipment including our products must be performed by an operator who is appropriately trained and experienced.

3. Do not service or attempt to remove product and machinery/ equipment until safety is confirmed.

- 1. The inspection and maintenance of machinery/equipment should only be performed after measures to prevent falling or runaway of the driven objects have been confirmed.
- 2. When the product is to be removed, confirm that the safety measures as mentioned above are implemented and the power from any appropriate source is cut, and read and understand the specific product precautions of all relevant products carefully.
- 3. Before machinery/equipment is restarted, take measures to prevent unexpected operation and malfunction.

4. Contact SMC beforehand and take special consideration of safety measures if the product is to be used in any of the following conditions.

- 1. Conditions and environments outside of the given specifications, or use outdoors or in a place exposed to direct sunlight.
- 2. Installation on equipment in conjunction with atomic energy, railways, air navigation, space, shipping, vehicles, military, medical treatment, combustion and recreation, or equipment in contact with food and beverages, emergency stop circuits, clutch and brake circuits in press applications, safety equipment or other applications unsuitable for the standard specifications described in the product catalog.
- 3. An application which could have negative effects on people, property, or animals requiring special safety analysis.
- 4. Use in an interlock circuit, which requires the provision of double interlock for possible failure by using a mechanical protective function, and periodical checks to confirm proper operation.

#### **⚠** Caution

1. The product is provided for use in manufacturing industries.

The product herein described is basically provided for peaceful use in manufacturing industries.

If considering using the product in other industries, consult SMC beforehand and exchange specifications or a contract if necessary.

If anything is unclear, contact your nearest sales branch.

### Limited warranty and Disclaimer/ **Compliance Requirements**

The product used is subject to the following "Limited warranty and Disclaimer" and "Compliance Requirements".

Read and accept them before using the product.

#### **Limited warranty and Disclaimer**

- 1. The warranty period of the product is 1 year in service or 1.5 years after the product is delivered, whichever is first.\*2) Also, the product may have specified durability, running distance or
- replacement parts. Please consult your nearest sales branch. 2. For any failure or damage reported within the warranty period which is clearly our
  - responsibility, a replacement product or necessary parts will be provided. This limited warranty applies only to our product independently, and not to any other damage incurred due to the failure of the product.
- 3. Prior to using SMC products, please read and understand the warranty terms and disclaimers noted in the specified catalog for the particular products.
  - 2) Vacuum pads are excluded from this 1 year warranty.

A vacuum pad is a consumable part, so it is warranted for a year after it is delivered.

Also, even within the warranty period, the wear of a product due to the use of the vacuum pad or failure due to the deterioration of rubber material are not covered by the limited warranty.

#### Compliance Requirements

- 1. The use of SMC products with production equipment for the manufacture of weapons of mass destruction (WMD) or any other weapon is strictly prohibited.
- 2. The exports of SMC products or technology from one country to another are governed by the relevant security laws and regulations of the countries involved in the transaction. Prior to the shipment of a SMC product to another country, assure that all local rules governing that export are known and followed.

#### **⚠** Caution

#### SMC products are not intended for use as instruments for legal metrology.

Measurement instruments that SMC manufactures or sells have not been qualified by type approval tests relevant to the metrology (measurement) laws of each country. Therefore, SMC products cannot be used for business or certification ordained by the metrology (measurement) laws of each country.

#### **Revision History**

- Edition B \* The ZL3 and ZL6 have been added.
  - \* Errors in text have been corrected.
  - \* Number of pages has been increased from 20 to 36.