

# Digital Pressure Switch Operation Manual



ZSE30A(F)/ISE30A

Thank you for purchasing an SMC ZSE30A(F)/ISE30A Series Digital Pressure Switch.  
Please read this manual carefully before operating the product and make sure you understand its capabilities and limitations.  
Please keep this manual handy for future reference.

To obtain more detailed information about operating this product, please refer to the SMC website (URL <http://www.smcworld.com>) or contact SMC directly.

## Safety Instructions

These safety instructions are intended to prevent hazardous situations and/or equipment damage.  
These instructions indicate the level of potential hazard with the labels of "Caution", "Warning" or "Danger". They are all important notes for safety and must be followed in addition to International standards (ISO/IEC) and other safety regulations.

**Caution:** CAUTION indicates a hazard with a low level of risk which, if not avoided, could result in minor or moderate injury.

**Warning:** WARNING indicates a hazard with a medium level of risk which, if not avoided, could result in death or serious injury.

**Danger:** DANGER indicates a hazard with a high level of risk which, if not avoided, will result in death or serious injury.

### Operator

- This operation manual is intended for those who have knowledge of machinery using pneumatic equipment, and have sufficient knowledge of assembly, operation and maintenance of such equipment. Only those persons are allowed to perform assembly, operation and maintenance.
- Read and understand this operation manual carefully before assembling, operating or providing maintenance to the product.

### Safety Instructions

#### Warning

- Do not disassemble, modify (including changing the printed circuit board) or repair.**  
An injury or failure can result.
- Do not operate the product outside of the specifications.**  
Do not use for flammable or harmful fluids.  
Fire, malfunction, or damage to the product can result.  
Verify the specifications before use.
- Do not operate in an atmosphere containing flammable or explosive gases.**  
Fire or an explosion can result.  
This product is not designed to be explosion proof.
- Do not use the product in a place where static electricity is a problem.**  
Otherwise it can cause failure or malfunction of the system.
- If using the product in an interlocking circuit:**
  - Provide a double interlocking system, for example a mechanical system
  - Check the product regularly for proper operation
 Otherwise malfunction can result, causing an accident.
- The following instructions must be followed during maintenance:**
  - Turn off the power supply
  - Stop the air supply, exhaust the residual pressure and verify that the air is released before performing maintenance work
 Otherwise an injury can result.

#### Caution


- Do not touch the terminals and connectors while the power is on.**  
Otherwise electric shock, malfunction or damage to the product can result.
- After maintenance is complete, perform appropriate functional inspections and leak tests.**  
Stop operation if the equipment does not function properly or there is a leakage of fluid.  
When leakage occurs from parts other than the piping, the product might be faulty.  
Disconnect the power supply and stop the fluid supply.  
Do not apply fluid under leaking conditions.  
Safety cannot be assured in the case of unexpected malfunction.

### NOTE

- The direct current power supply to be used should be UL approved as follows: Circuit (of Class2) which is of maximum 30 Vrms (42.4 V peak), with UL1310 Class2 power supply unit or UL1585 Class2 transformer.
- The product is a approved product only if it has a mark on the body.

## Summary of Product parts

### Names of individual parts

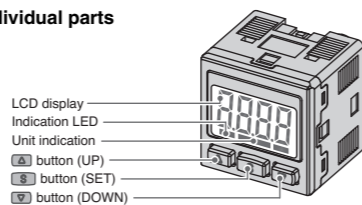


Indication LED (Green OUT1 and Red OUT2): Displays the switch condition.  
LCD display: Displays the current status of pressure, setting mode, selected indication unit and error code. Four display modes can be selected: display always in red or green, or display changing from green to red, or red to green, according to the output status.  
[UP] button (UP): Selects the mode or increases the ON/OFF set value. Press this button to change to the peak display mode.  
[DOWN] button (DOWN): Selects the mode or decreases the ON/OFF set value. Press this button to change to the bottom display mode.  
[SET] button (SET): Press this button to change to another mode and to set a value.  
Unit indication: Displays the unit currently selected (only for kPa or MPa unit indication).

## Mounting and Installation

### Installation


- Mounting with bracket**
  - The tightening torque of the piping port must be 7 to 9 Nm.
  - The tightening torque of the mounting screw for the bracket must be 0.5 to 0.7 Nm.
  - Fix the bracket to the pressure switch with the set screws M3x5L (2 pcs.) supplied, before installation.
  - Bracket A (Model: ZS-38-A1)
  - Bracket B (Model: ZS-38-A2)
  - Bracket C (Model: ZS-38-A3)

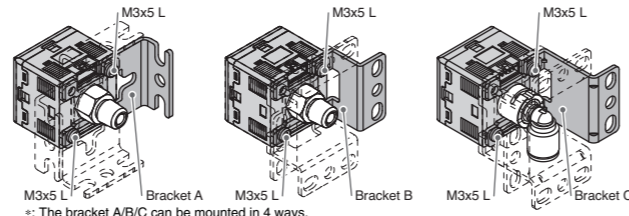

\*: The bracket A/B/C can be mounted in 4 ways.

### Mounting with panel mount adapter

- Fix the panel mount adapter to the product with the mounting screws (nominal size: 3 x 8 L, 2 pcs.) supplied.
- Panel mount adapter (Model: ZS-27-C)
- Panel mount adapter + Front protective cover (Model: ZS-27-D)

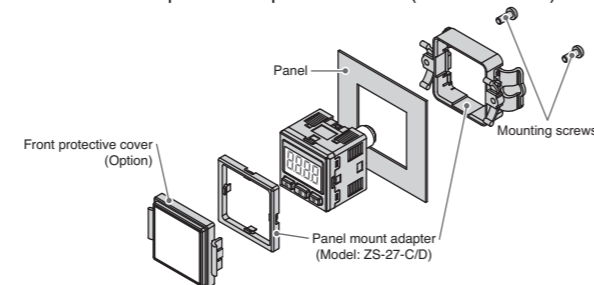


\*: The panel mount adapter can be rotated by 90 degrees for mounting.

Refer to the product catalogue or SMC website (URL <http://www.smcworld.com>) for more information about panel cut-out and mounting hole dimensions.

### Piping

#### Connection using One-touch fitting

- Cut the tube end perpendicular.
- Hold the tube and insert it into the One-touch fitting slowly until it bottoms out.

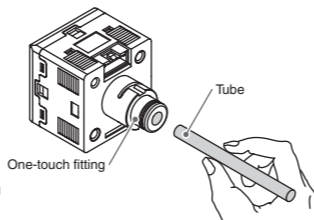

- Allow sufficient tube length to prevent twist and tensile or moment loads from being applied to the fitting or tube.
- When using a tube manufactured by a company other than SMC, check that its outside diameter tolerance satisfies the following values:
  - Nylon tube: ±0.1 mm maximum
  - Soft nylon tube: ±0.1 mm maximum
  - Polyurethane tube: +0.15 mm/-0.2 mm maximum

### Wiring


#### Connection

- Connections should only be made with the power supply turned off.
- Use separate routes for the Pressure switch wiring and any power or high voltage wiring. Otherwise, malfunction may result due to noise.
- Ensure that the FG terminal is connected to ground when using a commercially available switch-mode power supply. When a switch-mode power supply is connected to the product, switching noise will be superimposed and the product specification can no longer be met. This can be prevented by inserting a noise filter, such as a line noise filter and ferrite core, between the switch-mode power supply and the product, or by using a series power supply instead of the switch-mode power supply.

### Connector

#### Connecting / Disconnecting

- When mounting the connector, insert it straight into the socket, holding the lever and connector body, and push the connector until the lever hooks into the housing, and locks.
- When removing the connector, press down the lever to release the hook from the housing and pull the connector straight out.

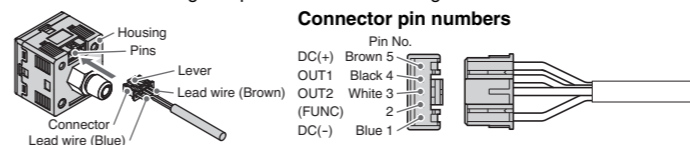

#### Connector pin numbers

Pin No.  
DC(+) Brown 5  
OUT1 Black 4  
OUT2 White 3  
(FUNC) 2  
DC(-) Blue 1

## Pressure Setting

### Measurement mode

The measurement mode is the condition where the pressure is detected and indicated, and the switch function is operating. This is the basic mode, and the other modes should be selected for setting changes and other function settings.

Set ON and OFF point of the Pressure switch.


#### Operation

When the pressure exceeds the set value, the Pressure switch will turn ON.

When the pressure falls below the set value by the amount of hysteresis or more, the Pressure switch will turn OFF.

The default setting of the output set value is the central value between the atmospheric pressure and the upper limit of the rated pressure range.

If this condition, shown to the right, is acceptable, then keep these settings.

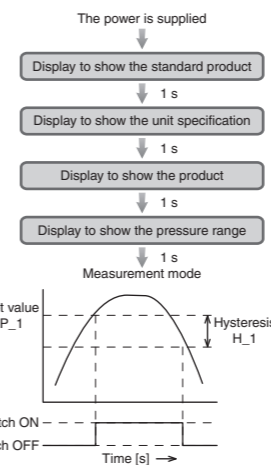


#### <How to operate>

[Hysteresis mode]


- Press the [SET] button once in measurement mode.

- [P\_1] or [n\_1] and the set value are displayed in turn.

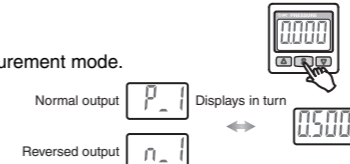

- Press the [UP] or [DOWN] button to change the set value. The [UP] button is to increase and the [DOWN] button is to decrease.

- Press the [UP] button once to increase by one digit, and press it continuously to keep increasing the set value.
- Press the [DOWN] button once to decrease by one digit, and press it continuously to keep decreasing the set value.

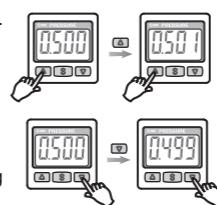

- Press the [SET] button to complete the setting. For models with 2 outputs, [P\_2] or [n\_2] will be displayed. Set as above.

The Pressure switch operates within a set pressure range (from P1L to P1H) during window comparator mode. Set P1L (switch lower limit) and P1H (switch upper limit) with the setting procedure above. (When reversed output is selected, [n1L] and [n1H] are displayed.)

#### Zero clear of display


The display is reset to zero when the [UP] and [DOWN] buttons are pressed simultaneously for 1 second.

For the initial operation, always perform zero clear with no pressure applied.

## Function Setting

### Function selection mode

In measurement mode, press the [SET] button for 2 seconds or longer to display [F 0]. Select to display the function to be changed, [F□□]. Press the [SET] button for 2 seconds or longer in function selection mode to return to measurement mode.

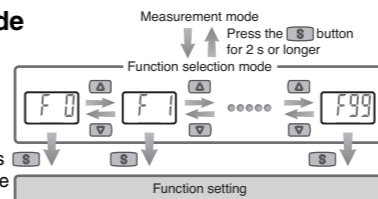

\*: Some functions are not available depending on part number. All functions are displayed with [F□□] followed by the function description. If a function is not available, the function is displayed as [---].

### Default setting

At the time of shipment, the following settings are provided. If the setting is acceptable, keep it for use.

Refer to the SMC website (URL <http://www.smcworld.com>) for more detailed information about setting changes, or contact SMC.

#### [F 0] Unit conversion function

Unit specification	Model	Default setting	Unit specification	Model	Default setting
Nil or M	ISE30A	MPa	p	ISE30A	psi
	ZSE30A(F)	kPa		ZSE30A(F)	

### [F 1] Setting of OUT1

Item	Description	Default setting
Output mode	Selects hysteresis mode or window comparator mode.	Hysteresis mode
Reversed output	Selects reversed output.	Normal output
Pressure setting	Sets ON or OFF point of the switch output.	ISE30A: 0.500 MPa ZSE30A: -50.5 kPa ZSE30AF: 50.0 kPa
Hysteresis	Chattering can be prevented by setting hysteresis.	ISE30A: 0.050 MPa ZSE30A: 5.0 kPa ZSE30AF: 5.0 kPa
Display colour	Selects the display colour.	ON: Green OFF: Red

### [F 2] Setting of OUT2

Same setting as [F 1] OUT1. The display colour is linked to the setting of OUT1, and can not be set for OUT2.

### Other parameter setting

Item	Default setting
[F 3] Setting of response time	2.5 ms
[F 4] Setting of display resolution	1000-split
[F 5] Setting of auto-preset	Manual
[F 6] Setting of fine adjustment of display value	0%
[F 7] Setting of power saving mode	OFF
[F 8] Setting of security code	OFF
[F90] Setting of all functions	OFF
[F97] Selection of copy function	OFF
[F98] Check of output	Normal
[F99] Reset to the default setting	OFF

## Other Settings

#### Peak / Bottom hold display

#### Zero clear

#### Key lock

To set each of these functions, refer to the SMC website (URL <http://www.smcworld.com>) for more detailed information, or contact SMC.

## Maintenance

### How to reset the product after a power cut or forcible de-energizing

The setting of the product will be retained as it was before a power cut or de-energizing.

The output condition is also basically recovered to that before a power cut or de-energizing, but may change depending on the operating environment. Therefore, check the safety of the whole installation before operating the product. If the installation is using accurate control, wait until the product has warmed up (approximately 10 to 15 minutes).

## Troubleshooting

### Error Indication

This function is to display error location and content when a problem or an error occurs.

Error Name	Error Display	Error Type	Troubleshooting Method
Over current Error	Er1 Er2	The switch output load current is more than 80 mA.	Turn the power off and remove the cause of the over current. Then turn the power on.
Residual Pressure Error	Er3	During the zero clear operation, pressure above ±7%F.S. (±3.5%F.S. for compound pressure) has been applied. After 1 second, the mode will return to measurement mode. The zero clear range can vary ±1%F.S. with individual product differences.	Perform zero clear operation again after restoring the applied pressure to an atmospheric pressure condition.
Pressurizing Error	XXX	Pressure has exceeded the upper limit of the set pressure range.	Reset applied pressure to a level within the set pressure range.
	LLL	Pressure has exceeded the lower limit of the set pressure range.	
System Error	Er0 Er4 Er6 Er7 Er8 Er9	Displayed in the case of an internal data error.	Turn the power off and turn it on again. If resetting fails, an investigation by SMC Corporation will be required.

If the error can not be reset after the above measures are taken, then please contact SMC.

Refer to the SMC website (URL <http://www.smcworld.com>) for more information about troubleshooting.

## Specifications Outline with Dimensions (in mm)

Refer to the product catalogue or SMC website (URL <http://www.smcworld.com>) for more information about the product specifications and outline dimensions.

SMC Corporation URL <http://www.smcworld.com>

Akihabara UDX 15F, 4-14-1, Sotokanda, Chiyoda-ku, Tokyo 101-0021, JAPAN  
Phone: +81 3-5207-8249 Fax: +81 3-5298-5362

Note: Specifications are subject to change without prior notice and any obligation on the part of the manufacturer.  
© 2011 SMC Corporation All Rights Reserved