
Plate Cylinder with Lock

MLU Series

ø**25**, ø**32**, ø**40**, ø**50**

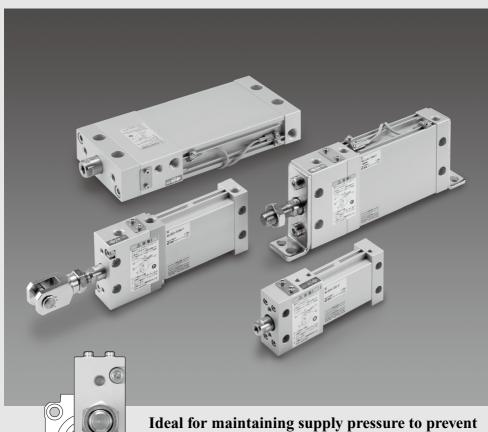

CLJ2

CLM2

CLG1 CL1

MLGC

CNG

MNB CNA2

CNS

CLS

CLQ RLQ

MLU

MLGP

ML1C

dropping of the load when residual pressure is

D-□



released.


Plate Cylinder with Lock


MLU Series


Ø25, Ø32, Ø40, Ø50

Drop prevention is possible at any point of stroke.


- Drop prevention for middle stroke emergency stops
- Lock positions can be changed to accommodate the position of the external stopper and the thickness of the clamped workpiece.

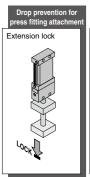

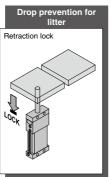

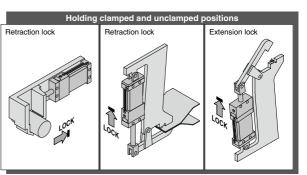

Simple construction: Simple and reliable locking system

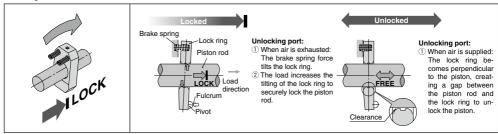

Slim and compact lock unit


• Lock unit length

35 mm to 50.5 mm

• Lock unit width 24 mm to 39 mm

The compact lock unit does not protrude beyond the cylinder body surface.

Lock unit	thickne	SS (mm)
Bore size (mm)	A	В
25	24	35
32	28	42
40	32	44
50	39	50.5

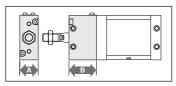

CLJ2

CLM2

CLG1

CL1
MLGC
CNG
MNB


CNA2

CNS


CLS

RLQ

MLGP ML1C

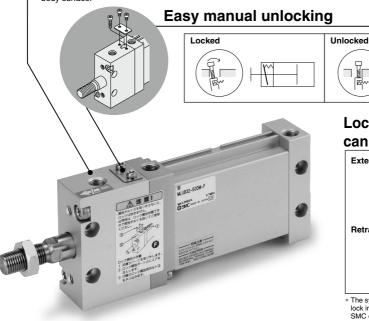


Locking direction can be selected.

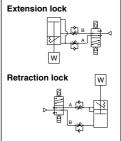


* The symbol for the cylinder with lock in the pneumatic circuit uses SMC original symbol.

Various mounting brackets to accommodate wide range of applications.

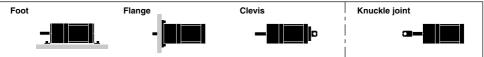

Flexible mounting: Possible to mount on all surfaces except for the one with ports

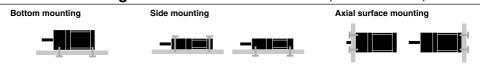

Series Variations


Series	Locking	Bore size		Standard stroke (mm)																
direction	direction	(mm)	5	10	15	20	25	30	35	40	45	50	75	100	125	150	175	200	250	300
	Extension lock	25	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
MLU		32	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
MLO	Retraction lock	40	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
		50	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0

D-□ -X□

Plate Cylinder with Lock MLU Series

Ø25, Ø32, Ø40, Ø50

How to Order

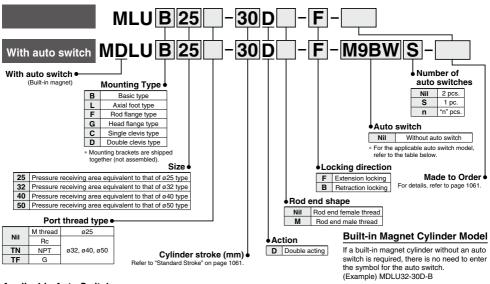

Applicable Auto Switches/Refer to pages 1119 to 1245 for further information on auto switches

		Electrical	light	140		Load volt	age	Auto swit	ch model	Lead	l-wire	len	gth (m)	D : 1									
Type	Special function	entry direction	Indicator light	Wiring (output)		DC	AC	Perpendicular	In-line	0.5 (Nil)	1 (M)	3 (L)			Pre-wired connector	Applica	ble load							
				3-wire (NPN) 3-wire (PNP)		5 V,12 V		M9NV	M9N	•	•	•	0	 —	0	10 -:								
		Grommet			5 V,12 V		M9PV	M9P	•	•	•	0	_	0	IC circuit									
ch	_			0	12	12 V	M9BV	M9B	•	•	•	0	-	0										
switch		Connector		2-wire				J79C	_	•	_	•	•	•	-									
0.0	Diagnostic indication (2-color indicator)			3-wire (NPN)		5 V,12 V	, v	M9NWV	M9NW	•	•	•	0	_	0	IC circuit								
auto				3-wire (PNP)	5 V, 12 V		M9PWV	M9PW	•	•	•	0	_	0	IC CITCUIT	Relay,								
state			Yes	2-wire	24 V	12 V	_	M9BWV	M9BW	•	•	•	0	_	0	_	PLC							
sta	Water resistant (2-color indicator)			3-wire (NPN)		5 V,12 V		M9NAV**	M9NA**	0	0	•	0	_	0	IC circuit	1 1							
Solid		Grommet	Grommet	Grommet		3-wire (PNP)		3 V, 12 V		M9PAV**	M9PA**	0	0	•	0	<u> </u>	0	IC CITCUIT						
S				2-wire	I-wire (NPN) 5 \	12 V		M9BAV**	M9BA**	0	0	•	0	_	0	_								
	With diagnostic output (2-color indicator)			4-wire (NPN)		5 V,12 V	1]	5	5 V,12 V	5 V,12 V	5 V,12 V	5 V,12 V		_	F79F	•	_	•	0	_	0	IC circuit	
	Magnetic field resistant			2-wire(Non-polar)					P3DWA	•	_	•		 -	0									
	(2-color indicator)			2-wire(Ivoir-polar)		-	_			P4DW	-	_	•	•	_	0								
ch			Yes	3-wire (NPN equiv.)	_	5 V	_	_	A76H	•	_	•	-	-	_	IC circuit	_							
switch		Grommet	165			_	200 V	A72	A72H	•	_	•	_	 —	_									
0.0	_						100 V	A73	A73H	•	_	•	•	_	_									
anı			No	2-wire		12 V	100 V or less	A80	A80H	•	_	•	-	 -	_	IC circuit	Relay,							
Reed auto		6	Connector Yes 2-Wire 24 V	12 V		A73C	_	•	_	•	•	•	-	_	PLC									
8		Connector	No	5		í l					_	A80C	_	•	_	•	•	•	_	IC circuit				
	Diagnostic indication (2-color indicator)	Grommet	Yes]		_		A79W	_	•	_	•	_	_	_	_	1							

^{**} Water resistant type auto switches can be mounted on the above models, but in such case SMC cannot guarantee water resistance. Consult with SMC regarding water resistant types with the above model numbers.

- (Example) M9NW * Lead wire length symbols: 0.5 m Nil * Solid state auto switches marked with a "O" are produced upon receipt of order.
 - 1 m M (Example) M9NWM D-A9□/A9□V cannot be mounted. (Example) M9NWI 3 m L
 - * D-P4DW type can only be mounted on the types for tubing of ø40 and ø50. (Example) M9NWZ

Only D-P4DW is mounted when shipped.

(Example) J79CN

* Refer to pages 1192 and 1193 for the details of auto switches with a pre-wired connector.

None ······ N

Besides the models in the above table, there are some other auto switches that are applicable. For more information, refer to page 1070.

Plate Cylinder with Lock **MLU** Series



Cylinder Specifications

Size	25	32	40	50							
Action		Double acting, Single rod									
Fluid		Α	ir								
Proof pressure		1.05	MPa								
Maximum operating pressure	0.7 MPa										
Minimum operating pressure	0.2 MPa Note)										
Ambient and fluid temperature	-10 to 60∘C (with no freezing)										
Lubrication		Not required	l (Non-lube)								
Cushion		Rubber bump	er (Standard)								
Stroke length tolerance		+1	.4								
Piston speed	-	50 to 50	0 mm/s								
Cylinder port size (Rc, NPT, G)	M5 x 0.8	1/	8	1/4							

Note) The minimum operating pressure of the cylinder is 0.1 MPa when the cylinder and lock are connected to separate ports.

Lock Specifications

Size	25	32	40	50					
Locking action	Spring locking (Exhaust locking)								
Unlocking pressure	0.2 MPa or more								
Locking pressure	0.05 MPa or less								
Locking direction	One direction	(Either extensio	n locking or retra	ction locking)					
Maximum operating pressure		0.7 MPa							
Unlocking port connection size (Rc, NPT, G)	M5 x 0.8	1/8							
Holding force N (maximum static load) Note)	245	403	629	982					

Note) The holding force (max. static load) shows the maximum capability and does not show the normal holding capability. So, select an appropriate cylinder while referring to page 1071.

Non-rotating Rod Accuracy

Size	25	32	40	50
Non-rotating rod accuracy	±1°	±0.8°	±0	.5°

Standard Stroke

Size	Standard stroke (mm)	Max. manufacturable stroke
25, 32, 40, 50	5, 10, 15, 20, 25, 30, 35, 40, 45, 50 75, 100, 125, 150, 175, 200, 250, 300	300

* Strokes other than listed above will be produced upon request of order. Please consult with SMC.

** Strokes longer than 300 mm are not available.

Weight

Unit: kg

	Size	25	32	40	50
	Basic type	0.34	0.58	0.87	1.52
Basic	Axial foot type	0.41	0.72	1.08	1.86
	Flange type: Rod/Head	0.44	0.72	1.10	1.98
weight	Single clevis type	0.40	0.70	1.09	1.92
	Double clevis type (with pin)	0.41	0.74	1.13	1.99
Additional w	eight per each 50 mm of stroke	0.12	0.16	0.22	0.34
	Single clevis type (Double clevis bracket)	0.06	0.12	0.22	0.40
Attached metal weight	Double clevis type (Single clevis bracket)	0.07	0.16	0.26	0.47
weight	Single knuckle joint	0.03	0.04	0.07	0.16
	Double knuckle joint (with pin)	0.05	0.09	0.14	0.29

Note) The weight of the attached metal single clevis and double clevis include the weight of two pieces of mounting bolts.

Calculation method-Example: MDLUL32-100D-F

• Stroke100 stroke

0.72 +100/50 x 0.16 = 1.04 kg



D-□

1061 ®

CLG1 CL1 MLGC

CLJ2 CLM2

CNG

CNA2

CNS

CLQ

RLQ

MLU

MLGP





Symbol	
-XC87	Heavy duty (ø40 and ø50 only)

Refer to pages 1068 to 1070 for cylinders with auto switches.

- · Minimum auto switch mounting stroke
- Proper auto switch mounting position (detection at stroke end) and mounting height
- · Operating range
- Switch mounting bracket: Part no.

MLU Series

Theoretical Output			-	C
--------------------	--	--	---	---

- OUT	Г	_	Liki
001			_ IIV

Unit: N

Size	Rod size	Operating	Piston area		Ope	erating pro	essure (M	Pa)	
Size	(mm)	direction	(mm²)	0.2	0.3	0.4	0.5	0.6	0.7
25	12	OUT	491	98	147	196	246	295	344
23	12	IN	378	76	113	151	189	227	265
32	14	OUT	804	161	241	322	402	482	563
32	14	IN	650	130	195	260	325	390	455
40	16	OUT	1257	251	377	503	629	754	880
40	10	IN	1056	211	317	422	528	634	739
50	20	OUT	1963	393	589	785	982	1178	1374
30	20	IN	1649	330	495	660	824	989	1154

Note) Theoretical output (N) = Pressure (MPa) x Piston area (mm2)

Mounting Bracket Part No.

Bracket Size	25	32	40	50
Foot Note 1)	MU-L02	MU-L03	MU-L04	MU-L05
Flange	MU-F02	MU-F03	MU-F04	MU-F05
Single clevis	MU-C02	MU-C03	MU-C04	MU-C05
Double clevis	MU-D02	MU-D03	MU-D04	MU-D05

Note 1) When ordering foot brackets, order 2 pieces for each cylinder.


Note 2) The parts included with each bracket are shown below.

Foot, Flange, Single clevis/Body mounting bolt

Double clevis/Pins for clevis, Type C retaining ring for axis, Body mounting

Plate Cylinder with Lock **MLU** Series

Construction

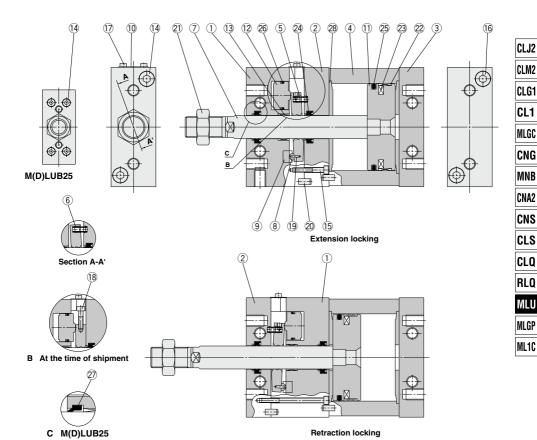

Component Parts

No.	Description	Material	Note
1	Lock body	Aluminium alloy	Hard anodized
2	Cover	Aluminium alloy	Hard anodized
3	Head cover	Aluminium alloy	Hard anodized
4	Cylinder tube	Aluminium alloy	Hard anodized
5	Lock ring	Carbon steel	Heat treatment
6	Brake spring	Steel wire	Zinc chromated
7	Piston rod	Carbon steel	Hard chromium electro plating
8	Pivot	Carbon steel	Heat treatment, zinc chromated
9	Pivot key	Carbon steel	Heat treatment, zinc chromated
10	Dust proof cover	Stainless steel	
11	Piston	Aluminium alloy	Chromate
12	Release piston	Special steel	Heat treatment
13	Bushing	Bearing alloy	
14	Hexagon socket head cap screw A	Stainless steel	

No.	Description	Material	Note
15	Hexagon socket head cap screw B	Stainless steel	
16	Hexagon socket head cap screw C	Stainless steel	
17	Hexagon socket head cap screw D	Chrome molybdenum steel	
18	Hexagon socket head cap screw E	Chrome molybdenum steel	
19	Spring pin	Carbon steel	
20	Parallel pin	Stainless steel	
21	Rod end nut	Rolling steel	Only for use with rod end male thread
22	Wear ring	Resin	
23	Magnet	_	Only for use with built-in magnet type
24	Rod seal	NBR	Use one piece with M(D)LUB25
24	nou seai	NBH	Use 2 pieces with M(D)LUB32 to 50
25	Piston seal	NBR	
26	Release piston seal	NBR	
27	Scraper	NBR	Only for use with M(D)LUB25
28	Bumper	Urethane rubber	

MLU Series


Dimensions

Basic type


M(D)LUB25, 32


M(D)LUB40, 50


Retraction locking

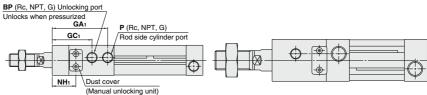


Extension locking

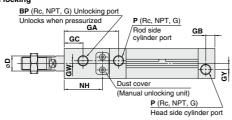

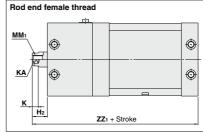

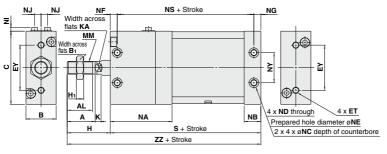

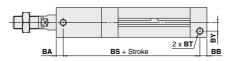

(mm)


Model	Stroke range	A	AL	В	В1	ВА	вв	BP	вѕ	ВТ	ву	С	D	ET	EY	GA	GA1	GВ	GC	GC₁	GW	GΥ	н	H1
MLUB25	5 to 300	22	19.5	24	17	8	9	M5 x 0.8	73	M5 x 0.8 depth 7.5	7	54	12	M5 x 0.8 depth 11	26	45	45	10	15.5	32.5	2.5	5	36	6
MLUB32	5 to 300	26	23.5	28	19	6.5	6.5	1/8	87	M6 x 1 depth 12	8	68	14	M6 x 1 depth 11	42	50.5	51.5	8.5	17.5	37	0	5.5	40	7
MLUB40	5 to 300	30	27	32	22	9	8	1/8	87	M8 x 1.25 depth 13	9	86	16	M8 x 1.25 depth 11	54	53	53	9	18.5	38.5	0	7	45	8
MLUB50	5 to 300	35	32	39	27	12	10	1/8	102.5	M10 x 1.5 depth 14.5	9	104	20	M10 x 1.5 depth 15	64	62	62	11.5	23	43	6	8	53	11
																							_	_

Model	H ₂	K	KA	MM	MM ₁	NA	NB	NC	ND	NE	NF	NG	NH	NH ₁	NI	NJ	NS	NY	Р	s	ZZ	ZZ ₁
MLUB25	14	5.5	10	M10 x 1.25	M6 x 1 depth 12	49	14	7.5 depth 4.5	M5 x 0.8	4.3	8	6	30	19	3.5	6	76	26	M5 x 0.8	90	126	104
MLUB32	14	5.5	12	M12 x 1.25	M8 x 1.25 depth 13	57.5	15.5	9 depth 5.5	M6 x 1	5.1	6.5	6.5	35.5	22	3.5	6	87	28	1/8	100	140	114
MLUB40	15	6	14	M14 x 1.5	M8 x 1.25 depth 13	60	16	10.5 depth 6.5	M8 x 1.25	6.9	9	8	37.5	22.5	3.5	9	87	36	1/8	104	149	119
MLUB50	18	7	18	M18 x 1.5	M10 x 1.5 depth 15	72	21.5	13.5 depth 8.5	M10 x 1.5	8.7	12	10	44	28	3.5	9	102.5	42	1/4	124.5	177.5	142.5

Plate Cylinder with Lock **MLU** Series

Dimensions

Axial foot type

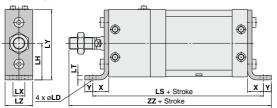

										(mm
Model	LD	LH	LS	LT	LX	LY	LZ	Х	Υ	ZZ
MLUL2	5 5.5	29	114	3.2	11	56	23	12	6	144
MLUL3	2 6.6	37	132	4.5	12	71	27	16	8	164
MLUL4	0 9	46	140	4.5	15	89	31	18	10	177
MLUL5	0 11	57	166.5	5	18	109	37	21	11	209.5

FD FT FV FX FV FZ

CLJ2

CLM2

CLG1 CL1

MLGC

CNG

MNB

CNA2

CNS

CLS

CLQ

ZZ

134

148

158


189.5


RLQ MLU

MLGP

ML1C


Rod flange type

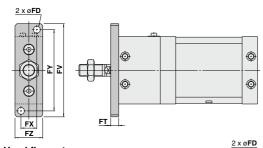

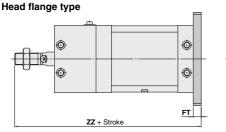

	WOUCI						
	MLUF25, MLUG25	5.5	8	76	14	66	24
	MLUF32, MLUG32	7	8	94	16	82	28
	MLUF40, MLUG40	9	9	118	18	102	32
	MLUF50, MLUG50	11	12	144	22	126	39
2							



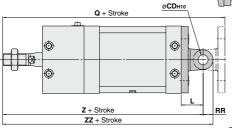

Single clevis type	Double clevis type

RR	CX ^{-0.2} CZ ^{-0.1}	CX:	4 2	- (/		~			(mm)
	Model	CD _{H10}	СХ	CZ	L	Q	RR	Z	ZZ	Rotation angle
	MLUC25, MLUD25	8 +0.058	9	18	17	160	8	143	151	100
	MLUC32, MLUD32	10+0.058	11	22	22	184	10	162	172	90
	MILLICAD MILLIDAD	10+0.058	10	26	07	000	10	170	100	-00


MLUC50, MLUD50 14*0.070 16 32 32 241.5 14 209.5 223.5

* Clevis pins and retaining rings are included in the double clevis type.

FΧ


MLU Series **Accessory Bracket Dimensions**

Single Clevis (Double clevis bracket)

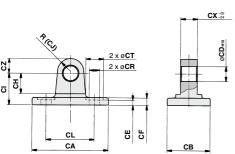

_		оСDно	ZQ
F			•

Double Clevis (Single clevis bracket)

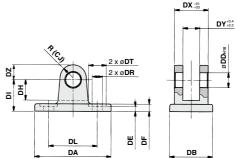

									(mm)
Model	Size	CA	СВ	CD _{H10}	CE	CF	СН	CI	CJ
MU-C02	25	53	23	8*0.058	3.5	4	11	17	7
MU-C03	32	67	27	10+0.058	3.5	7	13	22	10
MU-C04	40	85	31	10*0.058	3.5	10	13	27	10
MU-C05	50	103	37	14 ^{+0.070}	5.5	12	17	32	14

Model	CL	CR	СТ	СХ	CZ
MU-C02	26	5.3	9.5	9	8
MU-C03	42	6.4	11	11	10
MU-C04	54	8.4	14	13	10
MU-C05	64	10.5	17	16	14


									(mm)
Model	Size	DA	DB	DD _{H10}	DE	DF	DH	DI	DJ
MU-D02	25	53	23	8+0.058	3.5	4	11	17	7
MU-D03	32	67	27	10+0.058	3.5	7	13	22	10
MU-D04	40	85	31	10+0.058	3.5	10	13	27	10
MU-D05	50	103	37	14+0.070	5.5	12	17	32	14


Model	DL	DR	DT	DX	DY	DZ	Applicable pin no.
MU-D02	26	5.3	9.5	18	9	8	CD-MU02
MU-D03	42	6.4	11	22	11	10	CD-MU03
MU-D04	54	8.4	14	26	13	10	CD-MU04
MU-D05	64	10.5	17	32	16	14	CD-MU05

Clevis pins and retaining rings are included with the double clevis type.

Accessory Bracket Dimensions **MLU** Series


Single Knuckle Joint

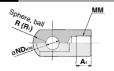

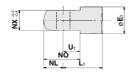

Part no.	Size	A 1	E ₁	L ₁	M	М
I-MU02	25	10.5	16	27	M10	(1.25
I-MU03	32	12	18	31	M12	c 1.25
I-MU04	40	14	20	36	M14	x 1.5
I-MU05	50	18	28	46	M18	x 1.5
Part no.	ND _{H10}	NL	NO	NX	R ₁	U ₁
I-MU02	8+0.058	8.5	19.5	9	8.5	11
I-MU03	10+0.058	10	24	11	10	14
	0.050			4.0		4.5
I-MU04	10+0.058	11	26	13	11	15

Double Knuckle Joint

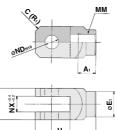

				NL_	L1	_		()	MNB
Part no.	Siz	-	A 1	E ₁	L ₁	MI		(mm) ND _{H10}	CNA2
Y-MU02	25	5	10.5	14	27	M10 x	1.25	8+0.058	
Y-MU03	32	2	12	18	31	M12 x	1.25	10*0.058	CNS
Y-MU04	40)	14	20	36	M14 2	c 1.5	10+0.058	CNO
Y-MU05	50)	18	28	46	M18	¢ 1.5	14+0.070	
									CLS
Part no.	NL	NO	NX	NZ	R ₁	U ₁	Applic	cable pin no.	
Y-MU02	8	21	9	18	3	13	C	D-MU02	CI O
Y-MU03	10	24	11	22	4	14	С	D-MU03	CLQ

17

23

CD-MU04


CD-MU05

16 * Knuckle pin and retaining ring are included.

16

10 27 13 26

Clevis Pin and Knuckle Pin

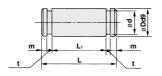

					(mm)
Part no.	Size	Dd9	L	d	L ₁
CD-MU02	25	8-0.040	23	7.6	18.2
CD-MU03	32	10-0.040	27	9.6	22.2
CD-MU04	40	10-0.040	31	9.6	26.2
CD-MU05	50	14-0.050	38	13.4	32.2


Part no.	m	t	Retaining ring
CD-MU02	1.5	0.9	C8 type for pivot
CD-MU03	1.25	1.15	C10 type for pivot
CD-MU04	1.25	1.15	C10 type for pivot
CD-MU05	1.75	1.15	C14 type for pivot

- * Included with the double clevis and double knuckle joint as standard. * Retaining rings are included.

Rod End Nut

Y-MU04

Y-MU05

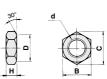

						(mm)
Part no.	Size	d	Н	В	С	D
NT-03	25	M10 x 1.25	6	17	19.6	16.5
NT-MU03	32	M12 x 1.25	7	19	21.9	18
NT-04	40	M14 x 1.5	8	22	25.4	21
NT-05	50	M18 x 1.5	11	27	31.2	26

* One piece is included with the rod end male thread as standard.

D-□

CLJ2 CLM2 CLG1 CL1

MLGC CNG

RLQ

MLU


MLGP ML1C

-X□



MLU Series Auto Switch Mounting 1

Auto Switch Proper Mounting Position (Detection at Stroke End) and Its Mounting Height

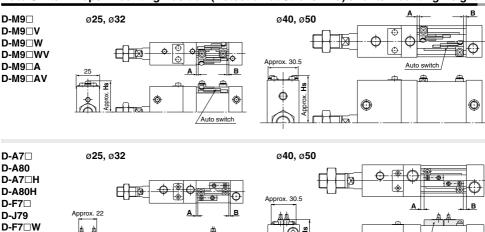


Auto switch

D-F7BA
D-A73C
D-A80C
D-J79C
D-A79W
D-F7□WV
D-F7□V

D-J79W

D-F79F D-F7NT


D-F7BAV
D-P3DWA Ø25 to Ø50

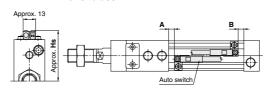

0

Auto switch

D-P4DW Ø40, Ø50

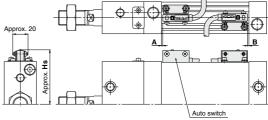

Auto Switch Proper Mounting Position (Detection at Stroke End) and Its Mounting Height

Auto Sw	ritch	Pro	per l	Mou	nting	g Po	sitio	n								(mm)
	D-M9 D-M9 D-M9 D-M9 D-M9	□V □W □WV □A	D-A D-A		D-A72 D-A7 H D-A80H D-F7 V D-J79 D-F7 W D-F7 W D-J79W D-F7BA D-F7BA D-F7BA		D-A D-A D-J		D-A	79W	D-F7NT		D-P3DWA			
(mm)	Α	В	Α	В	Α	В	Α	В	Α	В	Α	В	Α	В	Α	В
25	5.5	6	4	4.5	4.5	5	4.5	5	1.5	2	9.5	10	2.5	3	_	_
32	5.5	6	4	4.5	4.5	5	4.5	5	1.5	2	9.5	10	2.5	3		_
40	6	6.5	4.5	5	5	5.5	0	0	2	2.5	10	10.5	3	3.5	0.5	1
50	7.5	8	6	6.5	6.5	7	0.5	1	3.5	4	11.5	12	4.5	5	2	2.5

Note) Adjust the auto switch after confirming the operating conditions in the actual setting.

Auto Switch Mounting Height

Auto On	ALCH MICE		cigiii						(mm)
		D-A7□ D-A80	D-A7□H D-80H D-F7□ D-J79 F-F7□W D-79W D-F7NT D-F79F D-F7BA	D-A73C D-A80C	D-F7□V D-F7□WV D-F7BAV	D-J79C	D-A79W	D-P3DWA	D-P4DW
(mm)	Hs	Hs	Hs	Hs	Hs	Hs	Hs	Hs	Hs
25	33.5	32	33	39	35.5	37.5	34.5	37.5	_
32	40.5	39	40	46	42.5	44.5	41.5	44.5	_
40	48.5	47	48	54	50.5	52.5	49.5	52.5	56.5
50	58	56	57	63	59.5	61.5	58.5	62	66

Minimum Stroke for Auto Switch Mounting

Number of auto	Bore size	D-M	9□V	D-M9	□WV	D-M9	D□AV	D-M9		D-M	9□A
switches		Different side(s)	Same side								
1 pc.	25 to 50		5	1	0	1	0	1	5	1	5
0	25, 32	1	0	1	5	1	5	1	5	2	0
2 pcs.	40, 50	10	30	15	30	15	35	15	40	20	45

(mm)

Number of auto switches	D-F7□V D-J79C	D-A7□ D-A80 D-A73C D-A80C	D-F7□WV D-F7BAV	D-A7□H/A80H D-A79W D-F7□/J79 D-F7□W/J79W D-F7BA/F7NT D-F79F	D-P3DWA Different side(s) Same side	D-P4	
1 pc.	5	5	10	15	15	2	0
2 pcs.	5	10	15	15	15	20	75

^{*} Only size 40 and 50 can be mounted.

Operating Range

				(mm)
Auto switch model	Bore size			
	25	32	40	50
D-M9□/M9□V D-M9□W/M9□WV D-M9□A/M9□AV	4.5	5.5	7	7
D-A7□/A80 D-A7□H/A80H D-A73C/A80C	13	13	13	13
D-A79W	13	13	14	14

				(mm)	
A 1 N. I I. I	Bore size				
Auto switch model	25	32	40	50	
D-F7□/J79 D-F7□V/J79C D-F7□W/F7□WV D-J79W/F7NT D-F7BA/F7BAV D-F79F	6.5	7	6.5	6.5	
D-P3DWA	6	6.5	6	6	
D-P4DW	_	_	5	5	

Since the operating range is provided as a guideline including hysteresis, it cannot be guaranteed (assuming approximately ±30% dispersion).

It may vary substantially depending on an ambient environment.



RLQ MLU

CLJ2 CLM2 CLG1 CL1 MLGC CNG

MNB CNA2 CNS CLS CLQ

MLGP

ML1C

MLU Series **Auto Switch Mounting 2**

Auto Switch Mounting Bracket Part No.

Auto switch model	Bore size (mm)				
Auto switch model	ø 25	ø 32	ø 40	ø 50	
	①BMU1-025 ②B02-012 Two kinds of auto switch mounting brackets are used as a set.				
D-M9□ D-M9□V D-M9□W D-M9□WV D-M9□A D-M9□AV	Set screw (not used)				
D-A7□/A80 D-A73C/A80C D-A7□H/A80H D-A79W D-F7□/J79 D-F7□/V D-J79C D-F7□W/J79W D-F7□W/J79W D-F7□W/J79W D-F7□W/D-F7□WV	BMU1-025				
D-P4DW	-	-	BMU	2-040	

Auto switch model	Bore size (mm)				
Auto switch model	ø 25	ø 32			
	BMU4-040S				
D-P3DWA	(Attached to a Hexagon socical screw (M: Auto switch mounting braci Auto sw mountin	tet head 2.5 x 11L)	Sprin	socket head w (M3 x 4L) g washer switch	
	Note 1) The tightening torque for a hexagon sock head cap screw (M2.5) is 0.2 to 0.3 N·m. the shorter side of a hexagon wrench, an it to tighten. (Too much tightening may by the switch) Note 2) The tightening torque for a hexagon sock head cap screw (M3) is 0.5 to 0.7 N·m.				

[Mounting screw set made of stainless steel]

The following set of mounting screws made of stainless steel (including nuts) is available. Use it in accordance with the operating environment. BBA2: For D-A7/A8/F7/J7 types D-F7BA/D-F7BAV are set on the cylinder with the stainless steel screws above

when shipped.

When an auto switch is shipped independently, BBA2 is attached.

Note 1) Refer to page 1229 for the details of BBA2.

Note 2) When mounting D-M9□A(V), order auto switch mounting brackets, stainless steel screw set BBA2 and BQ2-012S separately.

Other than the applicable auto switches listed in "How to Order", the following auto switches can be mounted. For detailed specifications, refer to pages 1119 to 1245.

Auto switch type	Model	Electrical entry direction	Features	Applicable bore size
	D-F7NV, F7PV, F7BV		_	
	D-F7NWV, F7BWV	Grommet (perpendicular)	Diagnostic indication (2-color indicator)	
	D-F7BAVL	1	Water resistant (2-color indicator)	
Solid state	D-F79, F7P, J79	_	ø25 to ø50	
D-F79W, F7PW, J79W D-F7NT D-F7BA D-P5DW		Diagnostic indication (2-color indicator)		
	Grommet (in-line)	With timer		
	D-F7BA		Water resistant (2-color indicator)	
	D-P5DW		Magnetic field resistant (2-color indicator)	ø40, ø50

* For solid state auto switches, auto switches with a pre-wired connector are also available. Refer to pages 1192 and 1193. * Normally closed (NC = b contact) solid state auto switches (D-M9□E(V)) are also available. Refer to page 1592-1 for details.



MLU Series Specific Product Precautions 1

Be sure to read this before handling the products.

Refer to back page 50 for Safety Instructions and pages 3 to 12 for Actuator and Auto Switch Precautions.

Selection

\land Warning

- 1. The holding force (max. static load) indicates the maximum capability to hold a static load without vibration and impact. The maximum load (workpiece mass) should be below 50% of the holding force (max. static load). Refer to 6 below when the kinetic energy of the workpiece is absorbed at the cylinder end or eccentric load is applied.
- 2. Do not use for intermediate cylinder stops.

This cylinder is designed for locking against inadvertent movement from a stationary condition. Intermediate stops during operation with the locking mechanism may damage the cylinder, greatly shorten the service life or cause unlocking malfunction.

Select the correct locking direction, as this cylinder does not generate holding force opposite to the locking direction.

The extension lock does not generate holding force in the cylinder's retracting direction, and the retraction lock does not generate holding force in the cylinder's extension direction.

4. Even when locked, there may be a stroke movement of approximately 1 mm in the locking direction due to external forces, such as the workpiece mass.

Even when locked, if air pressure drops, a stroke movement of approximately 1 mm may be generated in the locking direction of the lock mechanism due to external forces such as the workpiece mass.


5. When locked, do not apply impact loads, stroke vibration or rotational force, etc.


This may damage the locking mechanism, shorten the service life or cause unlocking malfunction.

Operate so that load mass, maximum speed and eccentric distance are within the limiting ranges in the graphs below.


Operation beyond the limiting range will lead to cylinder damage and reduced service life, etc.

Allowable Kinetic Energy (Energy absorbable at the cylinder end)

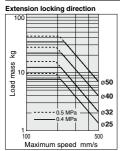

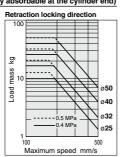

Allowable Load Mass

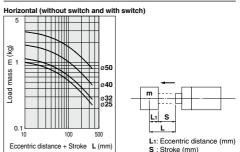

Pneumatic Circuit

⚠ Warning

- · Drop prevention circuit
- Do not use 3 position valves with the circuit example 1.
 The lock may be released due to inflow of the unlocking pressure.
- Install speed controllers for meter-out control. (Circuit example 1)

When they are not installed or they are used under meter-in control, it may cause malfunction.

 Branch off the compressed air piping for the lock unit between the cylinder and the speed controller. (Circuit example 1)

Note that branching off in other sections may shorten the service life

 Perform piping so that the side going from the piping junction to the lock release port is short. (Circuit example 1)

If the lock release port side is longer than another side from the piping junction, this may cause unlocking malfunction or shorten the service life.

Be careful of reverse exhaust pressure flow from a common exhaust type valve manifold. (Circuit example 1)

Since the lock may be released due to reverse exhaust pressure flow, use an individual exhaust type manifold or single type valve.

Be sure to release the lock before operating the cylinder. (Circuit example 2)

When the lock release delays, the cylinder may eject at high speed, which is extremely dangerous. It may also damage the cylinder, greatly shorten the service life or cause the locking malfunction. Even when the cylinder moves freely, be sure to release the lock and operate the cylinder.

7. Be aware that the locking action may be delayed due to the piping length or the timing of exhaust. (Circuit example 2)

The locking action may be delayed due to the piping length or the timing of exhaust, which also makes the stroke movement toward the lock larger. Install the solenoid valve for locking closer to the cylinder than the cylinder drive solenoid valve.

CLJ2 CLM2

CLG1

CL1

MLGC

CNG MNB

CNA2

CNS

CLQ

RLQ

MLGP

ML1C

-X



MLU Series Specific Product Precautions 2

Be sure to read this before handling the products.

Refer to back page 50 for Safety Instructions and pages 3 to 12 for Actuator and Auto Switch Precautions.

Pneumatic Circuit

∧ Warning

- · Emergency stop circuit
- Perform emergency stops with the pneumatic circuit. (Circuit examples 3 and 4)

This cylinder is designed for locking against inadvertent movement from a stationary condition. Do not perform intermediate stops while the cylinder is operating, as this may cause unlocking malfunction or shorten the service life. Emergency stops must be performed with the pneumatic circuit, and workpieces must be held with the locking mechanism after the cylinder fully stops.


- 2. When restarting the cylinder from the locked state, remove the workpiece and exhaust the residual pressure in the cylinder. (Circuit examples 3 and 4) A cylinder may eject at high speed, which is extremely dangerous. It may also damage the cylinder, greatly shorten the service life or cause the locking malfunction.
- 3. Be sure to release the lock before operating the cylinder. (Circuit example 4)

When the lock release delays, the cylinder may eject at high speed, which is extremely dangerous. It may also damage the cylinder, greatly shorten the service life or cause the locking malfunction. Even when the cylinder moves freely, be sure to release the lock and operate the cylinder.

- Drop prevention circuit, Emergency stop circuit
- If installing a solenoid valve for a lock unit, be aware that repeated supply and exhaustion of air may cause condensation. (Circuit examples 2 and 4)

The lock unit operating stroke is very small and so the pipe is long. If supplying and exhausting air repeatedly, condensation, which occurs by adiabatic expansion, accumulates in the lock unit. This may then cause air leakage and an unlocking malfunction due to corrosion of internal parts.

Circuit example

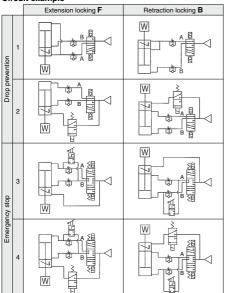

* The symbol for the cylinder with lock in the basic circuit uses SMC original symbol

Mounting

⚠ Caution

- Be sure to connect the load to the rod end with the cylinder in an unlocked condition.
 - If this is done when in a locked condition, it may cause damage to the lock mechanism.
- When fixing a work piece at the end of the piston rod, first retract the piston rod to the back end. Use the spanner hook at the end of the rod to keep the torque below the allowable tightening torque.
- Always apply the piston rod load in the axial direction. Avoid operation where rotational torque is applied. If it is the only possible way, be sure to use it within the allowable range shown in the table below.

Allowable Rotational Torque (
Size	25	32	40	50	
Allowable rotational torque	0.25	0.25	0.55	1.25	
Allowable torque for workpiece mounting	1.7	1.9	2.0	4.9	

4. The piston speed may exceed the maximum operating speed of 500 mm/s if the piping is directly connected to the cylinder. Please use speed controllers by SMC to adjust the piston speed so that it will not exceed 500 mm/s.

Preparing for Operation


⚠ Warning

 When starting operation from the locked position, be sure to restore air pressure to the B line in the pneumatic circuit.

When pressure is not applied to the B line, the load may drop or the cylinder may eject at high speed, which is extremely dangerous. It may also damage the cylinder, greatly shorten the service life or cause unlocking malfunction. When applying pressure to the B line, be sure to confirm whether the environment is safe since a workpiece may move.

Shipped in the unlocked condition maintained by the unlocking bolt. Be sure to remove the unlocking bolt following the procedures below before operation

The locking mechanism will not be effective without the removal of the unlocking bolt.

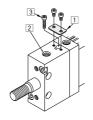

- Confirm that there is no air pressure inside the cylinder, and remove dust cover 11.
- 2) Supply air pressure of 0.2 MPa or more to unlocking port 2 shown in the drawing on the left.
- 3) Use a hexagon wrench (ø25, ø32: Width across flats 2.5, ø40, ø50: Width across flats 3) to remove unlocking bolt 3.





MLU Series Specific Product Precautions 3

Be sure to read this before handling the products.

Refer to back page 50 for Safety Instructions and pages 3 to 12 for Actuator and Auto Switch Precautions.

Manually Unlocking

⚠ Warning


1.Do not perform unlocking when an external force such as a load or spring force is being applied.

This is very dangerous because the cylinder will move suddenly. Release the lock after preventing cylinder movement with a lifting device such as a jack.

2. After confirming safety, operate the manual release following the steps shown below.

Carefully confirm that no one is inside the load movement range, etc., and that there is no danger even if the load moves suddenly.

Manually unlocking

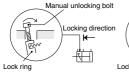



Extension locking direction

- 1) Remove the dust cover.
- Screw a manual unlocking bolt (a conventional bolt of e25, e32: M3 x 0.5 x 25 L or more, e40, e50: M4 x 0.7 x 35 L or more) into the lock ring threads as shown above, and lightly push the bolt in the direction of the arrow (head side) to unlock.

Retraction locking direction

Manual unlocking bolt

Locking direction

- 1) Remove the dust cover.
 - 2) Screw a manual unlocking bolt (a conventional bolt of a25, e32: M3 x 0.5 x 25 L or more, e40, e50: M4 x 0.7 x 35 L or more) into the lock ring threads as shown above, and lightly push the bolt in the direction of the arrow (rod side) to

Maintenance

In order to maintain good performance, operate with clean unlubricated air.

If lubricated air, compressor oil or drainage, etc., enter the cylinder, there is a danger of sharply reducing the locking performance.

2. Do not apply grease to the piston rod.

There is a danger of sharply reducing the locking performance.

3. Never disassemble the lock unit.


It contains a heavy duty spring which is dangerous. There is also a danger of reducing the locking performance.

Holding the Unlocked State

⚠ Warning

1. Sizes MLU can hold the unlocked condition.

- <Holding the unlocked condition>
- 1) Remove the dust cover.
- 2) Supply air pressure of 0.2 MPa or more to the unlocking port, and set the lock ring to the perpendicular position.
- b) Screw the unlocking bolt which is included (hexagon socket head screw ø25, ø32: M3 x 12 L, ø40, ø50: M4 x 16 L) into the lock ring to hold the unlocked condition.

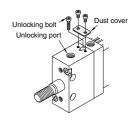

To use the locking mechanism again, be sure to remove the unlocking bolt.

The locking mechanism will not function with the unlocking bolt screwed-in. Remove the unlocking bolt according to the procedures described in the section "Preparing for Operation".

Auto Switch Handling Precautions

⚠ Warning

 If two or more cylinders are used in close proximity, the auto switches may malfunction affected by the magnets built in the nearby cylinder.

Please keep the cylinder mounting pitch larger than the values in the table below.

Minimum cylinder mounting pitch



				(mm
Size	25	32	40	50
L (d)	33 (10)	32 (5)	36 (5)	38 (0)

When the mounting pitch is equal to or smaller than the value shown above, it has to be shielded by an iron plate or a magnetic shielding plate (Part No. MU-S025) purchased separately. Please contact SMC for more information.

D-□

CLJ2

CLM2

CLG1

CL1

MLGC

CNG

MNB

CNA₂

CNS

CLO

RLO

MLU

MLGP

ML1C

1073

