
## 5 Port Solenoid Valve

## SY3000/5000/7000 Series



## 5 Port Solenoid Valve

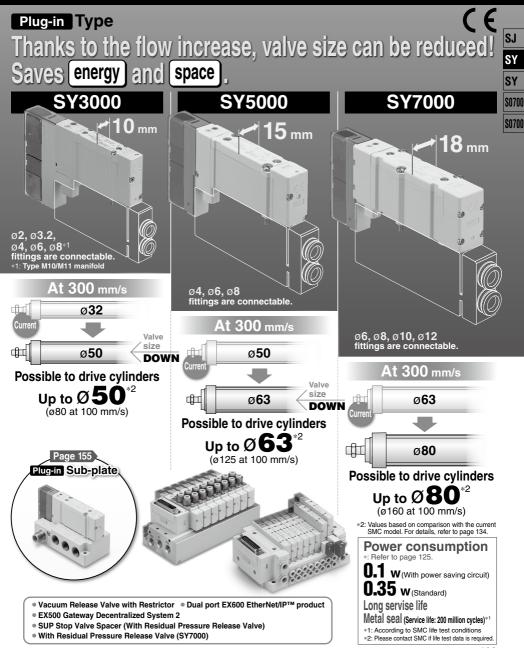


#### Plug-in Connector Connecting Base [IP67\*1]






- IP67 enclosure in standard specifications
- M12 waterproof connector type ensuring easy attaching/detaching and wiring
- Applicable to the side, top and bottom ported. (4A, 2B port)

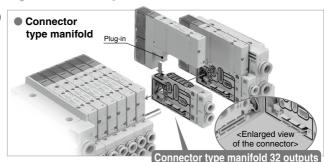

## Wiring

## D-sub Connector Flat Ribbon Cable PC Wiring Terminal Block Box Lead Wire Circular Connector Serial Transmission


#### **Serial Transmission System Variations**

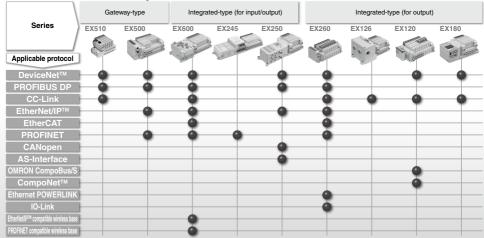

## Power Saving

#### **Power Consumption**

**0.1** w **0.35** w

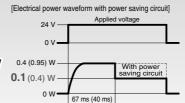

#### Power consumption is reduced by power saving circuit.

Power consumption is decreased by approx. 1/3 by reducing the wattage required to hold the valve in an energized state. (Effective energizing time is over 67 ms at 24 VDC.) Refer to the electrical power waveform as shown on the left.

\*1 Only products with the indicator light are


SJ

S0700

S0700


equipped with the power saving circuit. \*2 The value in ( ) are for the quick response and high pressure types.

## Space Saving / Improved

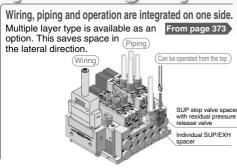


#### 4-position dual 3-port valve available (Only rubber seal type)


Two 3-port valves built into one body

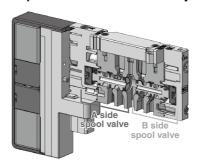

- 3-port valves on the A and B sides can operate independently.
- When used as a 3-port valve, only half the number of stations is required.
- Can also be used as a 4-position, 5-port valve.
- 4-position dual 3-port valve with back pressure check valve is available
- Combination examples

Combination	onap.oo	
Series	A side	B side
SY□A <sub>3</sub> 0	N.C. valve	N.C. valve
SY□B <sub>3</sub> 0	N.O. valve	N.O. valve
SY□C <sub>3</sub> 0	N.C. valve	N.O. valve

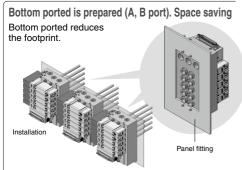

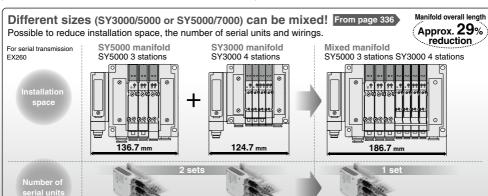



## 5 Port Solenoid Valve

## Improved Safety

#### Back Pressure Check Valve

This prevents actuator and air operated valve malfunctions caused by the exhaust from other valves.\*1

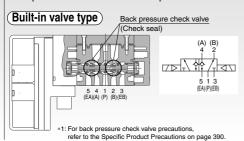

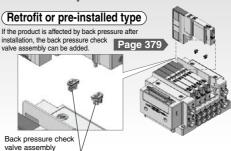

#### With residual pressure release valve (SY5000/7000) Page 146

#### For residual pressure release of the 3-position closed center valve

- ·The pressure of the 4 (A) and 2 (B) ports is also exhausted automatically at the same when the pressure of the 1 (P) port is exhausted.
- ·The pressure can be visualized using the indicator (red). ·Since this valve is not a spacer type, the flow rate is equivalent to that of the normal closed center valve.





IP67 compliant

#### Lever type is added to manual override button!

Solenoid valves can be replaced individually without shutting off the main pressure!\*1











Air for solenoid valves can be shut off individually!

The operation of an actuator can be checked by shutting off the air for the solenoid valves on the base individually, while the main air is being supplied during a trial operation.




#### Solenoid valves can be replaced individually!

The solenoid valves can be replaced individually without stopping the equipment during maintenance.

such as sanitary valve and automatic valve

<Application example: Air operated valves.

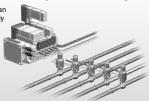

\*1: This product is only for internal pilot specifications, as the external pilot air cannot be shut off.

## Improved Safety


#### Slotted Type

SUP Stop Valve Spacer (With residual pressure release valve) Page 374

Air supply to each valve can be stopped individually. The valve and cylinder can be replaced without stopping other devices and equipment.

Button for manual release of residual pressure



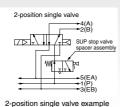

## **Slotted Type**


Double Check Spacer (With residual pressure release valve) Page 374 Long time of intermediate stop and position holding are possible.

[Intermediate stop] [Drop prevention] Button for manual release of residual pressure To exhaust residual pressure on cylinder side. Exhaust center 2-position single/double


SJ SY


SY


S0700 S0700

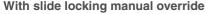

ON/OFF operation and locking can be performed with the manual slide.

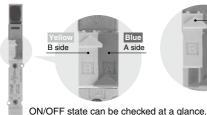

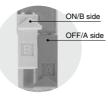

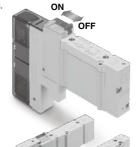

#### With safety slide locking manual override SY3000/5000/7000-X13 Page 154

Double action manual override prevents incorrect operation!



Operates the safety slide

SY5000-X13



#### Double action operation

Before operation The slide manual overrides cannot be turned ON with the safety slide cover. (OFF status: Locked) Slide manual overrides Safety slide cov





<Vertical sliding>

**SMC** 


<Horizontal sliding> \*: The safety slide cover cannot be locked when the slide manual override is turned ON.

#### Visual check

checked whether the safety slide cover is unlocked (FREE).




Safety slide covers can be checked from their raised and lowered positions

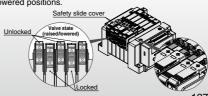

127


## **5 Port Solenoid Valve**

## **Piping Options**

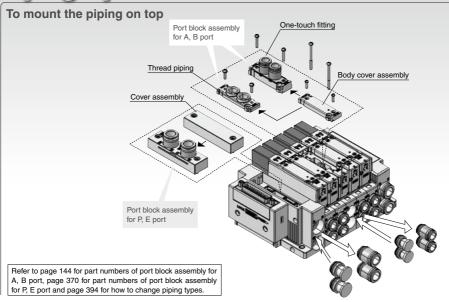

# To mount the piping on the side Replace the fitting and the port plug only.

Mixed mounting of top ported and side ported is possible.

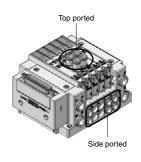

It is possible to detect the output of 4(A) and 2(B) port with a pressure switch by mounting the top ported valve onto the side ported or bottom ported manifold.


(Pressure switch etc., needs to be ordered separately.)



## **Variation**

#### Only for External Pilot Vacuum Release Valve with Restrictor $SY_5^3A \square R$ Series Page 148

Vacuum suction and release can be controlled with a single valve!

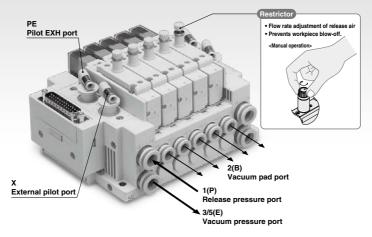


■ Can be mounted on the same manifold with the standard valve.

\*: When the individual EXH spacer is used

■ Mountable manifolds

Connector connecting base SS5Y\s^2 -10/11/12 type manifold Metal base SS5Y\s^2 -50/52 type manifold

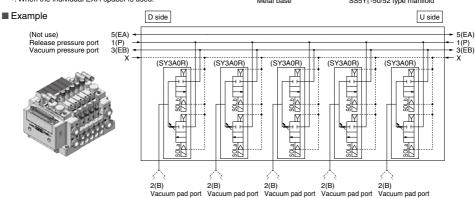

SJ

SY

SY

S0700

S0700

## **5 Port Solenoid Valve**

## Variations

	<u> </u>	ariation																						_						
					_								_	Vir									Com					Α	, В	
				Valve Series								Со	nne	-	ion				_				specifi							
				Jenes		_		type	×		×			S	eri	al t	ran	ısn	nis	SiO	n	_	_	ر						
					ctor	able		pring	k bo	•	ecto	tor		ts)	ts)								mor	mor					C2	
		Variations			D-sub connector	Flat ribbon cable	PC wiring	ck box (S	Terminal block box	Lead wire	Circular connector	M12 connector	EX510	28 poir	64 poin	EX600	EX245	EX250	EX260	EX126	EX120	EX180	Positive common	Negative common	М5	1/8	1/4	3/8	iping	
				5 ports	D-sub	Flatri	2	Terminal block box (Spring type)	Termin	Le	Circula	M12	Û	EX500 (128 points)	EX500 (64 points)	Û	ù	ù	Ē	Ù	ũ	â	Positi	Negati					Straight piping	
e d				SY3□30□																						•	_			
Plug-in Sub-pla			From page 157	SY5□30□	_	_	_	_	_	_	_		_	_	_	_	-	_	_	_	-	-	•	•	_	_		-	_	
ā		M12 connector		SY7□3□																						$\equiv$	_	•		
	ᅙ		Туре	SY3□0□																					•	•	_		•	
	ğ		50□	SY5□0□	•	•		_	_	_	_	_		_	_	_	-	_	_	_	_	-	•	0				_		
9	op o	page 168	SY7□0□	P.168	P.168	P.168						P.196													_			-		
Bas	red		Туре	SY3□0□																							_			
Plug-in Metal Base	Bottom ported	STITUTE .	51☐ From page 168	SY5□0□	•	•	•	_	_	_	_	_		-	-	_	-	_	_	-	-	-	•	•				-		
<b>2</b>	Bott		page 168	SY7□0□	P.168	P.168	P.168						P.196													_				
Plug-	ţe	880	Type 52□	SY3□3□																						_				
	Top ported	Total I	<b>52</b> □ From page 188	SY5□3□	•	•	•	_	_	_	_	_	•	_	-	_	-	_	_	-	-	-	•	•			_	-		
	ķ		page 188	SY7□3□	P.188	P.188	P.188						P.206													_				
ase		rted	Type 10□	SY3□0□																										
B B		Side ported	10□ From page 220	SY5□0□	•	•	•	•	•		•	_	_	•	•	•	•	•	•	•	•	•	•	•	-	_	_	-	l	
ectir		Sig	page 220	SY7□0□	P.220	P.220	P.220	P.237-1	P.238	P.248	P.258			P.268	P.274	P.284	P.295-1	P.296	P.304	P.312	P.320	P.327-1								
Plug-in Connector Connecting Base	Manifold	Bottom ported	Type 11  From page 220	SY5□0□	•	•	•	•	•	•	•	_	_	•	•	•	•	•	•	•	•	•	•	•	_	_	_	_	_	
necto	2	Botte	page 220	SY7□0□	P.220	P.220	P.220	P.237-1	P.238	P.248	P.258			P.268	P.274	P.284	P.295-1	P.296	P.304	P.312	P.320	P.327-1								
Conr		ted	Туре	SY3□3□																						_				
g-in		Top ported	<b>12</b> □ From page 232	SY5□3□	•	•	•	_				-	-	•	•		•	•	•	•	•	•	•	•			_	-		
ā		0	paye 232	SY7□3□	P.232	P.232	P.232	P.237-1	P.244	P.254	P.264			P.280	P.282	r.294	r.295-5	P.302	P.310	H.318	r.326	r.327-7				_				

Standard ○ Option ▲ Made-to-Order (Refer to page 154.)

Por	Port Size										ı	Иar	nifo	ld (	Opt	ior	ıs (I	Pag	jes	373	to	382	)			١	Val	ve (	Opti	ons	5		Valves Func		
One	e-tc	uc	h fi	ittir	ngs	;						cer	cer	release valve	elease valve	'n	sembly	sembly	disk	Jisk	installed type)		tion type)			unting	unting	turbine oil)	ification	Se	9	S		se valve	estrictor
C3 (N1)	C (N			6 (7)		8 19)	C	10 11)	C.	12	plate	P spa	н spa	al pressure	pressure	gulate	ck as	ck as	king (	king (	y (Manifold	itting	) connec	ite)	ate	om pe	om pa	signated	oeds e.	ssure	ssur	g size	IP67	e relea	with
٠,	Straight piping		Straight piping	<u> </u>	•	·	Straight piping	Elbow piping <sup>*1</sup>	Straight piping	Elbow piping*1	Blanking plate	Individual SUP spacer	Individual EXH spacer	SUP stop valve spacer with residual pressure release valve	Double check spacer with residual pressure release valve	Interface regulator	Individual SUP block assembly	Individual EXH block assembly	SUP/EXH blocking disk	Label for blocking disk	Back pressure check valve assembly (Manifold installed type)	Dual flow fitting	Silencer (One-touch fitting connection type)	Plug (White)	Name plate	SY3000/5000 mixed mounting	SY5000/7000 mixed mounting	Oil resistant (Other than designated turbine oil)	Vacuum/Low pressure specification	Different pressures	Reverse pressure	Mixed fitting sizes	Enclosure IP67	With residual pressure release valve	Vacuum release valve with restrictor
_	_	_	_				_	_	_	_	_	_	_	0	0	0	_	_	_	_	_			_	_	_	_	•	External Pilot	_	External Pilot	_	•	*3	_
_	•	_	•		_ •	_	_	_	_		0	0	0	0	0	0		_		_	_			0			_	<b>A</b>	External Pillot	O Individual SUP	External Pilot	•	_	*3	*4
_	•	_	•		_ _	_	-	_	-		0	0	0	0	0	0	_	_		_	_			0			_	<b>A</b>	_	O Individual SUP	_	•	_	*3	_
_	•	_	•	_	-	_	-	_	_		0	0	0	0	_	0	_	_		_	_			0			_	<b>A</b>	External Pilot	O Individual SUP	External Pilot	•	_	_	*4
_	•	•	•	0	-	-	_	-	-		0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	P.336			External Pilot	O Individual SUP	External Pilot	•	*2	*3	*4
_	•	_	•	_	•	_	-	_	-		0	0	0	0	0	0	0	0	0	0	0		0	0	0	P.336	P.340	•	External Pilot	O Individual SUP	External Pilot	•	*2	*3	*4
_	•	_	•		_ •		_	_	_		0	0	0	0	_	0	0	0	0	0	0		0	0	_	P.348	P.340	•	External Pilot	O Individual SUP	External Pilot	•	*2		*4

+1: Elbow piping may specify size only in millimeters, depending on the port size. Refer to How to Order Manifold for details.
+2: Refer to Manifold Specifications on page 216 for details on IP67.
+3: Only \$Y5000/7000

-4: Only \$Y3000/5000

One-touch fittings Straight piping





S0700

S0700

## INDEX

Manifold VariationsPage 130	Valve Replacement PartsPage 14
Optimum Actuation Size Chart of Air Cylinder Page 134	With Residual Pressure Release Valve ····· Page 14
Valve SpecificationsPage 136 (Specifications, Response Time, Weight)	Vacuum Release Valve with RestrictorPage 14
Valve Construction ·····Page 140	Made-to-Order for Valve Page 15



Plug-in Sub-plate Page 155



M12 connector



Plug-in Sub-plate Specifications (M12 Connector) Page 156

Sub-plate Parts No. Page 158



Plug-in Metal Base Page 165



50/ ported



Type 52/ Top ported



D-sub connector

Nij .

Flat ribbon cable



PC wiring



D-sub Connector, Flat Ribbon Cable, PC Wiring System [IP40]



EY510

Type 50/Side Ported ·····	Page 168
Type 51/Bottom Ported ·····	Page 168
Type 52/Top Ported ·····	Page 188
Wiring Specifications	Page 193
EX510 Gateway-type Serial Transmission System [IP20]	
Type 50/Side Ported ····	Page 196
Type 51/Bottom Ported ·····	Page 196
Type 52/Top Ported ·····	Page 206

Manifold Exploded View [Exploded View, Manifold Parts No.] ----- Page 212













S0700 S0700

Type 12/

## Type 10/Side Ported, Type 11/Bottom Ported, Type 12/Top Ported

D-sub	PC	Plug-in Connector Connecting Base	Page 216
connector	Willing	D-sub Connector, Flat Ribbon Cable, PC Wiring System [IP40/67]	·· Page 220
Flat ribbon cab	Terminal block box	Terminal Block Box (Spring Type) [IP67] ·····	Page 237-1
Lead wire	Terminal	Terminal Block Box [IP67] ·····	Page 238
2000 11110	block box (Spring type)	Lead Wire [IP67] ·····	Page 248
	Signal.	Circular Connector [IP67]	Page 258
	Circular connector	EX500 Gateway Decentralized System 2 (128 Points) [IP67]	Page 268
4 8000	EX500	EX500 Gateway Decentralized System (64 Points) [IP67] ·····	Page 27⁴
	and the same	EX600 Integrated-type (For Input/Output) Serial Transmission System [IP67]	··· Page 284
EX245	EX600	EX245 Integrated-type (For Input/Output) Serial Transmission System [IP65] $\!\cdot\!$	Page 295-1
	EX250	EX250 Integrated-type (For Input/Output) Serial Transmission System [IP67]	Page 296
EX260		EX260 Integrated type (For Output) Serial Transmission System [IP67]	·· Page 304
	EX126	EX126 Integrated-type (For Output) Serial Transmission System [IP67]	·· Page 312
HILLIAN SHE		EX120 Integrated-type (For Output) Serial Transmission System [IP20]	Page 320
EX120	EX180	EX180 Integrated-type (For Output) Serial Transmission System [IP20]	Page 327-1
	LX100	Type 10/Side ported Common Dimensions	
		(External Pilot, Silencer, Elbow Fittings, Slide Locking Manual Override)	·· Page 328
		Type 11/Bottom Ported Common Dimensions ····	Page 331
	Mixed	Type 12/Top Ported Common Dimensions	·· Page 333
	mounting	Plug-in Manifold Mixed Mounting Type	·· Page 336
		Manifold Exploded View [Exploded View, Manifold Parts No.]	·· Page 352
		How to Increase Connector Type Manifold	·· Page 366

One-touch Fittings, Plug Assembly/Part No. Page 371 Manifold Options [ Plug-in Metal Base, Plug-in Connector Connector Base] Plug-in Metal Base, Plug-in Connector Conne Specific Product Precautions Page 389

## Optimum Actuation Size Chart of Air Cylinder

Applicable	Main valve	Series		Арр	licable cyl	e cylinder				
cylinder speed	seal type	Series	ø <b>6</b>	ø <b>10</b>	ø <b>16</b>	ø <b>20</b>	ø <b>25</b>			
		SY3000								
	Rubber seal	SY5000								
100 mm/s		SY7000								
or less		SY3000								
	Metal seal	SY5000								
	Rubber seal	SY7000								
		SY3000								
		SY5000								
300 mm/s		SY7000								
or less		SY3000								
	Metal seal	SY5000								
		SY7000								
		SY3000								
	Rubber seal	SY5000								
500 mm/s		SY7000								
or less		SY3000								
	Metal seal	SY5000								

#### [Common conditions]

• Pressure: 0.5 MPa

• Piping length: 1 m


Load ratio: 50%Stroke: 200 mm

Connector type manifold (for side and bottom ported type)

\*: Use as a guide for selection.

Please check the actual conditions with SMC Model Selection Software.



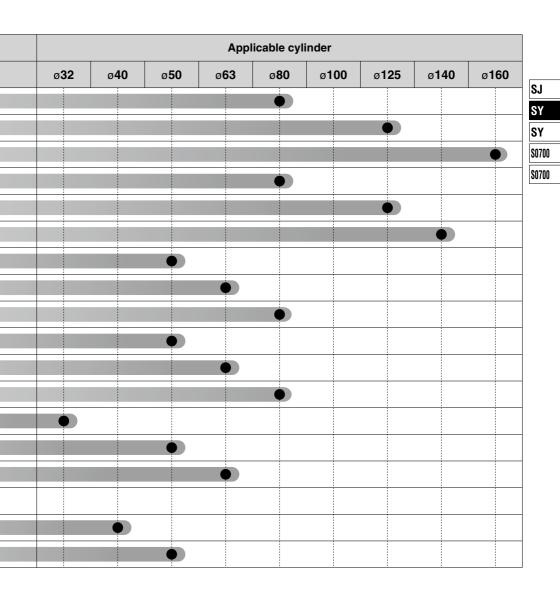

**⊕**SMC

135

# SY3000/5000/7000 Series Valve Specifications

#### **Valve Specifications**

V	alve type		Rubber seal	Metal seal			
Fluid			А	ir			
	2-position	single	0.15 to 0.7				
Internal pilot operating pressure range	2-position	double	0.1 to 0.7	0.1 to 0.7 (High pressure type: 0.1 to 1)			
[MPa]	3-position		0.2 to 0.7				
[iiii uj	4-position	dual 3-port valve	0.15 to 0.7	_			
	Operating	pressure range	-100 kPa to 0.7 (4-position: -100 kPa to 0.6)	-100 kPa to 0.7 (High pressure type: -100 kPa to 1)			
External pilot		2-position single					
operating pressure range	Pilot pressure	2-position double	0.25 to 0.7	0.1 to 0.7 (High pressure type: 0.1 to 1)			
[MPa]	range	3-position					
	· ugo	4-position dual 3-port valve	Operating pressure + 0.1 or more (Min. 0.25) to 0.7	_			
Ambient and fluid tempera	ture [°C]		-10 to 50 (f	No freezing)			
	SY3000	2-position single/double	5	20*1			
	SY5000	4-position dual 3-port valve	3	20			
Max. operating frequency	0.000	3-position	3 10*1				
[Hz]		2-position single/double	5	10* <sup>1</sup>			
	SY7000	4-position dual 3-port valve	3	_			
		3-position	3	10*1			
				g push type			
Manual override				ing slotted type			
wanuar overnide				king lever type			
				king type			
Pilot exhaust type	Internal pi		Main/Pilot valve common exhaust	Main/Pilot valve individual exhaust			
	External p	ilot	Pilot valve indi				
Lubrication			Not re	quired			
Mounting orientation*2			Unrestricted	Single: Unrestricted Double/3-position: Main valve is horizontal.			
Impact/Vibration resistance	e*2 [m/s²]		150	)/30			
Enclosure			IP67 (Based o	n IEC60529)*3			
Coil rated voltage [DC]			24,	12 V			
Allowable voltage fluctuat	ion [V]		±10% of rated voltage*4				
Standard			0.35 (With indi	cator light: 0.4)			
Power consumption [W]	High pressur	e type, Quick response type	0.9 (With indicate)	ator light: 0.95)			
rower consumption [w]	With power	er saving circuit	Standard: 0.1*5 (With indicator lig High pressure type: 0.4*5 (With indicat				
Surge voltage suppressor			Diode (Varistor fo	or non-polar type)			
Indicator light			LED				

<sup>\*1:</sup> Use below 5 Hz for with the power saving circuit.
\*2: Impact resistance: No malfunction occurred when it is tested in the axial direction and at the right angles to the main valve and armature in both

energized and de-energized states every once for each condition. (Values at the initial period)
Vibration resistance: No malfunction occurred in a one-sweep test between 45 and 2000 Hz. Test was performed at both energized and de-energized states in the axial direction and at the right angles to the main valve and armature. (Values at the initial period)
Refer to page 394 for the fixation of DIN rail mounting type manifold.

<sup>\*3:</sup> In the case of a metal seal, there are restrictions in the operating environment. Refer to the Specific Product Precautions (page 389).

<sup>\*4:</sup> Due to voltage drops by the internal circuit in S/Z type and T type (with power saving circuit), use within the allowable voltage fluctuation as follows. S/Z type {24 VDC: -7% to +10% T type {24 VDC: -8% to +10% L 2 VDC: -4% to +10% T type {12 VDC: -6% to +10% L 2 VDC: -6% to +10% T 4 VDC: -6% to +10% L 2 VDC: -6% to +10% L 2 VDC: -6% to +10%

<sup>\*5:</sup> For details, refer to page 391.

## Valve Specifications **SY3000/5000/7000 Series**

#### **Response Time**

				Response time ms (at 0.5 MPa) Note)									
					Standard		Quick	response ty	ре				
Series	Seal type	Model	Type of actuation	Without light			Without light/		ht/surge uppressor				
				surge voltage suppressor		• • • • • • • • • • • • • • • • • • • •	surge voltage suppressor	•	• •				
	D 11	0)101-0		• • • • • • • • • • • • • • • • • • • •	S/Z type	R/U type		S/Z type	R/U type				
	Rubber seal	SY31□0	2-position single	15 or less	20 or less	15 or less	12 or less	15 or less	12 or less				
	Metal seal	SY31□1	2 pooliion oingio	15 or less	20 or less	15 or less	12 or less	15 or less	12 or less				
	Rubber seal	SY32□0	2-position double	12 or less	15 or less	12 or less	10 or less	13 or less	10 or less				
SY3000	Metal seal	SY32□1	z-position double	12 or less	15 or less	12 or less	10 or less	13 or less	10 or less				
	Rubber seal	SY33/4/5□0	0	18 or less	22 or less	18 or less	14 or less	18 or less	14 or less				
	Metal seal	SY33/4/5□1	3-position	18 or less	22 or less	18 or less	14 or less	18 or less	14 or less				
	Rubber seal	SY3A/B/C□0	4-position dual 3-port valve	18 or less	22 or less	18 or less	15 or less	19 or less	15 or less				
	Rubber seal	SY51□0	0	24 or less	31 or less	24 or less	18 or less	25 or less	18 or less				
	Metal seal	SY51□1	2-position single	24 or less	31 or less	24 or less	18 or less	25 or less	18 or less				
	Rubber seal	SY52□0	2-position double	12 or less	15 or less	12 or less	10 or less	13 or less	10 or less				
SY5000	Metal seal	SY52□1	z-position double	12 or less	15 or less	12 or less	10 or less	13 or less	10 or less				
	Rubber seal	SY53/4/5□0	0:	30 or less	34 or less	30 or less	24 or less	28 or less	24 or less				
	Metal seal	SY53/4/5□1	3-position	28 or less	30 or less	28 or less	23 or less	25 or less	23 or less				
	Rubber seal	SY5A/B/C□0	4-position dual 3-port valve	35 or less	42 or less	35 or less	28 or less	35 or less	28 or less				
	Rubber seal	SY71□0		47 or less	58 or less	53 or less	42 or less	52 or less	44 or less				
	Metal seal	SY71□1	2-position single	39 or less	48 or less	39 or less	34 or less	43 or less	34 or less				
	Rubber seal	SY72□0	0	18 or less	19 or less	19 or less	18 or less	17 or less	17 or less				
SY7000	Metal seal	SY72□1	2-position double	17 or less	17 or less	16 or less	16 or less	16 or less	16 or less				
	Rubber seal	SY73/4/5□0		52 or less	54 or less	47 or less	42 or less	46 or less	40 or less				
	Metal seal	SY73/4/5□1	3-nosition	38 or less	45 or less	39 or less	33 or less	38 or less	34 or less				
	Rubber seal	SY7A/B/C□0	4-position dual 3-port valve	52 or less	60 or less	54 or less	49 or less	53 or less	48 or less				

Note) Based on dynamic performance test, JIS B 8419-2010. (Coil temperature: 20°C, at rated voltage)
Since the response time of the external pilot type of the 4-position dual 3-port valve differs from the above table, please contact SMC.

**SMC** 

SJ

S0700

S0700

#### Valve Weight

#### SY3000 series

Valve model	Seal type	Typ	oe of actuation	Weight [g]
		0:	Single	74
		2-position	Double	83
SY3□00	Rubber seal		Closed center	
31300	nubbei seai	3-position	Exhaust center	87
			Pressure center	
		4-position	Dual 3-port valve	83

Valve model	Seal	Tyro	e of actuation	Port size	Weight
valve illouel	type	Тур	e oi actuation	4, 2 (A, B)	[g]
		2-position	Single		74
		z-position	Double		83
SY3□30-M5			Closed center	M5 x 0.8	
313U3U-1VI3		3-position	Exhaust center	IVIO X U.O	87
			Pressure center		
		4-position	Dual 3-port valve		83
		0:	Single		82
		2-position	Double	C2	91
SY3□30-C2			Closed center	ø2 One-touch	
513U3U-C2		3-position	Exhaust center		95
			Pressure center	fitting	
		4-position	Dual 3-port valve		91
			Single		85
		2-position	Double	C3	94
SY3□30-C3	Rubber		Closed center		
313U3U-U3	seal	3-position	Exhaust center	ø3.2 One-touch	98
			Pressure center	fitting	
		4-position	Dual 3-port valve		94
		0:	Single		77
		2-position	Double	C4	86
SY3□30-C4			Closed center	ø4 One-touch	
513U3U-C4		3-position	Exhaust center		90
			Pressure center	fitting	
		4-position	Dual 3-port valve		86
			Single		80
		2-position	Double		89
CV0 - 00 CC			Closed center	C6	
SY3□30-C6		3-position	Exhaust center	ø6 One-touch	93
			Pressure center	fitting	
	4-position	Dual 3-port valve		89	

Valve model	Seal type	Ty	Type of actuation					
		2-position	Single	76				
		2-position	Double	86				
SY3□01	Metal seal		Closed center					
		3-position	Exhaust center	90				
		1	Pressure center					

Valve model	Seal	Type	of actuation	Port size	Weight
valve model	type	Турс	or actuation	4, 2 (A, B)	[g]
		2-position	Single		76
		2-рознюн	Double		86
SY3□31-M5			Closed center	M5 x 0.8	
		3-position	Exhaust center		90
			Pressure center		
		2-position	Single		84
		2-розіцоп	Double	C2	94
SY3□31-C2			Closed center	ø2 One-touch	
	3-po	3-position	Exhaust center	fitting	98
			Pressure center		
		2-position	Single		87
SY3□31-C3	Metal seal	z-position	Double	C3	97
		3-position	Closed center	ø3.2 One-touch	
			Exhaust center	fitting	101
			Pressure center		
		2-position	Single	C4 ø4 One-touch	79
			Double		89
SY3□31-C4			Closed center		
		3-position	Exhaust center	fitting	93
			Pressure center		
		2-position	Single		82
		2-position	Double	C6	92
SY3□31-C6			Closed center	ø6 One-touch	
		3-position	Exhaust center	fitting	96
			Pressure center		

#### SY5000 series

	Valve model	Seal type	Typ	oe of actuation	Weight [g]			
	SY5□00		2-position	Single	82			
			2-position	Double	90			
		Rubber seal	3-position	Closed center				
				Exhaust center	100			
				Pressure center				
			4-position	Dual 3-port valve	90			

	Seal	_		Port size	Weight
Valve model	type	Тур	e of actuation	4, 2 (A, B)	[g]
		2-position	Single		102
		2-position	Double		110
SY5□30-01			Closed center	1/8	
3130-01		3-position	Exhaust center	1/0	120
			Pressure center		
		4-position	Dual 3-port valve		110
		2-position	Single		115
		z-position	Double	C4	123
SY5□30-C4	Rubber	3-position	Closed center	ø4 One-touch	
315030-04			Exhaust center	fitting	133
			Pressure center		
		4-position	Dual 3-port valve		123
		2-position	Single	C6 ø6 One-touch fitting	110
			Double		118
SY5□30-C6		3-position	Closed center		128
313-30-00			Exhaust center		
			Pressure center		
		4-position	Dual 3-port valve		118
		2-position	Single		99
		z-position	Double	C8	107
SY5□30-C8			Closed center	ø8 One-touch	
		3-position	Exhaust center		117
			Pressure center	fitting	
		4-position	Dual 3-port valve		107

Valve model	Seal type	Type of actuation		Weight [g]
		2-position	Single	91
	Metal seal	2-position	Double	101
SY5□01		3-position	Closed center	
			Exhaust center	111
			Pressure center	

Valve model	Seal	Type of actuation		Port size	Weight
valve model	type			4, 2 (A, B)	[g]
		2-position	Single		111
		2-position	Double		121
SY5□31-01			Closed center	1/8	
		3-position	Exhaust center		131
			Pressure center		
		2-position	Single		124
		2-position	Double	C4	134
SY5□31-C4		3-position	Closed center	ø4 One-touch	
			Exhaust center	fitting	144
	Metal		Pressure center		
	seal	2-position	Single	C6	120
			Double		130
SY5□31-C6		3-position	Closed center	ø6 One-touch	
			Exhaust center	fitting	140
			Pressure center		
		2-position	Single		108
		2-position	Double	C8	118
SY5□31-C8			Closed center	ø8 One-touch	
		3-position	Exhaust center	fitting	128
			Pressure center		



## Valve Specifications **SY3000/5000/7000 Series**

## Valve Weight

#### SY7000 series

Valve model	Seal type	Typ	Type of actuation	
			Single	110
		2-position	Double	118
SY7□00	Rubber seal	3-position	Closed center	
			Exhaust center	133
			Pressure center	
		4-position	Dual 3-port valve	114

V-1 1-1	Seal	-		Port size	Weight
Valve model	type	Тур	e of actuation	4, 2 (A, B)	[g]
			Single	, , ,	125
		2-position	Double		133
SY7□30-02			Closed center	1/4	
317 L30-02		3-position	Exhaust center	1/4	147
			Pressure center		
		4-position	Dual 3-port valve		129
		2-position	Single		163
		2-position	Double	C6	171
SY7□30-C6			Closed center	ø6 One-touch	
317 - 30-00		3-position	Exhaust center	fitting	186
			Pressure center	illing	
		4-position	Dual 3-port valve		167
		2-position	Single	C8	151
			Double		159
SY7□30-C8	Rubber seal	3-position	Closed center	ø8 One-touch	
317-30-00			Exhaust center	fitting	174
			Pressure center		
		4-position	Dual 3-port valve		155
		2-position	Single	C10	136
			Double		144
SY7 30-C10			Closed center	ø10 One-touch	
317-30-010		3-position	Exhaust center	fitting	159
			Pressure center	ittiig	
		4-position	Dual 3-port valve		140
		2-position	Single		146
		2-position	Double	C12	154
SY7□30-C12			Closed center	ø12 One-touch	
317-30-012		3-position	Exhaust center	fitting	169
		'	Pressure center	inalig	
		4-position	Dual 3-port valve		150

Valve model	Seal type	Type of actuation		Weight [g]
		2-position	Single	122
	Metal seal	2-position	Double	133
SY7□01		3-position	Closed center	
			Exhaust center	150
			Pressure center	

Valve model	Seal	Type of actuation		Port size	Weight
valve model	type	Турс	or actuation	4, 2 (A, B)	[g]
		2-position	Single		136
		2-position	Double		148
SY7□31-02			Closed center	1/4	
		3-position	Exhaust center		164
			Pressure center		
		2-position	Single		174
		2-position	Double	C6	186
SY7□31-C6			Closed center	ø6 One-touch	
		3-position	Exhaust center	fitting	202
			Pressure center		
		2-position	Single		162
	Metal	z-position	Double	C8	174
SY7□31-C8	seal		Closed center	ø8 One-touch	
	Jour	3-position	Exhaust center	fitting	190
			Pressure center		
	2		Single		148
		2-position	Double	C10	159
SY7□31-C10			Closed center	ø10 One-touch	
		3-position	Exhaust center	fitting	176
			Pressure center		
		2-position	Single		157
		2-008111011	Double	C12	169
SY7□31-C12			Closed center	ø12 One-touch	
		3-position	Exhaust center	fitting	185
			Pressure center		

SJ


SY SY


S0700 S0700


## Valve Construction

#### **Rubber Seal**


## 2-position single

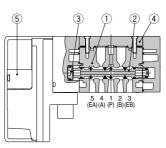


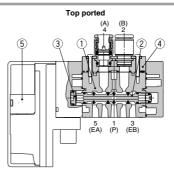

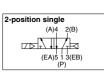


#### 2-position double

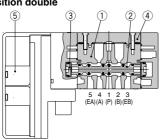

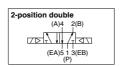

#### 3-position closed center/exhaust center/pressure center

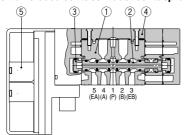





3-position exhaust center
(A)4 2(B)
(EA)5 1 3(EB)


#### **Component Parts**


No.	Description	Material	Note
1	Body	SY3000: Zinc die-casted SY5000/SY7000: Aluminum die-casted	
2	Spool valve	Special resin/HNBR ( 3-position valve: ( Aluminum/HNBR	
3	Piston	Resin	
	Body cover assembly	Resin	For side/bottom ported
4	Port block assembly	SY3000: Resin SY5000: Zinc die-casted SY7000: Aluminum die-casted	For top ported
5	Pilot valve assembly	_	Refer to page 145.

#### Valve Construction SY3000/5000/7000 Series

#### **Rubber Seal**

#### 4-position dual 3-port valve

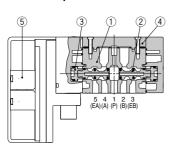

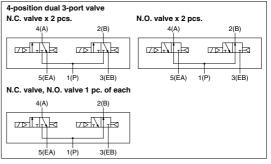


SJ


SY

SY S0700

S0700


#### 2-position double with back pressure check valve (Built-in valve type)

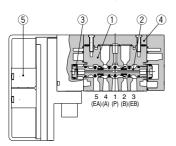


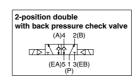

\*: The built-in valve type back pressure check valve is not available for the SY7000.

#### 4-position dual 3-port valve with back pressure check valve (Built-in valve type)

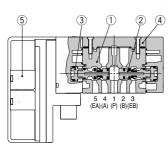

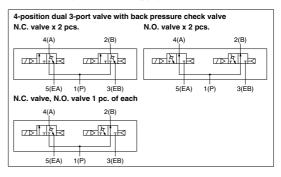



\*: The built-in valve type back pressure check valve is not available for the SY7000.

#### **Metal Seal**


## 

#### 2-position double

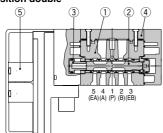


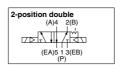

#### 3-position closed center/exhaust center/pressure center

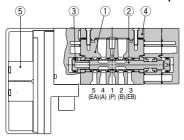



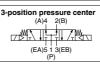

3-position exhaust center
(A)4 2(B)
(EA)5 1 3(EB)

#### **Component Parts**

**SMC** 

No.	Description	Material	Note		
1	Body	SY3000: Zinc die-casted SY5000/SY7000: Aluminum die-casted			
2	Spool, Sleeve	Stainless steel/HNBR			
3	Piston	Resin			
	Body cover assembly	Resin	For side/bottom ported		
4	Port block assembly	SY3000: Resin SY5000: Zinc die-casted SY7000: Aluminum die-casted	For top ported		
5	Pilot valve assembly	_	Refer to page 145.		

SJ


SY SY

\$0700

S0700

## Valve Replacement Parts

#### **How to Order Port Block Assembly**

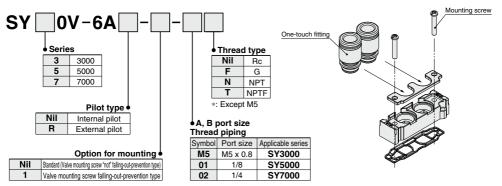

Metric size (One-touch fitting)

	oize (eine teaen intiliig)			
Cumhal	D. d. die.	Applicable series		
Symbol	Port size	SY3000	SY5000	SY7000
C2	ø2	•	_	_
C3	ø3.2	•	_	_
C4	ø4	•	•	_
C6	ø6	•	•	•
C8	ø8	_	•	•
C10	ø10	_	_	•
C12	ø12	_	_	•

Inch size (One-touch fitting)

Symbol	Port size	Applicable series				
Symbol		SY3000	SY5000	SY7000		
N1	ø1/8"	•	_	_		
N3	ø5/32"	•	•			
N7	ø1/4"	•	•	•		
N9	ø5/16"	_	•	•		
N11	ø3/8"	_	_	•		

#### • Possible to replace only the One-touch fitting.

Port size		SY3000	SY5000	SY7000
	ø2	VVQ1000-50A-C2	_	_
	ø3.2	VVQ1000-50A-C3	_	_
	ø4	VVQ1000-50A-C4	VVQ1000-51A-C4	_
Metric size	ø6	VVQ1000-50A-C6	VVQ1000-51A-C6	VVQ2000-51A-C6
	ø8	_	VVQ1000-51A-C8	VVQ2000-51A-C8
	ø10	-	_	VVQ2000-51A-C10
	ø12	_	_	KQ2H12-17-X899
	ø1/8"	VVQ1000-50A-N1	_	_
	ø5/32"	VVQ1000-50A-N3	VVQ1000-51A-N3	_
Inch size	ø1/4"	VVQ1000-50A-N7	VVQ1000-51A-N7	VVQ2000-51A-N7
	ø5/16"	_	VVQ1000-51A-N9	VVQ2000-51A-N9
	ø3/8"	_	_	VVQ2000-51A-N11


Refer to pages 394 and 395 for how to replace the port block assembly, One-touch fitting and body cover assembly.



## Valve Replacement Parts SY3000/5000/7000 Series

#### **Body Cover Assembly**

\*: Used when the top ported is changed to the side or bottom ported.

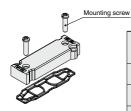

Series		Part no.		
		Standard (Valve mounting screw "not" falling-out-prevention type)	Valve mounting screw falling-out-prevention type	
SY3000	Internal pilot	SY30V-16A	SY30V-16A-1	
313000	External pilot	SY30V-16AR	SY30V-16AR-1	
SY5000	Internal pilot	SY50V-16A	SY50V-16A-1	
313000	External pilot	SY50V-16AR	SY50V-16AR-1	
SY7000	Internal pilot	SY70V-16A	SY70V-16A-1	
317000	External pilot	SY70V-16AR	SY70V-16AR-1	
The construction is and indicated an the construct				


<sup>\*:</sup> The part number is not indicated on the product.

## SJ


S0700

S0700

#### How to Order Pilot Valve Assembly (With a gasket and two mounting screws)

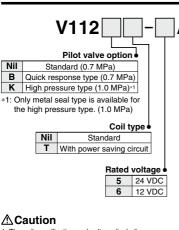

- 1. The coil specification and voltage (including light/surge voltage suppressor) cannot be changed by changing the pilot valve assembly
- 2. When selecting the coil type with power saving circuit, it is not possible to change to high pressure/power saving circuit type.

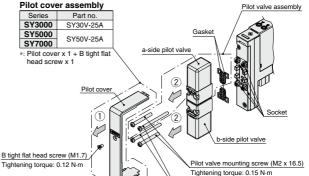

How to replace pilot valves

• Loosen B tight flat head screw to remove the pilot cover in the direction indicated by the arrow 1.

Pilot valve mounting screw (M2 x 25)

Tightening torque: 0.15 N-m

- · Remove the pilot valve mounting screws.
- Remove the pilot valve in the direction indicated by the arrow 2.
- \*: Assemble by following the removal procedure in reverse.
- \*: Ensure the gasket is mounted, and take care not to bend the socket.
- \*: Be noted for mounting that there are two types of lengths for the pilot valve mounting screws.




#### SY5000/7000 Series


## With Residual Pressure Release Valve

Mountable manifold SSSY5/7-50/51 type manifold SS5Y5/7-(M)10/11 type manifold Sub-plate single unit (Except top ported type)

How to Order (With mounting screw)

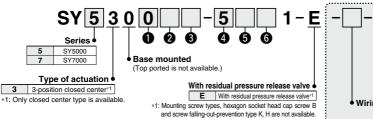



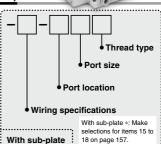

Seal type

0	Rubber seal
1	Metal seal

#### Pilot valve option

	Nil Standard (0.7 MPa)	
	B Quick response type (0.7 MPa)	
K*1 High pressure type (1.0 MPa		High pressure type (1.0 MPa)

\*1: Only metal seal type is available for the high pressure type.

#### Coil type

Nil	Standard		
Т	With power saving circuit (Continuous duty type)		
*: Be sure to select the power saving circuit to			

- when the valve is continuously energized for long periods of time.
- \*: Be careful of the energizing time when the power saving circuit is selected. Refer to page 391 for details.

#### Rated voltage

•	- matou romago		
5	24 VDC		
6	12 VDC		


\*: The applicable rated voltage varies depending on the manifold wiring type. Refer to the "How to Order Manifold" pages.

#### Light/surge voltage suppressor and common specification

Symbol	With light	Surge voltage suppressor	Common specification	
Nil	_	_		
R	_		Non-polar	
U	•			
S	-		Positive	
Z	•		common	
NS	_		Negative	
NZ	•		common	

- \*: For the non-polar type, be careful of surge voltage intrusion. Refer to page 392 for details.
- Only "Z" and "NZ" types are available for with the power saving circuit.

#### 6 Manual override

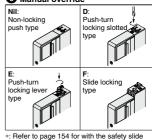

- locking manual override.
- \*: When ordering a valve individually, the base gasket is not included. Since the base gasket is attached to the manifold, please order the base gasket separately if it is needed for maintenance service. Refer to page 212 or 367 for part numbers of the

base gasket. Refer to Table 1 for part numbers of the mounting

#### Table 1. Valve mounting screw

rubic 1: varve incurring cores			
SY5000	SY7000		
SY5000-221-2A	SY7000-221-10A		
(2 pcs.)	(3 pcs.)		

#### Valve Specifications

Valve construction		Rubber seal	Metal seal
		3-position closed center valve with residual pressure release valve	
Fluid		Air	
Operating press	ure range MPa*2	0.3 to 0.7	0.3 to 0.7 (High pressure: 0.3 to 1)
Mainle 1-1	SY5000	117	128
Weight [g]	SY7000	156	177

- \*1: Rubber seal is used for the residual pressure release valve.
- \*2: Internal pilot type only
- \*: Other specifications are common to the valve specifications on page 136.
- \*: When using in combination with an individual SUP/EXH spacer or an interface regulator, the length of the required mounting screws will differ. Please contact SMC for details.

#### Symbol




A mechanism is used that exhausts the pressure of the cylinder port when the P port supply pressure of the 3 position closed center valve is exhausted.

## With Residual Pressure Release Valve **SY5000/7000 Series**

#### **Dimensions** SY5000 (Light/surge voltage suppressor) SJ 84.5 Manual override 39.8 30.7 12.6 Push-turn locking slotted type: Press, then rotate it. 4(A) port side : Blue 2(B) port side : Yellow SY Manual override part 2 x ø3.2 (For manifold mounting) A side indicator (Red)\*1 S0700 Exhausted: Concave EXH port Pressurized: End face 15 S0700 EXH port B side indicator (Red)\*1 45.1 47.6 For E type: 60.2) Exhausted: Concave 62.3 (For F type) 30.1 Pressurized: End face 56.6

#### SY7000

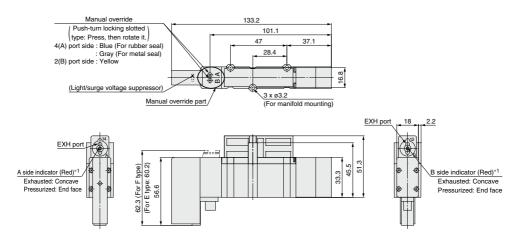

\*1: The indicator shows the pressurization status. Do not push it. Only for External Pilot


# Vacuum Release Valve with Restrictor ( E SY3000/5000 Series

Mountable manifold [External pilot] SS5Y3/5-50/52 type manifold SS5Y3/5-(M)10/11/12 type manifold Sub-plate single unit (Except SS5Y3-11 type)

How to Order (With mounting screw)

Thread type Port size Profit Size Profit Size Wiring specifications
With sub-plate \*: Make selections for items 15 to 18 on page 157.
With sub-plate



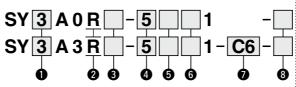

#### 1 Series 3 SY3000 5 SY5000

## Pilot type R External pilot



#### Coil type

	71.
Nil	Standard
т	With power saving circuit (Continuous duty type)

- \*: Be sure to select "with power saving circuit" when the solenoid valve will be energized continuously for long period.
- Note the specified energizing time when power saving circuit is selected.
   Refer to page 391 for details.




#### 5 Light/surge voltage suppressor and common specification

Symbol	With light	Surge voltage suppressor	Common specification
Nil	_	_	
R	_		Non-polar
U	•		
S	_	_	Positive common
Z	•	•	Fositive common
NS	_		Negative
NZ	•		common


- \*: For the non-polar type, be careful of surge voltage intrusion. Refer to page 392 for details.
- Only "Z" and "NZ" types are available for the product with power saving circuit.

#### 6 Manual override

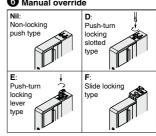

\*: Refer to page 154 for with the safety slide locking manual override.

#### **How to Order Manifold Assembly**

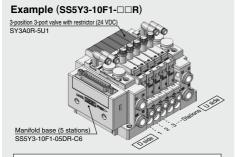

SS5Y3-10F1-05DR-C6···1 set (Type 10 5-station manifold base part no.) §SY3A0R-5U1 (3-position 3-port with restrictor part no.)····5 sets

- → \*The asterisk denotes the symbol for assembly.

  \*Prefix it to the part numbers of the valve etc.
- The valve arrangement is numbered as the 1st station from the D side.
   Under the manifold part number, state the valves to be mounted in order from the 1st station as shown in the figure above. If the arrangement becomes complicated, specify on a manifold specification sheet.

#### B port size

One-touch fitting (Metric size)

one todon numg (metric cize)							
Symbol	B port	SY3000	SY5000				
C4	ø4 One-touch fitting	•	•				
C6	ø6 One-touch fitting	•	•				
C8	ø8 One-touch fitting	_	•				

One-touch fitting (Inch size)

0	ouon mang (mon oize	,	
Symbol	B port	SY3000	SY5000
N3	ø5/32" One-touch fitting	•	•
N7	ø1/4" One-touch fitting	•	•
N9	ø5/16" One-touch fitting	_	•

- \*: When selecting the port size for each station, specify on a manifold specification sheet separately.
- \*: When mounting on the manifold base or sub-plate, the A port is plugged. When a manifold base or sub-plate is ordered separately, mount a plug on the A port.

#### 1 Type of mounting screw

<u> </u>	<u> </u>
Nil	Round head combination screw
В	Hexagon socket head cap screw

- \*: When ordering a valve individually, the base gasket is not included. Since the base gasket is attached to the manifold, please order the base gasket separately if it is needed for maintenance service. Refer to page 212 or 367 for part numbers of the base gasket and mounting screw.
- \*: "B" and "H" cannot be selected for the individual SUP/EXH spacer assembly or interface regulator.

#### Only for External Pilot Vacuum Release Valve with Restrictor SY3000/5000 Series

SJ

SY S0700

S0700



#### **Valve Specifications**


Valve construction		3-position 3-port valve with restrictor	
Seal		Rubber seal	
Fluid		Air	
Type of actuation		Normally closed	
	Release pressure port 1(P)	0 to 0.6	
Operating pressure range [MPa]	Vacuum pressure port 3(EB), 3/5(E)	-100 kPa to 0.7*1	
range [wra]	Pilot X port	Release pressure + 0.1 or more (Min. 0.25) to 0.7	
Restrictor operation		Manual	

- \*1: Can be used with positive pressure to suit the application.
- \*: Other specifications are common to the valve specifications on page 136.
- \*: Quick response type is not available.

#### Weight

Valve model	Weight [g]	1
SY3A0R	90	]
Valve model	Port size	Majaht [a]
valve model	2(B) port	Weight [g]
OVOAGE	C4	91
SY3A3R	C6	93
Valve model	Weight [g]	1
SY5A0R	94	]
Valve model	Port size	Majaht [a]
valve model	2(B) port	Weight [g]
	C4	118
SY5A3R	C6	115
	C8	121

#### Symbol

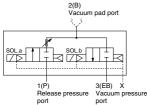

#### **Response Time**

Valve model	Without light/surge	With light/surge voltage suppressor				
vaive model	voltage suppressor	S/Z type	R/U type			
SY3A□R	18	26	18			
SY5A□R 27		32	27			

<sup>\*:</sup> P = 0.1 MPa X = 0.5 MPa

#### Manifold Flow Rate Characteristics\*1

#### Flow Rate Characteristics (When restrictor is fully open)

#### 1 Plug-in Metal Base

	Port size		Valve flow rate characteristics				
Manifold type	1, 3	2	1→2 (P→B	1→2 (P→B)		)	
	(P, EB)	(B)	C [dm <sup>3</sup> /(s·bar)]	b	C [dm3/(s-bar)]	b	
SS5Y3-50R (Side ported)	1/8	C6	0.7 0.24		1.0	0.16	
SS5Y3-52R (Top ported)	1/8	C6	1.0 0.25		1.1	0.25	
SS5Y5-50R (Side ported)	1/4	C8	1.0 0.30		2.3	0.10	
SS5Y5-52R (Top ported)	1/4	C8	1.4	0.16	2.4	0.14	

#### 2 Plug-in Connector Connecting Base

© Flag III Commoder Commodering Bacc								
	Port size		Valve flow rate characteristics					
Manifold type	1, 3	2	1→2 (P→B)	)	2→3 (B→EB)			
	(P, EB)	(B)	C [dm3/(s-bar)]	b	C [dm3/(s-bar)]	b		
SS5Y3-10R (Side ported)	C8	C6	0.7 0.36		1.2	0.22		
SS5Y3-12R (Top ported)	C8	C6	1.0 0.26		1.2	0.20		
SS5Y5-10R (Side ported)	C10	C8	1.0 0.20		2.9	0.17		
SS5Y5-11R (Bottom ported)	C10	C8	1.0 0.30		3.3	0.24		
SS5Y5-12R (Top ported)	C10	C8	1.4	0.15	2.6	0.24		

<sup>\*1:</sup> The value is for manifold base with 5 stations.


<sup>\*:</sup> Calculation of effective area S and sonic conductance C: S = 5.0 x C




## **SY3000/5000** Series

#### Restrictor Flow Rate Characteristics [Fluid passage: 1(P)-2(B)]




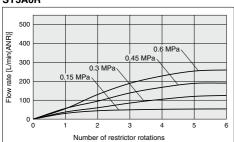


#### SY5A0R

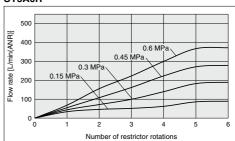


#### SY3A3R-C4

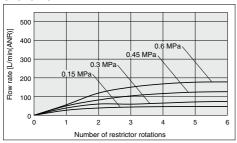


#### SY5A3R-C4

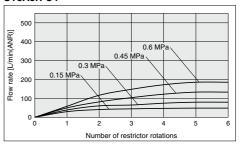


#### SY3A3R-C6

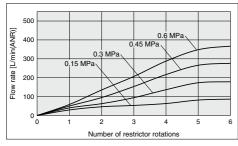

#### SY5A3R-C6

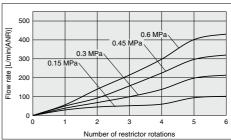

#### SY5A3R-C8

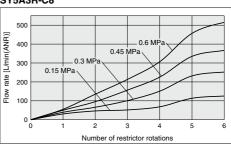


## Only for External Pilot Vacuum Release Valve with Restrictor SY3000/5000 Series


#### **Circuit Example**

vacuum, use the external pilot type.

#### <Example 1: When the 2-position double solenoid valve is combined with the individual EXH spacer.>

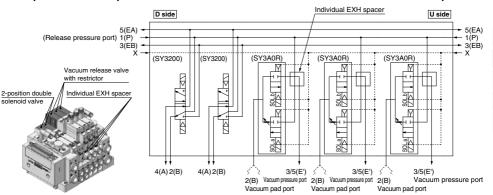

<Example 2: When the 2-position double solenoid valve is combined with the individual EXH block and blocking disk.>

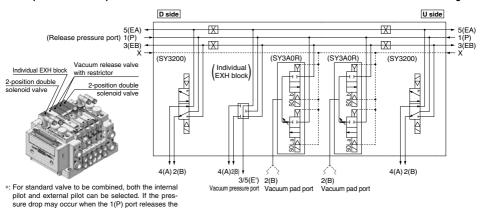

**SMC** 

SJ

SY


S0700

S0700


#### **SY3000/5000** Series


#### **Dimensions: SY3000**


#### Side ported SY3A0R

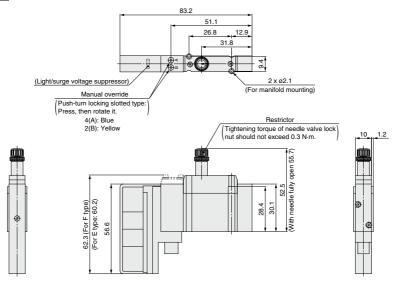

#### Top ported SY3A3R

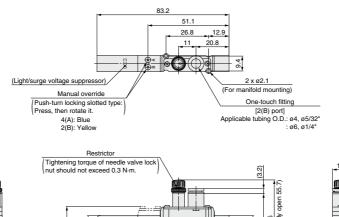


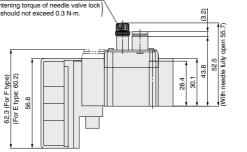

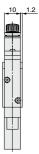


## Only for External Pilot Vacuum Release Valve with Restrictor SY3000/5000 Series

#### **Dimensions: SY5000**

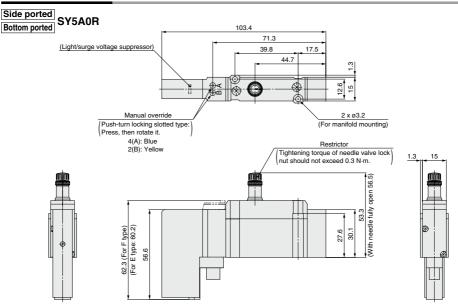

#### Top ported SY5A3R

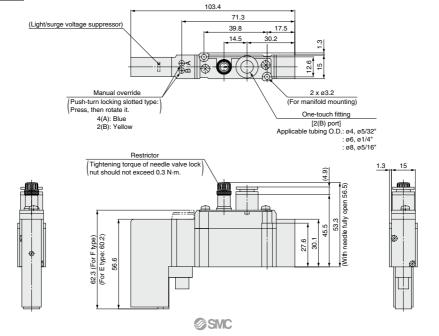

SJ

S0700

S0700

## SY3000/5000/7000 Series Made to Order






#### 1 Main Valve Fluororubber Specification

Symbol -X90


Fluororubber is used for rubber parts of the main valve to allow use in applications such as the following.

· When using a lubricant other than the recommended turbine oil, and there is a possibility of malfunction due to swelling of the spool valve seals.

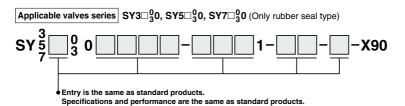

2 With Safety Slide Locking Manual Override

A safety lock is added to the slide locking manual override.

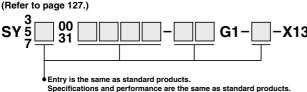




3 Metal Seal Valve, Main/Pilot Valve Common Exhaust

Symbol -X16

This is the type where the exhaust method of the pilot valve is integrated into the exhaust port of the main valve.

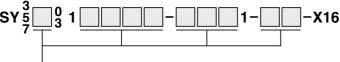

Entry is the same as standard products.

\*: Note that the response time of the valve becomes slower than standard products. Please contact SMC for details.

# Plug-in Sub-plate Type [IP67 Compliant]

SJ

SY

**SY** 

S0700



# Plug-in Single Unit/Sub-plate Type [IP67 Compliant] (Side ported, Bottom ported, Top ported) ( & Rohs)

#### Plug-in Sub-plate Specifications

Manifold type	Plug-in sub-plate						
	Side ported	1(P), 5(EA)/3(EB) port, 4(A)/2(B) port	Side p	oorted			
Piping direction	Bottom ported	1(P), 5(EA)/3(EB) port, 4(A)/2(B) port	Bottom	Bottom ported			
Fibilig direction	Terrorenteed	1(P), 5(EA)/3(EB) port	Side	oorted			
	Top ported	4(A)/2(B) port	Top p	orted			
SUP/EXH port type		SUP/EXH individual port [5(EA), 3(EB) indiv	vidual]				
Applicable connector		M12 waterproof connector					
Internal wiring		Positive common, Negative common					
			SY3000	1/8			
	Side ported	1(P), 5(EA)/3(EB) port, 4(A)/2(B) port	SY5000	1/4			
			SY7000	3/8			
	Bottom ported		SY3000	1/8			
Port size		1(P), 5(EA)/3(EB) port, 4(A)/2(B) port	SY5000	1/4			
			SY7000	3/8			
	Top ported		SY3000	1/8			
		1(P), 5(EA)/3(EB) port	SY5000	1/4			
			SY7000	3/8			
		4(A)/2(B) port	Compliant wit	Compliant with the valve.*1			
Enclosure (Based on IEC60529)		IP67					
		Side ported	9	99			
	SY3000	Bottom ported	109				
		Top ported	104				
		Side ported	145				
Weight: W [g]*2	SY5000	Bottom ported	17	172			
		Top ported	15	59			
	, and the second	Side ported	20	)5			
	SY7000	Bottom ported	23	32			
		Top ported	22	27			

<sup>\*1:</sup> Refer to page 136 for valve specifications.

#### Plug-in Sub-plate Flow Rate Characteristics

Rubber Seal								
0 :	Sub-plate	Fitting port size		1 →	4/2	4/2 → 5/3		
Series	piping location	(P,E)	(A,B)	С	b	С	b	
	Side ported	1/8	1/8	1.8	0.27	1.7	0.26	
SY3000	Bottom ported	1/8	1/8	1.7	0.23	1.4	0.27	
	Top ported	1/8	C6	1.3	0.34	1.5	0.27	
	Side ported	1/4	1/4	4.2	0.21	4.0	0.26	
SY5000	Bottom ported	1/4	1/4	4.0	0.19	4.0	0.23	
	Top ported	1/4	C8	2.9	0.29	4.1	0.33	
	Side ported	3/8	3/8	6.5	0.24	6.3	0.23	
SY7000	Bottom ported	3/8	3/8	6.4	0.22	6.3	0.22	
	Top ported	3/8	C12	5.4	0.30	6.0	0.27	

<sup>\*:</sup> Calculation of effective area S and sonic conductance C: S = 5.0 x C

#### Metal Seal

wictar ocar							
Series	Sub-plate	Fitting port size		1 → 4/2		4/2 → 5/3	
Series	piping location	(P,E)	(A,B)	С	b	С	b
	Side ported	1/8	1/8	1.4	0.14	1.3	0.26
SY3000	Bottom ported	1/8	1/8	1.3	0.13	1.3	0.22
	Top ported	1/8	C6	1.2	0.22	1.4	0.29
	Side ported	1/4	1/4	3.2	0.13	3.5	0.16
SY5000	Bottom ported	1/4	1/4	3.0	0.12	3.2	0.17
	Top ported	1/4	C8	2.6	0.23	3.2	0.19
	Side ported	3/8	3/8	4.6	0.10	4.9	0.16
SY7000	Bottom ported	3/8	3/8	4.6	0.10	4.9	0.17
	Top ported	3/8	C12	4.0	0.18	4.7	0.16


<sup>\*2:</sup> The valve and cable weights are not included. To obtain the weight with valves attached, add the valve weights given on page 138, and to include the cable weight, add the connector cable weight on page 158.

<sup>\*:</sup> The value is for individually operated 2-position type.

## Single Unit/Sub-plate Type [IP67 Compliant] SY3000/5000/7000 Series (Side ported, Bottom ported, Top ported)

#### **How to Order**

In the case of (Valve) + (Sub-plate) (Built-in valve type part no.)

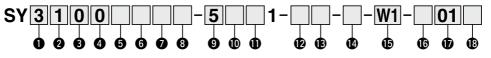

#### A Sarias

-	100
3	SY3000
5	SY5000
7	SY7000

#### 2 Type of actuation

1	2-position	Single		
2	2-position	Double		
3		Closed center		
4 5	3-position	Exhaust center		
		Pressure center		
<b>A</b> *1	4	N.C./N.C.		
B*1	4-position dual 3-port	N.O./N.O.		
C*1	dudi o port	N.C./N.O.		

\*1: Only rubber seal type is available for the 4-position dual 3-port valve.

#### Valve nining type

O vai	ve pipilig type
0	Base mounted (Port location: Side, Bottom)
3	Top ported (4A 2B port location: Top)

#### A Seal type

0	Rubber seal
1	Metal seal

#### Pilot type

	o, po
Nil	Internal pilot
R	External pilot

#### Back pressure check valve (Built-in valve type) Nil None н Built-in

- \*: Only rubber seal type
- \*: The built-in valve type back pressure check valve is not available for the 3-position type and the SY7000

#### Pilot valve option

Nil	Standard (0.7 MPa)
В	Quick response type (0.7 MPa)
K*1	High pressure type (1.0 MPa)

\*1: Only metal seal type is available for the high pressure type.

#### 8 Coil type

Nil	Standard			
Т	With power saving circuit (Continuous duty type)			
B 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1				

- \*: Be sure to select the power saving circuit type when the valve is continuously energized for long periods of time.
- \*: Be careful of the energizing time when the power saving circuit is selected. Refer to page 391 for details.

#### Poted veltege


5	24 VDC
6	12 VDC

#### Light/surge voltage suppressor and common specification

Symbol	With light	suppressor	specification	
Nil	_	_		
R			Non-polar	
U	•			
S	_		Positive	
Z	•	•	common	
NS	_		Negative	
NZ	•		common	

- \*: For the non-polar type, be careful of surge voltage intrusion. Refer to page 392 for details.
- \*: Only "Z" and "NZ" types are available for with the power saving circuit.

#### Manual override

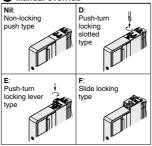

\*: Refer to page 154 for with the safety slide locking manual override.

#### A, B port size (\*: Top ported valve only)

#### Thread piping

Symbol	Port size	Applicable series		
M5	M5 x 0.8	SY3000		
01	1/8	SY5000		
02	1/4	SY7000		

Metric size (One-touch fitting)							
Symbol	A, B port	SY3000	SY5000	SY7000			
C2	ø2	•		_			
C3 C4	ø3.2	•	_	_			
C4	ø4	•	•	_			
C6	ø6	•	•	•			
C8	ø8	_	•	•			
C10	ø10	_	_	•			
C12	a12			•			

Inch size (One-touch fitting)

IIICII	inch size (One-touch litting)				
Symbol	A, B port	SY3000	SY5000	SY7000	
N1	ø1/8"	•	_	_	
N3	ø5/32"	•	•	_	
N7	ø1/4"	•	•	•	
N9	ø5/16"	_	•	•	
N11	ø3/8"	_	_	•	

#### A. B port thread type (Top ported valve only)

SY S0700

S0700

• ., -	port amount type (top porten tarre em)
Nil	Rc
F	G
N	NPT
Т	NPTF

Only Nil is available for M5.

#### 12 Type of mounting screw

Nil	Round head combination screw	
В	Hexagon socket head cap screw	
	Round head combination screw (Falling-out-prevention type)	
Н	Hexagon socket head cap screw (Falling-out-prevention type)	

- \*: For "K" and "H", the valve body cover has a drop prevention construction to stop the mounting screws from falling out when the valve is removed for maintenance etc.
- \*: Refer to page 158 when the base gaskets and mounting screws are required for maintenance.
- \*: When using an optional spacer assembly, "B" and "H" cannot be selected.

#### Wiring specifications (Sub-plate)

wo	Without M12 connector cable		
W1	With M12 connector cable (300 mm)		
W2	With M12 connector cable (500 mm)		
W3	With M12 connector cable (1000 mm)		
W4	With M12 connector cable (2000 mm)		
W7	With M12 connector cable (5000 mm)		
Miles and a single standard and a second standard to the NAMO and a second at the second standard			

\*: When ordering a product with M12 connector cable, the connector cable is included.

#### (6) Port location (Sub-plate)

Torricoation (our plate)			
Nil	Side ported		
В	Bottom ported		
V*1	Top ported (1P, 5EA, 3EB port: Side ported)		

\*1: Only available for the valve piping type "3" top ported.

#### Port size (Sub-plate)

Symbo	Port size	Applicable series
01	1/8	SY3000
02	1/4	SY5000
03	3/8	SY7000

#### (Sub-plate)

Thread type (Sub-plate)		
Nil	Rc	
F	G	
N	NPT	
Т	NPTF	


- \*1: When mounting a special order (including Made-to-Order specification) valve or manifold option (spacer etc.) on the sub-plate, add the valve part number or spacer part number under the sub-plate part number to place an order. For details, refer to the ordering example on page 158.
- \*2: When selecting a product with residual pressure release valve or vacuum release valve with restrictor, after selecting a model from page 146 or 148, make selections for items 15 to 18 above.



#### How to Order

#### In the case of (Sub-plate) (Sub-plate single unit part no.)

\*: Without valve

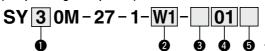



Series

3	SY3000
5	SY5000
7	SY7000

## Port location (Sub-plate)

<b>.</b>	it location (oub plate)
Nil	Side ported
В	Bottom ported
٧	Top ported [1(P), 5(EA), 3(EB) port: Side ported]

Sub-plate till eau type		
Nil	Rc	
F	G	
N	NPT	
Т	NPTF	

Wiring specifications

wo	Without M12 connector cable		
W1	With M12 connector cable (300 mm)		
W2	With M12 connector cable (500 mm)		
W3	With M12 connector cable (1000 mm)		
W4	With M12 connector cable (2000 mm)		
W7	With M12 connector cable (5000 mm)		
B ( ) # 111 1 1 ( ) 11			

- \*: Refer to the table below for connector cable part numbers.
- \*: When ordering a product with M12 connector cable, the connector cable is included.

## 4 Port size

Symbol	Port size	Applicable series
01	1/8	SY3000
02	1/4	SY5000
03	3/8	SY7000

#### How to Order when mounting a special order (including Made-to-Order specification) valve on the sub-plate (Ordering example: X90)

SY30M-27-1-W1-01 ······ 1 set (Sub-plate single unit part no.)

\*SY3200-5U1-X90...... 1 set (2-position double part no./Main valve fluororubber specification)

#### Ordering example when mounting a manifold option (spacer etc.)


SY30M-27-1-W1-01 ······ 1 set (Sub-plate single unit part no.) \*SY3400-5U1 ······· 1 set (3-position exhaust center part no.)

\*SY30M-60-1A ············· 1 set (Part no. for double check spacer with residual pressure release valve)

#### ∕!\ Caution

Due to the properties of the double check spacer, assembly carried out by the customer is not recommended. If a double check spacer is to be used, be sure to order the type that is built in to the sub-plate as shown in the ordering example above.

#### Sub-plate Parts No.

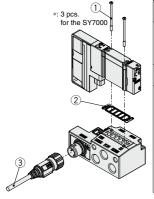

	Description		Part no.			
No.			SY3000	SY5000	SY7000	Note
1	Valve mounting screw	Round head combination screw	SY3000-23-24A (M2 x 32)	SY5000-221-1A (M3 x 32.5)	SY7000-221-1A (M3 x 36.5)	Part numbers shown on the left are for 10 valves (20 pcs.). (30 pcs. for the SY7000)
		Hexagon socket head cap screw	SY3000-222-1A (M2 x 32)	SY5000-222-1A (M3 x 32.5)	SY7000-222-1A (M3 x 36.5)	
2	Base gasket (for sub-plate)		SY30M-11-1A	SY50M-11-1A	SY70M-11-1A	Part numbers shown on the left are for 10 valves (10 pcs.).
3	M12 waterproof connector cable		ZS-37-L			Cable length: 300 mm Cable weight: Approx. 18 g
			ZS-37-M			Cable length: 500 mm Cable weight: Approx. 23 g
			ZS-37-N			Cable length: 1000 mm Cable weight: Approx. 36 g
			ZS-37-P			Cable length: 2000 mm Cable weight: Approx. 62 g
			ZS-37-C			Cable length: 5000 mm Cable weight: Approx. 140 g



M2: 0.16 N·m (SY3000) M3: 0.8 N·m (SY5000/7000)






SJ


SY

S0700

S0700

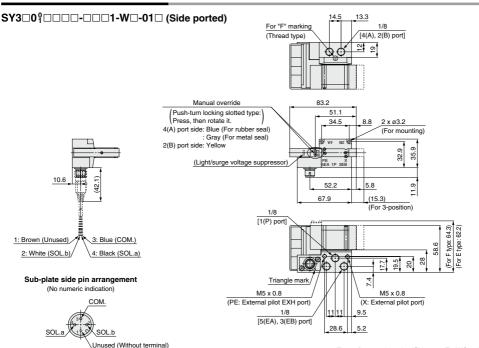

\*: These figures show the "SY3200-5Z1-WO-01F".

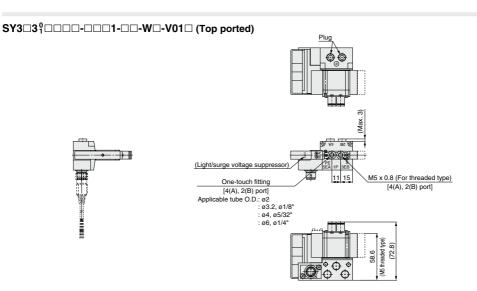


- \*: These figures show the "SY3230-5Z1-C6-WO-V01F".
- \*: 1(P), 5(EA), 3(EB), X and PE ports are side ported.



Dimensions: SY3000 Series

Plug-in Single Unit/Sub-plate

**Bottom** Ported

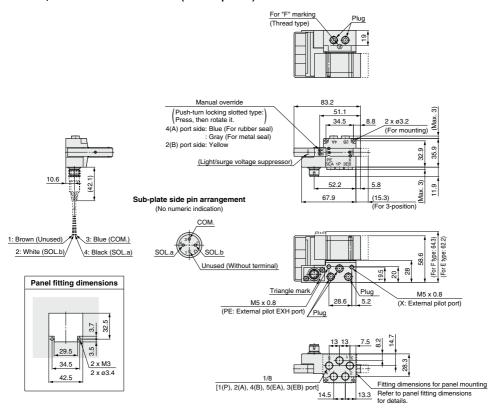

<sup>\*:</sup> These figures show the "SY3200-5Z1-WO-B01F".

160

## Single Unit/Sub-plate Type [IP67 Compliant] SY3000/5000/7000 Series (Side ported, Bottom ported, Top ported)

Dimensions: SY5000 Series




SJ


SY

S0700

S0700

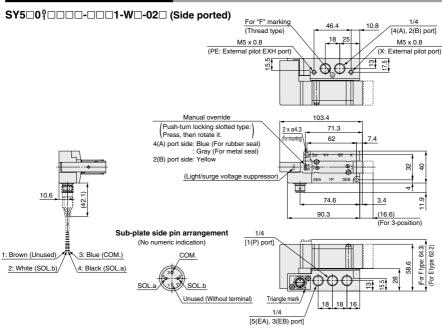

\*: These figures show the "SY5200-5Z1-WO-02F".

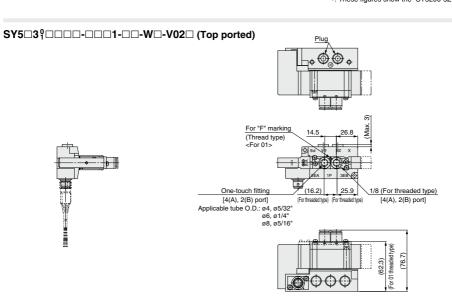


- \*: These figures show the "SY5230-5Z1-C8-WO-V02F".
- \*: 1(P), 5(EA), 3(EB), X and PE ports are side ported.



Dimensions: SY5000 Series Single U

Plug-in Single Unit/Sub-plate

**Bottom** Ported

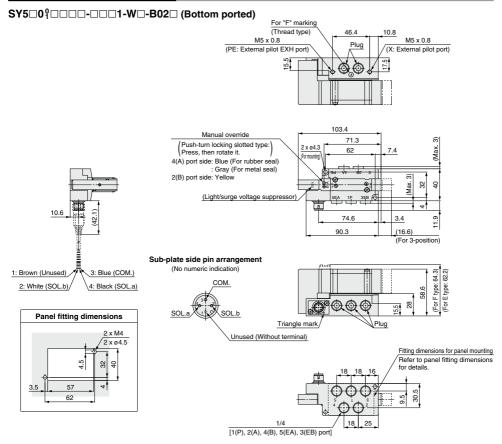

\*: These figures show the "SY5200-5Z1-WO-B02F".

Dimensions: SY7000 Series


### Plug-in Si Single Unit/Sub-plate To

Side Ported Top Ported


SJ

**SY** S0700

S0700

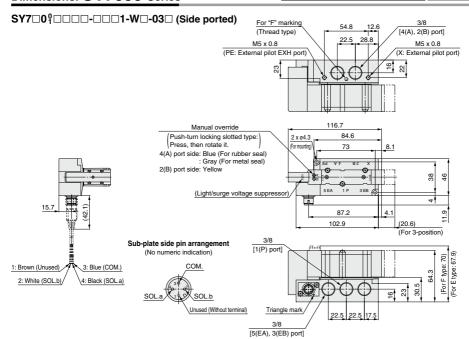

\*: These figures show the "SY7200-5Z1-WO-03F".

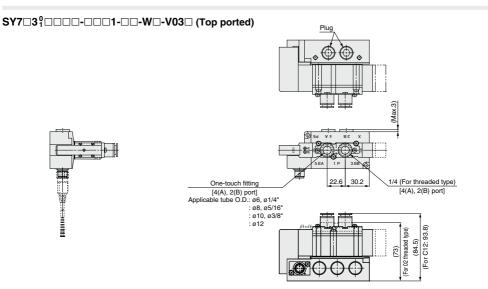


- \*: These figures show the "SY7230-5Z1-C10-WO-V03F".
- \*: 1(P), 5(EA), 3(EB), X and PE ports are side ported.

Dimensions: SY7000 Series

Plug-in Single Unit/Sub-plate

**Bottom** Ported

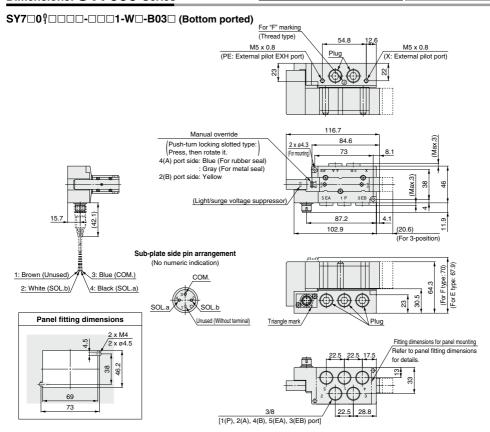

\*: These figures show the "SY7200-5Z1-WO-B03F".


# Plug-in Metal Base


SJ


SY

**SY** 80700

S0700

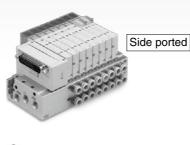

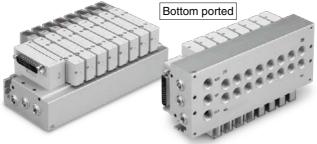

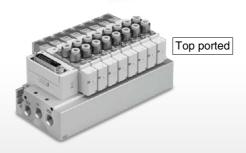

# SY3000/5000/7000 Series Type 50, 51, 52

# Plug-in Metal Base



### **Manifold Specifications**

Model  Manifold type			D-sub connector		Flat ribbon cable		Serial wiring	
			F type	P type PG type PH type			S5 type (EX510)	
				Plug-in metal base				
SUP/EXH po	rt type				Common SUP/EXH			
Valve stations All double wiring		2 to 12 stations		2 to 9 stations (J type: 2 to 8 stations) 2 to 4 stations		2 to 8 stations		
	All single wiring				2 to 12 stations	2 to 8 stations	2 to 12 stations	
Applicable connector			D-sub connector		t ribbon cable connector with strain relief nforming to MIL-C-83503		_	
					Socket: 20 pins MIL type	Socket: 10 pins MIL type		
Internal wirir	ng		Positive common, Negative common					
		SY3000	1/8					
	1(P), 3/5(E) port	SY5000	1/4					
		SY7000	3/8					
Port size		SY3000	$M5 \times 0.8, 1/8 \\$ ø2 One-touch fitting, ø3.2 One-touch fitting, ø4 One-touch fitting, ø6 One-touch fitting ø1/8" One-touch fitting, ø5/32" One-touch fitting, ø1/4" One-touch fitting					
Port Size	4(A), 2(B) port	SY5000	1/8, 1/4  ø4 One-touch fitting, ø6 One-touch fitting, ø8 One-touch fitting ø5/32" One-touch fitting, ø1/4" One-touch fitting, ø5/16" One-touch fitting					
	SY7000		1/4 ø6 One-touch fitting, ø8 One-touch fitting, ø10 One-touch fitting, ø12 One-touch fitting ø1/4* One-touch fitting, ø5/16* One-touch fitting, ø3/8* One-touch fitting					
Enclosure (Based on IEC60529)			IP40 IP20					

#### Manifold Flow Rate Characteristics\*\*/Manifold Weight

Valve Seal Type: Rubber Seal

	Port size		Val	ve flow rate	Weight: W [g]*2			
Model	1, 5, 3	4, 2	1→4/2 (P→	A/B)	4/2→5/3 (A/B→E)		(n: stations)	
	(P, EA, EB)	(A, B)	C [dm <sup>3</sup> /(s·bar)]	b	C [dm3/(s-bar)]	b	Fixed: C□	Replaceable: KC□
SS5Y3-50 (Side ported)	1/8	C6	1.1	0.19	1.1	0.15	39n + 247	43.5n + 247
SS5Y3-51 (Bottom ported)	1/8	C6	1.2	0.31	1.2	0.14	41.5n + 251	48.5n + 251
SS5Y3-52 (Top ported)	1/8	C6	1.1	0.29	1.2	0.20	44n + 247	
SS5Y5-50 (Side ported)	1/4	C8	2.6	0.28	2.6	0.14	93n + 379	110n + 379
SS5Y5-51 (Bottom ported)	1/4	C8	2.7	0.35	2.8	0.20	93n + 413	113n + 413
SS5Y5-52 (Top ported)	1/4	C8	2.6	0.26	3.1	0.13	103n	+ 379
SS5Y7-50 (Side ported)	3/8	C10	3.8	0.27	4.0	0.20	144n + 510	158n + 510
SS5Y7-51 (Bottom ported)	3/8	C10	4.1	0.34	4.8	0.20	150n + 549	172n + 549
SS5Y7-52 (Top ported)	3/8	C10	4.5	0.27	4.9	0.24	164n	+ 510

SJ

SY

S0700

\$0700

Valve Seal Type: Metal Seal

Tuito ooui i jpoi motai o	Port size		Valve flow rate characteristics				Weight: W [q]*2	
Model	1, 5, 3	4, 2	1→4/2 (P→	A/B)	4/2→5/3 (A/B→E)		(n: stations)	
	(P, EA, EB)	(A, B)	C [dm <sup>3</sup> /(s-bar)]	b	C [dm3/(s-bar)]	b	Fixed: C□	Replaceable: KC
SS5Y3-50 (Side ported)	1/8	C6	0.9	0.14	1.0	0.12	39n + 247	43.5n + 247
SS5Y3-51 (Bottom ported)	1/8	C6	1.0	0.21	1.1	0.10	41.5n + 251	48.5n + 251
SS5Y3-52 (Top ported)	1/8	C6	1.1	0.15	1.1	0.14	44n + 247	
SS5Y5-50 (Side ported)	1/4	C8	2.2	0.20	2.3	0.13	93n + 379	110n + 379
SS5Y5-51 (Bottom ported)	1/4	C8	2.4	0.26	2.5	0.16	93n + 413	113n + 413
SS5Y5-52 (Top ported)	1/4	C8	2.4	0.18	2.6	0.12	103n	+ 379
SS5Y7-50 (Side ported)	3/8	C10	3.2	0.23	3.5	0.18	144n + 510	158n + 510
SS5Y7-51 (Bottom ported)	3/8	C10	3.5	0.25	4.0	0.16	150n + 549	172n + 549
SS5Y7-52 (Top ported)	3/8	C10	3.5	0.21	3.8	0.18	164n	+ 510

<sup>\*1:</sup> The value is for manifold base with 5 stations and individually operated 2-position type.

<sup>\*2:</sup> Weight: W is the value for the D-sub connector manifold.

To obtain the weight with valves attached, add the valve weights given on page 138 for the appropriate number of stations.

<sup>\*:</sup> Calculation of effective area S and sonic conductance C: S = 5.0 x C



### Plug-in Metal Base


D-sub Connector | Flat Ribbon Cable | PC Wiring |

# SY3000/5000/7000 Series

C C C ROHS



#### **How to Order Manifold**

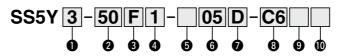



#### Series SY3000 SY5000 SY7000

### Side ported Bottom ported 50R Side ported, External pilot

\*: External pilot is not available for the bottom ported type.

#### 3 Connector type

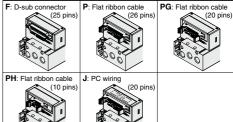

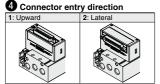


### Wiring type

e wiring*1
e wiring*2

- \*1: All double wiring: 2-position single, double, 3-position and 4-position valves can be used on all manifold stations.
- \*2: All single wiring: Available only for the manifold which has 2-position single for all stations.
- Note that 2-position double, 3- or 4-position valves cannot be used. \*: If a mix of single and double wiring is required, it is supplied as a special order.

### **How to Order Manifold Assembly**

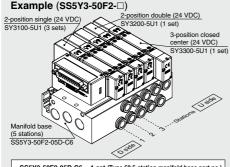

SS5Y3-50F2-05D-C6 ··· 1 set (Type 50 5-station manifold base part no.) \*SY3100-5U1----- 3 sets (2-position single part no.)

\*SY3200-5U1 ..... 1 set (2-position double part no.) SY3300-5U1-----1 set (3-position closed center part no.)

The asterisk denotes the symbol for assembly. Prefix it to the part numbers of the valve etc.

- The valve arrangement is numbered as the 1st station from the D side.
- . Under the manifold part number, state the valves to be mounted in order from the 1st station as shown in the figure above. If the arrangement becomes complicated, specify on a manifold specification sheet.
- \*: When mixing top ported configurations, select from page 189 In this case, use caution as there is also output on the A and B port on base side. Specify on a manifold specification sheet if plugs are required on the A and B port on base side

#### Valve stations

<b>F</b> : D	sub con	nector (25 pins)	P: Flat ribbon cable (26 pins)			PG: Flat ribbon cable (20 pins)				
Symbo	Stations	Note	Symbol	Stations	Note	Symbol	Stations	Note		
02	2 stations	All	02	2 stations	All	02	2 stations	All		
1	1	double	:	:	double	:	÷	double		
12	12 stations	wiring	12	12 stations	wiring	09	9 stations	wiring		
02	2 stations	All	02	2 stations	All	02	2 stations	All		
	1	single	:	- :	single		- :	single		
12	12 stations	wiring	12	12 stations	wiring	12	12 stations	wiring		
ВΠ	DH: Flot ribbon coble (10 nine)   I: DC wiring (20 nine)									

PH:	Flat ribbo	n cable (10 pins)	J: PC wiring (20 pins)			
Symbol	Stations	Note	Symbol	Stations	Note	
02	2 stations	All	02	2 stations	All	
:	:	double	:	:	double	
04	4 stations	wiring	08	8 stations	wiring	
02	2 stations	All	02	2 stations	All	
:	:	single	:	:	single	
08	8 stations	wiring	12	12 stations	wiring	

\*: This also includes the number of blanking plate assembly.

### Pugen Metal Base **SY3000/5000/7000** Series

SJ

S0700

S0700

P, E port entry

U	U side*1				
D	D side*1*2				
В	Both sides				
:1. Divers are married on the con-					

- \*1: Plugs are mounted on the opposite side of the selected ports.
- \*2: Only D side is available for Type 51 (Bottom ported).

Thread type

• ····· • · · · · · · · · · · · · · · ·						
Nil	Rc					
F	G					
N	NPT					
Т	NPTF					

**1** Mounting

١	Nil	Direct mounting					
	D	DIN rail mounting (With DIN rail)					
	D0	DIN rail mounting (Without DIN rail)					
ĺ	D3	For 3 stations	Specify a longer rail than				
	:	:	the standard length.				
	D12	For 12 stations	are standard length.				

- \*: Only direct mounting is available for Type 51 (Bottom ported).
- \*: Refer to page 394 for the fixation of DIN rail mounting type manifold.

### 8 A, B port size

Thread	piping
Symbol	1

Symbol	A, B port	SY3000	SY5000	SY700
M5	M5 x 0.8	•	_	_
01	1/8	•	•	_
02	1/4	_	•	•

One-touch fitting (Metric)

			<u> </u>					
Sy	ymbol	A, B port	SY3000	SY5000	SY7000			
	C2	ø2	•	_	_			
	СЗ	ø3.2	•	_	_			
Fixed	C4	ø4	•	•	_			
ΙĚ	C6	ø6	•	•	_			
	C8	ø8	_	•	•			
	C10	ø10	_	_	•	•		
	KC2	ø2	•	_	_	Type 50	Type 51	
	KC3	ø3.2	•	_	_	(Side ported)	(Bottom ported	
흥	KC4	ø4	•	•	_	า		
Replaceable	KC6	ø6	•	•	•	م ا ا		
plac	KC8	ø8	_	•	•			
8	KC10	ø10	_	_	•			
	KC12	ø12	_	_	•		<b>*</b>	
	<b>M</b> *1	Mixed sizes	•	•	•	9		
Ρ,	E port	size (Thread piping)	1/8	1/4	3/8			


One-touch fitting (Inch)

Or	ne-τοu	ich fitting (inch)					
Sy			SY3000	SY5000	SY7000		
	N1	ø1/8"	•	_	_		//
eplaceable Fixed	N3	ø5/32"	•	•	_		
xe	N7	ø1/4"	•	•	_		0%
ш	N9	ø5/16"	_	•	•		<i>(O</i> )L
	N11	ø3/8"	_	_	•		,
	KN1	ø1/8"	•	_	_	Type 50	Type 51
e	KN3	ø5/32"	•	•	_	(Side ported)	(Bottom ported)
Seak	KN7	ø1/4"	•	•	•		-
plac	KN9	ø5/16"	_	•	•	<b>100</b>	
æ	KN11	ø3/8"	_	_	•		
	<b>M</b> *1	Mixed sizes	•	•	•	<b>~ ~ ~ ~ ~ ~</b>	
Ρ,	E port	size (Thread piping)	1/8	1/4	3/8		

<sup>\*1:</sup> When ports are mixed sizes, indicate the piping specifications on the manifold specification sheet.

#### How to Order Valves (With mounting screw)

Refer to page 136 for valve specifications.

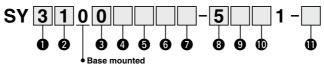

#### ----

U Sei	ries
3	SY3000
5	SY5000
7	SY7000

2 Type of actuation

1	2-position	Single				
2	2-position	Double				
3		Closed center				
4	3-position	Exhaust center				
5		Pressure center				
<b>A</b> *1	4-position	N.C./N.C.				
B*1	dual 3-port	N.O./N.O.				
C*1	dudi o port	N.C./N.O.				

\*1: Only rubber seal type is available for the 4-position dual 3-port valve.

#### 3 Seal type

0	Rubber seal
1	Metal seal

A Pilot type

T not type						
Nil	Internal pilot					
R	External pilot					

## Back pressure check valve (Built-in valve type)

(Built-in valve type)						
Nil	None					
Н	Built-in					

- \*: Only rubber seal type
- \*: Back pressure check valve is not available for the 3-position type and the SY7000.

#### 6 Pilot valve option

	or raire option
Nil	Standard (0.7 MPa)
В	Quick response type (0.7 MPa)
<b>K</b> *1	High pressure type (1.0 MPa)

\*1: Only metal seal type is available for the high pressure type.

#### Coil type

Nil	Standard
Т	With power saving circuit (Continuous duty type
*· Re su	re to select the nower saving circuit

- \*: Be sure to select the power saving circuit type when the valve is continuously energized for long periods of time.
- \*: Be careful of the energizing time when the power saving circuit is selected. Refer to page 391 for details.

#### 8 Rated voltage


5	24 VDC
6	12 VDC

#### 9 Light/surge voltage suppressor and common specification

Symbol	With light	Surge voltage suppressor	Common specification		
Nil		_			
R	_		Non-polar		
U	•				
S	_	1	Positive		
Z	•	_	common		
NS	_		Negative		
NZ	•		common		

\*: Only "Z" and "NZ" types are available for with the power saving circuit.

#### Manual override

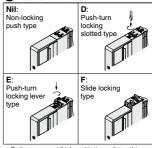

\*: Refer to page 154 for with the safety slide locking manual override.

#### Type of mounting screw

ועי שט	Je of illouriting screw			
Nil	Round head combination screw			
В	Hexagon socket head cap screw			
K	Round head combination screw (Falling-out-prevention type)			
Н	Hexagon socket head cap screw (Falling-out-prevention type)			

- \*: For "K" and "H", the valve body cover has a drop prevention construction to stop the mounting screws from falling out when the valve is removed for maintenance etc.
- When ordering a valve individually, the base gasket is not included. Since the base gasket is attached to the manifold, please order the base gasket separately if it is needed for maintenance service.
- Refer to page 212 for part numbers of the base gasket and mounting screw.
- \*: "B" and "H" cannot be selected for the individual SUP/EXH spacer assembly, interface regulator or double check spacer assembly with residual pressure release valve

### Pure in Metal Base SY3000/5000/7000 Series

Dimensions: SY3000 Series

Plug-in Type 50/Side Ported


Metal Base D-sub Connector


SJ

SY

S0700

S0700

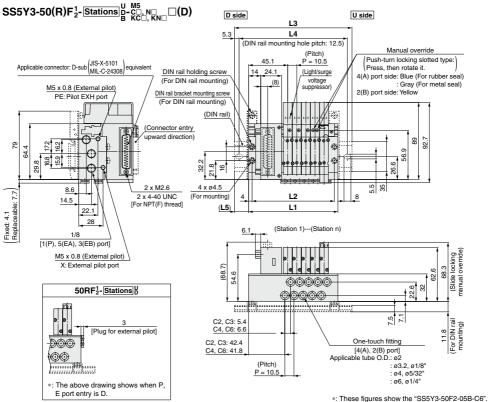

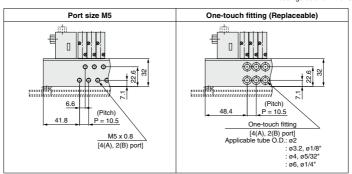


n: Stations	2	3	4	5	6	7	8	9	10	11	12
L1	71.5	82	92.5	103	113.5	124	134.5	145	155.5	166	176.5
L2	63.5	74	84.5	95	105.5	116	126.5	137	147.5	158	168.5
L3	98	110.5	123	135.5	148	160.5	160.5	173	185.5	198	210.5
L4	87.5	100	112.5	125	137.5	150	150	162.5	175	187.5	200
L5	13.5	14.5	15.5	16.5	17.5	18.5	13	14	15	16	17

Plug-in Type 50/Side Ported

Metal Base D-sub Connector

### Dimensions: SY3000 Series

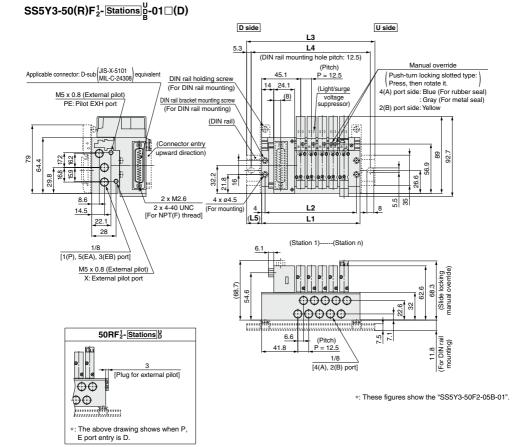

n: Stations	2	3	4	5	6	7	8	9	10	11	12
L1	76	88.5	101	113.5	126	138.5	151	163.5	176	188.5	201
L2	68	80.5	93	105.5	118	130.5	143	155.5	168	180.5	193
L3	110.5	123	135.5	148	160.5	173	185.5	198	210.5	223	235.5
L4	100	112.5	125	137.5	150	162.5	175	187.5	200	212.5	225
L5	17.5	17.5	17.5	17.5	17.5	17.5	17.5	17.5	17.5	17.5	17.5

### Plus-in Metal Base SY3000/5000/7000 Series

Dimensions: SY5000 Series





SJ

SY

S0700

S0700

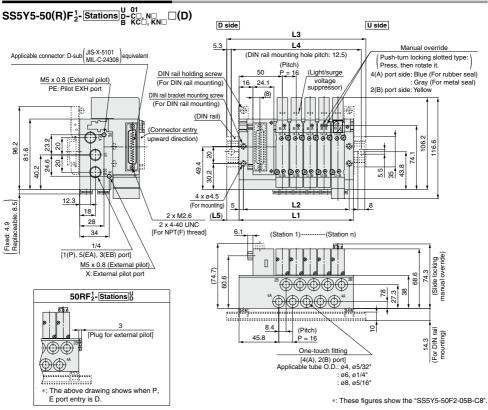

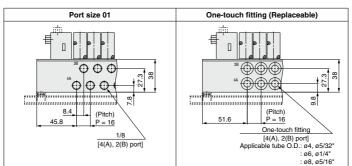


n: Stations	2	3	4	5	6	7	8	9	10	11	12
L1	84	100	116	132	148	164	180	196	212	228	244
L2	74	90	106	122	138	154	170	186	202	218	234
L3	110.5	135.5	148	160.5	173	198	210.5	223	248	260.5	273
L4	100	125	137.5	150	162.5	187.5	200	212.5	237.5	250	262.5
L5	13.5	18	16	14.5	12.5	17	15.5	13.5	18	16.5	14.5

Plug-in Type 50/Side Ported

Metal Base D-sub Connector

### Dimensions: SY5000 Series

### SS5Y5-50(R)F<sub>2</sub><sup>1</sup>-Stations D-02□(D)

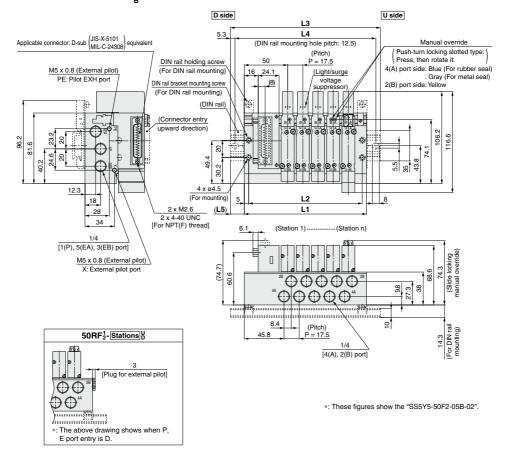


n: Stations	2	3	4	5	6	7	8	9	10	11	12
L1	88.5	106	123.5	141	158.5	176	193.5	211	228.5	246	263.5
L2	78.5	96	113.5	131	148.5	166	183.5	201	218.5	236	253.5
L3	123	135.5	148	173	185.5	210.5	223	235.5	260.5	273	298
L4	112.5	125	137.5	162.5	175	200	212.5	225	250	262.5	287.5
L5	17.5	15	12.5	16	13.5	17.5	15	12.5	16	13.5	17.5

### Pure in Metal Base SY3000/5000/7000 Series





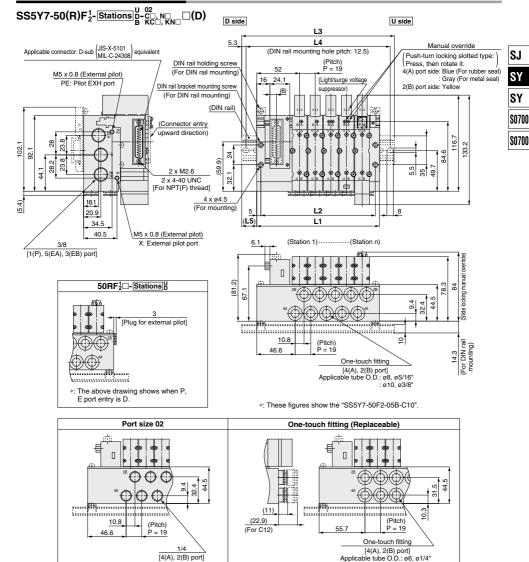


n: Stations	2	3	4	5	6	7	8	9	10	11	12
L1	92	111	130	149	168	187	206	225	244	263	282
L2	82	101	120	139	158	177	196	215	234	253	272
L3	123	148	160.5	185.5	198	223	235.5	260.5	273	298	310.5
L4	112.5	137.5	150	175	187.5	212.5	225	250	262.5	287.5	300
L5	15.5	18.5	15.5	18.5	15	18	15	18	14.5	17.5	14.5


: ø8, ø5/16" : ø10, ø3/8" : ø12

Plug-in Type 50/Side Ported


Metal Base Flat Ribbon Cable

### Dimensions: SY3000 Series

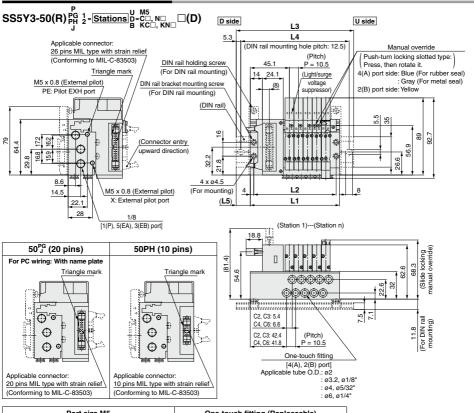

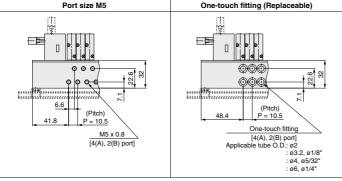

- \*: These figures show the "SS5Y3-50P2-05B-C6".
- \*: Only connectors are different for 50PG, 50PH and 50J. L1 to L5 dimensions are the same
  - as 50P type.

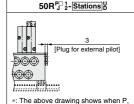


\*: The above drawing shows when P E port entry is D.


n: Stations	2	3	4	5	6	7	8	9	10	11	12
L1	71.5	82	92.5	103	113.5	124	134.5	145	155.5	166	176.5
L2	63.5	74	84.5	95	105.5	116	126.5	137	147.5	158	168.5
L3	98	110.5	123	135.5	148	160.5	160.5	173	185.5	198	210.5
L4	87.5	100	112.5	125	137.5	150	150	162.5	175	187.5	200
L5	13.5	14.5	15.5	16.5	17.5	18.5	13	14	15	16	17

### Pure in Metal Base SY3000/5000/7000 Series


Plug-in Type 50/Side Ported
Metal Base Flat Ribbon Cable



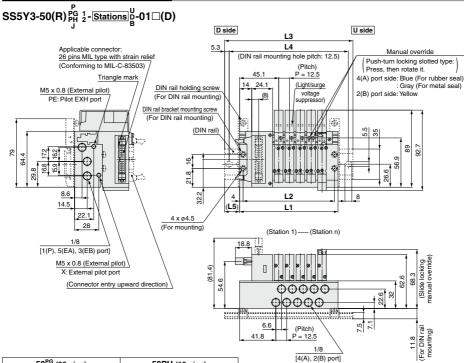

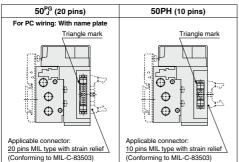

- \*: These figures show the "SS5Y3-50P2-05B-01".
- \*: Only connectors are different for 50PG, 50PH and 50J. L1 to L5 dimensions are the same as 50P type.

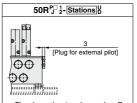

\*: The above drawing shows when P, E port entry is D.

n: Stations	2	3	4	5	6	7	8	9	10	11	12
L1	76	88.5	101	113.5	126	138.5	151	163.5	176	188.5	201
L2	68	80.5	93	105.5	118	130.5	143	155.5	168	180.5	193
L3	110.5	123	135.5	148	160.5	173	185.5	198	210.5	223	235.5
L4	100	112.5	125	137.5	150	162.5	175	187.5	200	212.5	225
L5	17.5	17.5	17.5	17.5	17.5	17.5	17.5	17.5	17.5	17.5	17.5

SJ

SY


SY S0700


S0700


Plug-in Type 50/Side Ported

Metal Base Flat Ribbon Cable

### Dimensions: SY5000 Series

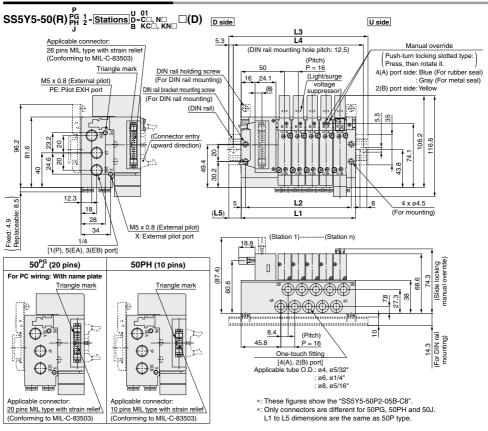

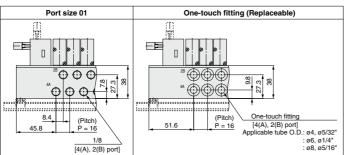

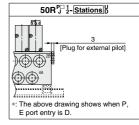

n: Stations	2	3	4	5	6	7	8	9	10	11	12
L1	84	100	116	132	148	164	180	196	212	228	244
L2	74	90	106	122	138	154	170	186	202	218	234
L3	110.5	135.5	148	160.5	173	198	210.5	223	248	260.5	273
L4	100	125	137.5	150	162.5	187.5	200	212.5	237.5	250	262.5
L5	13.5	18	16	14.5	12.5	17	15.5	13.5	18	16.5	14.5

### Pure Metal Base SY3000/5000/7000 Series

### Dimensions: SY5000 Series

Applicable connector:

20 pins MIL type with strain relie

(Conforming to MIL-C-83503)


Plug-in Type 50/Side Ported

Metal Base Flat Ribbon Cable

[Plug for external pilot]

/-----

\*: The above drawing shows when P, E port entry is D.

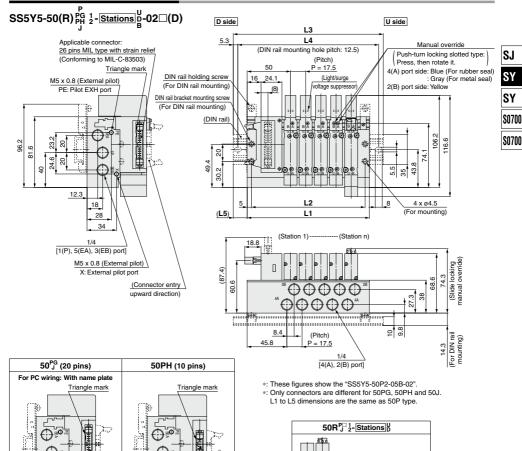

n: Stations	2	3	4	5	6	7	8	9	10	11	12
L1	88.5	106	123.5	141	158.5	176	193.5	211	228.5	246	263.5
L2	78.5	96	113.5	131	148.5	166	183.5	201	218.5	236	253.5
L3	123	135.5	148	173	185.5	210.5	223	235.5	260.5	273	298
L4	112.5	125	137.5	162.5	175	200	212.5	225	250	262.5	287.5
L5	17.5	15	12.5	16	13.5	17.5	15	12.5	16	13.5	17.5


Applicable connector:


10 pins MIL type with strain relief


(Conforming to MIL-C-83503)



### Dimensions: SY7000 Series

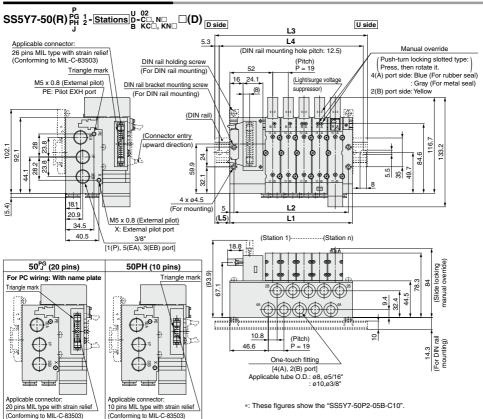

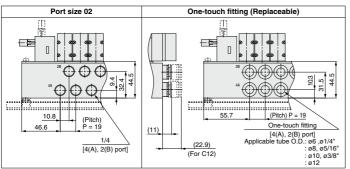

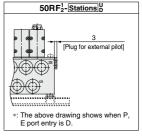

n: Stations	2	3	4	5	6	7	8	9	10	11	12
L1	92	111	130	149	168	187	206	225	244	263	282
L2	82	101	120	139	158	177	196	215	234	253	272
L3	123	148	160.5	185.5	198	223	235.5	260.5	273	298	310.5
L4	112.5	137.5	150	175	187.5	212.5	225	250	262.5	287.5	300
L5	15.5	18.5	15.5	18.5	15	18	15	18	14.5	17.5	14.5

### Plus in Metal Base SY3000/5000/7000 Series



Plug-in Metal Base

Type 51/Bottom Ported


SJ


SY


S0700


S0700

D-sub Connector

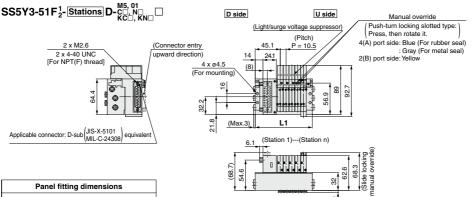

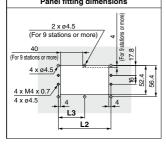

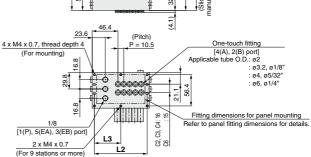

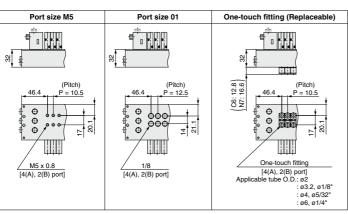

\*: These figures show the "SS5Y3-51F2-05D-C6".

#### Port Size M5, C□, N□, KC□, KN□

,,	,	,									
n: Stations	2	3	4	5	6	7	8	9	10	11	12
L1	71.5	82	92.5	103	113.5	124	134.5	145	155.5	166	176.5
L2	63.5	74	84.5	95	105.5	116	126.5	137	147.5	158	168.5
1.2								68.5	73.8	70	84.3


#### Port Size 01


n: Stations	2	3	4	5	6	7	8	9	10	11	12
L1	76	88.5	101	113.5	126	138.5	151	163.5	176	188.5	201
L2	68	80.5	93	105.5	118	130.5	143	155.5	168	180.5	193
L3	_	_	_	_	_	_	_	77.8	84	90.3	96.5

Dimensions: SY5000 Series

Plug-in Typ Metal Base

Type 51/Bottom Ported
D-sub Connector

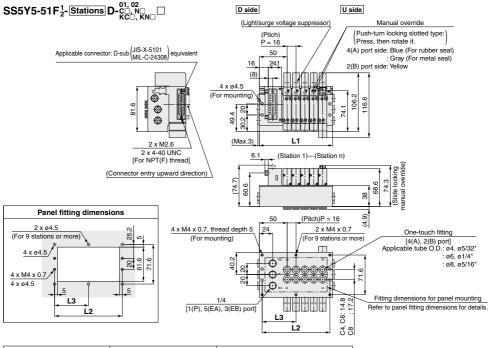

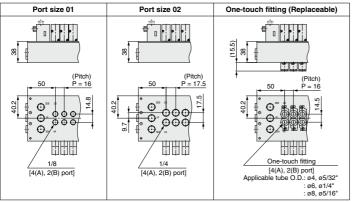

\*: These figures show the "SS5Y5-51F2-05D-C8".

#### Port Size 01, C□, N□, KC□, KN□


n: Stations	2	3	4	5	6	7	8	9	10	11	12
L1	84	100	116	132	148	164	180	196	212	228	244
L2	74	90	106	122	138	154	170	186	202	218	234
L3	_	_	_	_	_	_	_	93	101	109	117

#### Port Size 02

n: Stations	2	3	4	5	6	7	8	9	10	11	12
L1	88.5	106	123.5	141	158.5	176	193.5	211	228.5	246	263.5
L2	78.5	96	113.5	131	148.5	166	183.5	201	218.5	236	253.5
L3	_	_	_	_	_	_	_	100.5	109.3	118	126.8

### Pure in Metal Base SY3000/5000/7000 Series



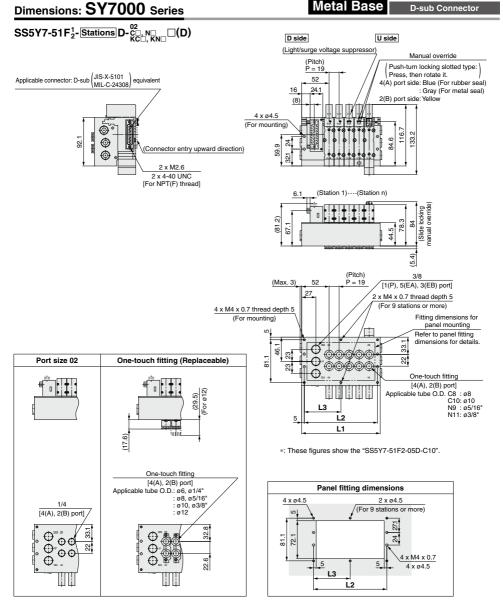


n: Stations	2	3	4	5	6	7	8	9	10	11	12
L1	92	111	130	149	168	187	206	225	244	263	282
L2	82	101	120	139	158	177	196	215	234	253	272
L3	_	_	_	_	_	_	_	107.5	117	126.5	136

SJ

SY

S0700

S0700

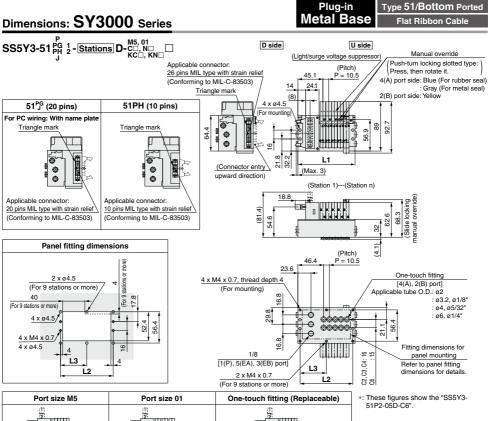


		one teach many (nephaecasie)	E4 DO OED OO!
8	8	8 4	51P2-05D-C6".
(Pitch) 46.4 P = 10.5	(Pitch) P=12.5 O O O O T	(Pitch) P=10.5 P=10.5 P=10.5	
<u> </u>	1/8	One-touch fitting	
[4(A), 2(B) port]	[4(A), 2(B) port]	[4(A), 2(B) port] Applicable tube O.D.: ø2	
		: ø3.2, ø1/8"	
		: ø4, ø5/32"	
		: ø6, ø1/4"	
Port Size M5, C□, N□, KC	□, KN□		

	,	,									
n: Stations	2	3	4	5	6	7	8	9	10	11	12
L1	71.5	82	92.5	103	113.5	124	134.5	145	155.5	166	176.5
L2	63.5	74	84.5	95	105.5	116	126.5	137	147.5	158	168.5
1.3	_	_	_	_	_	_	_	68.5	73.8	79	84.3

Port	Size 01											
	n: Stations	2	3	4	5	6	7	8	9	10	11	12
	L1	76	88.5	101	113.5	126	138.5	151	163.5	176	188.5	201
	L2	68	80.5	93	105.5	118	130.5	143	155.5	168	180.5	193
	L3	_	_	_	_	_	_	_	77.8	84	90.3	96.5

### Pure Metal Base SY3000/5000/7000 Series

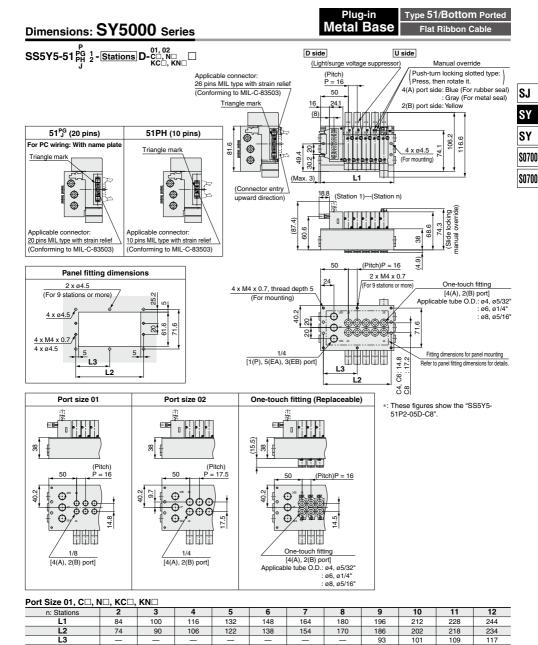

6

158.5

176

166

8

193.5

183.5

9

211

201

100.5

10

228.5

218.5

109.3

11

246

236

118

5

141

131

Port Size 02 n: Stations

L1

L2

L3

2

88.5

78.5

3

106

96

123.5

113.5

12

263.5


253.5


126.8

### Dimensions: SY7000 Series


SS5Y7-51 PG 1-Stations D-


Plug-in Type 51/Bottom Ported **Metal Base** Flat Ribbon Cable

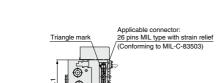


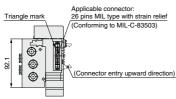


. 02 C□, N□ □(**D**) KC□, KN□

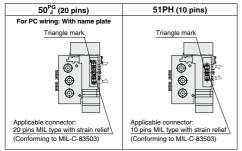


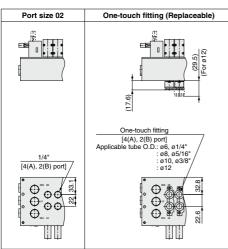

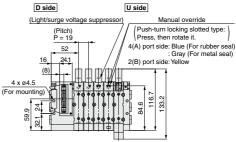

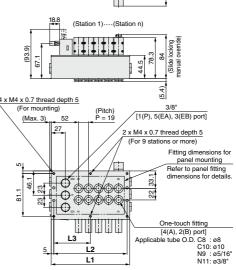

\*: These figures show the "SS5Y7-51P2-05D-C10".

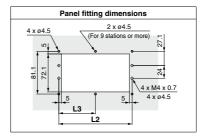

n: Stations	2	3	4	5	6	7	8	9	10	11	12
L1	92	111	130	149	168	187	206	225	244	263	282
L2	82	101	120	139	158	177	196	215	234	253	272
L3	_	_	_	_	_	_	_	107.5	117	126.5	136

SJ

SY SY

S0700

S0700

### Plug-in Metal Base


D-sub Connector | Flat Ribbon Cable | PC Wiring

Type 52 Top Ported

# SY3000/5000/7000 Series

C C C ROHS


#### **How to Order Manifold**

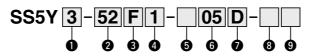

#### Series SY3000 SY5000

2 Type 52 Top ported 52R Top ported, External pilot

### 4 Connector entry direction

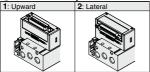


Wiring type

Nil	All double wiring*1
S	All single wiring*2

- \*1: All double wiring: 2-position single, double, 3-position and 4-position valves can be used on all manifold stations.
- \*2: All single wiring: Available only for the manifold which has 2-position single for all stations. Note that 2-position double, 3- or 4-position valves cannot be used.
- \*: If a mix of single and double wiring is required, it is supplied as a

### How to Order Manifold Assembly

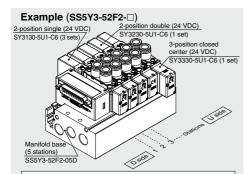


SS5Y3-52F2-05D ......... 1 set (Type 52 5-station manifold base part no.) \*SY3130-5U1-C6...... 3 sets (2-position single part no.) \*SY3230-5U1-C6..... 1 set (2-position double part no.) \*SY3330-5U1-C6...... 1 set (3-position closed center part no.)

- The asterisk denotes the symbol for assembly. Prefix it to the part numbers of the valve etc.

• The valve arrangement is numbered as the 1st station from the D side. . Under the manifold part number, state the valves to be mounted in order from the 1st station as shown in the figure above. If the arrangement becomes complicated, specify on a manifold specification sheet.

### Connector type

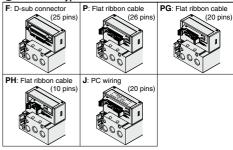

### Valve stations

<b>F</b> : D-	sub con	nector (25 pins	<b>P</b> : Fla	t ribbon	cable (26 pins)	PG: Flat ribbon cable (20 pins)			
Symbol	Stations	Note	Symbol	Stations	Note	Symbol	Stations	Note	
02	2 stations	All	02	2 stations	All	02	2 stations	All	
-	:	double		:	double	:		double	
12	12 stations	wiring	12	12 stations	wiring	09	9 stations	wiring	
02	2 stations	All	02	2 stations	All	02	2 stations	All	
	:	single		:	single	:		single	
12	12 stations	wiring	12	12 stations	wiring	12	12 stations	wiring	

PH:	lat ribbo	n cable (10 pins)	<b>J</b> : P0	wirin	g (20 pins)
Symbol	Stations	Note	Symbol	Stations	Note
02	2 stations	All	02	2 stations	All
·	- :	double	- :	:	double
04	4 stations	wiring	08	8 stations	wiring
02	2 stations	All	02	2 stations	All
·	- :	single	:	:	single
08	8 stations	wiring	12	12 stations	wiring

\*: This also includes the number of blanking plate assembly.

#### P F port entry

T , E port ontry							
U	U side*1						
D	D side*1						
В	Both sides						

\*1: Plugs are mounted on the opposite side of the selected ports.

#### Thread type

N	lil	Rc
00F	G	
00	N	NPT
00	TC	NPTF

Mounting									
Nil		Direct mounting							
D	DIN rai	DIN rail mounting (With DIN rail)							
D0	DIN rail mounting (Without DIN rail)								
D3	For 3 stations	Cassify a language sail than							
:	:	Specify a longer rail than the standard length.							
D12	For 12 stations	trie startuaru terigiri.							

\*: Refer to page 394 for the fixation of DIN rail mounting type manifold.

### Pure Metal Base SY3000/5000/7000 Series


#### How to Order Valves (With mounting screw)

Refer to page 136 for valve specifications.

SJ

S0700

S0700

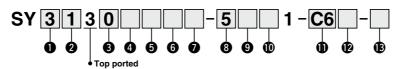

#### Series

3	SY3000
5	SY5000
7	SY7000

#### 2 Type of actuation

• .,,,			
1	0	Single	
2	2-position	Double	
3		Closed center	
4	3-position	Exhaust center	
5		Pressure center	
<b>A</b> *1	4-position	N.C./N.C.	
B*1	dual	N.O./N.O.	
C*1	3-port	N.C./N.O.	

\*1: Only rubber seal type is available for the 4-position dual 3-port valve.

#### Seal type

0	Rubber seal
1	Metal seal

#### 4 Pilot type

•	, p
Nil	Internal pilot
R	External pilot

## Back pressure check valve (Built-in valve type)

	(Βι	uilt-in valve type)
Ni	1	None

- \*: Only rubber seal type
- Back pressure check valve is not available for the 3-position type and the SY7000.

#### 6 Pilot valve option

Nil	Standard (0.7 MPa)	
В	Quick response type (0.7 MPa)	
K*1	High pressure type (1.0 MPa)	

\*1: Only metal seal type is available for the high pressure type.

#### Coil type

	•		
Nil Standard		Standard	
	т	With power saving circuit (Continuous duty type)	

- \*: Be sure to select the power saving circuit type when a valve is continuously energized for long periods of time.
- Be careful of the energizing time when the power saving circuit is selected. Refer to page 391 for details.

#### 8 Rated voltage


<u> </u>	ica voitage		
5		24 VDC	
6		12 VDC	

## 9 Light/surge voltage suppressor and common specification

Symbol	With light	Surge voltage suppressor	Common specification
Nil	-	_	
R	l		Non-polar
U	•		
S		_	Positive
Z	•	•	common
NS	_		Negative
NZ	•		common

\*: Only "Z" and "NZ" types are available for with the power saving circuit.

### Manual override

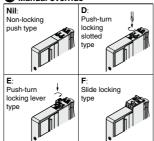

\*: Refer to page 154 for with the safety slide locking manual override.

#### A, B port size

#### Thread nining

111116	riireau pipilig			
Symbol	Port size	Applicable series		
M5	M5 x 0.8	SY3000		
01	1/8	SY5000		
02	1/4	SY7000		

#### One-touch fitting (Metric)

One-touch fitting (wetho)						
Symbol	A, B port	SY3000	SY5000	SY7000		
C2	ø2	•	_	_		
C2 C3 C4 C6	ø3.2	•	_	_		
C4	ø4	•	•	_		
C6	ø6	•	•	•		
C8	ø8		•	•		
C10	ø10		_	•		
C12	ø12	_	_	•		

#### One-touch fitting (Inch)

Symbol	A, B port	SY3000	SY5000	SY7000
N1	ø1/8"	•	_	_
N3	ø5/32"	•	•	_
N7	ø1/4"	•	•	•
N9	ø5/16"	_	•	•
N11	ø3/8"	_	_	•

#### 1 Thread type

Nil	Rc
F	G
N	NPT
Т	NPTF

\*: Only Nil is available for M5.

### B Type of mounting screw

ועי שט	be of mounting screw
Nil	Round head combination screw
В	Hexagon socket head cap screw
K	Round head combination screw (Falling-out-prevention type)
Н	Hexagon socket head cap screw (Falling-out-prevention type)

- \*: For "K" and "H", the valve body cover has a drop prevention construction to stop the mounting screws from falling out when the valve is removed for maintenance etc.
- \*: When ordering a valve individually, the base gasket is not included. Since the base gasket is attached to the manifold, please order the base gasket separately if it is needed for maintenance service.


Refer to page 212 for part numbers of the base gasket and mounting screw.


\*: "B" and "H" cannot be selected for the individual SUP/EXH spacer assembly or interface regulator.

Plug-in **Metal** Base Type 52/Top Ported

D-sub Connector, Flat Ribbon Cable


Dimensions: SY3000 Series

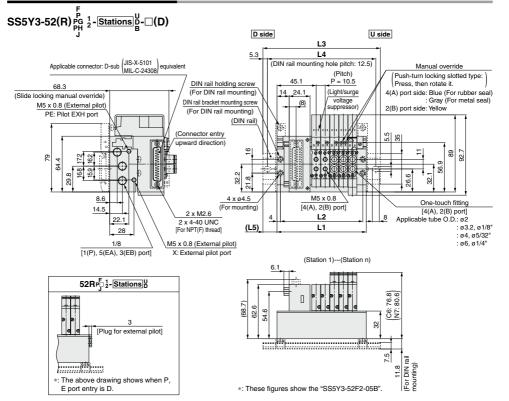

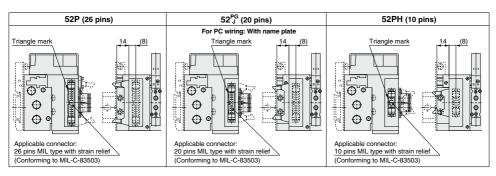

n: Stations	2	3	4	5	6	7	8	9	10	11	12
L1	71.5	82	92.5	103	113.5	124	134.5	145	155.5	166	176.5
L2	63.5	74	84.5	95	105.5	116	126.5	137	147.5	158	168.5
L3	98	110.5	123	135.5	148	160.5	160.5	173	185.5	198	210.5
L4	87.5	100	112.5	125	137.5	150	150	162.5	175	187.5	200
L5	13.5	14.5	15.5	16.5	17.5	18.5	13	14	15	16	17

## Pustin Metal Base SY3000/5000/7000 Series

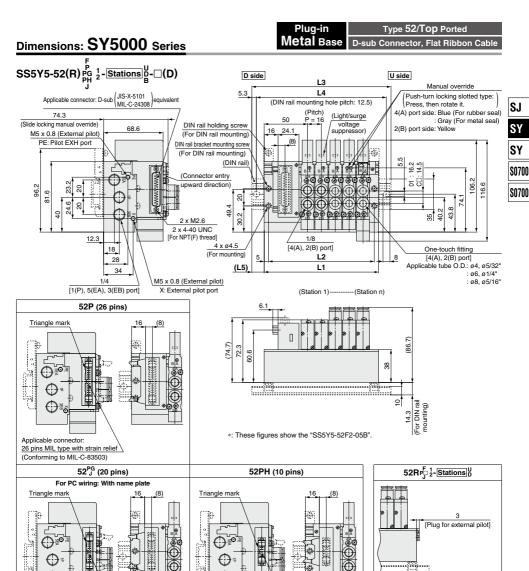

n: Stations	2	3	4	5	6	7	8	9	10	11	12
L1	84	100	116	132	148	164	180	196	212	228	244
L2	74	90	106	122	138	154	170	186	202	218	234
L3	110.5	135.5	148	160.5	173	198	210.5	223	248	260.5	273
L4	100	125	137.5	150	162.5	187.5	200	212.5	237.5	250	262.5
L5	13.5	18	16	14.5	12.5	17	15.5	13.5	18	16.5	14.5

Applicable connector:

10 pins MIL type with strain relief


(Conforming to MIL-C-83503)

Applicable connector:

20 pins MIL type with strain relief


(Conforming to MIL-C-83503)

\*: The above drawing shows when P, E port entry is D.

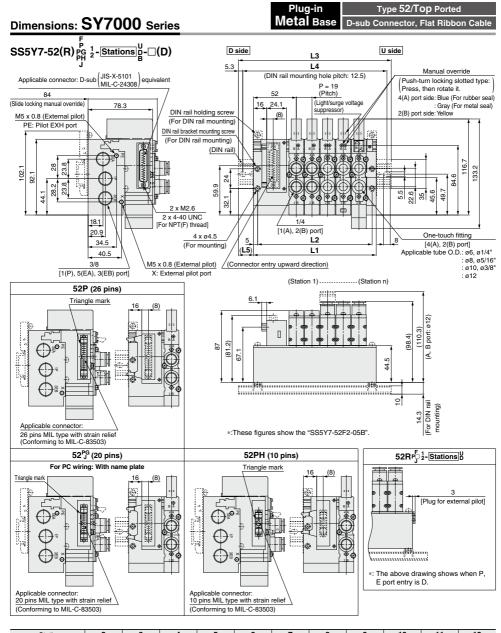


n: Stations	2	3	4	5	6	7	8	9	10	11	12
L1	92	111	130	149	168	187	206	225	244	263	282
L2	82	101	120	139	158	177	196	215	234	253	272
L3	123	148	160.5	185.5	198	223	235.5	260.5	273	298	310.5
L4	112.5	137.5	150	175	187.5	212.5	225	250	262.5	287.5	300
L5	15.5	18.5	15.5	18.5	15	18	15	18	14.5	17.5	14.5

### Pure Metal Base SY3000/5000/7000 Series

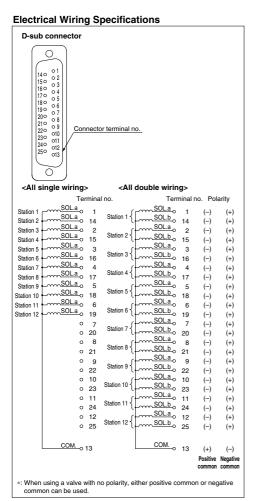

#### Cable Assembly

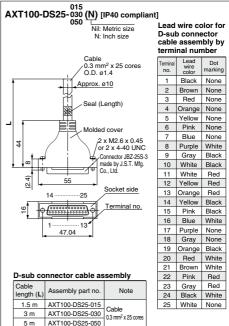

\*: When using a standard commercial connector, use a 25-pin type female connector conforming to MIL-C-24308.

- \*: Cannot be used for movable wiring. \* I enoths other than the above are also
- available. Please contact SMC for details.

Electrical cha	racteris	U
Item	Property	
Conductor resistance $\Omega/km$ , $20^{\circ}C$	65 or less	
Voltage limit V, 1 minute, AC	1000	
Insulation resistance MΩ/km, 20°C	5 or more	

\*: The minimum bending radius of the D-sub connector cable is 20 mm

#### Electrical characteristics | Connector Manufacturers' Example

- · Fujitsu Limited
- · Japan Aviation Electronics Industry, Limited
- . J.S.T. Mfg. Co., Ltd.
- · HIROSE ELECTRIC CO., LTD.


SJ

SY

S0700

S0700

### **Electrical Wiring Specifications**

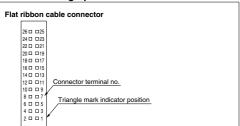

D. Flat sibban askla (00 sins)

	P: Fla	t ribbon c	able (26 pir	าร)		
<all single<="" th=""><th>wiring&gt;</th><th><all< th=""><th>double wiri</th><th>ing&gt;</th><th></th><th></th></all<></th></all>	wiring>	<all< th=""><th>double wiri</th><th>ing&gt;</th><th></th><th></th></all<>	double wiri	ing>		
	Termina	l no.	Term	ninal r	no. Pol	arity
Station 1	SOLa 1	Station 1 {	SOL.a SOL.b	1 2	(-) (-)	(+) (+)
Station 3	SOLa 3	Station 2 {	SOL.a SOL.b	3	(-) (-)	(+) (+)
Station 5	SOLa 5	Station 3 {	SOL.a SOL.b	5 6	(-) (-)	(+) (+)
Station 7	SOLa 7	Station 4 {	SOL.a SOL.b	7 8	(-) (-)	(+) (+)
Station 9	SOLa 9 SOLa 10	Station 5 {	SOL.b	9 10	(-) (-)	(+) (+)
Station 11	SOLa 0 11 SOLa 0 12	Station 6 {	SOL.b	11 12	(-) (-)	(+) (+)
	o 13 o 14	Station 7 {	SOL.a SOL.b	14	(-) (-)	(+) (+)
	∘ 15 ∘ 16	Station 8 {	SOL a	16	(-)	(+) (+)
	∘17 ∘18	Station 9 {	SOL.b	10	( <del>-</del> )	(+) (+)
	∘ 19 ∘ 20	Station 10 {	SOL.a SOL.b	00	(-) (-)	(+) (+)
	° 21 ° 22	Station 11 {	SOL b SOL a	22	(-) (-)	(+) (+)
	∘ 23 ∘ 24 COM.	Station 12 {	L~~~SUL.D	24	(–) (–)	(+) (+)
	COM. 25		COM.	25 26	(+)	(-) (-)
				F	Positive	Negative


	PG: Fla	t ribbon d	cable (20 p	ins)		1
<all single<="" th=""><th>wiring&gt;</th><th><all (<="" th=""><th>double wir</th><th>ing&gt;</th><th></th><th></th></all></th></all>	wiring>	<all (<="" th=""><th>double wir</th><th>ing&gt;</th><th></th><th></th></all>	double wir	ing>		
	Terminal	no.	Tern	ninal no	. Pola	arity
Station 1 Station 2 Station 3 Station 4 Station 5 Station 6 Station 7 Station 7 Station 9 Station 9 Station 10 Station 11 Station 12	SOLa   1	Station 1 { Station 2 { Station 3 { Station 4 { Station 5 { Station 6 { Station 7 { Station 8 { Station 9 {	SOLA SOLA SOLA SOLA SOLA SOLA SOLA SOLA	1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18		(+) (+) (+) (+) (+) (+) (+) (+) (+) (+)
					sitive mmon	Negative common

common common

**SMC** 

\*: When using a valve with no polarity, either positive common or negative common can be used.

#### Cable Assembly

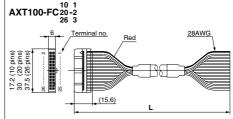

#### Flat ribbon cable connector assembly

Cable		Assembly part no.	
length (L)	26 pins	20 pins	10 pins
1.5 m	AXT100-FC26-1	AXT100-FC20-1	AXT100-FC10-1
3 m	AXT100-FC26-2	AXT100-FC20-2	AXT100-FC10-2
5 m	AXT100-FC26-3	AXT100-FC20-3	AXT100-FC10-3

- \*: When using a standard commercial connector, use a 26-pin, 20-pin or 10-pin type connector conforming to MIL-C-83503 with strain relief.
- \*: Cannot be used for movable wiring.
- \*: Lengths other than the above are also available. Please contact SMC for details.

#### Connector Manufacturers' Example

- HIROSE ELECTRIC CO., LTD. Japan Aviation Electronics Industry, Limited
- 3M Japan Limited J.S.T. Mfg. Co., Ltd.
- Fujitsu Limited
   Oki Electric Cable Co., Ltd.

#### PH: Flat ribbon cable (10 pins) <All single wiring> <All double wiring> Terminal no. Terminal no. Polarity mSOLa o 1 SOLa ∘ 1 Station 1 SOL.b Station 1 Station 2 2 SOLa 3 SOL.a Station 3 3 (+) SOLa Station 2 SOL.b Station 4 4 (+)SOL.a SOL.a Station 5 5 5 (-) (+) SOL.a Station 3 SOL.b Station 6 6 6 (+) SOL.a SOL.a Station 7 (+) SOLa 8 Station 4 SOL.b Station 8 (+) СОМ. COM. o 9 9 (+) (-) COM. ○ 10 <u>COM.</u> ∘ 10 (+) (<del>-</del>) Positive Negative

common common

	J: Flat ribbo	on cable (20	pins) P	C w	iring	
<all sir<="" th=""><th>ngle wiring&gt;</th><th><all d<="" th=""><th>ouble wi</th><th>rinç</th><th><b>j&gt;</b></th><th></th></all></th></all>	ngle wiring>	<all d<="" th=""><th>ouble wi</th><th>rinç</th><th><b>j&gt;</b></th><th></th></all>	ouble wi	rinç	<b>j&gt;</b>	
	Terminal	no.			no. Pola	arity
Station 1 Station 2 Station 3 Station 4 Station 5 Station 6 Station 7 Station 8 Station 9 Station 10 Station 11	SOLa 20	Station 1 { Station 2 { Station 3 { Station 3 { Station 4 { Station 5 { Station 5 { Station 6 { Station 7 { Station 7 { Station 8 { Statio	SOLa SOLb SOLa SOLb SOLa SOLb SOLa SOLb SOLa SOLb	20 18 16		(+) (+) (+) (+) (+) (+) (+) (+) (+) (+)
					Positive common	Negative common

194

SJ

SY

**SY** 

S0700

# Plug-in Metal Base Ex510

# **SY3000/5000/7000** Series

Plugs are mounted on the opposite

\*2: Only D side is available for Type 51

side of the selected ports.

(Bottom ported).

#### **How to Order Manifold**



# 3 SY3000 5 SY5000 7 SY7000

	<u> </u>	Je
	50	Side ported
	51	Bottom ported
	50R	Side ported, External p

3 SI Unit output polarit					
Nil	Positive common				
N	Negative common				

 External pilot is not available for the bottom ported type.

5 Valve stations						
Symbol	Stations	Note	Symbol	Stations	Note	
02	2 stations	All double	02	2 stations	All single	
·		wiring	:		wiring	
08	8 stations	wiilig	12	12 stations	willing	

\*: This also includes the number of blanking plate assembly.

# Wiring type Nil All double wiring\*1 S All single wiring\*2

- \*1: All double wiring: 2-position single, double, 3-position and 4-position valves can be used on all manifold stations.
- \*2: All single wiring: Available only for the manifold which has 2-position single for all stations.
- Note that 2-position double, 3- or 4-position valves cannot be used.
- \*: If a mix of single and double wiring is required, it is supplied as a special order.

# A, B port size

В

P, E port entry

Till cau pipilig					
Symbol	A, B port	SY3000	SY5000	SY7000	
M5	M5 x 0.8	•	_	_	
01	1/8	•	•	_	
02	1/4	_	•	•	

U side\*1

D side\*1\*2

Both sides

#### One-touch fitting (Metric)


ĺ	Symbol		A, B port	SY3000	SY5000	SY7000		
		C2	ø2	•	_	_		
		СЗ	ø3.2	•	_	_		
ı	Fixed	C4	ø4	•	•	_		6Q
ı	Ĕ	C6	ø6	•	•	_		
ı		C8	ø8	_	•	•	<b>(C</b>	
ı		C10	ø10	_	_	•		
l		KC2	ø2	•	_	_	Type 50	Type 51
ı		кс3	ø3.2	•	_	_	(Side ported)	(Bottom ported)
ı	e	KC4	ø4	•	•	_	111	
ı	Replaceable	KC6	ø6	•	•	•		`
ı	plac	KC8	ø8	_	•	•		
ı	Be	KC10	ø10	_	_	•		
		KC12	ø12	_	_	•		
l		M*1	Mixed sizes	•	•	•		_
Ì	P, E port size (Thread piping)			1/8	1/4	3/8		

#### One-touch fitting (Inch)

Sy	ymbol	A, B port	SY3000	SY5000	SY7000		
	N1	ø1/8"	•	_	_		//
_	N3	ø5/32"	•	•	_		
Fixed	N7	ø1/4"	•	•	_		04
"	N9	ø5/16"	_	•	•		10 L
	N11	ø3/8"	_	_	•	, , , , , , , , , , , , , , , , , , ,	,
	KN1	ø1/8"	•	_	_	Type 50	Type 51
e	KN3	ø5/32"	•	•	_	1 (Side ported)	(Bottom ported)
Seal	KN3 KN7 KN9 KN11	ø1/4"	•	•	•		
pla	KN9	ø5/16"	_	•	•		
Re	KN11	ø3/8"	_	_	•		
	M*1	Mixed sizes	•	•	•		
P,	E port s	size (Thread piping)	1/8	1/4	3/8		

\*1: When ports are mixed sizes, indicate the piping specifications on the manifold specification sheet.

# **How to Order Manifold Assembly**

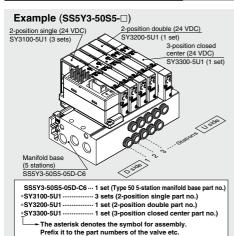

\*: When mixing top ported configurations, select from page 207. In this case, use caution as there is also output on the A and B port on base side. Specify on a manifold specification sheet if plugs are required on the A and B port on base side.

 The valve arrangement is numbered as the 1st station from the D side.
 Under the manifold part number, state the valves to be mounted in order from the 1st station as shown in the figure above. If the arrangement becomes complicated, specify on a manifold specification sheet.

# Metal Base SY3000/5000/7000 Series

SJ

S0700

S0700

Thread type					
Nil	Rc				
F	G				
N	NPT				
Т	NPTF				

Mounting


Nil		Direct mounting					
D		DIN rail mounting (With DIN rail)					
		(With Dily fall)					
DO		DIN rail mounting					
_ D0	DU	(Without DIN rail)					
D3	;	For 3 stations	Cassify a language sail than				
:			Specify a longer rail than the standard length.				
D12	2	For 12 stations	ine sianuaru lengin.				

- \*: Only direct mounting is available for Type 51 (Bottom ported).
- \*: Refer to page 394 for the fixation of DIN rail mounting type manifold.

For details about the EX510 Gateway-type Serial Transmission System, refer to pages 878 to 906 and the Operation Manual. Please download the Operation Manual via SMC website, http://www.smcworld.com

## How to Order Valves (With mounting screw)

Refer to page 136 for valve specifications.

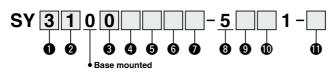

#### A Sarias

COLICO			
3	SY3000		
5	SY5000		
7	SY7000		

2 Type of actuation

• .,,,					
Opposition	Single				
2-position	Double				
3	Closed center				
3-position	Exhaust center				
	Pressure center				
4	N.C./N.C.				
dual 3-port	N.O./N.O.				
	N.C./N.O.				
	2-position 3-position 4-position				

\*1: Only rubber seal type is available for the 4-position dual 3-port valve.

# A coal time

Sear type					
	0	Rubber seal			
	1	Metal seal			

Dilot type

<u> </u>	or type
Nil	Internal pilot
R	External pilot

#### Back pressure check valve (Built-in valve type)

	ant in valve type,
Nil	None
H	Built-in

- \*: Only rubber seal type
- \*: Back pressure check valve is not available for the 3-position type and the SY7000.

#### 6 Pilot valve option

Nil	Standard (0.7 MPa)
В	Quick response type (0.7 MPa)
K*1	High pressure type (1.0 MPa)

\*1: Only metal seal type is available for the high pressure type.

# Coil type

_	**
Nil	Standard
T	With power saving circuit (Continuous duty type)

- \*: Be sure to select the power saving circuit type when the valve is continuously energized for long periods of time.
- \*: Be careful of the energizing time when the power saving circuit is selected. Refer to page 391 for details.

# Rated voltage


5	24 V/D/	^

#### Light/surge voltage suppressor and common specification

un	and common opcomounon												
Symbol	With light	Surge voltage suppressor	Common specification										
R	-		Non-polar										
U	•		Non-polai										
S	_		Positive common										
Z	•		FUSILIVE CUITITION										
NS	_		Negative common										
NZ	•		iveyalive common										

\*: Only "Z" and "NZ" types are available for with the power saving circuit. Select a valve from R, U, S or Z when the SI Unit output polarity is Nil (positive common).

Select a valve from R, U, NS or NZ when the SI Unit output polarity is N (negative common). Manual override

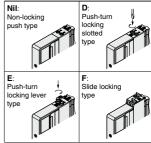

\*: Refer to page 154 for with the safety slide locking manual override.

#### Type of mounting screw

Nil	Round head combination screw
В	Hexagon socket head cap screw
K	Round head combination screw (Falling-out-prevention type)
Н	Hexagon socket head cap screw (Falling-out-prevention type)

- \*: For "K" and "H", the valve body cover has a drop prevention construction to stop the mounting screws from falling out when the valve is removed for maintenance etc.
- \*: When ordering a valve individually, the base gasket is not included. Since the base gasket is attached to the manifold, please order the base gasket separately if it is needed for maintenance service

Refer to page 212 for part numbers of the base gasket and mounting screw.


\*: "B" and "H" cannot be selected for the individual SUP/EXH spacer assembly, interface regulator or double check spacer assembly with residual pressure release valve.






Plug-in **Metal** Base Type 50/Side Ported EX510

Dimensions: SY3000 Series

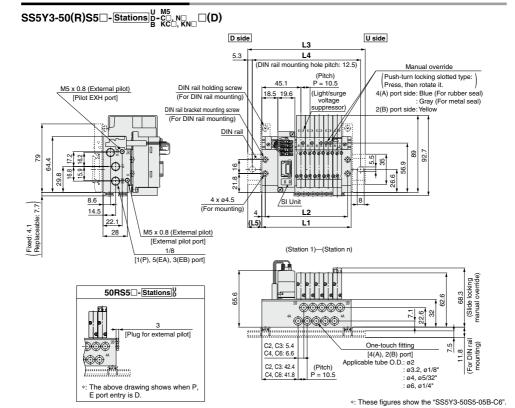

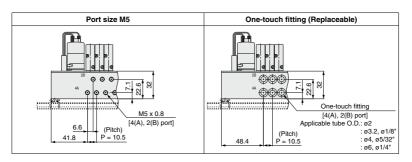

n: Stations	2	3	4	5	6	7	8	9	10	11	12
L1	71.5	82	92.5	103	113.5	124	134.5	145	155.5	166	176.5
L2	63.5	74	84.5	95	105.5	116	126.5	137	147.5	158	168.5
L3	98	110.5	123	135.5	148	160.5	160.5	173	185.5	198	210.5
L4	87.5	100	112.5	125	137.5	150	150	162.5	175	187.5	200
L5	13.5	14.5	15.5	16.5	17.5	18.5	13	14	15	16	17

# Pure Metal Base SY3000/5000/7000 Series

Plug-in Type 50/Side Ported Metal Base EX510

SJ

SY

SY


S0700

S0700

Dimensions: SY3000 Series SS5Y3-50(R)S5□-Stations D-01□(D)

D side U side L3 L4 5.3 Manual override (DIN rail mounting hole pitch: 12.5) M5 x 0.8 (External pilot) Push-turn locking slotted type: (Pitch) [Pilot EXH port] Press, then rotate it. P = 12.5 DIN rail holding screw 45.1 4(A) port side: Blue (For rubber seal) 18.5 19.6 (For DIN rail mounting) (Light/surge voltage : Gray (For metal seal) suppressor) 2(B) port side: Yellow DIN rail bracket mounting screw (For DIN rail mounting) DIN rai 8 92.7 79 64.4 56.9 26.6 SI Unit 8.6 4 x ø4.5 8 (For mounting) 14.5 (L5) 22.1 M5 x 0.8 (External pilot) 28 [External pilot port] 1/8 [1(P), 5(EA), 3(EB) port] (Station 1)----(Station n) 68.3 9.59 62.6

	50RS5□-Stations D
	[Plug for external pilot]
*:	The above drawing shows when P, E port entry is D.

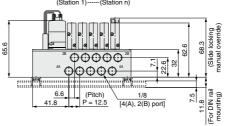


\*: These figures show the "SS5Y3-50S5-05B-01".

n: Stations	2	3	4	5	6	7	8	9	10	11	12
L1	76	88.5	101	113.5	126	138.5	151	163.5	176	188.5	201
L2	68	80.5	93	105.5	118	130.5	143	155.5	168	180.5	193
L3	110.5	123	135.5	148	160.5	173	185.5	198	210.5	223	235.5
L4	100	112.5	125	137.5	150	162.5	175	187.5	200	212.5	225
L5	17.5	17.5	17.5	17.5	17.5	17.5	17.5	17.5	17.5	17.5	17.5




Plug-in **Metal** Base Type 50/Side Ported EX510

Dimensions: SY5000 Series

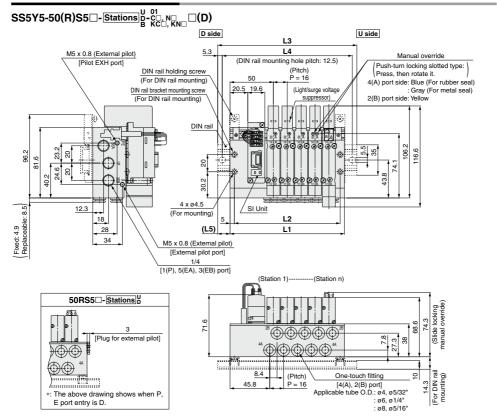

\*: These figures show the "SS5Y5-50S5-05B-C8".

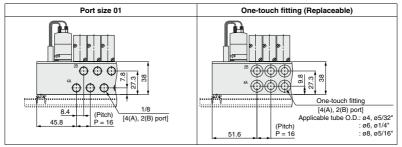

n: Stations	2	3	4	5	6	7	8	9	10	11	12
L1	84	100	116	132	148	164	180	196	212	228	244
L2	74	90	106	122	138	154	170	186	202	218	234
L3	110.5	135.5	148	160.5	173	198	210.5	223	248	260.5	273
L4	100	125	137.5	150	162.5	187.5	200	212.5	237.5	250	262.5
L5	13.5	18	16	14.5	12.5	17	15.5	13.5	18	16.5	14.5


# Puge Metal Base SY3000/5000/7000 Series

Plug-in Typ Metal Base

Type 50/Side Ported EX510

Dimensions: SY5000 Series


SS5Y5-50(R)S5 $\square$ -Stations  $\stackrel{\text{U}}{\text{B}}$ -02 $\square$ (D)

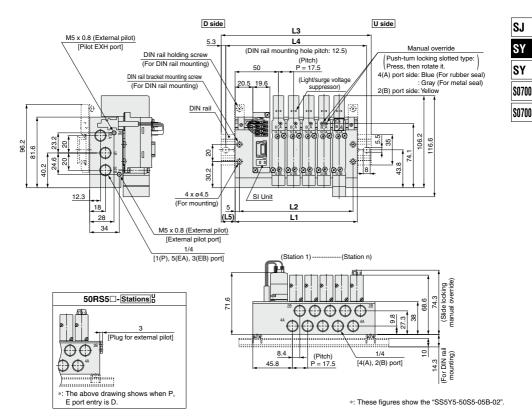


n: Stations	2	3	4	5	6	7	8	9	10	11	12
L1	88.5	106	123.5	141	158.5	176	193.5	211	228.5	246	263.5
L2	78.5	96	113.5	131	148.5	166	183.5	201	218.5	236	253.5
L3	123	135.5	148	173	185.5	210.5	223	235.5	260.5	273	298
L4	112.5	125	137.5	162.5	175	200	212.5	225	250	262.5	287.5
L5	17.5	15	12.5	16	13.5	17.5	15	12.5	16	13.5	17.5

Plug-in **Metal** Base Type 50/Side Ported EX510


Dimensions: SY7000 Series

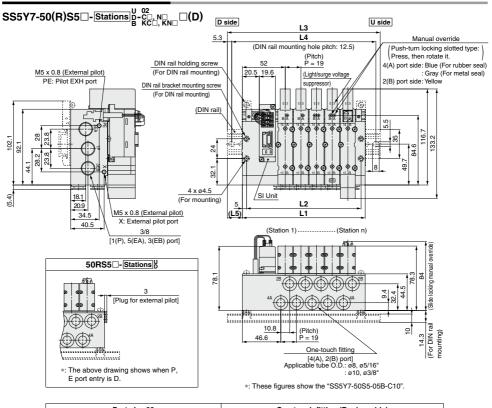

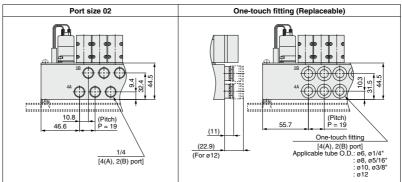

n: Stations	2	3	4	5	6	7	8	9	10	11	12
L1	92	111	130	149	168	187	206	225	244	263	282
L2	82	101	120	139	158	177	196	215	234	253	272
L3	123	148	160.5	185.5	198	223	235.5	260.5	273	298	310.5
L4	112.5	137.5	150	175	187.5	212.5	225	250	262.5	287.5	300
L5	15.5	18.5	15.5	18.5	15	18	15	18	14.5	17.5	14.5

# Pure Metal Base SY3000/5000/7000 Series

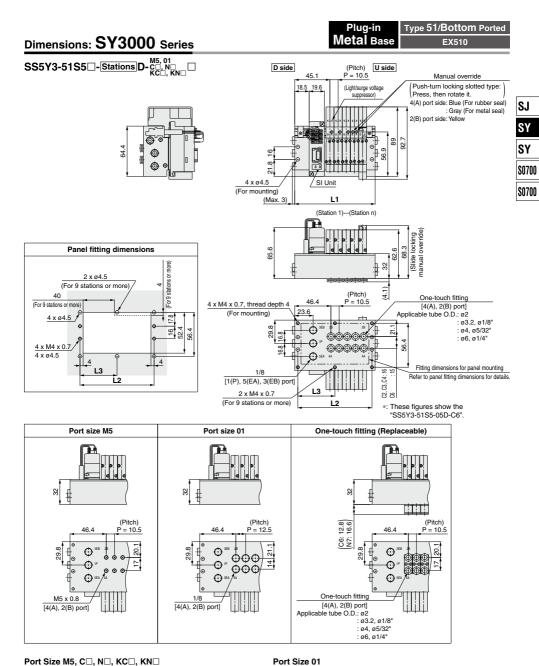

0	011	
¥	21/	

n: Stations 2

L1 76 88.5 101 113.5 126 138.5 151 163.5 176 188.5 201

L2

L3

68 80.5

3 4 5 6 7 8

93

105.5 118 130.5 143

12

168.5

9 10 11

68.5 73.8 79 84.3

134.5 145 155.5 166 176.5

124

95 | 105.5 | 116 | 126.5 | 137 | 147.5 | 158

n: Stations 2 3 4 5 6 7 8

L1 71.5 82 92.5 103 113.5

L2

L3

74 84.5

63.5

12

193


11


9 10

155.5

77.8 84 90.3

168 180.5

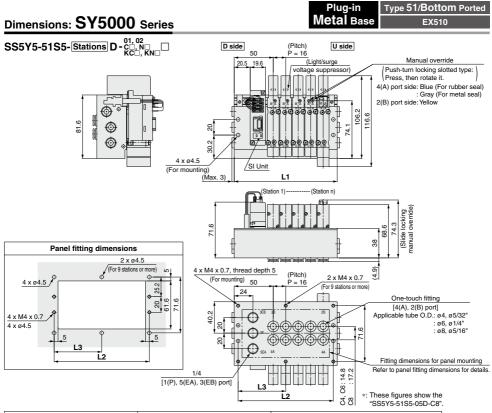

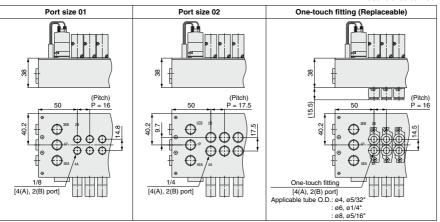

PORT SIZE UT, CL, NL, KCL, KNL											
n: Stations	2	3	4	5	6	7	8	9	10	11	12
L1	84	100	116	132	148	164	180	196	212	228	244
L2	74	90	106	122	138	154	170	186	202	218	234
L3	ı	_	ı	_	_	_	_	93	101	109	117

FUIT SIZE UZ											
n: Stations	2	3	4	5	6	7	8	9	10	11	12
L1	88.5	106	123.5	141	158.5	176	193.5	211	228.5	246	263.5
L2	78.5	96	113.5	131	148.5	166	183.5	201	218.5	236	253.5
L3	_	_	_	_	_	_	_	100.5	109.3	118	126.8

Dart Cina 00

# Puge Metal Base SY3000/5000/7000 Series

Dimensions: SY7000 Series

Plug-in **Metal** Base Type 51/Bottom Ported

SJ


SY


S0700


S0700






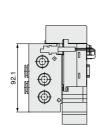

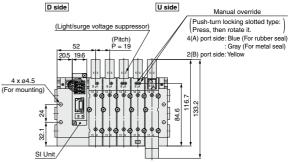

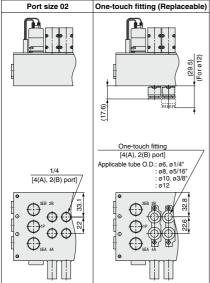

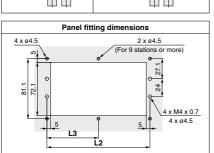

2

92

82

3

111

101

130


120


n: Stations

L1

L2

L3

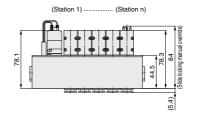

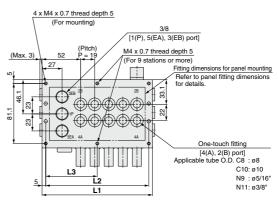

6	7	8	9	10	11	12
168	187	206	225	244	263	282
158	177	106	215	334	253	272

117

126.5

107.5

\*: These figures show the "SS5Y7-51S5-05D-C10".

5

149


139



# Plug-in Metal Base Ex510

# SY3000/5000/7000 Series

#### **How to Order Manifold**

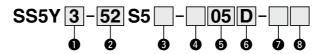

#### Series

<b>O</b> 001100			
3	SY3000		
5	SY5000		
7	SY7000		

# 2 Type

	• ',	<b>,</b>
52		Top ported
	52R	Top ported, External pilot

### SI Unit output polarity

	- · · · · · · · · · · · · · · · · · · ·
Nil	Positive common
N	Negative common

## Wiring type

Nil		All do	uble w	/irin	g*1		
S		All si	ngle w	iring	J*2		
	 					_	 _

- \*1: All double wiring: 2-position single, double, 3-position and 4-position valves can be used on all manifold stations.
- \*2: All single wiring: Available only for the manifold which has 2-position single for all stations. Note that 2-position double, 3- or 4-position valves cannot be used.
- \*: If a mix of single and double wiring is required, it is supplied as a special order.

#### Valve stations

Symbol	Stations	Note
02	2 stations	All double
:		
08	8 stations	wiring
02 2 stations		All single
:		wiring
12 12 stations		wiilig


\*: This also includes the number of blanking plate assembly.

## 6 P, E port entry

U	U side*1
D	D side*1
В	Both sides

\*1: Plugs are mounted on the opposite side of the selected ports.

# **How to Order Manifold Assembly**

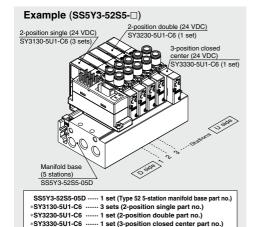

The valve arrangement is numbered as the 1st station from the D side.
 Under the manifold part number, state the valves to be mounted in order from the 1st station as shown in the figure above. If the arrangement becomes complicated, specify on a manifold specification

The asterisk denotes the symbol for assembly. Prefix it to the part numbers of the valve etc. Thread type

Nil	Rc
00F	G
00N	NPT
00T	NPTF

# 8 Mounting

	<u> </u>				
Nil		Direct mounting			
D		DIN rail mounting			
_		(With DIN rail)			
DO	DIN rail mounting				
DU	(Without DIN rail)				
D3	For 3 stations	Cassify a language sail than			
:		Specify a longer rail than the standard length.			
D12	For 12 stations	ine standard length.			

\*: Refer to page 394 for the fixation of DIN rail mounting type manifold.

For details on the EX510 Gateway-type Serial Transmission System, refer to pages 878 to 906 and the Operation Manual. Please download the Operation Manual via SMC website, http://www.smcworld.com

# Puc-in Metal Base SY3000/5000/7000 Series


### How to Order Valves (With mounting screw)

Refer to page 136 for valve specifications.

SJ

S0700

S0700

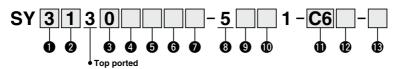

#### Series

3	SY3000
5	SY5000
7	SY7000

#### 2 Type of actuation

1	2-position	Single	
2	2-position	Double	
3		Closed center	
4	3-position	Exhaust center	
5		Pressure center	
<b>A</b> *1	4-position	N.C./N.C.	
B*1	dual	N.O./N.O.	
C*1	3-port	N.C./N.O.	

\*1: Only rubber seal type is available for the 4-position dual 3-port valve.

#### Seal type

• com type		
0	Rubber seal	
1	Metal seal	

## A Dilot type

• i not type		
Nil	Internal pilot	
R	External pilot	

# Back pressure check valve

(Bu	ıilt-in valve type)
Nil	None

- Built-in
- Only rubber seal type \*: Back pressure check valve is not available for the 3-position type and the SY7000

#### 6 Pilot valve option

Nil	Standard (0.7 MPa)
В	Quick response type (0.7 MPa)
<b>K</b> *1	High pressure type (1.0 MPa)

\*1: Only metal seal type is available for the high pressure type.

#### Coil type

Nil	Standard	
Т	With power saving circuit (Continuous duty type)	

- \*: Be sure to select the power saving circuit type when the valve is continuously energized for long periods of time.
- \*: Be careful of the energizing time when the power saving circuit is selected. Refer to page 391 for details.

# 8 Rated voltage


24 VDC

#### 9 Light/surge voltage suppressor and common specification

Symbol	With light	Surge voltage suppressor	Common specification
R			Non-polar
U	•		14011 polai
S	_	•	Positive
Z	•	_	common
NS	_		Negative
NZ	•		common

\*: Only "Z" and "NZ" types are available for with the power saving circuit. Select a valve from R, U, S or Z when the SI Unit polarity is Nil (positive common). Select a valve from R, U, NS or NZ when the SI Unit output polarity is N (negative common).

#### Manual override

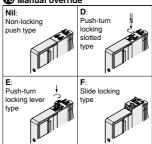

\*: Refer to page 154 for with the safety slide locking manual override.

## (I) A, B port size

#### Thread piping

oud bibing		
Symbol	Port size	Applicable series
M5	M5 x 0.8	SY3000
01	1/8	SY5000
02	1/4	SY7000

#### One-touch fitting (Metric)

Symbol	A, B port	SY3000	SY5000	SY7000
C2	ø2	•	_	_
C3 C4	ø3.2	•	_	_
C4	ø4	•	•	_
C6	ø6	•	•	•
C8	ø8	-	•	•
C10	ø10		_	•
C12	ø12	_	_	•

#### One-touch fitting (Inch)

Symbol	A, B port	SY3000	SY5000	SY7000
N1	ø1/8"	•	_	_
N3	ø5/32"	•	•	_
N7	ø1/4"	•	•	•
N9	ø5/16"		•	•
N11	ø3/8"		_	•

#### 12 Thread type

Nil	Rc
F	G
N	NPT
T	NPTF

\*: Only Nil is available for M5.

# R Type of mounting screw

ועיש	oc or inounting screw
Nil	Round head combination screw
В	Hexagon socket head cap screw
K	Round head combination screw (Falling-out-prevention type)
Н	Hexagon socket head cap screw (Falling-out-prevention type)


- \*: For "K" and "H", the valve body cover has a drop prevention construction to stop the mounting screws from falling out when the valve is removed for maintenance etc.
- \*: When ordering a valve individually, the base gasket is not included. Since the base gasket is attached to the manifold, please order the base gasket separately if it is needed for maintenance

service. Refer to page 212 for part numbers of the base gasket and mounting screw.

\*: "B" and "H" cannot be selected for the individual SUP/EXH spacer assembly or interface regulator.

Plug-in Type 52/Top Ported
Metal Base EX510

# Dimensions: SY3000 Series

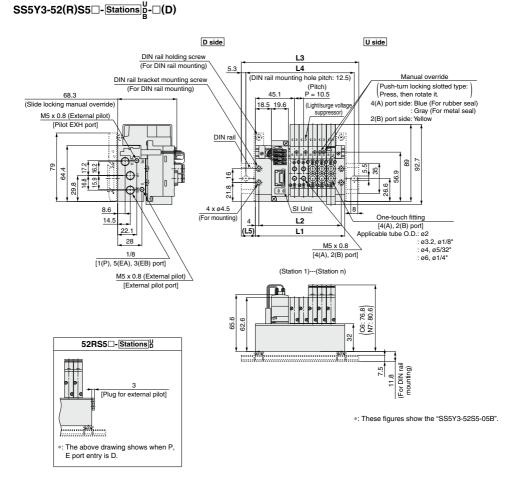


n: Stations	2	3	4	5	6	7	8	9	10	11	12
L1	71.5	82	92.5	103	113.5	124	134.5	145	155.5	166	176.5
L2	63.5	74	84.5	95	105.5	116	126.5	137	147.5	158	168.5
L3	98	110.5	123	135.5	148	160.5	160.5	173	185.5	198	210.5
L4	87.5	100	112.5	125	137.5	150	150	162.5	175	187.5	200
L5	13.5	14.5	15.5	16.5	17.5	18.5	13	14	15	16	17

# Pursin Metal Base SY3000/5000/7000 Series

Plug-in Type 52/Top Ported
Metal Base EX510

Dimensions: SY5000 Series

SS5Y5-52(R)S5 $\square$ -Stations  $\stackrel{\text{U}}{\text{p}}$ - $\square$ (D)

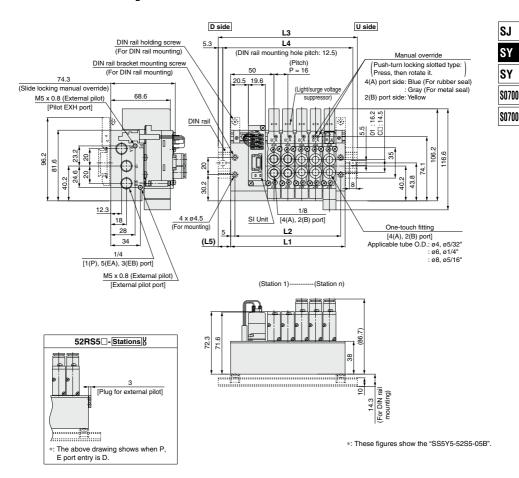


n: Stations	2	3	4	5	6	7	8	9	10	11	12
L1	84	100	116	132	148	164	180	196	212	228	244
L2	74	90	106	122	138	154	170	186	202	218	234
L3	110.5	135.5	148	160.5	173	198	210.5	223	248	260.5	273
L4	100	125	137.5	150	162.5	187.5	200	212.5	237.5	250	262.5
L5	13.5	18	16	14.5	12.5	17	15.5	13.5	18	16.5	14.5





Plug-in Type 52/Top Ported
Metal Base EX510

# Dimensions: SY7000 Series

# SS5Y7-52(R)S5□-Stations D-□(D)

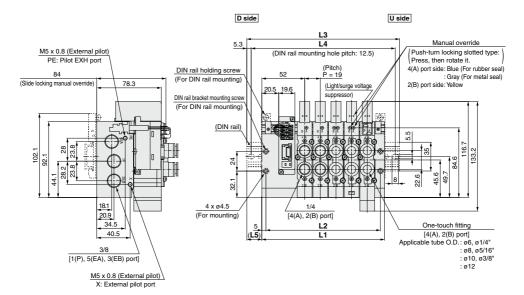

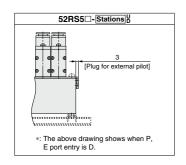

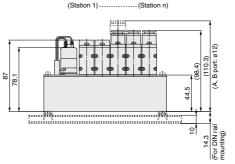

\*: These figures show the "SS5Y7-52S5-05B".

n: Stations	2	3	4	5	6	7	8	9	10	11	12
L1	92	111	130	149	168	187	206	225	244	263	282
L2	82	101	120	139	158	177	196	215	234	253	272
L3	123	148	160.5	185.5	198	223	235.5	260.5	273	298	310.5
L4	112.5	137.5	150	175	187.5	212.5	225	250	262.5	287.5	300
L5	15.5	18.5	15.5	18.5	15	18	15	18	14.5	17.5	14.5


SJ

SY SY

S0700

S0700

# SY3000/5000/7000 Series Type 50, 51, 52 Plug-in Metal Base Manifold Exploded View

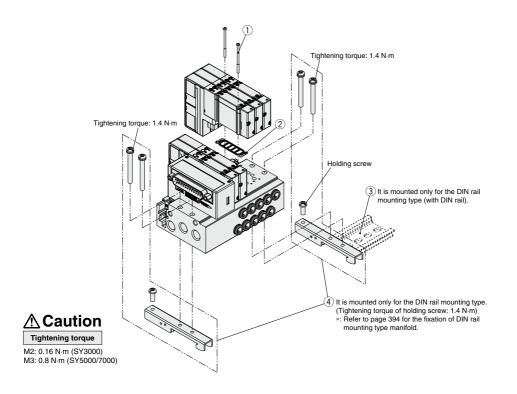

# Manifold Parts No.

No.	Do	acintian		Part no.		Note	
INO.	Des	scription	SY3000	SY3000 SY5000 SY7000		Note	
(1)	Valve mounting	9		<b>SY5000-221-1A</b> (M3 x 32.5)	<b>SY7000-221-1A</b> (M3 x 36.5)	Part numbers shown on the left are for 10 valves (20 pcs.).	
	screw	Hexagon socket head cap screw	<b>SY3000-222-1A</b> (M2 x 32)	<b>SY5000-222-1A</b> (M3 x 32.5)	<b>SY7000-222-1A</b> (M3 x 36.5)	(30 pcs. for the SY7000)	
2	Base gasket (for plug-in metal	base and sub-plate)	SY30M-11-1A	SY50M-11-1A	SY70M-11-1A	Part numbers shown on the left are for 10 valves (10 pcs.).	
3	DIN rail	rail VZ1000-11-1- VZ1000-11-4- VZ1000-11-4-		VZ1000-11-4-□	Refer to page 372.		
4	Clamp bracket a (for plug-in metal		SY30M-15-2A	SY50M-15-2A	SY70M-15-2A	Part numbers shown on the left are for the clamp bracket assembly for one manifold (two sets of clamp brackets).	

# Type 50, 51, 52 Plug-in Metal Base Manifold Exploded View SY3000/5000/7000 Series

#### Manifold Parts No.

#### ■Blanking plate assembly (With mounting screw)

Used when expecting valve additions, or for maintenance.

A structure to prevent screws falling out is in place on the blanking plate, making it much harder for the mounting screws to fall out.








SY50M-26-2A (-B) SY70M-26-2A (-B)

Refer to pages 383, 385, 387 for dimensions.

Refer to pages 373 to 377 for individual SUP/EXH and other options.

How to Order Blanking Plate Assembly

Circuit diagram

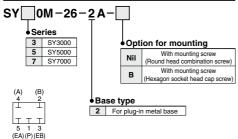

SJ

S0700


# Plug-in Connector Connecting Base

SJ

SY

S0700

\$0700

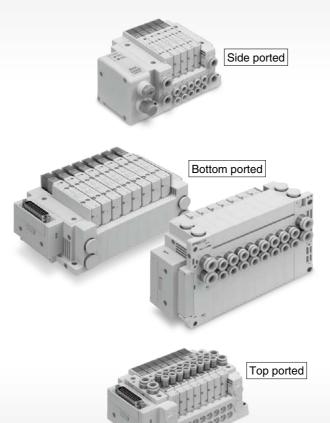



# SY3000/5000/7000 Series Type 10, 11, 12 Plug-in Connector Connecting Base

# **Manifold Specifications**

			D-s		Flat	ribbon c	able	Terminal block box (Spring type)	Terminal block box	Lead wire	Circular connector		S	erial wirir	ng	
	Model		F type	FW type	P type	PG type J type G type	PH type			L type	M type		SA□ type (EX245)	(EX500)	SA3 type (EX500) S□ type (EX250) (EX260)	S3□ type (EX120) S8□ type (EX180)
Manifol	d type							Plug-in connector connecting base								
SUP/EX	H port type			Co					P/EXH (	Commor	n for 3/5 p	oort)				
Valve s	tations		2 to	24 statio	ons	2 to 18 stations (J/G type: 2 to 16 stations)	2 to 8 stations	2 to 24 stations			2 to 24	stations			2 to 24 stations	
Applica	ble connector	,	D-sub connector Conforming to MIL-C-24308 JIS-X-5101 (Refer to page 234.)	ector ming b Dedicated connector (Refer to page 234.) er to Docket: 26 pins 12 op pins 10 pins												
Internal	wiring		Positive common, Negative common Negative common Negative common Negative common													
		SY3000							8 One-to 16" One-		•					
	1(P), 3/5(E) port	SY5000							10 One-to /8" One-1		•					
Port		SY7000							12 One-to /2" One-t		•					
size		SY3000					-		-			-	One-touch	-		
	4(A), 2(B) port	SY5000	ø4 One-touch fitting, ø6 One-touch fitting, ø8 One-touch fitting ø5/32" One-touch fitting, ø1/4" One-touch fitting, ø5/16" One-touch fitting													
		SY7000	ø6 One-touch fitting, ø8 One-touch fitting, ø10 One-touch fitting, ø12 One-touch fitting ø1/4* One-touch fitting, ø5/16* One-touch fitting, ø3/8* One-touch fitting													
Enclosu	ure (Based on I	EC60529)	IP40	IP67*1		IP40			IP6	7* <sup>1</sup>		IP67*1 I/O Unit: partially IP40	IP65	IP67*1 (EX500 GW) Unit, Input Unit: IP65	IP67*1 EX260 D-sub communication connector: IP40 EX500 GW Unit: IP65	IP20

<sup>\*1:</sup> In the case of a metal seal, there are restrictions in the operating environment. Refer to the Specific Product Precautions (page 389).

# Manifold Flow Rate Characteristics\*/Manifold Weight

Valve Seal Type: Rubber Seal

	Port size		Val	ve flow rate			
Model	1, 3/5	4, 2	1→4/2 (P→	A/B)	4/2→5/3 (A/E	3→E)	Weight: W [g]*2 (n: stations)
	(P, E)	(A, B)	C [dm <sup>3</sup> /(s-bar)]	b	C [dm3/(s-bar)]	b	(II. Stations)
SS5Y3-10 (Side ported)	C8	C6	1.4	0.30	1.6	0.19	28.9n + 293
SS5Y3-12 (Top ported)	C8	C6	1.2	0.29	1.3	0.19	25.1n + 314
SS5Y5-10 (Side ported)	C10	C8	3.3	0.30	3.6	0.17	74.7n + 398
SS5Y5-11 (Bottom ported)	C10	C8	3.3	0.29	4.2	0.26	76.8n + 445
SS5Y5-12 (Top ported)	C10	C8	2.8	0.27	3.8	0.23	66.3n + 417
SS5Y7-10 (Side ported)	C12	C12	6.2	0.23	5.9	0.20	106.6n + 496
SS5Y7-11 (Bottom ported)	C12	C12	6.2	0.25	6.6	0.21	117.9n + 532
SS5Y7-12 (Top ported)	C12	C12	5.6	0.31	5.7	0.24	84.1n + 519

SJ

S0700 S0700

Valve Seal Type: Metal Seal

vaive ocal Type. Wetai o	cai							
	Port size		Val	ve flow rate				
Model	1, 3/5	4, 2	1→4/2 (P→	A/B)	4/2→5/3 (A/E	3→E)	Weight: W [g]*2 (n: stations)	
	(P, E)	(A, B)	C [dm <sup>3</sup> /(s-bar)]	b	C [dm <sup>3</sup> /(s-bar)]	b	(II. Stations)	
SS5Y3-10 (Side ported)	C8	C6	1.2	0.19	1.3	0.18	28.9n + 293	
SS5Y3-12 (Top ported)	C8	C6	1.2	0.16	1.3	0.18	25.1n + 314	
SS5Y5-10 (Side ported)	C10	C8	2.7	0.24	3.1	0.17	74.7n + 398	
SS5Y5-11 (Bottom ported)	C10	C8	2.8	0.25	3.5	0.15	76.8n + 445	
SS5Y5-12 (Top ported)	C10	C8	2.6	0.18	3.0	0.16	66.3n + 417	
SS5Y7-10 (Side ported)	C12	C12	4.4	0.14	4.4	0.17	106.6n + 496	
SS5Y7-11 (Bottom ported)	C12	C12	4.6	0.16	4.7	0.18	117.9n + 532	
SS5Y7-12 (Top ported)	C12	C12	3.9	0.21	4.1	0.14	84.1n + 519	

<sup>\*1:</sup> The value is for manifold base with 5 stations and individually operated 2-position type.

<sup>\*2:</sup> Weight: W is the value of the internal pilot, and D-sub connector manifold with One-touch fitting straight piping type.

To obtain the weight with valves attached, add the valve weights given on page 138 for the appropriate number of stations.


<sup>\*:</sup> Calculation of effective area S and sonic conductance C: S = 5.0 x C

## **Connector Wiring Layout**

Station 3

For both serial and parallel wiring, additional valves are sequentially assigned pins on the connector. This makes it completely unnecessary to disassemble the connector unit.

■ Single solenoid valve is installed to all double wiring. (in the case of all double wiring) (Manifold specification sheet is not necessary.)

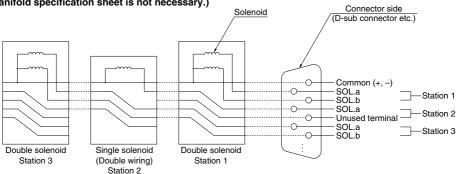

■ Single/double wiring are mixed. (Manifold specification sheet is necessary.) Connector side Solenoid (D-sub connector etc.) Common (+, -) SOL.a 0 -Station 1 ----SOL.b 0 SOL.a Station 2 SOL.a --Station 3 SOL.b -Double solenoid Single solenoid Double solenoid

Station 1

Station 2

<sup>\*:</sup> These diagrams are for the purpose of explanation, and differ from the connector wiring used for testing.

SJ

SY SY

S0700

S0700

Type 10 **Type 11 Bottom Ported** 

# Plug-in Connector Connecting Base

D-sub Connector | Flat Ribbon Cable | PC Wiring |


# SY3000/5000/7000 Series

C C C ROHS



#### **How to Order Manifold**

Refer to pages 331 (SY5000) and 332 (SY7000) for dimensions of Type 11/Bottom ported type.

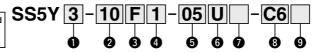


#### Series SY3000 5 SY5000 SY7000

# Side ported Bottom ported\*1

\*1: The SY5000 manifold base is used for the bottom ported of the SY3000. When ordering, refer to "Plug-in Mixed Mounting Type Manifold" (from page 336).

Connector type

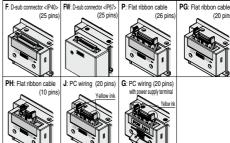

4 Connector entry direction





\*: The connector entry direction for connector type "FW" D-sub connector <IP67> can not be rotated. If it is necessary to change, order connector block assembly (page 354) separately.

## Valve stations

Symbol	Stations	Note	Symbol	Stations	Note
02	2 stations		02	2 stations	
÷	:	Double wiring*1	:	:	Double wiring*1
12	12 stations	-	12	12 stations	
02	2 stations	Specified layout*2	02	2 stations	Specified layout*2
÷	:	(Available up to	:	:	(Available up to
24	24 stations	24 solenoids)	24	24 stations	24 solenoids)

Symbol Stations Note 02 2 stations Double wiring\*1 O2 2 stations Specified layout\*2 (Available up to 18 solenoids)

18 18 stations


J/G: PC wiring (20 pins)								
Symbol	Stations	Note						
02	2 stations							
-:-	:	Double wiring*1						
08	8 stations							
02	2 stations	Specified layout*2						
-:	:	(Available up to						
16	16 stations	16 solenoids)						

_			obon oabio (10 pino)						
	Symbol	Stations	Note						
	02	2 stations							
	:	:	Double wiring*1						
	04	4 stations							
1	02	2 stations	Specified layout*2						
	:	- :	(Available up to						
	08	8 stations	8 solenoids)						
	*1: Double wiring: 2-position single,								

double, 3-position and 4-position valves can be used on all manifold stations Use of a 2-position single solenoid will result in an unused control signal. If this is not desired, order with a specified lavout.

\*2: Specified layout: Indicate the wiring specifications on the manifold specification sheet. (Note that 2-position double, 3-position and 4position valves cannot be used where single wiring has been specified.) \*: This also includes the number of blanking plate assembly.

# How to Order Manifold Assembly

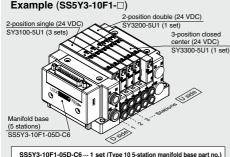

SS5Y3-10F1-05D-C6 ··· 1 set (Type 10 5-station manifold base part no.) \*SY3100-5U1------ 3 sets (2-position single part no.)

\*SY3200-5U1------1 set (2-position double part no.) §SY3300-5U1------1 set (3-position closed center part no.)

The asterisk denotes the symbol for assembly Prefix it to the part numbers of the valve etc.

- The valve arrangement is numbered as the 1st station from the D side.
- . Under the manifold part number, state the valves to be mounted in order from the 1st station as shown in the figure above. If the arrangement becomes complicated, specify on a manifold specification sheet.
- \*: When mixing top ported configurations, select from page 233. In this case, use caution as there is also output on the A and B port on base side. Specify on a manifold specification sheet if plugs are required on the A and B

# Excellin Connector Connecting Base SY3000/5000/7000 Series

SJ

S0700 S0700

A P. E port entry

<b>O</b> 1 ,	L port critiy
U	U side (2 to 10 stations)
D	D side (2 to 10 stations)
В	Both sides (2 to 24 stations)

# SUP/EXH block assembly

Nil	Internal pilot
s	Internal pilot,
9	Built-in silencer
R	External pilot

\*: 3/5(E) port is plugged for the built-in silencer type.

9 Mounting and Option

Cumbal	Mounting	Option			DIN Rail Option		
Syllibol		Name plate	Station number	Ш	Nil	Dire	ct mounting
Nil	Direct	_	_	Ш	0	Without D	IN rail (with bracket)
AA	mounting	•	•	Ш	3	For 3 stations	Specify a longer rail
BA	illouring	•	_	Ш	÷	- :	than the total length
D□	DIN rail mounting	_	_	Ш	24	For 24 stations	of specified stations.
A□		•	•	Ι΄			
B□		•	_				

- \*: Enter the number of stations inside  $\hfill\square$  when it is larger than the number of valve stations. (Refer to "DIN Rail Option" above.)
- \*: Only direct mounting is available for Type 11 (Bottom ported).
- \*: Refer to page 394 for the fixation of DIN rail mounting type manifold.

A, B port size				(Metri	c/One	-touch	fitting	3)		
Symbol		A, B port					Type 11/Bo			
,				SY3000	SY5000	SY7000	SY5000	SY7000		
C2			ø2	•	_	-	_	_		
C3			ø3.2	•	_	_	_	_		
C4	_		ø4	•	•	_	•	_		
C6	igh		ø6	•	•	•	•	•		
C8	Straight		ø8	_	•	•	•	•	200	
C10	0)		ø10	_	_	•	_	•	OG STEEL	
C12			ø12	_	_	•	_	•		
CM*1		Straig	ht port, mixed sizes	•	•	•	•	•		
L4			ø4	•	•	_	_	_		
L6		9	ø6	•	•	•	_	_		
L8		Upward	ø8	_	•	•	_	_		
L10		5	ø10	_	_	•	_	_		
L12			ø12	_	_	•	_	_	Jeise Park	
B4	W*2		ø4	•	•	_	_	_		
B6	Elbow*2	ard	Downward	ø6	•	•	•	_	_	
B8	ш	ě	ø8	_	•	•	_	_		
B10	Dow	ဂ္ဂါ	ø10	_	_	•	_	_		
B12		_	ø12	_	_	•	_	_		
LM*1		Elbow port, mixed sizes (Including upward and downward piping)		•	•	•	_	_		
	P, E port size (One-touch fittings)			ø8	ø10	ø12	ø10	ø12		

A, B port size (Inch/One-touch fitting)


Symbol		A, B port					Type 11/Bo		
Symbol				SY3000	SY5000	SY7000	SY5000	SY7000	
N1			ø1/8"	•	_	_	_	_	
N3	L		ø5/32"	•	•	_	•	_	
N7	ig		ø1/4"	•	•	•	•	•	
N9	Straight		ø5/16"	_	•	•	•	•	
N11	"		ø3/8"	_	_	•	_	•	o Sale
CM*1		Straight port, mixed sizes		•	•	•	•	•	
LN3		_	ø5/32"	•	_	_	_	_	
LN7		Upward	ø1/4"	•	•	_	_	_	
LN9		후	ø5/16"	_	•	_	_	_	
LN11		_	ø3/8"	_	_	•	_	_	J. J. Basser
BN3	×	5	ø5/32"	•	_	_	_	_	
BN7	≣lbow*2	Downward	ø1/4"	•	•	_	_		
BN9	_	Š	ø5/16"	_	•	_	_	_	
BN11		드	ø3/8"	_	_	•	_	_	
LM*1		Elbow port, mixed sizes (Including upward and downward piping)		•	•	•	_		
P, E port size (One-touch fittings)		ø5/16"	ø3/8"	ø1/2"	ø3/8"	ø1/2"			

<sup>\*1:</sup> Indicate the sizes on the manifold specification sheet in the case of "CM", "LM". The direction of P, E port fittings is the same as for A, B port. If selecting "LM", indicate it on the manifold specification sheet for the P, E port fitting direction

<sup>\*2:</sup> To avoid interference with the body or piping, select downward elbow port when mounting the optional spacer assembly (pages 373 to 375).

## How to Order Valves (With mounting screw)

Refer to page 136 for valve specifications.

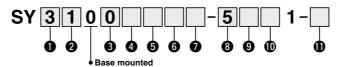

#### Series

3	SY3000
5	SY5000
7	SY7000

2 Type of actuation

• ,,		•
1	0	Single
2	2-position	Double
3		Closed center
4	3-position	Exhaust center
5		Pressure center
<b>A</b> *1	4-position dual	N.C./N.C.
B*1		N.O./N.O.
C*1	3-port	N.C./N.O.

\*1: Only rubber seal type is available for the 4-position dual 3-port valve.

#### 6 Pilot valve option

•				
Nil	Standard (0.7 MPa)			
В	Quick response type (0.7 MPa)			
<b>K</b> *1	High pressure type (1.0 MPa)			

\*1: Only metal seal type is available for the high pressure type.


## Coil type

• •••• • • • • • • • • • • • • • • • • •				
	Nil	Standard		
	Т	With power saving circuit (Continuous duty type)		
	*: Be sure to select the power saving circuit			

- type when the valve is continuously energized for long periods of time.

  \*: Be careful of the energizing time when the
- \*: Be careful of the energizing time when the power saving circuit is selected. Refer to page 391 for details.

## Manual override

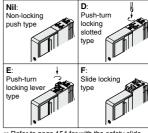

\*: Refer to page 154 for with the safety slide locking manual override.

#### 3 Seal type

0	Rubber seal
1	Metal seal

4 Pilot type

Nil	Internal pilot
R	External pilot

# Back pressure check valve (Built-in valve type)

	· p· · · · · · · · · · · · · · · · · ·
Nil	None
Н	Built-in

- e: Only rubber seal type. Manifold installed type is available if the back pressure check valve is required for a valve with metal seal. Refer to page 379 for Ordering Example. However, it is not recommended to use the built-in valve type and the manifold installed type at the same time because it will reduce the flow.
- \*: The built-in valve type back pressure check valve is not available for the 3-position type and the SY7000.

# 8 Rated voltage

	24 VDC
J	24 VDC
6	12 VDC

 Connector type "G" (PC wiring with power supply terminal) of the manifold type is only available in 24 VDC.

# 9 Light/surge voltage suppressor and common specification

Symbol	With light	Surge voltage suppressor	Common specification
Nil	_	_	
R	-		Non-polar
U	•		
S	_		Positive
Z	•	_	common
NS	_		Negative
NZ	•		common

- \*: Only "Z" and "NZ" types are available for with the power saving circuit.
- \*: For connector type "G" (PC wiring with power supply terminal) of the manifold type, select non-polar or positive common.

Type of mounting screw

Nil	Round head combination screw
В	Hexagon socket head cap screw
K	Round head combination screw (Falling-out-prevention type)
Н	Hexagon socket head cap screw (Falling-out-prevention type)

- \*: For "K" and "H", the valve body cover has a drop prevention construction to stop the mounting screws from falling out when the valve is removed for maintenance etc.
- \* When ordering a valve individually, the base gasket is not included. Since the base gasket is attached to the manifold, please order the base gasket separately if it is needed for maintenance service.
- Refer to page 367 for part numbers of the base gasket and mounting screw.
- \*: "B" and "H" cannot be selected for the individual SUP/EXH spacer assembly, interface regulator or double check spacer assembly with residual pressure release

# Eugen Connector Connecting Base SY3000/5000/7000 Series

Dimensions: SY3000 Series

Plug-in
Connector Connecting Base

Type 10/Side Ported


D-sub Connector (IP40)

SJ

**SY** S0700

S0700

SS5Y3-10F<sub>2</sub><sup>1</sup>-Stations B - C3, N1 (D) - C6, N7

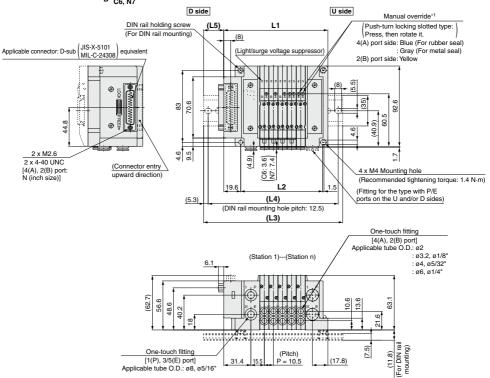

- \*1: Refer to page 328 for dimensions of external pilot, silencer, elbow fittings and slide locking manual override.
- \*: These figures show the "SS5Y3-10F2-05D-C6"
- \*: Refer to page 333 for dimensions of A or B port top-ported type.


n: Stations	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
L1	88.6	99.1	109.6	120.1	130.6	141.1	151.6	162.1	172.6	183.1	193.6	204.1	214.6	225.1	235.6	246.1	256.6	267.1	277.6	288.1	298.6	309.1	319.6
L2	63	73.5	84	94.5	105	115.5	126	136.5	147	157.5	168	178.5	189	199.5	210	220.5	231	241.5	252	262.5	273	283.5	294
L3	123	135.5	148	160.5	160.5	173	185.5	198	210.5	223	223	235.5	248	260.5	273	285.5	298	298	310.5	323	335.5	348	360.5
L4	112.5	125	137.5	150	150	162.5	175	187.5	200	212.5	212.5	225	237.5	250	262.5	275	287.5	287.5	300	312.5	325	337.5	350
L5	20.5	21.5	22.5	23.5	18	19	20	21	22	23	18	19	20	21	22	23	23.5	18.5	19.5	20.5	21.5	22.5	23.5


Dimensions: SY5000 Series

Plug-in Connector Connecting Base D-sub Connector (IP40)

Type 10/Side Ported

SS5Y5-10F<sub>2</sub>-Stations D-C6, N7 (D)

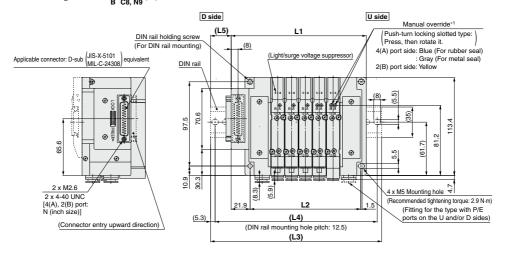

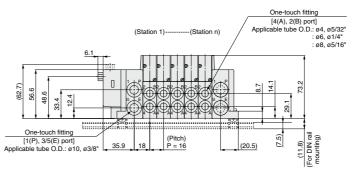

- \*1: Refer to page 329 for dimensions of external pilot, silencer, elbow fittings and slide locking manual override.
- \*: These figures show the "SS5Y5-10F2-05D-C8"
- \*: Refer to page 334 for dimensions of A or B port top-ported type.

n: Stations	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
L1	108.4	124.4	140.4	156.4	172.4	188.4	204.4	220.4	236.4	252.4	268.4	284.4	300.4	316.4	332.4	348.4	364.4	380.4	396.4	412.4	428.4	444.4	460.4
L2	80	96	112	128	144	160	176	192	208	224	240	256	272	288	304	320	336	352	368	384	400	416	432
L3	148	160.5	173	198	210.5	223	235.5	260.5	273	285.5	298	323	335.5	348	373	385.5	398	410.5	435.5	448	460.5	485.5	498
L4	137.5	150	162.5	187.5	200	212.5	225	250	262.5	275	287.5	312.5	325	337.5	362.5	375	387.5	400	425	437.5	450	475	487.5
L5	23	21	19.5	24	22	20.5	18.5	23	21.5	19.5	18	22.5	20.5	19	23.5	21.5	20	18	22.5	21	19	23.5	22
								•	•				•	•	•								

# Eugen Connector Connecting Base SY3000/5000/7000 Series

Dimensions: SY7000 Series

Plug-in Connector Connecting Base

Type 10/Side Ported

D-sub Connector (IP40)


SJ


SY

S0700

S0700

SS5Y7-10F<sub>2</sub><sup>1</sup>-Stations D C6, N7 C10, N11(D)

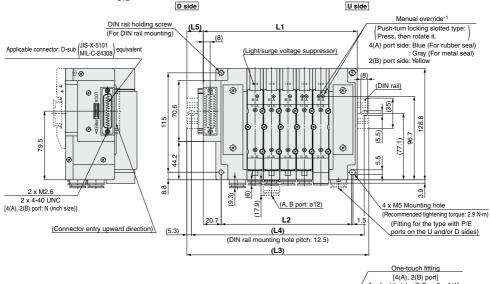

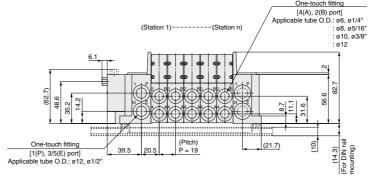

- \*1: Refer to page 330 for dimensions of external pilot, silencer, elbow fittings and slide locking manual override.
- \*: These figures show the "SS5Y7-10F2-05D-C10".
- \*: Refer to page 335 for dimensions of A or B port top-ported type.


	n: Stations	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
	L1	121.2	140.2	159.2	178.2	197.2	216.2	235.2	254.2	273.2	292.2	311.2	330.2	349.2	368.2	387.2	406.2	425.2	444.2	463.2	482.2	501.2	520.2	539.2
ĺ	L2	94	113	132	151	170	189	208	227	246	265	284	303	322	341	360	379	398	417	436	455	474	493	512
	L3	160.5	173	198	210.5	235.5	248	273	285.5	310.5	323	348	360.5	385.5	398	423	435.5	460.5	485.5	498	523	535.5	560.5	573
	L4	150	162.5	187.5	200	225	237.5	262.5	275	300	312.5	337.5	350	375	387.5	412.5	425	450	475	487.5	512.5	525	550	562.5
	L5	22.5	19.5	22.5	19	22	19	22	18.5	21.5	18.5	21.5	18	21	18	21	17.5	20.5	23.5	20.5	23.5	20	23	20




# Dimensions: SY3000 Series

# Plug-in Connector Connecting Base D-sub Connector (IP67)

Type 10/Side Ported

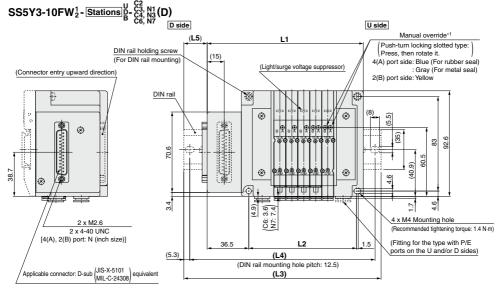

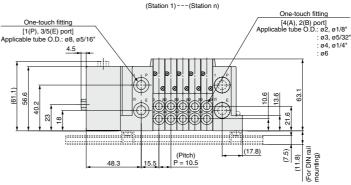

- \*1: Refer to page 328 for dimensions of external pilot, silencer, elbow fittings and slide locking manual override.
- \*: These figures show the "SS5Y3-10FW2-05D-C6".
- \*: Refer to page 333 for dimensions of A or B port top-ported type.

n:	Stations	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
	L1	105.5	116	126.5	137	147.5	158	168.5	179	189.5	200	210.5	221	231.5	242	252.5	263	273.5	284	294.5	305	315.5	326	336.5
	L2	63	73.5	84	94.5	105	115.5	126	136.5	147	157.5	168	178.5	189	199.5	210	220.5	231	241.5	252	262.5	273	283.5	294
	L3	135.5	148	160.5	173	185.5	198	198	210.5	223	235.5	248	260.5	260.5	273	285.5	298	310.5	323	323	335.5	348	360.5	373
	L4	125	137.5	150	162.5	175	187.5	187.5	200	212.5	225	237.5	250	250	262.5	275	287.5	300	312.5	312.5	325	337.5	350	362.5
	L5	17.5	18.5	19.5	20.5	21.5	22.5	17	18	19	20	21	22	17	18	19	20	21	22	16.5	17.5	18.5	19.5	20.5
_																								

# Eugen Connector Connecting Base SY3000/5000/7000 Series

Dimensions: SY5000 Series

Plug-in Connecting Base

Type 10/Side Ported


D-sub Connector (IP67)

SJ

**SY** S0700

S0700

SS5Y5-10FW<sub>2</sub><sup>1</sup>-Stations D-C6, N7 (D) D side U side Manual override\*1 Push-turn locking slotted type: L1 Press, then rotate it. DIN rail holding screw (15)4(A) port side: Blue (For rubber seal) (For DIN rail mounting) (Light/surge voltage suppressor) (Connector entry upward direction) : Gray (For metal seal) 2(B) port side: Yellow DIN rail в₿ 97.5 9.02 13.4 81.2 ۲, 59.5 61 ⊗ 24.2 Φ 2 x M2.6 8.3) 2 x 4-40 UNC 4 x M5 Mounting hole 12 [4(A), 2(B) port: (Recommended tightening torque: 2.9 N-m) (5.3) (L4) (Fitting for the type with P/E N (inch size)] ports on the U and/or D sides) (DIN rail mounting hole pitch: 12.5) Applicable connector: D-sub (JIS-X-5101 | MIL-C-24308) equivalent (L3)

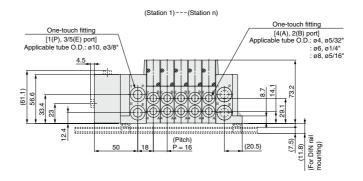

- \*1: Refer to page 329 for dimensions of external pilot, silencer, elbow fittings and slide locking manual override.
- \*: These figures show the "SS5Y5-10FW2-05D-C8".
- \*: Refer to page 334 for dimensions of A or B port top-ported type.


n: Stations	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
L1	122.5	138.5	154.5	170.5	186.5	202.5	218.5	234.5	250.5	266.5	282.5	298.5	314.5	330.5	346.5	362.5	378.5	394.5	410.5	426.5	442.5	458.5	474.5
L2	80	96	112	128	144	160	176	192	208	224	240	256	272	288	304	320	336	352	368	384	400	416	432
L3	160.5	173	185.5	210.5	223	235.5	248	273	285.5	298	310.5	335.5	348	360.5	385.5	398	410.5	423	448	460.5	473	498	510.5
L4	150	162.5	175	200	212.5	225	237.5	262.5	275	287.5	300	325	337.5	350	375	387.5	400	412.5	437.5	450	462.5	487.5	500
L5	21.5	19.5	18	22.5	20.5	19	17	21.5	20	18	16.5	21	19	17.5	22	20	18.5	16.5	21	19.5	17.5	22	20.5




Dimensions: SY7000 Series

# Plug-in Connector Connecting Base D-sub Connector (IP67)

Type 10/Side Ported

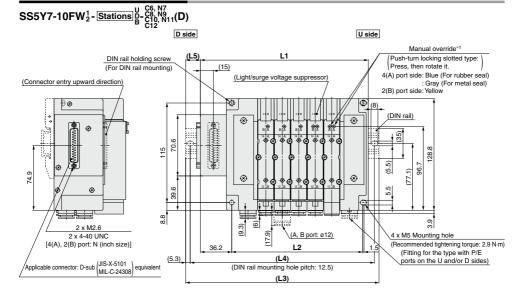

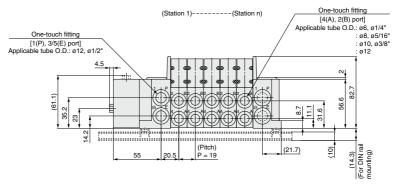

- \*1: Refer to page 330 for dimensions of external pilot, silencer, elbow fittings and slide locking manual override.
- \*: These figures show the "SS5Y7-10FW2-05D-C10".
- \*: Refer to page 335 for dimensions of A or B port top-ported type.


n: Stations	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
L1	136.7	155.7	174.7	193.7	212.7	231.7	250.7	269.7	288.7	307.7	326.7	345.7	364.7	383.7	402.7	421.7	440.7	459.7	478.7	497.7	516.7	535.7	554.7
L2	94	113	132	151	170	189	208	227	246	265	284	303	322	341	360	379	398	417	436	455	474	493	512
L3	173	185.5	210.5	223	248	260.5	285.5	298	323	335.5	360.5	385.5	398	423	435.5	460.5	473	498	510.5	535.5	548	573	585.5
L4	162.5	175	200	212.5	237.5	250	275	287.5	312.5	325	350	375	387.5	412.5	425	450	462.5	487.5	500	525	537.5	562.5	575
L5	20.5	17	20	17	20	16.5	19.5	16.5	19.5	16	19	22	19	22	18.5	21.5	18.5	21.5	18	21	18	21	17.5

# Connector Connecting Base SY3000/5000/7000 Series




# Plug-in Connecting Base

Type 10/Side Ported
Flat Ribbon Cable

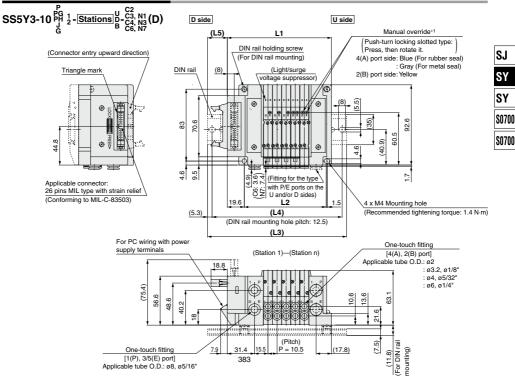


- \*1: Refer to page 328 for dimensions of external pilot, silencer, elbow fittings and slide locking manual override.
- \*: These figures show the "SS5Y3-10P2-05D-C6".
- \*: Refer to page 333 for dimensions of A or B port top-ported type.
- \*: Only connectors are different for 10PG, 10PH, 10J and 10G. L1 to L5 dimensions are the same as 10P type.

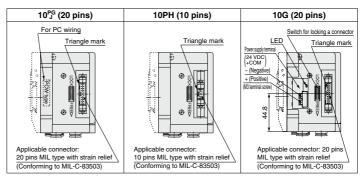


n: Stations	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
L1	88.6	99.1	109.6	120.1	130.6	141.1	151.6	162.1	172.6	183.1	193.6	204.1	214.6	225.1	235.6	246.1	256.6	267.1	277.6	288.1	298.6	309.1	319.6
L2	63	73.5	84	94.5	105	115.5	126	136.5	147	157.5	168	178.5	189	199.5	210	220.5	231	241.5	252	262.5	273	283.5	294
L3	123	135.5	148	160.5	160.5	173	185.5	198	210.5	223	223	235.5	248	260.5	273	285.5	298	298	310.5	323	335.5	348	360.5
L4	112.5	125	137.5	150	150	162.5	175	187.5	200	212.5	212.5	225	237.5	250	262.5	275	287.5	287.5	300	312.5	325	337.5	350
L5	20.5	21.5	22.5	23.5	18	19	20	21	22	23	18	19	20	21	22	23	23.5	18.5	19.5	20.5	21.5	22.5	23.5

# Dimensions: SY5000 Series Plug-in Connector Connecting Base

Type 10/Side Ported
Flat Ribbon Cable

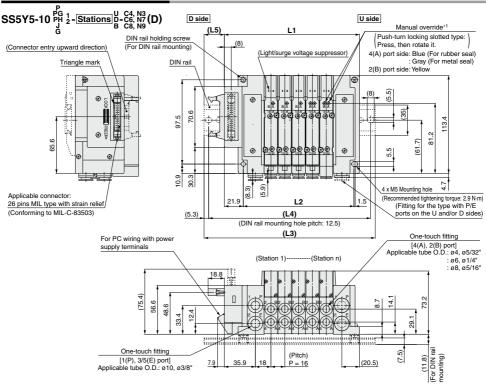

- \*1: Refer to page 329 for dimensions of external pilot, silencer, elbow fittings and slide locking manual override.
- \*: These figures show the "SS5Y5-10P2-05D-C8".
- \*: Refer to page 334 for dimensions of A or B port top-ported type.
- Only connectors are different for 10PG, 10PH and 10J.
   L1 to L5 dimensions are the same as 10P type.

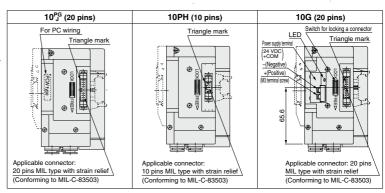


	n: Stations	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
	L1	108.4	124.4	140.4	156.4	172.4	188.4	204.4	220.4	236.4	252.4	268.4	284.4	300.4	316.4	332.4	348.4	364.4	380.4	396.4	412.4	428.4	444.4	460.4
	L2	80	96	112	128	144	160	176	192	208	224	240	256	272	288	304	320	336	352	368	384	400	416	432
	L3	148	160.5	173	198	210.5	223	235.5	260.5	273	285.5	298	323	335.5	348	373	385.5	398	410.5	435.5	448	460.5	485.5	498
	L4	137.5	150	162.5	187.5	200	212.5	225	250	262.5	275	287.5	312.5	325	337.5	362.5	375	387.5	400	425	437.5	450	475	487.5
	L5	23	21	19.5	24	22	20.5	18.5	23	21.5	19.5	18	22.5	20.5	19	23.5	21.5	20	18	22.5	21	19	23.5	22
. '																								


# Connector Connecting Base SY3000/5000/7000 Series

Dimensions: SY7000 Series

Plug-in Connector Connecting Base

Type 10/Side Ported
Flat Ribbon Cable

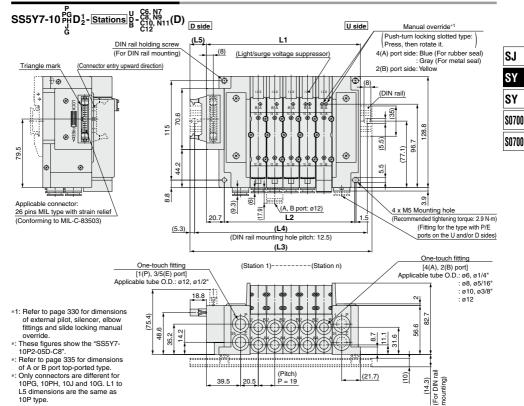

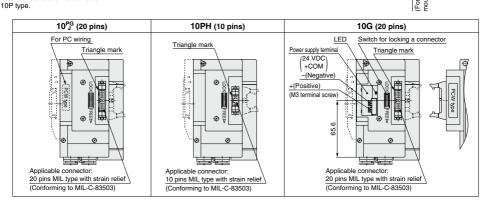

n: Stations	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
L1	121.2	140.2	159.2	178.2	197.2	216.2	235.2	254.2	273.2	292.2	311.2	330.2	349.2	368.2	387.2	406.2	425.2	444.2	463.2	482.2	501.2	520.2	539.2
L2	94	113	132	151	170	189	208	227	246	265	284	303	322	341	360	379	398	417	436	455	474	493	512
L3	160.5	173	198	210.5	235.5	248	273	285.5	310.5	323	348	360.5	385.5	398	423	435.5	460.5	485.5	498	523	535.5	560.5	573
L4	150	162.5	187.5	200	225	237.5	262.5	275	300	312.5	337.5	350	375	387.5	412.5	425	450	475	487.5	512.5	525	550	562.5
L5	22.5	19.5	22.5	19	22	19	22	18.5	21.5	18.5	21.5	18	21	18	21	17.5	20.5	23.5	20.5	23.5	20	23	20

# Plug-in Connector Connecting Base

D-sub Connector Flat Ribbon Cable PC Wiring






Type 12 Top Ported

# **SY3000/5000/7000** Series • **5**




# **How to Order Manifold**

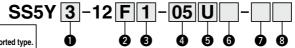

# Refer to pages 333 to 335 for dimensions of Type 12/Top ported type. Series

# SY3000 SY5000 SY7000


2 Connector type

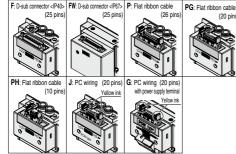

P, E port entry				
U*1	U side (2 to 10 stations)			
<b>D</b> *1	D side (2 to 10 stations)			
В	Roth sides (2 to 24 stations)			

\*1: 6 For type "S", supply/exhaust block assembly with built-in silencer, choose U or D for P port

# How to Order Manifold Assembly

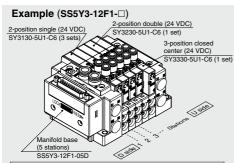


SS5Y3-12F1-05D ······ 1 set (Type 12 5-station manifold base part no.) \*SY3130-5U1-C6 ...... 3 sets (2-position single part no.) \*SY3230-5U1-C6 ...... 1 set (2-position double part no.) \*SY3330-5U1-C6 ...... 1 set (3-position closed center part no.)

The asterisk denotes the symbol for assembly Prefix it to the part numbers of the valve etc.

- . The valve arrangement is numbered as the 1st station from the D side . Under the manifold part number, state the valves to be mounted in order
- from the 1st station as shown in the figure above. If the arrangement becomes complicated, specify on a manifold

# 3 Connector entry direction

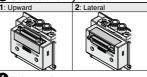

: The connector entry direction for connector type "FW" D-sub connector <IP67> can not be rotated. If it is necessary to change, order connector block assembly (page 354) separately.

# 4 Valve stations

F/FV	<b>V</b> : D-s	ub connector (25 pins)	P: F	at ribb	oon cable (26 pins)
Symbol	Stations	Note	Symbol	Stations	Note
02	2 stations		02	2 stations	
:	- 1	Double wiring*1	:		Double wiring*1
12	12 stations	-	12	12 stations	
02	2 stations	Specified layout*2	02	2 stations	Specified layout*2
:	- 1	(Available up to	:		(Available up to
24	24 stations	24 solenoids)	24	24 stations	24 solenoids)
	•				

# PG: Flat ribbon cable (20 pins) PH: Flat ribbon cable (10 pins)

	iut ii	bbon dable (20 pins)		i iai ii	bbon cable (10 pins
Symbol S	Stations	Note	Symbol	Stations	Note
02 2	stations		02	2 stations	
:	:	Double wiring*1	-		Double wiring*1
09 9	stations	-	04	4 stations	_
02 2	stations	Specified layout*2	02	2 stations	Specified layout*2
:	:	(Available up to	-	- 1	(Available up to
18	8 stations	18 solenoids)	08	8 stations	8 solenoids)

J/G: PC wiring (20 pins)					
Symbol	Stations	Note			
02	2 stations				
1	:	Double wiring*1			
08	8 stations				
02	2 stations	Specified layout*2			
1	:	(Available up to			
16	16 stations	16 solenoids)			

\*1: Double wiring: 2-position single, double, 3-position and 4-position valves can be used on all manifold stations. Use of a 2-position single solenoid will result in an unused control signal. If this is not desired, order with a specified layout.

- \*2: Specified layout: Indicate the wiring specifications on the manifold specification sheet. (Note that 2-position double, 3-position and 4-position valves cannot be used where single wiring has been specified.)
- \*: This also includes the number of blanking plate assembly.

SUP/EXH block assembly				
Nil	Internal pilot			
s	Internal pilot, Built-in silencer			
R	External pilot			

\*: For built-in silencer type, P and E ports are available on U and D sides. 3/5(E) port is plugged. The silencer exhaust port is located on the opposite side of P, E port entry. (Example: When the P, E port entry is D side, the silencer exhaust port is U side.)

### Mounting

•						
Nil	Direct mounting					
D	DIN rail mounting (With DIN rail)					
D0	DIN rail mounting (Without DIN rail					
D3	For 3 stations	Specify a longer				
÷		rail than the				
D24	For 24 stations	standard length.				

\*: Refer to page 394 for the fixation of DIN rail mounting type manifold.

# P, E port size (One-touch fittings)


Symbol	SY3000	SY5000	SY7000	
Nil	ø8	ø10	ø12	
N	ø5/16"	ø3/8"	ø1/2"	

\*: For N. sizes are in inches

# Connector Connecting Base SY3000/5000/7000 Series

# How to Order Valves (With mounting screw)

Refer to page 136 for valve specifications.

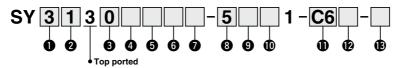

### 1 Series

3	SY3000
5	SY5000
7	SY7000

# 2 Type of actuation

1	2-position	Single				
2	2-position	Double				
3		Closed center				
4	3-position	Exhaust center				
5		Pressure center				
<b>A</b> *1	4-position	N.C./N.C.				
<b>B</b> ∗1	dual	N.O./N.O.				
C*1	3-port	N.C./N.O.				

\*1: Only rubber seal type is available for the 4-position dual 3-port valve.

# Seal type

0	Rubber seal
1	Metal seal

# Pilot type

Nil	Internal pilot
R	External pilot

# Back pressure check valve

(Built-in valve type)		
Nil	None	
Н	Built-in	

- \*: Only rubber seal type. Manifold installed type is available if the back pressure check valve is required for a valve with metal seal. Refer to page 379 for Ordering Example. However, it is not recommended to use the built-in valve type and the manifold installed type at the same time because it will reduce the flow
- \*: The built-in valve type back pressure check valve is not available for the 3-position type and the SY7000.

# 6 Pilot valve option

Nil	Standard (0.7 MPa)
В	Quick response type (0.7 MPa)
K*1	High pressure type (1.0 MPa)

\*1: Only metal seal type is available for the high pressure type.

### Coil type

	Nil Standard	
T With power saving circuit (Con		With power saving circuit (Continuous duty type)
	*: Be sure to select the power saving circuit type when the valve is continuously	

- energized for long periods of time. \*: Be careful of the energizing time when the
- power saving circuit is selected. Refer to page 301 for details

### 8 Rated voltage


5	24 VDC
6	12 VDC

\*: Connector type "G" (PC wiring with power supply terminal) of the manifold type is only available in 24 VDC

### 9 Light/surge voltage suppressor and common specification

Symbol	With light	Surge voltage suppressor	Common specification
Nil	ı	_	
R	_		Non-polar
U	•	•	
S	ı		Positive
Z	•		common
NS	-		Negative
NZ	•		common

- \*: Only "Z" and "NZ" types are available for with
- the power saving circlit.
  \*: For connector type "G" (PC wiring with power supply terminal) of the manifold type, select non-polar or positive common.

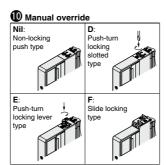

\*: Refer to page 154 for with safety slide locking manual override.

# A, B port size

11116	au pipirig	
Symbol	Port size	Applicable series
M5	M5 x 0.8	SY3000
01	1/8	SY5000
02	1/4	SY7000

### One-touch fitting (Metric)

Symbol	A D now	SY3000	CVENNA	CVZOOO
-,	A, B port	513000	212000	317000
C2	ø2	•	_	_
СЗ	ø3.2	•	_	_
C4	ø4	•	•	_
C6	ø6	•	•	•
C8	ø8		•	•
C10	ø10		_	•
C12	ø12	_	_	•

### One-touch fitting (Inch)

Symbol	A, B port	SY3000	SY5000	SY7000
N1	ø1/8"	•	_	_
N3	ø5/32"	•	•	_
N7	ø1/4"	•	•	•
N9	ø5/16"	_	•	•
N11	ø3/8"	_	_	•

12 Thread type

Nil	Rc
F	G
N	NPT
Т	NPTF

\*: Only Nil is available for M5.

### R Type of mounting screw

<u>• ,,</u>	oo or mounting oor on	
Nil	Nil Round head combination screw	
B Hexagon socket head cap scre		
K	Round head combination screw (Falling-out-prevention type)	
Н	Hexagon socket head cap screw (Falling-out-prevention type)	

- \*: For "K" and "H", the valve body cover has a drop prevention construction to stop the mounting screws from falling out when the valve is removed for maintenance etc.
- \*: When ordering a valve individually, the base gasket is not included. Since the base gasket is attached to the manifold, please order the base gasket separately if it is needed for maintenance service.

Refer to page 367 for part numbers of the base gasket and mounting screw.


\*: "B" and "H" cannot be selected for the individual SUP/EXH spacer assembly or interface regulator.

> Protective class class II (Mark: (ii))

SJ

S0700 S0700

# **Electrical Wiring Specifications**

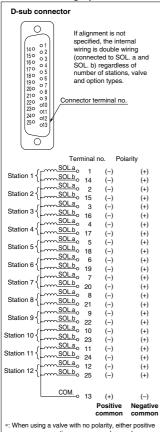

common or negative common can be used.

### Specified Layout


COM

### (25 pins)



Mixed wiring of single and double wiring can be specified on the manifold specification sheet. The maximum number of stations is determined according to the number of solenoids. The total number of solenoids should be 24 or less 1 solenoid is required for 2-position single, and 2 solenoids for 2-position double, 3-position and 4-position.

### Cable Assembly

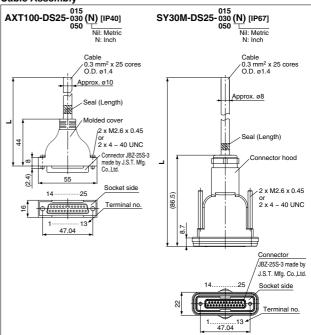

# D-sub connector cable assembly [IP40]

length (L)	Assembly part no.	Note
1.5 m	AXT100-DS25-015	Cable
3 m		0.3 mm <sup>2</sup> x 25 cores
5 m	AXT100-DS25-050	0.011111 x 20 00165

- \*: When using a standard commercial connector, use a 25-pin type female
  - connector conforming to MIL-C-24308. \*: Cannot be used for movable wiring. \*: Lengths other than the above are also available. Please contact SMC for details.

# D-sub connector cable assembly [IP67]

Cable ength ( <b>L</b> )	Assembly part no.	Note
1.5 m	SY30M-DS25-015	Cable
3 m	SY30M-DS25-030	0.3 mm <sup>2</sup> x 25 cores
5 m	SY30M-DS25-050	0.511111 x 25 00165

- \*: Be sure to use the connector cable assembly in the table, to satisfy enclosure IP67.
- \*: Cannot be used for movable wiring

# Electrical characteristics Connector Manufacturers' Example

Item	Property
Conductor resistance Ω/km, 20°C	65 or less
Voltage limit V, 1 minute, AC	1000
Insulation resistance MΩ/km, 20°C	5 or more

- Fuiitsu Limited · Japan Aviation Electronics Industry, Limited
- J.S.T. Mfg. Co., Ltd.
- HIROSE ELECTRIC CO., LTD.
- \*: The minimum bending radius of the D-sub connector cable is 20 mm

### D-sub connector cable assembly terminal numbers

Terminal no.	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25
Lead wire color	Black	Brown	Red	Orange	Yellow	Pink	Blue	Purple	Gray	White	White	Yellow	Orange	Yellow	Pink	Blue	Purple	Gray	Orange	Red	Brown	Pink	Gray	Black	White
Dot marking	None	None	None	None	None	None	None	White	Black	Black	Red	Red	Red	Black	Black	White	None	None	Black	White	White	Bed	Red	White	None



# Euglin Connector Connecting Base SY3000/5000/7000 Series

# **Electrical Wiring Specifications**

### Flat ribbon cable connector 26 🗆 🗆 25 24 🗆 🗆 23 22 🗆 🗆 21 20 0 0 19 18 0 0 17 16 0 0 15 14 🗆 🗆 13 12 0 011 Connector terminal no. 10 0 0 9 8 0 0 7 Triangle mark indicator position 6 🗆 🗆 5 4 🗆 🗆 3 2 0 0 1

If alignment is not specified, the internal wiring is double wiring (connected to SOL. a and SOL. b) regardless of number of stations, valve and option types.

### P: Flat ribbon cable (26 pins) <Double wiring> Terminal no. Polarity SOL.a 1 (-) (+) SOL.b 2 (-)(+)SOL.a 3 (-) (+) SOL.b 4 (-) (+) SOL.a 5 (-) (+) SOL.b 6 (-) (-) (+) SOL.a 7 (+) SOL.b Я (-)(+)SOL.a 9 (-)(+)SOL.b 10 (-)(+)SOL.a 11 (-)(+)SOL.b 12 (-)(+)SOL.a 13 (-)(+)SOL.b (-) 14 (+)SOL.a (-) 15 (+)SOL.b (-) 16 (+)SOL.a 17 (-)(+)SOL.b 18 (-) (+)SOL.a 19 (-)(+)SOL.b 20 (-)(+)SOL.a 21 (-) (+) SOL.b 22 (-)(+) SOL.a 23 (-)(+)SOL.b 24 (-)(+) COM 25 (+) (-) COM. 26 (+) (-)Positive Negative common common

PG: Flat ribbon	cable (20 pins)
<double< th=""><th>wiring&gt;</th></double<>	wiring>
	Terminal no. Polarity
Station 1 { SOLa SOLb SOLa SOLb	1 (-) (+) 2 (-) (+) 3 (-) (+) 4 (-) (+)
SOLa	5 (-) (+)
Station 3 SOL.b	6 (-) (+)
SOLa	7 (-) (+)
Station 4 SOL.b	8 (-) (+)
SOLa	9 (-) (+)
Station 5 {SOL.b_o	10 (-) (+)
SOLa o	11 (-) (+)
Station 6 { SOL.b	12 (-) (+)
Station 7 SOLa	13 (-) (+)
	14 (-) (+)
Station 8 SOLa	15 (-) (+)
Station 8 (SOL.b_o	16 (-) (+)
Station 0 3 SOL b	17 (-) (+)
(tww.	18 (-) (+)
COM.	19 (+) (-) 20 (+) (-)
	Positive Negative
	common common

PG: Flat ribbon cable (20 pine)

PH: Flat ribbon cable (10 pins)		
$\begin{tabular}{l l l l l l l l l l l l l l l l l l l $	PH: Flat ribbon o	cable (10 pins)
$ \begin{array}{c ccccccccccccccccccccccccccccccccccc$	<double< th=""><th>wiring&gt;</th></double<>	wiring>
common common	Sation 1   SOL.a   SOL.b   SOL.b   SOL.b   SOL.b   SOL.b   SOL.b   SOL.b   SOL.b   SOL.b   Sol.a   S	Terminal Inc. Polarity  1 (-) (+) 2 (-) (+) 3 (-) (+) 4 (-) (+) 5 (-) (+) 6 (-) (+) 7 (-) (+) 8 (-) (+) 9 (+) (-) 10 (+) (-) Positive Negative


_ J: Flat ribbon c	abie (20 pins)	Ц.				
PC wi	ring					
<double wiring=""></double>						
	Terminal no. Polarity					
Station 1	20 (-) (+) (+) (18 (-) (+) (+) (16 (-) (+) (+) (14 (-) (+) (+) (12 (-) (+) (+) (15 (-) (+) (+) (+) (+) (+) (+) (+) (+) (+) (+					
00	1 (+) (-) Positive Negative					
	common common					

\* When using a valve with no polarity either positive common or negative common can be used

	J: Flat ribbon cable (20 pins)						
	PC wiring						
	<double wiring=""></double>						
	Terminal no. Polarity						
	tation 1 { SOLa SOLb 18 (-) (+) SOLa (+)						
	tation 2 {						
0,0	tation 3 {						
	ation 4 { SOLb 6 (-) (+)						
0,0	tation 5 {						
	tation 6 { SOLb 13 (-) (+)						
	ation 7 (SOL.b 9 (-) (+)						
,	5 (-) (+)						
	4 (-) (+) 3 (-) (+)						
	COM. o 2 (+) (-)						
	COM. o 1 (+) (-)						
	Positive Negative						

- \*: This circuits are for the specifications with up to 8 stations of 2-position double, 3-position and 4-position dual 3 port valve. There should be wired in order 20→18→16→14 without skipping or leaving any connectors remaining.
- \*: For details on PC wiring system, refer to the Web Catalog.

### G: Flat ribbon cable (20 pins) PC wiring (with power supply terminal)

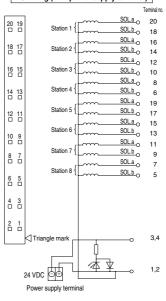

- \*: This circuits are for the specifications with up to 8 stations of 2-position double, 3-position and 4-position dual 3 port valve. There should be wired in order 20→18→16→14 without skipping or leaving any connectors remaining.
- \*: For details on PC wiring system, refer to the Web Catalog.


SJ

S0700

S0700

### Flat Ribbon Cable Assembly

# AXT100-FC 20 - 2

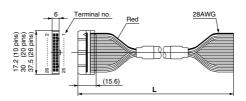

### Flat ribbon cable connector assembly


Cable		Assembly part no.	
length (L)	26 pins	20 pins	10 pins
1.5 m	AXT100-FC26-1	AXT100-FC20-1	AXT100-FC10-1
3 m	AXT100-FC26-2	AXT100-FC20-2	AXT100-FC10-2
5 m	AXT100-FC26-3	AXT100-FC20-3	AXT100-FC10-3

- \*: When using a standard commercial connector, use a 26-pin, 20-pin or 10-pin type connector conforming to MIL-C-83503 with strain relief.
- \*: Cannot be used for movable wiring.
- \*: Lengths other than the above are also available. Please contact SMC for details.

### Connector Manufacturers' Example

- · HIROSE ELECTRIC CO., LTD.
- 3M Japan Limited
- Fujitsu Limited
- · Japan Aviation Electronics Industry, Limited
- J.S.T. Mfg. Co., Ltd.
- Oki Electric Cable Co., Ltd.

# **Specified Layout**

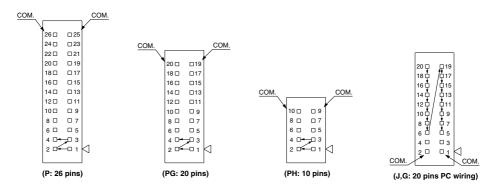

Mixed wiring of single and double wiring can be specified on the manifold specification. The maximum number of stations is determined according to the number of solenoids. The total number of solenoids should be 24 or less for P, 18 or less for PG, 8 or less for PH, and 16 or less for J/G. 1 solenoid is required for 2-position single, and 2 solenoids for 2-position double, 3-position and 4-position.

SJ

SY SY

S0700

S0700

Type 10
Side Ported
Type 11
Bottom Ported

# Plug-in Connector Connecting Base

Terminal Block Box (Spring Type)

# SY3000/5000/7000 Series

( E c RoHS

# **How to Order Manifold**

Refer to pages 331 (SY5000) and 332 (SY7000) for dimensions of Type 11/Bottom ported type. SS5Y 3-10 TC-05 D - C6 - 0 0 0 0 0 0 0

# Series

	3	SY3000			
	5	SY5000			
	7	SY7000			

# **2** Туре

	**
10	Side ported
11	Bottom ported *1

\*1 The SY5000 manifold base is used for the bottom ported SY3000. When ordering, refer to the "Plug-in Mixed Mounting Type Manifold" (From page 336).

# 4 P. E port entry

U	U side (2 to 10 stations)
D	D side (2 to 10 stations)
В	Both sides (2 to 24 stations)

### 5 SUP/EXH block assemble

SUP/EXTI DIOCK assellible					
Nil	Internal pilot				
S	Internal pilot, Built-in silence				
R	External pilot				

- 3/5(E) port is plugged for the built-in silencer type.
- When the built-in silencer type is used, keep the exhaust port from coming in direct contact with water or other liquids.

Example (SS5Y3-10TC
)

# 3 Valve stations

# TC: Spring type terminal block box

Stations	Note
2 stations	
- 1	Double wiring *1
16 stations	
2 stations	Specified layout *2
- :	(Up to 32 solenoids
24 stations	available)
	2 stations : 16 stations 2 stations :

\*1 Double wiring: 2-position single, double, 3-position, and 4-position valves can be used on all manifold stations.

> Use of a 2-position single solenoid will result in an unused control signal. If this is not desired, order with a specified layout.

- \*2 Specified layout: Indicate the wiring specifications with the manifold specification sheet. (Note that 2-position double, 3-position, and 4-position valves cannot be used where single wiring has been specified.)
- This also includes the number of blanking plate assembly.

# Mounting and Option [

Symbol	Mounting	Option
Nil	Direct mounting	None
AA		Name plate (with station number)
BA		Name plate (without station number)
D□	DIN rail	Without name plate
A□	mounting	Name plate (with station number)
B□		Name plate (without station number)

DIN Rail Option

Nil	DIN rail mou	DIN rail mounting (with DIN rail)				
	DIN rail mounting (without DIN ra					
3	For 3 stations	Specify a longer				
- 1	- :	rail than the				
24	For 24 stations	standard length				

Enter the number of stations inside □. (Refer to "DIN Rail Option" above.)
 Only direct mounting is available for Type 11 (Bottom ported).

6 A, B port size (Metric/One-touch fitting)

	Type 10/Side ported Type 11/Bottom ported											
Symbol		A, B port			SY5000							
C2			ø2	•	_	_	_	_				
C3			ø3.2	•	_	_	_	_	_ DS			
C4 C6	=		ø4	•	•		•	_				
<b>C6</b>	Straight		ø6	•	•	•	•	•				
C8	it a		ø8	_	•	•	•	•				
C10	0)		ø10	_	_	•	_	•	1000			
C12		$oxed{oxed}$	ø12	_	_	•	_	•	_			
CM*1		Strai	ght port, mixed sizes	•	•	•	•	•				
L4			ø4	•	•	_	_	_	<b>▶</b> 2			
L6		띭	ø6	•	•	•	_	_				
L8		Upward	ø8	_	•	•	_	_				
L10		5	ø10	_	_	•	_	_				
L12	*	Ш	ø12	_	_	•	_	_				
B4	Š	٦	ø4	•	•	_	_	_				
B6	3 <sup>Ш</sup> 0 2	Æ١	Æ١	阊	ğ	ø6	•	•	•	_	_	
B8		È	ø8	_	•	•	_	_				
B10		Downward	ø10	_	_	•	_	_				
B12		드	ø12	_	_	•	_	_	The second			
LM*1		upw	port, mixed sizes (Including ard and downward piping)	•	•	•	_	_				
P, E po	ort si	ze (C	One-touch fittings)	ø8	ø10	ø12	ø10	ø12				

# **How to Order Manifold Assembly**

# 2-position double (24 VDC) SY3200-5U1 (1 set) 2-position single (24 VDC) SY3300-5U1 (1 set) 2-position single (24 VDC) SY3100-5U1 (3 sets) Manifold base (5 stations) SSSY4-IOTC-05D-C6

- \$\$\$73-10TC-05D-C6----1 set (Type 10 5-station manifold base part no.)
  \$\$\$Y3100-5U1-------3 sets (2-position single part no.)
  \$\$\$Y3200-5U1--------1 set (2-position double part no.)
- The valve arrangement is numbered as the 1st station from the D side.
  Under the manifold part number, state the valves to be mounted in order from the 1st station as shown in the figure above. If the arrangement becomes complicated, specify on a manifold specification sheet.

### A. B port size (Inch/One-touch fitting)

Symbol	A, B port			10/Side					
,		A, B port		SY3000	SY5000	SY7000	SY5000	SY7000	
N1			ø1/8"	•	_	_	_	_	
N3	Ħ		ø5/32"	•	•	_	•	_	
N7	įģ		ø1/4"	•	•	•	•	•	
N9	Straight	Г	ø5/16"	_	•	•	•	•	
N11	S		ø3/8"	_	_	•	_	•	al Section
CM*1		Strai	ght port, mixed sizes	•	•	•	•	•	
LN3		ъ	ø5/32"	•	_	_	_	_	
LN7		Upward	ø1/4"	•	•	_	_	_	
LN9			ø5/16"	_	•	_	_	_	
LN11	۲ <u>۶</u>	-	ø3/8"	_	_	•	_	_	
BN <sub>3</sub>	Elbow	Downward	ø5/32"	•	_	_	_	_	
BN7	ĕ		ø1/4"	•	•	_	_	_	
BN9	ш		ø5/16"	_	•	_	_	_	
BN11			ø3/8"	_	_	•	_	_	
LM*1	Elbow port, mixed sizes upward and downwar		port, mixed sizes (Including ard and downward piping)	•	•	•	_	_	
P, E p	P, E port size (One-touch fittings)			ø5/16"	ø3/8"	ø1/2"	ø3/8"	ø1/2"	

- •1 Indicate the sizes on the manifold specification sheet in the case of "CM" or "LM." The direction of P, E port fittings is the same as for the A, B port. If selecting "LM," indicate it on the manifold specification sheet for the P, E port fitting direction.
- \*2 To avoid interference with the body or piping, select a downward elbow port when mounting the optional spacer assembly.

# Connector Connecting Base SY3000/5000/7000 Series

# How to Order Valves (With mounting screw)


Refer to page 136 for valve specifications.

SJ

SY

S0700

S0700

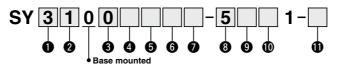

# 1 Series

	3	SY3000
	5	SY5000
	7	SY7000

# 2 Type of actuation

1	2-position	Single
2		Double
3		Closed center
4	3-position	Exhaust center
5		Pressure center
<b>A</b> *1	4-position dual 3-port	N.C./N.C.
B*1 C*1		N.O./N.O.
	duai 5-port	N.C./N.O.

\*1 Only the rubber seal type is available for the 4-position dual 3-port valve.

# Seal type

0	Rubber seal
1	Metal seal

# 4 Pilot type

Nil	Internal pilot	
R	External pilot	

# Back pressure check valve (Built-in valve type)

	· · · · · · · · · · · · · · · · · · ·
Nil	None
Н	Built-in

- Only the rubber seal type. The manifold installed type is available if the back pressure check valve is required for a valve with a metal seal. Refer to page 379 for ordering example. However, it is not recommended to use the built-in valve type and the manifold installed type at the same time because it will reduce the flow.
- The built-in valve type back pressure check valve is not available for the 3-position type and the SY7000.

# 6 Pilot valve option

Nil	Standard (0.7 MPa)
В	Quick response type (0.7 MPa)
K*1	High pressure type (1.0 MPa)

\*1 Only the metal seal type is available for the high pressure type.

# Coil type

Nil	Standard		
Т	With power saving circuit (Continuous duty type		
B 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1			

- Be sure to select the power saving circuit type when the valve is continuously energized for long periods of time.
- Be careful of the energizing time when the power saving circuit is selected. Refer to page 391 for details.

# Rated voltage


		<b>-</b>
	5	24 VDC
	6	12 VDC

# 9 Light/surge voltage suppressor and common specification

Symbol	With light	Surge voltage suppressor	Common specification			
Nil	_	_				
R	-		Non-polar			
U	•					
S	_	•	Positive			
Z	•	_	common			
NS	ı		Negative			
NZ	•		common			

 Only "Z" and "NZ" types are available with the power saving circuit.

# Manual override

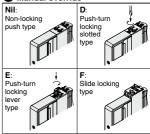

 Refer to page 154 for the safety slide locking manual override.

# Type of mounting screw

Nil	Round head combination screw
В	Hexagon socket head cap screw
K	Round head combination screw (Fall-out prevention type)
Н	Hexagon socket head cap screw (Fall-out prevention type)

- \* For "K" and "H," the valve body cover has a drop prevention construction to stop the mounting screws from falling out when the valve is removed for maintenance etc.
- When ordering a valve individually, the base gasket is not included. Since the base gasket is attached to the manifold, please order the base gasket separately if it is needed for maintenance service.
  - Refer to page 367 for base gasket and mounting screw part numbers. "B" and "H" cannot be selected for the
- \* "B" and "H" cannot be selected for the individual SUP/EXH spacer assembly, interface regulator, or double check spacer assembly with residual pressure release valve.

⚠ Protective class class II (Mark:﴿﴾)


237-2 A

**ØSMC** 


Dimensions: SY3000 Series

Plug-in Type 10/Side Ported
Connector Connecting Base Terminal Block Box

SS5Y3-10TC-Stations | U - C2 - C3, N1 (D) - C6, N7

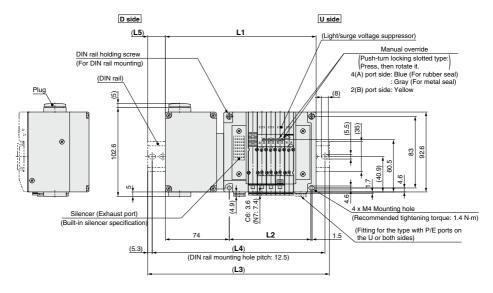

(Station 1) ---- (Station n)

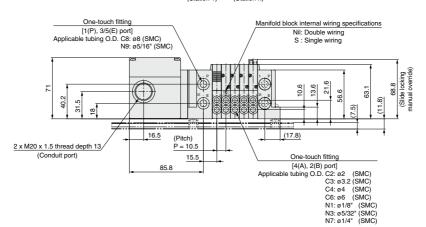


n: Statio	s 2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
L1	143	153.5	164	174.5	185	195.5	206	216.5	227	237.5	248	258.5	269	279.5	290	300.5	311	321.5	332	342.5	353	363.5	374
L2	63	73.5	84	94.5	105	115.5	126	136.5	147	157.5	168	178.5	189	199.5	210	220.5	231	241.5	252	262.5	273	283.5	294
L3	173	185.5	198	210.5	223	235.5	235.5	248	260.5	273	285.5	298	298	310.5	323	335.5	348	360.5	360.5	373	385.5	398	410.5
L4	162.5	175	187.5	200	212.5	225	225	237.5	250	262.5	275	287.5	287.5	300	312.5	325	337.5	350	350	362.5	375	387.5	400
L5	17.5	18.5	19.5	20.5	21.5	22.5	17	18	19	20	21	22	17	18	19	20	21	22	16.5	17.5	18.5	19.5	20.5

# Connector Connecting Base SY3000/5000/7000 Series


Plug-in Type 10/Side Ported
Connector Connecting Base Terminal Block Box

Dimensions: SY5000 Series

SS5Y5-10TC-Stations U - C4, N3 (D)

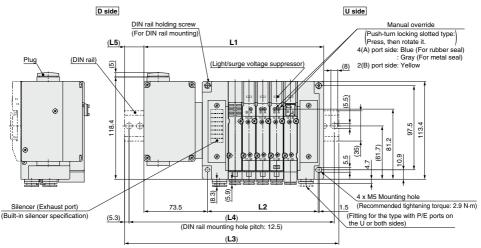

(Station 1) ---- (Station n)

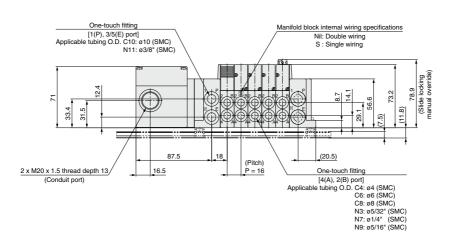

n: Stations	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
L1	160	176	192	208	224	240	256	272	288	304	320	336	352	368	384	400	416	432	448	464	480	496	512
L2	80	96	112	128	144	160	176	192	208	224	240	256	272	288	304	320	336	352	368	384	400	416	432
L3	198	210.5	223	248	260.5	273	285.5	310.5	323	335.5	348	373	385.5	398	423	435.5	448	460.5	485.5	498	510.5	535.5	548
L4	187.5	200	212.5	237.5	250	262.5	275	300	312.5	325	337.5	362.5	375	387.5	412.5	425	437.5	450	475	487.5	500	525	537.5
L5	21.5	19.5	18	22.5	20.5	19	17	21.5	20	18	16.5	21	19	17.5	22	20	18.5	16.5	21	19.5	17.5	22	20.5

SJ

SY


SY S0700


S0700

Dimensions: SY7000 Series

Plug-in Type 10/Side Ported
Connector Connecting Base Terminal Block Box

SS5Y7-10TC-<u>Stations</u>  $\bigcup_{p}^{C6} \Box \cdot \bigcap_{\substack{C8, N7 \\ C12, N11}}^{C6, N7} (D)$ 

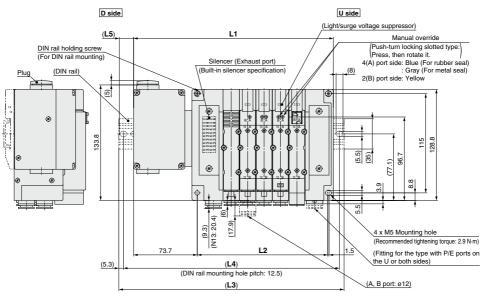

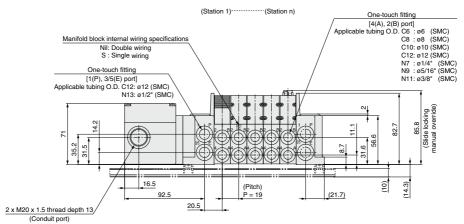

n: Stations	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
L1	174.2	193.2	212.2	231.2	250.2	269.2	288.2	307.2	326.2	345.2	364.2	383.2	402.2	421.2	440.2	459.2	478.2	497.2	516.2	535.2	554.2	573.2	592.2
L2	94	113	132	151	170	189	208	227	246	265	284	303	322	341	360	379	398	417	436	455	474	493	512
L3	210.5	223	248	260.5	285.5	298	323	335.5	360.5	373	398	423	435.5	460.5	473	498	510.5	535.5	548	573	585.5	610.5	623
L4	200	212.5	237.5	250	275	287.5	312.5	325	350	362.5	387.5	412.5	425	450	462.5	487.5	500	525	537.5	562.5	575	600	612.5
L5	20.5	17	20	17	20	16.5	19.5	16.5	19.5	16	19	22	19	22	18.5	21.5	18.5	21.5	18	21	18	21	17.5
~~~																							

# Plug-in Connector Connecting Base

Terminal Block Box (Spring Type)

Type 12 Top Ported

# SY3000/5000/7000 Series

C C C ROHS



SY

S0700

S0700

**How to Order Manifold** 

Refer to pages 333 to 335 for dimensions of Type 12/Top ported type. SS5Y 3 - 12 TC - 05

0	Series	

• ••	
3	SY3000
5	SY5000
7	SY7000

2 Туре	
12	Top ported

# Valve stations

TC. Spring type terminal block how

	Spring	type terminal block box
Symbol	Stations	Note
02	2 stations	
:		Double wiring *1
16	16 stations	
02	2 stations	Considered lawaret #2
:	:	Specified layout *2 (Up to 32 solenoids available)
24	24 stations	(Op to 32 soleriolds available)

\*1 Double wiring: 2-position single, double, 3-position, and 4-position valves can be used on all manifold stations.

Use of a 2-position single solenoid will result in an unused control signal. If this is not desired, order with a specified layout.

- \*2 Specified layout: Indicate the wiring specifications with the manifold specification sheet. (Note that 2-position double, 3-position, and 4-position valves cannot be used where single wiring has been specified.)
- This also includes the number of blanking plate assembly.

# A P. E port entry


U	U side (2 to 10 stations)
D	D side (2 to 10 stations)
В	Both sides (2 to 24 stations)

# 5 SUP/EXH block assembly

Nil	Internal pilot
s	Internal pilot
3	Built-in silencer
R	External pilot

- \* For built-in silencer type, P and E ports are available on U and D sides. 3/5(E) port is plugged. The silencer exhaust port is located on the opposite side of P, E port entry. (Example: When the P, E port entry is D side, the silencer exhaust port is U side.)
- When the built-in silencer type is used, keep the exhaust port from coming in direct contact with water or other liquids.

# How to Order Manifold Assembly

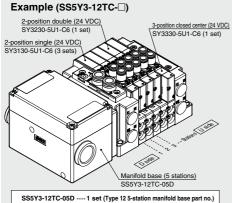

\* SY3130-5U1-C6 ......3 sets (2-position single part no.)

\* SY3230-5U1-C6 ......1 set (2-position double part no.) \* SY3330-5U1-C6 ......1 set (3-position closed center part no.)

The asterisk denotes the symbol for assembly. Prefix it to the part numbers of the valve etc.

• The valve arrangement is numbered as the 1st station from the D side. · Under the manifold part number, state the valves to be mounted in order from the 1st station as shown in the figure above. If the arrangement becomes complicated, specify on a manifold specification sheet.

# 6 P, E port size (One-touch fittings)

(Cito touch intailige)												
	Symbol	SY3000	SY5000	SY7000								
	Nil	ø8	ø10	ø12								
	N	ø5/16"	ø3/8"	ø1/2"								


<sup>\*</sup> For N sizes are in inches

<b>✓</b> Mounting				
Nil	Direct mounting DIN rail mounting (with DIN rail)			
D				
D0	DIN rail mounting (without DIN rail) For 3 stations			
D3				
:	:	Specify a longer rail than the standard length.		
D24	For 24 stations	the standard length.		

\* Refer to page 394 (SY3000/5000/7000 series: Specific product precautions 6) for instructions on fastening the DIN rail mounting type manifold

# How to Order Valves (With mounting screw)

Refer to page 136 for valve specifications.

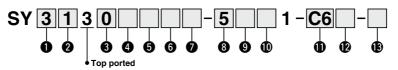

### Series

3	SY3000
5	SY5000
7	SY7000

### 2 Type of actuation

1	Opposition	Single		
2	2-position	Double		
3		Closed center		
4	5	Exhaust center		
5		Pressure center		
<b>A</b> *1	4-position dual 3-port	N.C./N.C.		
B*1		N.O./N.O.		
C*1		N.C./N.O.		

\*1 Only the rubber seal type is available for the 4-position dual 3-port valve.

# 3 Seal type

0	Rubber seal	
1	Metal seal	

# 4 Pilot type

Nil	Internal pilot
R	External pilot

# Back pressure check valve

(50	int-in valve type)
Nil	None
Н	Built-in

- Only the rubber seal type. The manifold installed type is available if the back pressure check valve is required for a valve with a metal seal. Refer to page 379 for ordering example. However, it is not recommended to use the built-in valve type and the manifold installed type at the same time because it will reduce the flow.
- \* The built-in valve type back pressure check valve is not available for the 3-position type and the SY7000.

# 6 Pilot valve option

	or raire opiion
Nil	Standard (0.7 MPa)
В	Quick response type (0.7 MPa)
<b>K</b> *1	High pressure type (1.0 MPa)

\*1 Only the metal seal type is available for the high pressure type.

# Coil type

Nil	Standard		
Т	With power saving circuit (Continuous duty type)		

- Be sure to select the power saving circuit type when the valve is continuously energized for long periods of time.
- Be careful of the energizing time when the power saving circuit is selected. Refer to page 391 for details.

# Rated voltage


•	iou ronugo
5	24 VDC
6	12 VDC

# 9 Light/surge voltage suppressor and common specification

Symbol	With light	Surge voltage suppressor	Specification	
Nil	_	_		
R	1		Non-polar	
U	•	•		
S	_		Positive	
Z	•		common	
NS	ı		Negative	
NZ	•		common	

 Only "Z" and "NZ" types are available with the power saving circuit.

## Manual override

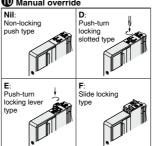

 Refer to the Web Catalog for the safety slide locking manual override.

# A, B port size

### Thread piping

Symbol	Port size	Applicable series	
M5	M5 x 0.8	SY3000 SY5000	
01	1/8		
02	1/4	SY7000	

### One-touch fitting (Metric)

Symbol	A, B port	SY3000	SY5000	SY7000	
C2 C3	ø2	•	_	_	
	ø3.2	•	_	_	
C4	ø4	•	•	_	
C6	ø6	•	•	•	
C8	ø8	_	•	•	
C10	ø10	_	_	•	
C12	ø12	_	_	•	

### One-touch fitting (Inch)

One-touch litting (inch)						
Symbol	A, B port	SY3000	SY5000	SY7000		
N1	ø1/8"	•		_		
N3	ø5/32"	•	•	_		
N7	ø1/4"	•	•	•		
N9	ø5/16"	_	•	•		
N11	ø3/8"	_	_	•		

# 12 Thread type

Nil	Rc
F	G
N	NPT
Т	NPTF

\* Only Nil is available for M5.

# (R) Type of mounting screw

• ',	oo ooug oo.o		
Nil Round head combination screen			
В	Hexagon socket head cap screw		
K	Round head combination screw (Fall-out prevention type)		
Н	Hexagon socket head cap screw (Fall-out prevention type)		

- \* For "K" and "H," the valve body cover has a drop prevention construction to stop the mounting screws from falling out when the valve is removed for maintenance etc.
- When ordering a valve individually, the base gasket is not included. Since the base gasket is attached to the manifold, please order the base gasket separately if it is needed for maintenance service.

Refer to page 367 for base gasket and

mounting screw part numbers.

\* "B" and "H" cannot be selected for the individual SUP/EXH spacer assembly or interface regulator.




# Connector Connecting Base SY3000/5000/7000 Series

### **Terminal Block Connection**

### Step 1. Remove the terminal block cover


Loosen the 4 mounting screws (M3) to remove the terminal block cover.

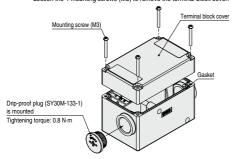

Step 2. The diagram below shows the terminal block wiring.
All stations are provided with double wiring regardless of the mounted valves.

Connect each wire to the power supply side, according to the markings provided inside the terminal block.

Be sure to connect the wire with the push button pressed down.

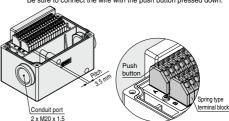


### Step 3. Mount the terminal block cover

Securely tighten the mounting screws (M3) to the torque shown in the table below only after confirming that the gasket is installed correctly.

Proper tightening torque [N⋅m]
0.54 to 0.66

• Applicable wire range: Conductor diameter ø0.5 to ø1.2 mm, Stranded wire AWG24 to 16

# **Electrical Wiring Specifications (IP67 compatible)**

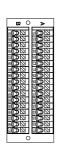

If alignment is not specified, the internal wiring will be double wiring (connected to SOL. a and SOL. b) regardless of number of stations, valve types, and option types.

 When using a valve with no polarity, either positive common or negative common can be used.

Standard wiring			
Terminal ne	o. Po	arity	
Com SOL.a 1A	(-)	(+)	
Station 1 SOL.b 1B	(-)	(+)	
SOL.a 2A	(-)	(+)	
Station 2 SOL.b 2B	(-)	(+)	
SOL.a 3A	(-)	(+)	
Station 3 ( SOL.b 3B	(-)	(+)	
SOL.a 4A	(-)	(+)	
Station 4 SOL.b 4B	(-)	(+)	
SOL.a 5A	(-)	(+)	
Station 5 SB	(-)	(+)	
Station 6	(-)	(+)	
(+mnoozzo 6B	(-)	(+)	
Station 7	(-)	(+)	
(+my	(-)	(+)	
Station 8	(-)	(+)	
O SE	(-)	(+)	
Station 9 SOL b	(-)	(+)	
(Fmmessas 9B	(-)	(+)	
Station 10 SOL.a 10A	(-)	(+)	
001 - 10B	(-)	(+)	
Station 11	(-)	(+)	
001 o 11B	(-)	(+)	
Station 12	(-)	(+)	
001 - 0 12B	(-)	(+)	
Station 13	(-)	(+)	
001 - 105	(-)	(+)	
Station 14	(-)	(+)	
Sol.a 15A	(-)	(+) (+)	
Station 15	(-)	(+)	
SOL.a 16A	(-)	(+)	
Station 16 SOL.b 16B	(-)	(+)	
- 16B	(-)	(+)	
→ COM.	(+)	(-)	
→ COM.	(+)	(-)	
	ositive	Negative	
		common	


Standard wiring

# Specified Layout

S0700

S0700

A mixture of single and double wiring can be specified on the manifold specification sheet. The maximum number of stations is determined according to the number of solenoids. The total number of solenoids should be 32 or less. 1 solenoid is required for the 2-position single, and 2 solenoids for the 2-position double, 3-position, and 4-position.

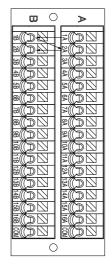





# Plug-in Connector Connecting Base


Terminal Block Box

# SY3000/5000/7000 Series

( E c RoHS

# **How to Order Manifold**

Refer to pages 331 (SY5000) and 332 (SY7000) for dimensions of Type 11/Bottom ported type.

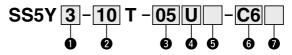

# Series

3	SY3000
5	SY5000
7	SY7000

<b>②</b> тур	pe
10	Side ported
11	Bottom ported*1

\*1: The SY5000 manifold base is used for the bottom ported of the SY3000. When ordering, refer to "Plug-in Mixed Mounting Type Manifold (from page 336).

# 3 Valve stations

Symbol	Stations	Note						
02	2 stations							
:	:	Double wiring*1						
10	10 stations	3						
02	2 stations	0						
:	:	Specified layout*2						
20	20 stations	(Available up to 20 solenoids)						

- 1: Double wiring: 2-position single, double, 3-position and 4-position valves can be used on all manifold stations. Use of a 2-position single solenoid will result in an unused control signal. If this is not desired, order with a specified layout.
- 2: Specified layout: Indicate the wiring specifications with the manifold specification sheet. (Note that 2-position double, 3-position and 4-position valves cannot be used where single wiring has been specified.)
- \*: This also includes the number of blanking plate assembly.

# 4 P. E port entry

U	U side (2 to 10 stations)
D	D side (2 to 10 stations)
В	Both sides (2 to 20 stations)

# 5 SUP/EXH block assembly


Nil	Internal pilot
S	Internal pilot, Built-in silencer
R	External pilot

- \*: 3/5(E) port is plugged for the built-in silencer
- \*: When the built-in silencer type is used, keep the exhaust port from coming in direct

Refer to the page on the right for 6.

contact with water or other liquids.

# **How to Order Manifold Assembly**

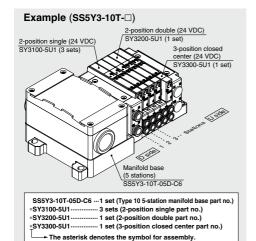

- Prefix it to the part numbers of the valve etc. • The valve arrangement is numbered as the 1st station from the D side.
- . Under the manifold part number, state the valves to be mounted in order from the 1st station as shown in the figure above. If the arrangement becomes complicated, specify on a manifold specification sheet.
- \*: When mixing top ported configurations, select from page 245. In this case, use caution as there is also output on the A and B port on base side. Specify on a manifold specification sheet if plugs are required on the A and B port on base side.

# Mounting and Option

•						
Symbol	Mounting	Option				
Symbol	wounting	Name plate	Station number			
Nil	Direct	_	_			
AA	mounting	•	•			
BA	mounting	•	_			
D□	DIN rail	_	_			
A□	mounting	•	•			
B□	mounting	•	_			

- \*: Enter the number of stations inside 

  when it is larger than the number of valve stations. (Refer to "DIN Rail Option" below.)
- \*: Only direct mounting is available for Type 11 (Bottom ported).
- \*: Refer to page 394 for the fixation of DIN rail mounting type manifold.

### DIN Rail Ontion

	an option				
Nil	Direct mounting				
0	Without DIN rail (with bracket)				
3	For 3 stations	Cassify a language soil than the			
:	- :	Specify a longer rail than the			
20	For 20 stations	total length of specified stations.			



# Plus-in Connector Connecting Base SY3000/5000/7000 Series

SJ

S0700 S0700

6 A, B port size (Metric/One-touch fitting)

Cumbal	A, B port		Type 1	10/Side	ported	Type 11/Bo	ttom ported		
Symbol			SY3000	SY5000	SY7000	SY5000	SY7000		
C2			ø2	•	_	_	_	_	
C3			ø3.2	•	_	_	_	_	
C4	_		ø4	•	•	-	•	-	
C6	Straight		ø6	•	•	•	•	•	
C8	Stra		ø8	_	•	•	•	•	2 4 10
C10	0,		ø10	_	-	•	-	•	O SEE
C12			ø12	_	_	•	_	•	*
CM*1		Straig	ght port, mixed sizes	•	•	•	•	•	
L4			ø4	•	•	-	-	-	
L6		5	ø6	•	•	•	_	_	
L8		Upward	ø8	_	•	•	I	I	
L10		5	ø10	_	_	•	_	_	
L12	O.		ø12	_	1	•	-		Jel Sal
B4	Elbow*2	_	ø4	•	•		_		
B6	Elbc	/ard	ø6	•	•	•	_	_	
B8		Downward	ø8	_	•	•	_	_	
B10		lá	ø10	_		•			
B12			ø12	_	_	•	_	_	
LM*1	(Includir		w port, mixed sizes uding upward and wnward piping)	•	•	•	ı	ı	
	P, E port size (One-touch fittings)		ø8	ø10	ø12	ø10	ø12		

Combal		^	Donast	Type 1	10/Side	ported	Type 11/Bo	ttom ported						
Symbol	м, в рс		B port	SY3000	SY5000	SY7000	SY5000	SY7000						
N1	П	ø1/8"		•	_	_	_	_						
N3	_		ø5/32"	•	•	_	•	_						
N7	igh		ø1/4"	•	•	•	•	•						
N9	Straight		ø5/16"	_	•	•	•	•						
N11	1" [		ø3/8"	_	_	•	_	•	o Garage					
CM*1		Straight port, mixed sizes		•	•	•	•	•						
LN3	Г	Downward Upward	Upward	Upward	Jpward	ø5/32"	•	_	_	_	_			
LN7						Jpwarc	ø1/4"	•	•	_	_	_		
LN9							후	&	鱼	ø5/16"	_	•	_	_
LN11					ø3/8"	_	_	•	_	_	O DE LOS DE LA CONTRACTION DEL CONTRACTION DE LA CONTRACTION DE LA CONTRACTION DE LA CONTRACTION DE LA CONTRACTION DEL CONTRACTION DE LA C			
BN3	Elbow*2		ø5/32"	•	_	_	_	_						
BN7			ø1/4"	•	•	_	_	_						
BN9		JWC	ø5/16"	_	•	_	_	_						
BN11		ŏ	ø3/8"	_	_	•	_	_	The same					

A, B port size (Inch/One-touch fitting)

**SMC** 

LM\*1

(Including upward and downward piping) P, E port size

(One-touch fittings)


ø5/16" ø3/8" ø1/2" ø3/8" ø1/2"

<sup>\*1:</sup> Indicate the sizes on the manifold specification sheet in the case of "CM", "LM". The direction of P, E port fittings is the same as for A, B port. If selecting "LM", indicate it on the manifold specification sheet for the P, E port fitting

<sup>\*2:</sup> To avoid interference with the body or piping, select downward elbow port when mounting the optional spacer assembly (pages 373 to 375).

# How to Order Valves (With mounting screw)

Refer to page 136 for valve specifications.

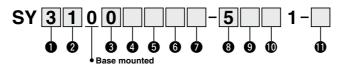

### Series

3	SY3000
5	SY5000
7	SY7000

# 2 Type of actuation

1	Onesition	Single						
2	2-position	Double						
3		Closed center						
4	3-position	Exhaust center						
5		Pressure center						
<b>A</b> *1	4-position	N.C./N.C.						
<b>B</b> ∗1	dual 3-port	N.O./N.O.						
C*1	addi 5-port	N.C./N.O.						

\*1: Only rubber seal type is available for the 4-position dual 3-port valve.

# 3 Seal type

0	Rubber seal
1	Metal seal

# 4 Pilot type

Internal pilot
External pilot

# Back pressure check valve (Built-in valve type)

Nil	None
Н	Built-in

- Only rubber seal type. Manifold installed type is available if the back pressure check valve is required for a valve with metal seal. Refer to page 379 for Ordering Example. However, it is not recommended to use the built-in valve type and the manifold installed type at the same time because it will reduce the flow.
- \*: The built-in valve type back pressure check valve is not available for the 3-position type and the SY7000.

# 6 Pilot valve option

Nil Standard (0.7 MPa)								
В	Quick response type (0.7 MPa)							
<b>K</b> *1	High pressure type (1.0 MPa)							

\*1: Only metal seal type is available for the high pressure type.

# Coil type

Nil	Standard								
Т	With power saving circuit (Continuous duty type)								

- \*: Be sure to select the power saving circuit type when the valve is continuously energized for long periods of time.
- \*: Be careful of the energizing time when the power saving circuit is selected. Refer to page 391 for details


Rate	ted voltage
5	24 VDC
6	12 VDC

# 9 Light/surge voltage suppressor and common specification

	Symbol	With light	Surge voltage suppressor	Common specification			
	Nil	_	_				
	R	_		Non-polar			
	U	•					
	S Z NS	_		Positive			
		•	_	common			
				Negative			
	NZ	•		common			

\*: Only "Z" and "NZ" types are available for with the power saving circuit.

# Manual override

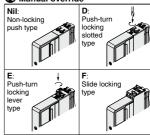

\*: Refer to page 154 for with the safety slide locking manual override.

# Type of mounting screw

Nil	Round head combination screw
В	Hexagon socket head cap screw
K	Round head combination screw (Falling-out-prevention type)
Н	Hexagon socket head cap screw (Falling-out-prevention type)

- \*: For "K" and "H", the valve body cover has a drop prevention construction to stop the mounting screws from falling out when the valve is removed for maintenance etc.
- When ordering a valve individually, the base gasket is not included. Since the base gasket is attached to the manifold, please order the base gasket separately if it is needed for maintenance service.
- Refer to page 367 for part numbers of the base gasket and mounting screw.
- \*: "B" and "H" cannot be selected for the individual SUP/EXH spacer assembly, interface regulator or double check spacer assembly with residual pressure release valve.


# Plus-in Connector Connecting Base SY3000/5000/7000 Series

Dimensions: SY3000 Series

Plug-in
Connector Connecting Base

Type 10/Side Ported
Terminal Block Box

SS5Y3-10T-<u>Stations</u> D C2, N1 (D)

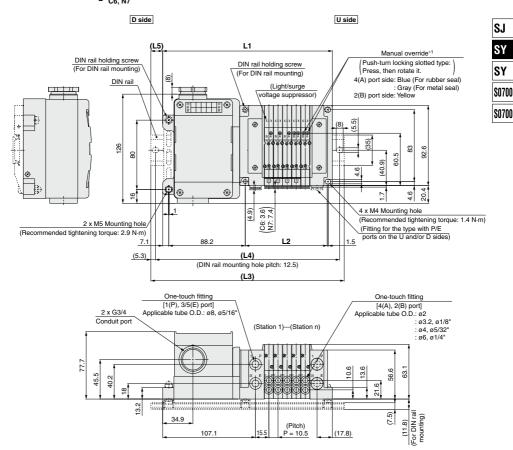

- \*1: Refer to page 328 for dimensions of external pilot, silencer, elbow fittings and slide locking manual override.
- \*: These figures show the "SS5Y3-10T-05D-C6".
- \*: Refer to page 333 for dimensions of A or B port top-ported type.

n: Stations	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20
L1	164.3	174.8	185.3	195.8	206.3	216.8	227.3	237.8	248.3	258.8	269.3	279.8	290.3	300.8	311.3	321.8	332.3	342.8	353.3
L2	63	73.5	84	94.5	105	115.5	126	136.5	147	157.5	168	178.5	189	199.5	210	220.5	231	241.5	252
L3	198	198	210.5	223	235.5	248	260.5	273	273	285.5	298	310.5	323	335.5	335.5	348	360.5	373	385.5
L4	187.5	187.5	200	212.5	225	237.5	250	262.5	262.5	275	287.5	300	312.5	325	325	337.5	350	362.5	375
L5	17	11.5	12.5	13.5	14.5	15.5	16.5	17.5	12.5	13.5	14.5	15.5	16.5	17.5	12	13	14	15	16





Dimensions: SY5000 Series

Plug-in Connector Connecting Base

Type 10/Side Ported
Terminal Block Box

SS5Y5-10T-Stations D-C6, N7 (D)

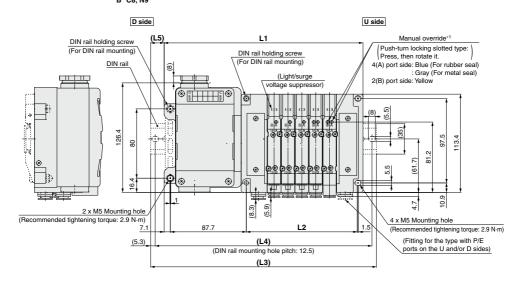

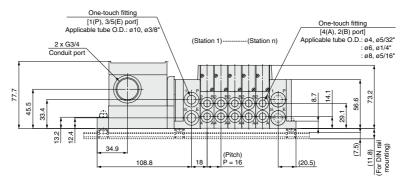

- \*1: Refer to page 329 for dimensions of external pilot, silencer, elbow fittings and slide locking manual override.
- \*: These figures show the "SS5Y5-10T-05D-C8".
- \*: Refer to page 334 for dimensions of A or B port top-ported type.

n: Stations	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20
L1	181.3	197.3	213.3	229.3	245.3	261.3	277.3	293.3	309.3	325.3	341.3	357.3	373.3	389.3	405.3	421.3	437.3	453.3	469.3
L2	80	96	112	128	144	160	176	192	208	224	240	256	272	288	304	320	336	352	368
L3	210.5	223	248	260.5	273	285.5	310.5	323	335.5	360.5	373	385.5	398	423	435.5	448	460.5	485.5	498
L4	200	212.5	237.5	250	262.5	275	300	312.5	325	350	362.5	375	387.5	412.5	425	437.5	450	475	487.5
L5	14.5	13	17.5	15.5	14	12	16.5	15	13	17.5	16	14	12.5	17	15	13.5	11.5	16	14.5


# Plus-in Connector Connecting Base SY3000/5000/7000 Series


Dimensions: SY7000 Series

Plug-in Connector Connecting Base

Type 10/Side Ported
Terminal Block Box

SS5Y7-10T-<u>Stations</u> D C6, N7 C8, N9 C10, N11 (D)

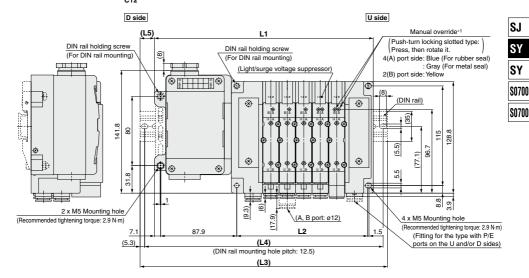

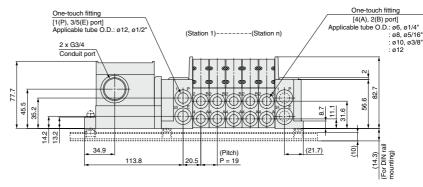

- \*1: Refer to page 330 for dimensions of external pilot, silencer, elbow fittings and slide locking manual override.
- \*: These figures show the "SS5Y7-10T-05D-C10".
- \*: Refer to page 335 for dimensions of A or B port top-ported type.

n: Stations	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20
L1	195.5	214.5	233.5	252.5	271.5	290.5	309.5	328.5	347.5	366.5	385.5	404.5	423.5	442.5	461.5	480.5	499.5	518.5	537.5
L2	94	113	132	151	170	189	208	227	246	265	284	303	322	341	360	379	398	417	436
L3	223	248	260.5	285.5	298	323	335.5	360.5	373	398	410.5	435.5	448	473	485.5	510.5	523	548	573
L4	212.5	237.5	250	275	287.5	312.5	325	350	362.5	387.5	400	425	437.5	462.5	475	500	512.5	537.5	562.5
L5	14	17	13.5	16.5	13.5	16.5	13	16	13	16	12.5	15.5	12.5	15.5	12	15	12	15	18



# Plug-in Connector Connecting Base

**Terminal Block Box** 

Type 12 Top Ported

# SY3000/5000/7000 Series

C C C ROHS

# **How to Order Manifold**



Refer to pages 333 to 335 for dimensions of Type 12/Top ported type.

# Series

3	SY3000
5	SY5000
7	SY7000

P. E port entry

U*1	U side (2 to 10 stations)
D*1	D side (2 to 10 stations)
В	Both sides (2 to 20 stations)
	,

\*1: 4 For type "S", supply/exhaust block assembly with built-in silencer, choose U or D for P port entry.

# Valve stations

Stations	Note				
2 stations					
1	Double wiring*1				
10 stations	. 3				
2 stations					
1	Specified layout*2				
20 stations	(Available up to 20 solenoids)				
	2 stations : 10 stations 2 stations : : : : : : : : : : : : : : : : : : :				

- \*1: Double wiring: 2-position single, double, 3-position and 4-position valves can be used on all manifold stations. Use of a 2-position single solenoid will result in an unused control signal. If this is not desired, order with a specified layout.
- \*2: Specified layout: Indicate the wiring specifications on the manifold specification sheet. (Note that 2-position double, 3-position and 4-position valves cannot be used where single wiring has been specified.)
- \*: This also includes the number of blanking plate assembly.

# 4 SUP/EXH block assembly

Nil	Internal pilot
S	Internal pilot, Built-in silencer
R	External pilot

- \*: For built-in silencer type, P and E ports are available on U and D sides. 3/5(E) port is plugged. The silencer exhaust port is located on the opposite side of P, E port entry. (Example: When the P, E port entry is D side, the silencer exhaust port is U side.)
- \*: When the built-in silencer type is used, keep the exhaust port from coming in direct contact with water or other liquids.

# P. E port size (One-touch fittings)

(one touch manage)							
Symbol	SY3000	SY5000	SY7000				
Nil	ø8	ø10	ø12				
N	ø5/16"	ø3/8"	ø1/2"				

\*: For N. sizes are in inches.

# **How to Order Manifold Assembly**

Example (SS5Y3-	12T-□)	
	2-position doub	
	\SY3230-5U1-C	
2-position single (24 VDC)	\\ \~ .	3-position closed
SY3130-5U1-C6 (3 sets)		center (24 VDC)
, , , , , , , , , , , , , , , , , , , ,		SY3330-5U1-C6 (1 set)
	X35571	010000 001 00 (1 00)
/°> </th <th></th> <th><b>%€</b>∕3</th>		<b>%€</b> ∕3
<b>.</b>		
		<b>9</b> 49
		- T-
		State Signer
M///		1, 36
		~~ v
		> "
	Manifold b	ase
IMI/	(5 stations	
	SS5Y3-12	
	33313-12	1-05D
SS5Y3-12T-05D 1	set (Type 12 5-stati	on manifold base part no.)
*SY3130-5U1-C6 3		
*SY3230-5U1-C6 1		
<u>∗</u> SY3330-5U1-C6 ·········· 1	set (3-position ci	osea center part no.)

. The valve arrangement is numbered as the 1st station from the D side. . Under the manifold part number, state the valves to be mounted in order from the 1st station as shown in the figure above. If the arrangement becomes complicated, specify on a manifold specification

The asterisk denotes the symbol for assembly. Prefix it to the part numbers of the valve etc.

# **A** Mounting

Widdining							
Nil	Direct mounting						
D	DIN rail mounting						
יט	(With DIN rail)						
D0	DIN rail mounting						
DU	(Without DIN rail)						
D3	For 3 stations	Specify a longer rail than					
:	:	the standard length.					
D20	For 20 stations	the standard length.					

\*: Refer to page 394 for the fixation of DIN rail mounting type manifold.

# Plug-in Connector Connecting Base SY3000/5000/7000 Series


# How to Order Valves (With mounting screw)

Refer to page 136 for valve specifications.

SJ

S0700

S0700

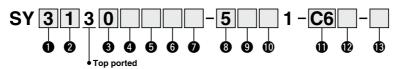

### 1 Series

3	SY3000
5	SY5000
7	SY7000

### 2 Type of actuation

1	2-position	Single			
2	2-position	Double			
3		Closed center			
4	3-position	Exhaust center			
5		Pressure center			
<b>A</b> *1	4	N.C./N.C.			
B*1	4-position dual 3-port	N.O./N.O.			
C*1		N.C./N.O.			

\*1: Only rubber seal type is available for the 4-position dual 3-port valve.

# Seal type

0	Rubber seal					
1	Metal seal					

# Pilot type

Nil	Internal pilot	
R	External pilot	

# Back pressure check valve

(Built-in valve type)	
Nil	None
_	Puilt in

- \*: Only rubber seal type. Manifold installed type is available if the back pressure check valve is required for a valve with metal seal. Refer to page 379 for Ordering Example. However, it is not recommended to use the built-in valve type and the manifold installed type at the same time because it will reduce the flow.
- \*: The built-in valve type back pressure check valve is not available for the 3-position type and the SY7000.

# Pilot valve option

O I not varie option		
Nil	Standard (0.7 MPa)	
В	Quick response type (0.7 MPa)	
<b>K</b> *1	High pressure type (1.0 MPa)	

\*1: Only metal seal type is available for the high pressure type.

# Coil type

	Nil	Standard
	Т	With power saving circuit (Continuous duty type
*: Be sure to select the power saving circuit		

- type when the valve is continuously energized for long periods of time.
- \*: Be careful of the energizing time when the power saving circuit is selected. Refer to page 391 for details.

# Rated voltage


•	iou roitugo
5	24 VDC
6	12 VDC

# 9 Light/surge voltage suppressor and common specification

Symbol	With light Surge voltage suppressor		Common specification	
Nil	-	_		
R	_		Non-polar	
U	•			
S	-		Positive	
Z	•	_	common	
NS	_		Negative	
NZ	•		common	

\*: Only "Z" and "NZ" types are available for with the power saving circuit.

# Manual override

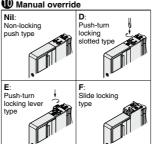

\*: Refer to page 154 for with the safety slide locking manual override.

# A, B port size

### Thread piping

	p.pg	
Symbol	Port size	Applicable series
M5	M5 x 0.8	SY3000
01	1/8	SY5000
02	1/4	SY7000

### One-touch fitting (Motrie)

one todon name (metric)				
Symbol	A, B port	SY3000	SY5000	SY7000
C2	ø2	•	_	_
C2 C3 C4 C6	ø3.2	•	_	_
C4	ø4	•	•	_
C6	ø6	•	•	•
C8	ø8	_	•	•
C10	ø10	_	_	•
C12	ø12	_		•

### One-touch fitting (Inch)

One-	One-touch nitting (inch)			
Symbol	A, B port	SY3000	SY5000	SY7000
N1	ø1/8"	•		_
N3	ø5/32"	•	•	_
N7	ø1/4"	•	•	•
N9	ø5/16"	_	•	•
N11	ø3/8"		_	•

# 12 Thread type

Nil	Rc
F	G
N	NPT
Т	NPTF

\*: Only Nil is available for M5.

# Type of mounting screw

Type of mounting colen		oc or mounting corew
B Hexagon socket h		Round head combination screw
		Hexagon socket head cap screw
		Round head combination screw (Falling-out-prevention type)
	Н	Hexagon socket head cap screw (Falling-out-prevention type)

- \*: For "K" and "H", the valve body cover has a drop prevention construction to stop the mounting screws from falling out when the valve is removed for maintenance etc.
- \*: When ordering a valve individually, the base gasket is not included. Since the base gasket is attached to the manifold, please order the base gasket separately if it is needed for maintenance service.

Refer to page 367 for part numbers of the base gasket and mounting screw.

\*: "B" and "H" cannot be selected for the individual SUP/EXH spacer assembly or interface regulator.




245

### **Terminal Block Connection**


### Step 1. Removing the terminal block cover

Loosen the 4 mounting screws (M4) to remove the terminal block cover.

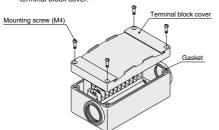

# Step 2. The below diagram shows the terminal block wiring. All stations are provided with double wiring regardless of the mounted valves.

Connect each wire to the power supply side, according to the markings provided inside the terminal block.

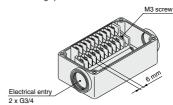


### Step 3. Mounting the terminal block cover

Securely tighten the screws to the torque shown in the below table only after confirming that the gasket is installed correctly.

Proper tightening torque [N-m]
0.7 to 1.2


- Applicable crimped terminal: 1.25-3S, 1.25Y-3, 1.25Y-3N, 1.25Y-3.5
- Name plate: VVQ5000-N-T
- Drip-proof plug assembly (for G3/4): AXT100-B06A

# **Electrical Wiring Specifications (IP67 compatible)**

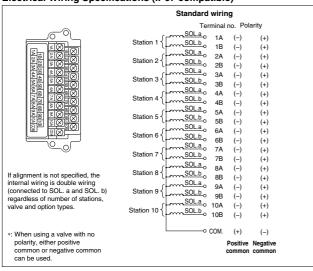

# Specified Layout

Mixed wiring of single and double wiring can be specified on the manifold specification sheet. The maximum number of stations is determined according to the number of solenoids. The total number of solenoids should be 20 or less. 1 solenoid is required for 2-position single, and 2 solenoids for 2-position double, 3-position and 4-position.

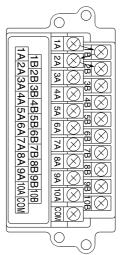

SJ

SY SY

S0700

S0700



# **Plug-in** Connector Connecting Base


Lead Wire

# SY3000/5000/7000 Series

( ( c RoHS

# **How to Order Manifold**

Refer to pages 331 (SY5000) and 332 (SY7000) for dimensions of Type 11/Bottom ported type.

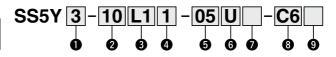

# 3 SY3000 5 SY5000 7 SY7000

### 

Туре		
10	Side ported	
11	Bottom ported*1	

\*1: The SY5000 manifold base is used for the bottom ported of the SY3000. When ordering, refer to "Plug-in Mixed Mounting Type Manifold" (from page 336).

Lead wire length					
1	0.6 m				
2	1.5 m				
3	3 m				


# Valve stations (L1□)

(L10	⊐)		(L3	□)	
Symbol	Stations	Note	Symbol	Stations	Note
02	2 stations		02	2 stations	
-	:	Double wiring*1	:	-	Double wiring*1
16	16 stations		04	4 stations	
02	2 stations	Specified layout*2	02	2 stations	Specified layout*2
-	:	(Available up to	:	-	(Available up to
24	24 stations	32 solenoids)	08	8 stations	8 solenoids)
	•				•

(L2	□)			
Symbol	Stations	Note		
02	2 stations			
:	- :	Double wiring*1		
08	8 stations			
02	2 stations	Specified layout*2		
:	- :	(Available up to		
16	16 stations	16 solenoids)		
*1: Double wiring: 2-position single				

- 11: Double wiring: 2-position single, double, 3-position and 4-position valves can be used on all manifold stations. Use of a 2-position single solenoid will result in an unused control signal. If this is not desired, order with a specified layout.
- Specified layout: Indicate the wiring specifications on the manifold specification sheet. (Note that 2-position double, 3-position and 4-position valves cannot be used where single wiring has been specified.)
- \*: This also includes the number of blanking plate assembly.

# How to Order Manifold Assembly

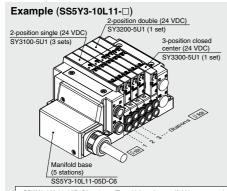

→ The asterisk denotes the symbol for assembly. Prefix it to the part numbers of the valve etc.

- The valve arrangement is numbered as the 1st station from the D side.
- Under the manifold part number, state the valves to be mounted in order from the 1st station as shown in the figure above. If the arrangement becomes complicated, specify on a manifold specification sheet.
- \*: When mixing top ported configurations, select from page 255. In this case, use caution as there is also output on the A and B port on base side. Specify on a manifold specification sheet if plugs are required on the A and B port on base side.

# 6 P. E port entry

P, E port entry						
	U	U side (2 to 10 stations)				
	D	D side (2 to 10 stations)				
	В	Both sides (2 to 24 stations)				

# SUP/EXH block assembly

SUP/EAR DIOCK assembly					
Nil	Internal pilot				
S	Internal pilot, Built-in silencer				
R	External pilot				

- \*: 3/5(E) port is plugged for the built-in silencer type.
- \*: When the built-in silencer type is used, keep the exhaust port from coming in direct contact with water or other liquids.

# Plusin Connector Connecting Base SY3000/5000/7000 Series

SJ

S0700

S0700

8 A, B port size (Metric/One-touch fitting)

Symbol	A, B port		Type 1	10/Side	ported	Type 11/Bo	ttom ported		
Symbol		A, B port		SY3000	SY5000	SY7000	SY5000	SY7000	
C2			ø2	•	_	_	_	_	
C3			ø3.2	•	ı	_	I	_	
C4	+		ø4	•	•	_	•	_	
C6	Straight		ø6	•	•	•	•	•	
C8	Stra		ø8	_	•	•	•	•	
C10			ø10	_	_	•	_	•	15055
C12			ø12	_	_	•	_	•	
CM*1		Straig	ht port, mixed sizes	•	•	•	•	•	
L4			ø4	•	•	_	_	_	
L6		힏	ø6	•	•	•	_	_	
L8		Upward	ø8	_	•	•		_	
L10		5	ø10	_	_	•	_	_	
L12	01		ø12	_	_	•	_	_	
B4	∃lbow*2	_	ø4	•	•	_	_	_	
B6	Elbc	/ard	ø6	•	•	•	_	_	
B8		Downward	ø8	_	•	•	_	_	
B10		õ	ø10	_	-	•		_	
B12	2		ø12	_	_	•	_	_	
LM*1		Elbow port, mixed sizes (Including upward and downward piping)		•	•	•	_	_	
P, E port size (One-touch fittings)			ø8	ø10	ø12	ø10	ø12		

	mbol A, B port		71.			71					
Syllibol			ь роп	SY3000	SY5000	SY7000	SY5000	SY7000			
N1			ø1/8"	•	_	_	_	_			
N3	_		ø5/32"	•	•	_	•	_			
N7	igh		ø1/4"	•	•	•	•	•			
N9	Straight		ø5/16"	_	•	•	•	•			
N11	٠,		ø3/8"	_	_	•	_	•	of Surgar		
CM*1		Straight port, mixed sizes		•	•	•	•	•			
LN3	N7 N9 N11 Elpow <sub>2</sub> , BN3 8N7 BN9	1	ø5/32"	•	_	_	_	_			
LN7		٦ L	/arc	ø1/4"	•	•	_	_	_		
LN9				۱ġ	ø5/16"	_	•	_	_		
LN11				_	ø3/8"	_	_	•	_	_	G D TO SERVE
BN3		rd	ø5/32"	•	_	_	_	_			
BN7		wa	ø1/4"	•	•	_	_	_			
BN9		owr	ø5/16"	_	•	_	_	_			
BN11		Δ	ø3/8"	-	_	•	-	-			

Type 10/Side ported Type 11/Bottom ported

A, B port size (Inch/One-touch fitting)

ø3/8' Elbow port, mixed size

> ø5/16' ø3/8" ø1/21 ø3/8" ø1/2"

(Including upward and downward piping) P, E port size

(One-touch fittings)

\*1: Indicate the sizes on the manifold specification sheet in the case of "CM", "LM". The direction of P, E port fittings is the same as for A, B port. If selecting "LM", indicate it on the manifold specification sheet for the P, E port fitting direction.

LM\*

# Mounting and Option

	• ····································							
Symbol	Mounting	Option		DIN Rai	Option			
Symbol	iviouriting	Name plate	Station number	Nil	Direct mounting			
Nil	Direct mounting	_	_	0	Withou	it DIN rail (with bracket)		
AA		•	•	3	For 3 stations	Specify a longer rail than the		
BA		•	_	:	:	total length of specified		
D□	DIN	_	_	24	For 24 stations	stations.		
A□	DIN rail mounting	•	•					
B□		•						

- \*: Enter the number of stations inside 


  when it is larger than the number of valve stations. (Refer to "DIN Rail Option" above.)
- \*: Only direct mounting is available for Type 11 (Bottom ported).

  \*: Refer to page 394 for the fixation of DIN rail mounting type manifold.

<sup>\*2:</sup> To avoid interference with the body or piping, select downward elbow port when mounting the optional spacer assembly (pages 373 to 375).

# How to Order Valves (With mounting screw)

Refer to page 136 for valve specifications.

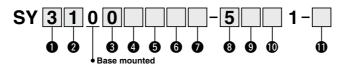

# 1 Series

	3	SY3000
	5	SY5000
	7	SY7000

### 2 Type of actuation

1	2-position	Single
2		Double
3	3-position	Closed center
4		Exhaust center
5		Pressure center
<b>A</b> *1	4-position dual 3-port	N.C./N.C.
B*1		N.O./N.O.
C*1		N.C./N.O.

\*1: Only rubber seal is available for the 4-position dual 3-port valve.

# Seal type

0	Rubber seal
1	Metal seal

# 4 Pilot type

PII	ot type
Nil	Internal pilot
R	External pilot

# Back pressure check valve (Built-in valve type)

Nil	None
Н	Ruilt-in

- Only rubber seal type. Manifold installed type is available if the back pressure check valve is required for a valve with metal seal. Refer to page 379 for Ordering Example. However, it is not recommended to use the built-in valve type and the manifold installed type at the same time because it will reduce the flow.
- \*: The built-in valve type back pressure check valve is not available for the 3-position type and the SY7000.

# 6 Pilot valve option

Nil	Standard (0.7 MPa)
В	Quick response type (0.7 MPa)
<b>K</b> *1	High pressure type (1.0 MPa)

\*1: Only metal seal type is available for the high pressure type.

# Coil type

Nil	Standard
T	With power saving circuit (Continuous duty type)
Da a	en ta nalant tha marriar annina niverrit trans

- \*: Be sure to select the power saving circuit type when the valve is continuously energized for long periods of time.
- \*: Be careful of the energizing time when the power saving circuit is selected. Refer to page 391 for details.

# 8 Rated voltage


5	24 VDC
6	12 VDC

# 9 Light/surge voltage suppressor and common specification

Symbol	With light	Surge voltage suppressor	Common specification					
Nil	_	_						
R	1		Non-polar					
U	•							
S	-		Positive					
Z	•	_	common					
NS	ı		Negative					
NZ	•		common					

\*: Only "Z" and "NZ" types are available for with the power saving circuit.

# Manual override

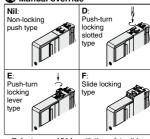

\*: Refer to page 154 for with the safety slide locking manual override.

# Type of mounting screw

Nil	Round head combination screw
В	Hexagon socket head cap screw
K	Round head combination screw (Falling-out-prevention type)
Н	Hexagon socket head cap screw (Falling-out-prevention type)

- \*: For "K" and "H", the valve body cover has a drop prevention construction to stop the mounting screws from falling out when the valve is removed for maintenance etc.
- \*: When ordering a valve individually, the base gasket is not included. Since the base gasket is attached to the manifold, please order the base gasket separately if it is needed for maintenance service.
  - Refer to page 367 for part numbers of the base gasket and mounting screw.
- \*: "B" and "H" cannot be selected for the individual SUP/EXH spacer assembly, interface regulator or double check spacer assembly with residual pressure release valve



# Plusin Connector Connecting Base SY3000/5000/7000 Series

Dimensions: SY3000 Series

(Lead wire length)

Plug-in Connector Connecting Base Type 10/Side Ported Lead Wire

SJ


SY

S0700

S0700

SS5Y3-10L $_{3}^{1}$   $\square$ -Stations  $\bigcup_{\substack{0 \ C_{3} \ C_{6}}}^{C_{2}}$ D side U side Manual override\*1 (L5)L1 Push-turn locking slotted type: DIN rail holding screw Press, then rotate it. 4(A) port side: Blue (For rubber seal) (For DIN rail mounting) : Gray (For metal seal) (Light/surge DIN rail 2(B) port side: Yellow voltage suppressor) 8 92.6 စ္ထု 67.8 60.5 (40.9) 南南南南 4.6 (4.9) ë ë 4 x M4 Mounting hole (Recommended tightening torque: 1.4 N·m) 18 (Fitting for the type with P/E ports on the U and/or D sides) L2 (5.3)(L4) 0.6 m, 1.5 m, 3 m

(DIN rail mounting hole pitch: 12.5) (L3)

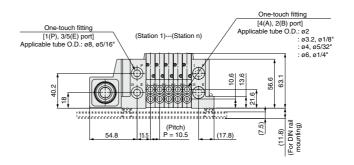

- \*1: Refer to page 328 for dimensions of external pilot, silencer, elbow fittings and slide locking manual override.
- \*: These figures show the "SS5Y3-10L1 □-05D-C6".
- \*: Refer to page 333 for dimensions of A or B port top-ported type.


n: Stations	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
L1	112	122.5	133	143.5	154	164.5	175	185.5	196	206.5	217	227.5	238	248.5	259	269.5	280	290.5	301	311.5	322	332.5	343
L2	63	73.5	84	94.5	105	115.5	126	136.5	147	157.5	168	178.5	189	199.5	210	220.5	231	241.5	252	262.5	273	283.5	294
L3	135.5	148	160.5	173	185.5	198	210.5	210.5	223	235.5	248	260.5	273	273	285.5	298	310.5	323	335.5	335.5	348	360.5	373
L4	125	137.5	150	162.5	175	187.5	200	200	212.5	225	237.5	250	262.5	262.5	275	287.5	300	312.5	325	325	337.5	350	362.5
L5	12	13	14	15	16	17	18	12.5	13.5	14.5	15.5	16.5	17.5	12.5	13.5	14.5	15.5	16.5	17.5	12	13	14	15
														•	•								


Dimensions: SY5000 Series

Plug-in Connecting Base

Type 10/Side Ported Lead Wire

SS5Y5-10L<sub>2</sub> - Stations D-C6, N7 (D)

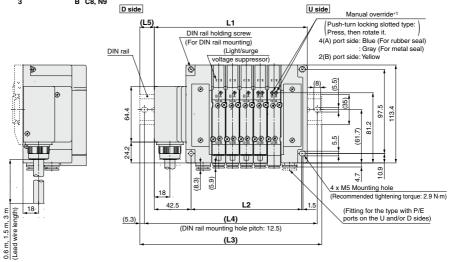

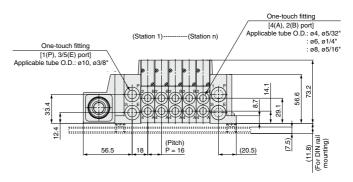

- \*1: Refer to page 329 for dimensions of external pilot, silencer, elbow fittings and slide locking manual override.
- \*: These figures show the "SS5Y5-10L1□-05D-C8".
- \*: Refer to page 334 for dimensions of A or B port top-ported type.

n: Stations	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
L1	129	145	161	177	193	209	225	241	257	273	289	305	321	337	353	369	385	401	417	433	449	465	481
L2	80	96	112	128	144	160	176	192	208	224	240	256	272	288	304	320	336	352	368	384	400	416	432
L3	160.5	173	185.5	210.5	223	235.5	260.5	273	285.5	298	323	335.5	348	360.5	385.5	398	410.5	435.5	448	460.5	473	498	510.5
L4	150	162.5	175	200	212.5	225	250	262.5	275	287.5	312.5	325	337.5	350	375	387.5	400	425	437.5	450	462.5	487.5	500
L5	16	14	12.5	17	15	13.5	18	16	14.5	12.5	17	15.5	13.5	12	16.5	14.5	13	17.5	15.5	14	12	16.5	15


# Plus-in Connector Connecting Base SY3000/5000/7000 Series

Dimensions: SY7000 Series


Plug-in
Connector Connecting Base

Type 10/Side Ported Lead Wire

SS5Y7-10L<sub>2</sub><sup>1</sup> - <u>Stations</u> D C8, N7 C8, N9 C10, N11 (D)

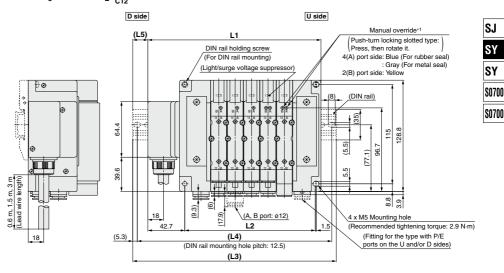

(Station 1)-----(Station n)

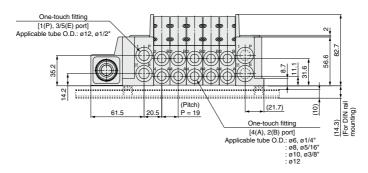

- \*1: Refer to page 330 for dimensions of external pilot, silencer, elbow fittings and slide locking manual override.
- \*: These figures show the "SS5Y7-10L1 □-05D-C10".
- \*: Refer to page 335 for dimensions of A or B port top-ported type.

n: Stations	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
L1	143.2	162.2	181.2	200.2	219.2	238.2	257.2	276.2	295.2	314.2	333.2	352.2	371.2	390.2	409.2	428.2	447.2	466.2	485.2	504.2	523.2	542.2	561.2
L2	94	113	132	151	170	189	208	227	246	265	284	303	322	341	360	379	398	417	436	455	474	493	512
L3	173	185.5	210.5	235.5	248	273	285.5	310.5	323	348	360.5	385.5	398	423	435.5	460.5	473	498	510.5	535.5	548	573	585.5
L4	162.5	175	200	225	237.5	262.5	275	300	312.5	337.5	350	375	387.5	412.5	425	450	462.5	487.5	500	525	537.5	562.5	575
L5	15	11.5	14.5	17.5	14.5	17.5	14	17	14	17	13.5	16.5	13.5	16.5	13	16	13	16	12.5	15.5	12.5	15.5	12



# **Plug-in** Connector Connecting Base


Lead Wire

Type 12
Top Ported

# SY3000/5000/7000 Series

C C CRU'US ROHS

# **How to Order Manifold**

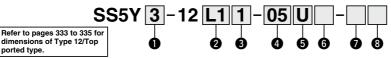

# Series

3	SY3000
5	SY5000
7	SY7000

# Number of cores (Lead wire)

	uu wiicj
L1	34 cores
L2	17 cores
L3	9 cores

# 1 0.6 m 2 1.5 m

3 m

<b>6</b> P, I	E port entry
U*1	U side (2 to 10 stations)
<b>D</b> *1	D side (2 to 10 stations)

\*1: 6 For type "S", supply/exhaust block assembly with built-in silencer, choose U or D for P port entry.

# **How to Order Manifold Assembly**

Both sides (2 to 24 stations

# Example (SS5Y3-12L11-□) 2-position double (24 VDC) SY3230-5U1-C6 (1 set) 3-position closed center (24 VDC) SY3130-5U1-C6 (3 sets) Manifold base (5 stations) SS5Y3-12L11-05D

SS5Y3-12L11-05D ··· 1 set (Type 12 5-station manifold base part no.) \*SY3130-5U1-C6 ······ 3 sets (2-position single part no.) \*SY3230-5U1-C6 ····· 1 set (2-position clouble part no.) \*SY3330-5U1-C6 ····· 1 set (3-position closed center part no.)

➤ The asterisk denotes the symbol for assembly.

Prefix it to the part numbers of the valve etc.

 The valve arrangement is numbered as the 1st station from the D side.
 Under the manifold part number, state the valves to be mounted in order from the 1st station as shown in the figure above. If the arrangement becomes complicated, specify on a manifold specification sheet.

# 4 Valve stations

•		Juliona			
(L10	□)		(L3	□)	
Symbol	Stations	Note	Symbol	Stations	Note
02	2 stations		02	2 stations	
	;	Double wiring*1			Double wiring*1
16	16 stations		04	4 stations	
02	2 stations	Specified layout*2	02	2 stations	Specified layout*2
	;	(Available up to			(Available up to
24	24 stations	32 solenoids)	08	8 stations	8 solenoids)

)	
Stations	Note
2 stations	
:	Double wiring*1
stations	
stations	Specified layout*2
:	(Available up to
6 stations	16 solenoids)
	stations : stations stations :

- \*1: Double wiring: 2-position single, double, 3-position and 4-position valves can be used on all manifold stations. Use of a 2-position single solenoid will result in an unused control signal. If this is not desired, order with a specified layout.
- \*2: Specified layout: Indicate the wiring specifications on the manifold specification sheet. (Note that 2-position double, 3-position and 4-position valves cannot be used where single wiring has been specified.)
- \*: This also includes the number of blanking plate assembly.

# SUP/EXH block assembly Nil Internal pilot S Internal pilot, Built-in silencer R External pilot

- e: For built-in silencer type, P and E ports are available on U and D sides. 3/5(E) port is plugged. The silencer exhaust port is located on the opposite side of P, E port entry. (Example: When the P, E port entry is D side, the silencer exhaust port is U side.)
- \*: When the built-in silencer type is used, keep the exhaust port from coming in direct contact with water or other liquids.

# P, E port size (One-touch fittings)

Symbol	SY3000	SY5000	SY7000	
Nil	ø8	ø10	ø12	
N	ø5/16"	ø3/8"	ø1/2"	

\*: For N, sizes are in inches

## Mounting


Widuliting			
Nil	Direct mounting		
D	DIN rail mounting (With DIN rail)		
D0	DIN rail mounting (Without DIN rail)		
D3	For 3 stations	Specify a longer rail than	
:		the standard length.	
D24	For 24 stations	the standard length.	

\*: Refer to page 394 for the fixation of DIN rail mounting type manifold.

# Plug-in Connector Connecting Base SY3000/5000/7000 Series

# How to Order Valves (With mounting screw)

Refer to page 136 for valve specifications.

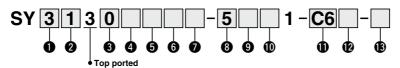

### Series

3	SY3000
5	SY5000
7	SY7000

# Type of actuation

1	2-position	Single
2		Double
3	3-position	Closed center
4		Exhaust center
5		Pressure center
A*1 B*1	4-position dual 3-port	N.C./N.C.
		N.O./N.O.
C*1		N.C./N.O.

\*1: Only rubber seal type is available for the 4-position dual 3-port valve.

# Seal type

0	Rubber seal
1	Metal seal

# A Pilot type

• :		
Nil	Internal pilot	
R	External pilot	

# Back pressure check valve (Built-in valve type)

Nil	None
Н	Built-in

- \*: Only rubber seal type. Manifold installed type is available if the back pressure check valve is required for a valve with metal seal. Refer to page 379 for Ordering Example. However, it is not recommended to use the built-in valve type and the manifold installed type at the same time because it will reduce the flow
- \*: The built-in valve type back pressure check valve is not available for the 3-position type and the SY7000

# 6 Pilot valve option

Nil	Standard (0.7 MPa)	
В	Quick response type (0.7 MPa)	
<b>K</b> *1	High pressure type (1.0 MPa)	

\*1: Only metal seal type is available for the high pressure type.

# Coil type

Nil	Standard
Т	With power saving circuit (Continuous duty type
D	re to coloct the neuron continue sinouit

- \*: Be sure to select the power saving circuit type when the valve is continuously energized for long periods of time.
- \*: Be careful of the energizing time when the power saving circuit is selected. Refer to page 391 for details.

# 8 Rated voltage

ĺ	5	24 VDC
	6	12 VDC

# Light/surge voltage suppressor and common specification

Symbol	With light	Surge voltage suppressor	Common specification
Nil	_	_	
R	-		Non-polar
U	•		
S	_	•	Positive
Z	•	_	common
NS	_		Negative
NZ	•		common

\*: Only "Z" and "NZ" types are available for with the power saving circuit.



\*: Refer to page 154 for with the safety slide locking manual override.

# A. B port size

### Thread piping

Symbo	Port size	Applicable series	
M5	M5 x 0.8	SY3000	
01	1/8	SY5000	
02	1/4	SY7000	

### One-touch fitting (Motrie)

one todon name (metric)				
Symbol	A, B port	SY3000	SY5000	SY7000
C2	ø2	•	_	_
C2 C3 C4 C6	ø3.2	•	_	_
C4	ø4	•	•	_
C6	ø6	•	•	•
C8	ø8	_	•	•
C10	ø10			•
C12	ø12	_	_	•

### a touch fitting (Inch)

One-touch litting (inch)				
A, B port	SY3000	SY5000	SY7000	
ø1/8"	•	_	_	
ø5/32"	•	•	_	
ø1/4"	•	•	•	
ø5/16"	_	•	•	
ø3/8"	_	_	•	
	ø1/8" ø5/32" ø1/4" ø5/16"	ø1/8" ●  ø5/32" ●  ø1/4" ●  ø5/16" —	Ø1/8"     —       Ø5/32"     ●       Ø1/4"     ●       Ø5/16"     —	

### Thread type

Nil	Rc
F	G
N	NPT
Т	NPTF

\*: Only Nil is available for M5.

# Type of mounting screw

Type of illounting screw		
Nil	Round head combination screw	
В	Hexagon socket head cap screw	
K	Round head combination screw (Falling-out-prevention type)	
н	Heyanon socket head can screw (Falling.out.prevention type)	

- \*: For "K" and "H", the valve body cover has a drop prevention construction to stop the mounting screws from falling out when the valve is removed for maintenance etc.
- \*: When ordering a valve individually, the base gasket is not included. Since the base gasket is attached to the manifold, please order the base gasket separately if it is needed for maintenance

service. Refer to page 367 for part numbers of the base gasket and mounting screw.

\*: "B" and "H" cannot be selected for the individual SUP/EXH spacer assembly or interface regulator.




SJ

S0700

S0700

# **Electrical Wiring Specifications**



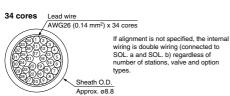

	Lead wire	Printed (Both si	
Lead wire no. Polarity	color	Type	Color
Station 1 { SOL.b 0 1 (-) (+) SOL.b 0 2 (-) (+)	Orange	-	Red Black
Station 2 { SOL.b o 4 (-) (+)	Light gray	-	Red Black
Station 3 { SOL.b o 6 (-) (+)	White	-	Red Black
Station 4 { SOL.a o 7 (-) (+) (+) (+)	Yellow	-	Red Black
Station 5 { SOL.a 9 (-) (+) SOL.b 0 10 (-) (+)	Pink	-	Red Black
Station 6 { SOL.a o 11 (-) (+) (+) (+) (-) (+)	Orange		Red Black
Station 7 { SOL.a o 13 (-) (+) (+) (+) (+)	Light gray		Red Black
Station 8 { SOL.a o 15 (-) (+) SOL.b o 16 (-) (+)	White		Red Black
Station 9 { SOL.a o 17 (-) (+) (+) (+) (+)	Yellow		Red Black
Station 10 {	Pink		Red Black
Station 11 {	Orange		Red Black
Station 12 { SOL.a o 23 (-) (+) (+) (+) (-) (+)	Light gray		Red Black
Station 13 { SOL.a o 25 (-) (+) (+) (+) (+)	White		Red Black
Station 14 { SOL.b o 27 (-) (+) (+) (-) (-) (+)	Yellow		Red Black
Station 15 { SOL.a 29 (-) (+) (+) (+) (-) (+)	Pink		Red Black
Station 16 ( +) SOL.b 32 (-) (+)	Orange		Red Black
COM. 0 33 (+) (-) COM. 0 34 (+) (-)	Light gray		Red Black

### **Electrical characteristics**

Item	Property
Conductor resistance Ω/km, 20°C	143 or less
Voltage limit V, 1 minute, AC	2000
Insulation resistance MΩ/km, 20°C	10 or more

\*: Cannot be used for movable wiring. The minimum bending radius of the cable is 55 mm.

# \*: For negative common specification, a valve for negative common or a valve without polarity should be used.

# **Specified Layout**

Positive Negative common common

Mixed wiring of single and double wiring can be specified on the manifold specification. The maximum number of stations is determined according to the number of solenoids. The total number of solenoids should be 32 or less. 1 solenoid is required for 2-position single, and 2 solenoids for 2-position double, 3-position and 4-position.

# Plus-in Connector Connecting Base SY3000/5000/7000 Series

**Electrical Wiring Specifications** Lead wire Electrical characteristics Item Property Conductor resistance 143 or less 17 cores Lead wire Lead wire Ω/km, 20°C 9 cores AWG26 (0.14 mm<sup>2</sup>) x 17 cores AWG26 (0.14 mm<sup>2</sup>) x 9 cores Voltage limit 2000 V, 1 minute, AC Insulation resistance 10 or more MΩ/km, 20°C \*: Cannot be used for movable wiring. \*: Cannot be used for movable wiring. The minimum bending radius of the cable The minimum bending radius of the cable is 45 mm is 40 mm. Sheath O.D. Sheath O.D. Lead Printed mark Printed mark Lead ø6.8 ø6.3 (Both sides) wire (Both sides) wire Lead wire no. Polarity Lead wire no. Polarity color color Color Type Color Type SOL.a o 1 SOL.a (-) Red (-) (+)Red SOL.b o 2 Orange Station 1 Orange SOL.b (-) (+)Rlack (-)(+)Black SOL.a o 3 SOL.a (-) (+) Red 3 Red (-) (+)Liaht SOL.b SOL.b o 4 Station 2 (-) (+) gray (-) (+) Black SOL.a o 5 SOL.a (+) Red (-)(+)Red SOL.b 6 SOL.b o White Station 3 White (-)(+) 6 (-) (+) Black Black mSOL.a o 7 SOL.a o Red Red (-)(+) 7 (-) (+) Yellow SOL.b o Station 4 mSOL.b 8 Yellow Station 4 (-) (+) Black COM. o 9 SOL.a (+) Pink Red 9 (+) Red (-)(-) SOL.b 0 10 Station 5 Pink Black (-)(+)Positive Negative SOL.a o 11 common common Red (-) (+)SOL.b o 12 Orange Station 6 Black (-) (+) SOL.a o 13 (+) Red Station 7 SOL.b 0 14 gray Black (-) (+)SOL.a o 15 Red (-) (+) ......SOL.b ∘ 16 White Station 8 Black (-) (+) COM. 0 17 Yellow Red (+) (-)Positive Negative common common \*: For negative common specification, a valve for negative common or a valve without polarity should be used.

SY

SJ

S0700

S0700



# Plug-in Connector Connecting Base

**Circular Connector** 


# SY3000/5000/7000 Series

C C C ROHS



# **How to Order Manifold**

Refer to pages 331 (SY5000) and 332 (SY7000) for dimensions of Type 11/Bottom ported type.

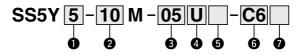

# Series

3	SY3000
5	SY5000
7	SY7000

# **A** Type

do Oide medeal	
10 Side ported	
11 Bottom ported*1	

\*1: The SY5000 manifold base is used for the bottom ported of the SY3000. When ordering, refer to "Plug-in Mixed Mounting Type Manifold" (from page 336).

# 3 Valve stations

Symbol	Stations	Note
02	2 stations	
:	- :	Double wiring*1
12	12 stations	
02	2 stations	0
:	- :	Specified layout*2 (Available up to 24 solenoids)
24	24 stations	(Available up to 24 soleriolus)

- \*1: Double wiring: 2-position single, double, 3-position and 4-position valves can be used on all manifold stations. Use of a 2-position single solenoid will result in an unused control signal. If this is not desired, order with a specified layout.
- \*2: Specified layout: Indicate the wiring specifications on the manifold specification sheet. (Note that 2-position double, 3-position and 4-position valves cannot be used where single wiring has been specified.)
- \*: This also includes the number of blanking plate assembly.

# 4 P, E port entry

U	U side (2 to 10 stations)
D	D side (2 to 10 stations)
В	Both sides (2 to 24 stations)

# 5 SUP/EXH block assembly


Nil	Internal pilot		
S	Internal pilot, Built-in silencer		
R	External pilot		

- \*: 3/5(E) port is plugged for the built-in silencer
- \*: When the built-in silencer type is used, keep the exhaust port from coming in direct contact with water or other liquids.

Refer to the page on the right for 6.



# **How to Order Manifold Assembly**

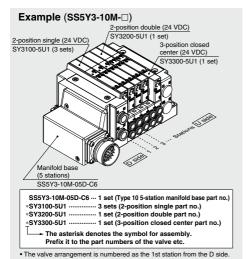

. Under the manifold part number, state the valves to be mounted in order from the 1st station as shown in the figure above. If the arrangement becomes complicated, specify on a manifold specification sheet.

\*: When mixing top ported configurations, select from page 265 In this case, use caution as there is also output on the A and B port on base side. Specify on a manifold specification sheet if plugs are required on the A and B port

# Mounting and Option

Symbol	Mounting	Option	
Symbol		Name plate	Station number
Nil	Direct	_	_
AA	mounting	•	•
BA	mounting	•	_
D□	DIM	_	_
A□	DIN rail mounting	•	•
B□	mounting	•	_

- \*: Enter the number of stations inside □ when it is larger than the number of valve stations. (Refer to "DIN Rail Option" below.)
- \*: Only direct mounting is available for Type 11 (Bottom ported).
- \*: Refer to page 394 for the fixation of DIN rail mounting type manifold.

DIN Hall Option					
Nil	Direct mounting				
0	Without DIN rail (with bracket)				
3	For 3 stations	Specify a longer rail than the total length of specified stations.			
- ;	:				
24	For 24 stations	total length of specified stations.			



### Plus-in Connector Connecting Base SY3000/5000/7000 Series

SJ

S0700

S0700

$oldsymbol{\omega}$	A, B	port size	(Metric/One-touch	i fitting)
			Type 10/Side ported	Time 11/Dellar

Symbol	A, B port		Type 1	10/Side	ported	Type 11/Bo	ttom ported											
Symbol			SY3000	SY5000	SY7000	SY5000	SY7000											
C2		ø2		•	I	I	I	_										
C3			ø3.2	•	_	_	_	_										
C4	+		ø4	•	•	_	•	_										
C6	Straight		ø6	•	•	•	•	•										
C8	Stra		ø8	_	•	•	•	•	2 100									
C10	•,		ø10	_	_	•	_	•	S STEEL									
C12			ø12	_	ı	•	1	•	<b>*</b>									
CM*1		Straig	ht port, mixed sizes	•	•	•	•	•										
L4			ø4	•	•	_	_	_										
L6		힏	ø6	•	•	•	_	_										
L8		Upward	ø8	_	•	•	_	_										
L10			⊃ ø10 — -	_	•	_	_											
L12	01		ø12	_	_	•	_	_	G C Jaller									
B4	Elbow*2	_	ø4	•	•	_	_	_										
B6	Elbo	Downward	lar.	lar.	lar.	arc	/aro	/ard	/ard	aro	ard	ø6	•	•	•	_	_	
B8			ø8	_	•	•	_	_										
B10			8	ø10	_	_	•	_	_									
B12			ø12	_	_	•	_	_										
LM*1	Elbow port, mixed sizes (Including upward and downward piping)		•	•	•	ı	ı											
P, E port size (One-touch fittings)			ø8	ø10	ø12	ø10	ø12											


A, B	р	ort	size (Inc	h/One	-toucl	n fittin	g)				
0				Type 10/Side ported		Type 11/Bottom ported					
Symbol	A, B port		SY3000	SY5000	SY7000	SY5000	SY7000				
N1			ø1/8"	•	_	_	_	_			
N3			ø5/32"	•	•	_	•	_			
N7	jt j		ø1/4"	•	•	•	•	•			
N9	Straight		ø5/16"	_	•	•	•	•			
N11	0,		ø3/8"	_	_	•	_	•	A SERVICE		
CM*1		Straig	ht port, mixed sizes	•	•	•	•	•			
LN3			ø5/32"	•	_	_	_	_			
LN7		ard	ø1/4"	•	•	_	_	_			
LN9		Jpward	ø5/16"	_	•	_	_	_			
LN11			<u>.</u> .	-	ø3/8"	_	_	•	_	_	G G G G G G G G G G G G G G G G G G G
BN3	∃lbow*2	Downward	ø5/32"	•	_	_	_	_			
BN7	읦		wa	wa	ø1/4"	•	•	_	_	_	
BN9	"		ø5/16"		•						
BN11	1	ă	ø3/8"	_	_	•	_	_			
LM*1		(Incl	v port, mixed sizes uding upward and wnward piping)	•	•	•	_	_			
	P, E port size (One-touch fittings)			ø5/16"	ø3/8"	ø1/2"	ø3/8"	ø1/2"			

<sup>\*1:</sup> Indicate the sizes on the manifold specification sheet in the case of "CM", "LM". The direction of P, E port fittings is the same as for A, B port. If selecting "LM", indicate it on the manifold specification sheet for the P, E port fitting

<sup>\*2:</sup> To avoid interference with the body or piping, select downward elbow port when mounting the optional spacer assembly (pages 373 to 375).

#### How to Order Valves (With mounting screw)

Refer to page 136 for valve specifications.

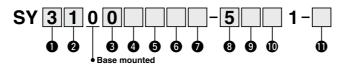

#### Series

3	SY3000
5	SY5000
7	SY7000

Type of actuation

1	2-position	Single		
2		Double		
3		Closed center		
4	3-position	Exhaust center		
5		Pressure center		
<b>A</b> *1	4 position	N.C./N.C.		
B*1	4-position dual 3-port	N.O./N.O.		
C*1	addi 5-port	N.C./N.O.		
•				

\*1: Only rubber seal type is available for the 4-position dual 3-port valve.

Seal type

0	Rubber seal
1	Metal seal

A Pilot type

Nil	Internal pilot
R	External pilot

#### Back pressure check valve (Built-in valve type)

Nil	None
Н	Built-in

- \*: Only rubber seal type. Manifold installed type is available if the back pressure check valve is required for a valve with metal seal. Refer to page 379 for Ordering Example. However, it is not recommended to use the built-in valve type and the manifold installed type at the same time because it will reduce the flow.
- \*: The built-in valve type back pressure check valve is not available for the 3-position type and the SY7000.

Pilot valve option

• :et raire epiiei.						
Nil	Standard (0.7 MPa)					
В	Quick response type (0.7 MPa)					
<b>K</b> *1	High pressure type (1.0 MPa)					

\*1: Only metal seal type is available for the high pressure type.

Coil type

Nil	Standard
Т	With power saving circuit (Continuous duty type)

- \*: Be sure to select the power saving circuit type when the valve is continuously energized for long periods of time.
- \*: Be careful of the energizing time when the power saving circuit is selected. Refer to page 391 for details.

8 Rated voltage


5	24 VDC
6	12 VDC

9 Light/surge voltage suppressor and common specification

Symbol	With light	Surge voltage suppressor	Common specification	
Nil	_	_		
R			Non-polar	
U	•			
S	_	•	Positive	
Z	•		common	
NS	_		Negative	
NZ	•		common	

\*: Only "Z" and "NZ" types are available for with the power saving circuit.

Manual override

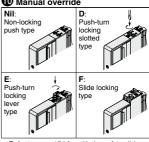

\*: Refer to page 154 for with the safety slide locking manual override.

Type of mounting screw

	<b>J</b>
Nil	Round head combination screw
В	Hexagon socket head cap screw
K	Round head combination screw (Falling-out-prevention type)
Н	Hexagon socket head cap screw (Falling-out-prevention type)

- \*: For "K" and "H", the valve body cover has a drop prevention construction to stop the mounting screws from falling out when the valve is removed for maintenance etc.
- \*: When ordering a valve individually, the base gasket is not included. Since the base gasket is attached to the manifold, please order the base gasket separately if it is needed for maintenance service.
  - Refer to page 367 for part numbers of the base gasket and mounting screw.
- \*: "B" and "H" cannot be selected for the individual SUP/EXH spacer assembly, interface regulator or double check spacer assembly with residual pressure release valve

#### Plus-in Connector Connecting Base SY3000/5000/7000 Series

Dimensions: SY3000 Series

Plug-in
Connector Connecting Base

Type 10/Side Ported
Circular Connector


SJ

SY

S0700

S0700

SS5Y3-10M-<u>Stations</u> D C23, N1 (D) B C6, N7

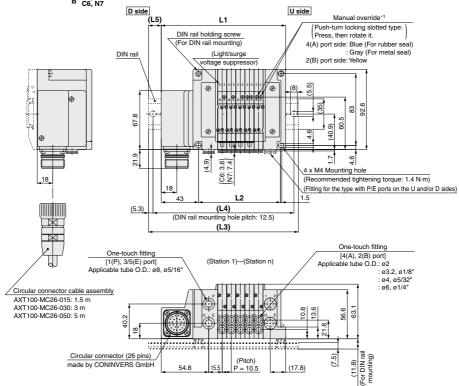


- \*1: Refer to page 328 for dimensions of external pilot, silencer, elbow fittings and slide locking manual override.
- \*: These figures show the "SS5Y3-10M-05D-C6".
- \*: Refer to page 333 for dimensions of A or B port top-ported type.

n: Stations	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
L1	112	122.5	133	143.5	154	164.5	175	185.5	196	206.5	217	227.5	238	248.5	259	269.5	280	290.5	301	311.5	322	332.5	343
L2	63	73.5	84	94.5	105	115.5	126	136.5	147	157.5	168	178.5	189	199.5	210	220.5	231	241.5	252	262.5	273	283.5	294
L3	135.5	148	160.5	173	185.5	198	210.5	210.5	223	235.5	248	260.5	273	273	285.5	298	310.5	323	335.5	335.5	348	360.5	373
L4	125	137.5	150	162.5	175	187.5	200	200	212.5	225	237.5	250	262.5	262.5	275	287.5	300	312.5	325	325	337.5	350	362.5
L5	12	13	14	15	16	17	18	12.5	13.5	14.5	15.5	16.5	17.5	12.5	13.5	14.5	15.5	16.5	17.5	12	13	14	15

Dimensions: SY5000 Series

Plug-in
Connector Connecting Base

Type 10/Side Ported
Circular Connector

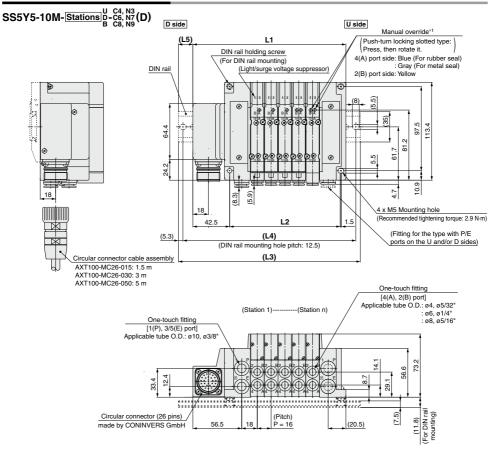

- \*1: Refer to page 329 for dimensions of external pilot, silencer, elbow fittings and slide locking manual override.
- \*: These figures show the "SS5Y5-10M-05D-C8".
- \*: Refer to page 334 for dimensions of A or B port top-ported type.


n: Stations	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
L1	129	145	161	177	193	209	225	241	257	273	289	305	321	337	353	369	385	401	417	433	449	465	481
L2	80	96	112	128	144	160	176	192	208	224	240	256	272	288	304	320	336	352	368	384	400	416	432
L3	160.5	173	185.5	210.5	223	235.5	260.5	273	285.5	298	323	335.5	348	360.5	385.5	398	410.5	435.5	448	460.5	473	498	510.5
L4	150	162.5	175	200	212.5	225	250	262.5	275	287.5	312.5	325	337.5	350	375	387.5	400	425	437.5	450	462.5	487.5	500
L5	16	14	12.5	17	15	13.5	18	16	14.5	12.5	17	15.5	13.5	12	16.5	14.5	13	17.5	15.5	14	12	16.5	15
								•			•	•	•	•	•				•	•			

#### Plusin Connector Connecting Base SY3000/5000/7000 Series

Dimensions: SY7000 Series

Plug-in Type 10/Side Ported Connector Connecting Base

SS5Y7-10M-<u>Stations</u> D-C6, N7 C8, N9 D-C10, N11 (D)

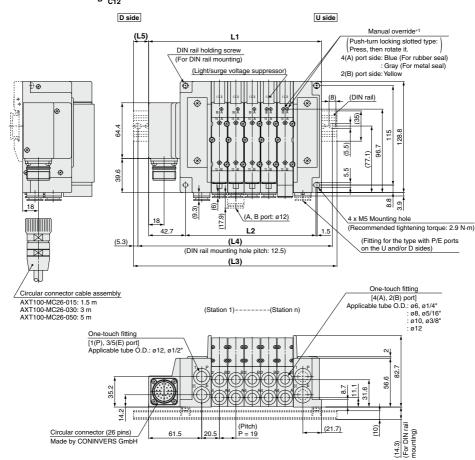

- \*1: Refer to page 330 for dimensions of external pilot, silencer, elbow fittings and slide locking manual override.
- \*: These figures show the "SS5Y7-10M-05D-C10".
- \*: Refer to page 335 for dimensions of A or B port top-ported type.

n: Stations	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
L1	143.2	162.2	181.2	200.2	219.2	238.2	257.2	276.2	295.2	314.2	333.2	352.2	371.2	390.2	409.2	428.2	447.2	466.2	485.2	504.2	523.2	542.2	561.2
L2	94	113	132	151	170	189	208	227	246	265	284	303	322	341	360	379	398	417	436	455	474	493	512
L3	173	185.5	210.5	235.5	248	273	285.5	310.5	323	348	360.5	385.5	398	423	435.5	460.5	473	498	510.5	535.5	548	573	585.5
L4	162.5	175	200	225	237.5	262.5	275	300	312.5	337.5	350	375	387.5	412.5	425	450	462.5	487.5	500	525	537.5	562.5	575
L5	15	11.5	14.5	17.5	14.5	17.5	14	17	14	17	13.5	16.5	13.5	16.5	13	16	13	16	12.5	15.5	12.5	15.5	12



SJ

Circular Connector

SY

S0700

S0700

## **Plug-in** Connector Connecting Base

Circular Connector

Type 12 Top Ported

# SY3000/5000/7000 Series

( E c RoHS

#### **How to Order Manifold**



Refer to pages 333 to 335 for dimensions of Type 12/Top ported type.

🛈 Se	ries
3	

3	SY3000
5	SY5000
7	SY7000

#### 2 Valve stations

_	vaive	Juliona
Symbol	Stations	Note
02	2 stations	
:	- :	Double wiring*1
12	12 stations	
02	2 stations	Considered lavorates
:	- :	Specified layout*2 (Available up to 24 solenoids)
24	24 stations	(Available up to 24 soleriolus)

- \*1: Double wiring: 2-position single, double, 3-position and 4-position valves can be used on all manifold stations. Use of a 2-position single solenoid will result in an unused control signal. If this is not desired, order with a specified layout.
- \*2: Specified layout: Indicate the wiring specifications on the manifold specification sheet. (Note that 2-position double, 3-position and 4-position valves cannot be used where single wiring has been specified.)
- This also includes the number of blanking plate assembly.

#### 3 P, E port entry

U*1	U side (2 to 10 stations)
<b>D</b> *1	D side (2 to 10 stations)
В	Both sides (2 to 24 stations)


\*1: For type "S", supply/exhaust block assembly with built-in silencer, choose U or D for P port entry.

#### 4 SUP/EXH block assembly

Nil	Internal pilot
S	Internal pilot, Built-in silencer
R	External pilot

- e: For built-in silencer type, P and E ports are available on U and D sides. 3/5(E) port is plugged. The silencer exhaust port is located on the opposite side of P, E port entry. (Example: When the P, E port entry is D side, the silencer exhaust port is U side.)
- \*: When the built-in silencer type is used, keep the exhaust port from coming in direct contact with water or other liquids.

#### **How to Order Manifold Assembly**

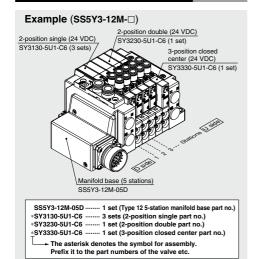


 The valve arrangement is numbered as the 1st station from the D side.
 Under the manifold part number, state the valves to be mounted in order from the 1st station as shown in the figure above. If the arrangement becomes complicated, specify on a manifold specification sheet.

#### **5** P, E port size (One-touch fittings)

<u> </u>	_ po. t o.zo	(One tout	iii iiiiiigo,
Symbol	SY3000	SY5000	SY7000
Nil	ø8	ø10	ø12
N	ø5/16"	ø3/8"	ø1/2"

\*: For N, sizes are in inches

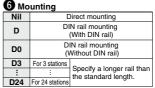


\*: Refer to page 394 for the fixation of DIN rail mounting type manifold.

#### Plug-in Connector Connecting Base SY3000/5000/7000 Series

#### How to Order Valves (With mounting screw)

Refer to page 136 for valve specifications.

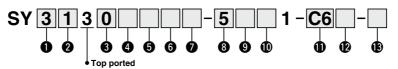

#### 1 Series

3	SY3000
5	SY5000
7	SY7000

#### 2 Type of actuation

	2-position	Single						
2	z-position	Double						
3		Closed center						
4	3-position	Exhaust center						
5		Pressure center						
<b>A</b> *1	4-position	N.C./N.C.						
<b>B</b> *1	dual 3-port	N.O./N.O.						
C*1	dual o port	N.C./N.O.						

\*1: Only rubber seal is available for the 4-position dual 3-port valve.

#### Seal type

0	Rubber seal	
1	Metal seal	

#### Pilot type

Nil	Internal pilot
R	External pilot

#### Back pressure check valve (Built-in valve type)

	int in valve type,
Nil	None
н	Ruilt-in

- \*: Only rubber seal type. Manifold installed type is available if the back pressure check valve is required for a valve with metal seal. Refer to page 379 for Ordering Example. However, it is not recommended to use the built-in valve type and the manifold installed type at
- the same time because it will reduce the flow. \*: The built-in valve type back pressure check valve is not available for the 3-position type and the SY7000.

#### 6 Pilot valve option

	o i not vaive option			
Nil Standard (0.7 MPa)		Standard (0.7 MPa)		
	В	Quick response type (0.7 MPa)		
	<b>K</b> *1	High pressure type (1.0 MPa)		

\*1: Only metal seal type is available for the high pressure type.

#### Coil type

I	Nil	Standard	
I	Т	With power saving circuit (Continuous duty type)	
1	D		

- Be sure to select the power saving circui type when the valve is continuously energized for long periods of time.
- \*: Be careful of the energizing time when the power saving circuit is selected. Refer to page 391 for details.


#### Rated voltage

5	24 VDC
6	12 VDC

#### Light/surge voltage suppressor and common specification

Symbol	With light	Surge voltage suppressor	Common specification
Nil	_	_	
R			Non-polar
U	•		
S	_	1 _	Positive
Z	•	_	common
NS	_		Negative
NZ	•		common

\*: Only "Z" and "NZ" types are available for with the power saving circuit.

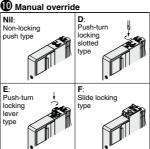

\*: Refer to page 154 for with the safety slide locking manual override.

#### A, B port size

#### Thread piping

	~~ b.ba	
Symbol	Port size	Applicable series
M5	M5 x 0.8	SY3000
01	1/8	SY5000
02	1/4	SY7000

#### One-touch fitting (Metric)

Symbol	A, B port	SY3000	SY5000	SY7000
C2	ø2	•	_	_
C3 C4 C6	ø3.2	•	_	_
C4	ø4	•	•	_
	ø6	•	•	•
C8	ø8	_	•	•
C10	ø10	_	_	•
C12	ø12	_	_	•

#### One-touch fitting (Inch)

Symbol	A, B port	SY3000	SY5000	SY7000
N1	ø1/8"	•	_	_
N3	ø5/32"	•	•	_
N7	ø1/4"	•	•	•
N9	ø5/16"	_	•	•
N11	ø3/8"	_	_	•

#### Thread type

Nil	Rc
F	G
N	NPT
T	NPTF

\*: Only Nil is available for M5.

#### Type of mounting screw

Type or mounting cores	
Nil	Round head combination screw
В	Hexagon socket head cap screw
K	Round head combination screw (Falling-out-prevention type)
Н	Hexagon socket head cap screw (Falling-out-prevention type)

- \*: For "K" and "H", the valve body cover has a drop prevention construction to stop the mounting screws from falling out when the valve is removed for maintenance etc.
- \*: When ordering a valve individually, the base gasket is not included. Since the base gasket is attached to the manifold, please order the base gasket separately if it is needed for maintenance service

Refer to page 367 for part numbers of the base gasket and mounting screw.

\*: "B" and "H" cannot be selected for the individual SUP/EXH spacer assembly or interface regulator.



SJ

S0700

S0700

#### **Electrical Wiring Specifications**



If alignment is not specified, the internal wiring is double wiring (connected to SOL. a and SOL. b) regardless of number of stations, valve and option types.

#### Terminal no. Polarity SOL.a 1 (-) (+)Station 1 SOL.b 2 (-)(+) 3 (-) (+)Station 2 SOL.b (-) (+)SOL.a 5 (-)(+)Station 3 SOL.b 6 (-)SOL.a (-)(+)SOL.b Station 4 (-)(+) SOL.a 9 (-)(+)SOL.b 10 Station 5 (-) (+) SOL.a o 11 (-)(+) Station 6 SOL.b o 12 (-)(+) SOL.a o 13 (-)(+)SOL.b 14 Station 7 (+) SOL.a 0 15 (-)(+) SOL.b o 16 Station 8 (-) (+)SOL.a o 17 (-)(+)SOL.b 18 Station 9 (-) (+) SOL.a 0 19 (-) (+) SOL.b 20 Station 10 (-) (+)SOL.a 0 21 (-)(+) SOL.b 22 Station 11 (-)(+)SOL.a o 23 (-) (+) SOL.b o 24 Station 12 (-)(+) COM. ○ 25 (-) COM. 26 (+) (-)


\*: When using a valve with no polarity, either positive common or negative common can be used.

#### **Specified Layout**

Positive Negative common common

Mixed wiring of single and double wiring can be specified on the manifold specification sheet. The maximum number of stations is determined according to the number of solenoids. The total number of solenoids should be 24 or less. 1 solenoid is required for 2-position single, and 2 solenoids for 2-position double, 3-position and 4-position.

#### Cable Assembly

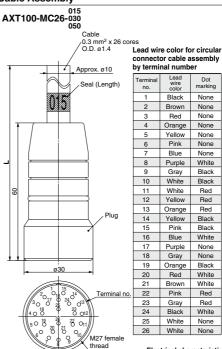

#### Circular connector cable assembly

Circular connector cable assembly				
Cable	Assembly part no.			
length (L)	26 pins			
1.5 m	AXT100-MC26-015			
3 m	AXT100-MC26-030			
E m	AVT100 MC06 0F0			

- \*: Cannot be used for movable wiring.
- \*: Lengths other than the above is also available. Please contact SMC for details.

Item	Property
Conductor resistance Ω/km, 20°C	65 or less
Voltage limit V, 1 minute, AC	1000
Insulation resistance MΩ/km, 20°C	5 or more

**Electrical characteristics** 

\*: The minimum bending radius of the circular connector cable is 20 mm



SJ

SY SY

\$0700

S0700

Type 10 Type 11

**Bottom Ported** 

## Plug-in Connector Connecting Base

EX500 Gateway Decentralized System 2 (128 Points)


# SY3000/5000/7000 Series

( E c RoHS



#### **How to Order Manifold**

Refer to pages 331 (SY5000) and 332 (SY7000) for dimensions of Type 11/Bottom ported type.

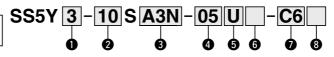

#### Series

3	SY3000
5	SY5000
7	SY7000

\*: For mixed mounting, refer to page 336 and later.

<b>②</b> Ty	oe e
10	Side ported
11	Bottom ported*1

- \*1: The SY5000 manifold base is used for the bottom ported of the SY3000. When ordering, refer to "Plug-in Mixed Mounting Type Manifold" (from page 336)
- \*: When mixing top ported configurations, select from page 281. In this case, use caution as there is also output on the A and B port on base side. Specify on a manifold specification sheet if plugs are required on the A and B port on base side.

#### SI Unit (Number of outputs, Output polarity, Max. number of valve stations)

0	Without SI Unit
	32 outputs*1*4, 2 to 16 stations (24 stations*3), Negative common*2


- \*1: 16 outputs can be set by switching the built-in setting switch.
- \*2: Ensure a match with the common specification of the valve
- \*3: ( ): Maximum number of stations for mixed single and double wiring.
- \*4: When using the SI Unit with 32 outputs, use the GW Unit compatible with the EX500 Gateway Decentralized System 2 (128 points).

#### 4 Valve stations

		Stations	Note
	02	2 stations	
	:	:	Double wiring*1
	16	16 stations	
	02	2 stations	Considered lawayets?
Г	:		Specified layout*2 (Available up to 32 solenoids)
	24	24 stations	(Available up to 32 soletiolus)

- \*1: Double wiring: 2-position single, double, 3-position and 4-position valves can be used on all manifold stations. Use of a 2-position single solenoid will result in an unused control signal. If this is not desired, order with a specified layout.
- \*2: Specified layout: Indicate the wiring specifications on the manifold specification sheet. (Note that 2-position double, 3-position and 4-position valves cannot be used where single wiring has been specified.)
- \*: When the product without the SI Unit (S0) is selected, note the maximum number of solenoids of the SI Unit that will be mounted. If the layout is specified, indicate it on the manifold specification sheet.
- \*: This also includes the number of blanking plate assembly.

#### How to Order Manifold Assembly

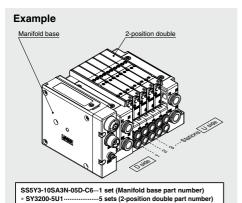

The asterisk denotes the symbol for assembly.

. The valve arrangement is numbered as the 1st station from the D side.

· Under the manifold base part number, state the valves to be mounted in

order from the 1st station as shown in the figure above. If the arrangement

Prefix it to the part numbers of the valve etc

becomes complicated, specify on the manifold specification sheet

P. E port entry

	_ p =
U	U side (2 to 10 stations)
D	D side (2 to 10 stations)
В	Both sides (2 to 24 stations)

#### 6 SUP/EXH block assembly

Nil	Internal pilot
S	Internal pilot, Built-in silencer*1*2
R	External pilot

- \*1: 3/5(E) port is plugged for the built-in silencer type.
- \*2: When built-in silencer type is used, keep the exhaust port from coming in direct contact with water or other liquids.

\*: A separate GW Unit and communication cable are required

For details about the EX500 Gateway-type Serial Transmission System, refer to pages 845 to 876 and the Operation Manual. For details about part numbers of SI Units to be mounted, refer to page 358. Please download the Operation Manual via SMC website, http://www.smcworld.com

## Connector Connecting Base SY3000/5000/7000 Series

SJ

A, B port size (Inch/One-touch fitting)

• • • • •

• • • • •

•

•

•

ø5/16" | ø3/8" | ø1/2" | ø3/8" | ø1/2"

• • • •

•

•

A, B port

ø1/8'

ø5/32"

ø1/4"

ø5/16"

ø3/8"

Mixed sizes

ø5/32'

ø1/4"

ø5/16"

ø3/8"

ø5/32"

ø1/4"

ø5/16"

ø3/8"

Mixed sizes
P, E port\*3

N1

N3

N7

N9

N11

CM\*1

LN3

LN7

LN9

LN11

BN3

BN7

BN9

BN11

LM\*

Elbow\*2

Downward

Type 10/Side Ported Type 11/Bottom Ported

SY3000 SY5000 SY7000 SY5000 SY7000

•

•

SY

S0700

\$0700

Ø.	A, B port size (Metric/One-touch fitting)										
				Type 1	0/Side	Ported	Type 11/Bo	ttom Ported			
		Α,	B port	SY3000	SY5000	SY7000	SY5000	SY7000			
C2			ø2	•	_	_	_	_	_		
СЗ			ø3.2	•	_	_	_	_			
C4	_		ø4	•	•	_	•	_			
C6	Ē		ø6	•	•	•	•	•			
C8	Straight		ø8	_	•	•	•	•	2410		
C10	] "		ø10	_	_	•	_	•	O STEEL		
C12			ø12	_	_	•	_	•			
CM*1		Mi	xed sizes	•	•	•	•	•			
L4			ø4	•	•	_	_	_			
L6		힏	ø6	•	•	•	_	_			
L8		Upward	ø8	_	•	•	_				
L10			5	ø10	_	_	•	_	_		
L12	N.		ø12	_	_	•	_	_	G Jaller		
B4	Elbow*2	_	ø4	•	•	_	_	_			
B6	ı e	a E	var.	/arc	ø6	•	•	•	_	_	
B8	[	Downward	ø8	_	•	•	_	_			
B10		8	ø10	_	_	•	_	_			
B12	2	Ш	ø12	_	_	•	_	_	The state of the s		
LM*1	М		xed sizes	•	•	•	_	_			
	P, E port*3		ø8	ø10	ø12	ø10	ø12				

\*1: Indicate the sizes on the manifold specification sheet.

\*2: To avoid interference with the body or piping, select downward elbow port when mounting the optional spacer assembly (pages 373 to 375).

\*3: The direction of P, E port fittings is the same as for A, B port. If selecting "LM", indicate it on the manifold specification sheet for the P, E port fitting direction.

#### **8** Mounting and Option

	Mauntina	Option		
	Mounting	Name plate	Station number	
Nil	D: .	_	_	
AA	Direct mounting	•	•	
BA	mounting	•		
<b>D</b> □*1	DIN rail mounting	_	_	
<b>A</b> □*1		•	•	
<b>B</b> □*1	mounting	•	_	

- \*1: Refer to "DIN Rail Option" below.
- \*: Select the direct mounting type for Type 11 (Bottom ported).

#### **DIN Rail Option**


Dire rian option				
Nil	With DIN bracket, DIN rail with standard length			
0	With DIN bracket, without DIN rail			
<b>3</b> *1	With DIN bracket, DIN rail for 3 stations			
	:			
24*1	With DIN bracket, DIN rail for 24 stations			

- \*1: Specify a longer rail than the length of valve stations.
- If the DIN rail must be mounted without an SI Unit, select "D0" and order the DIN rail separately. Refer to L3 of the dimensions for the DIN rail length. Refer to page 372 for the DIN rail part number.
- \*: Refer to page 394 for the fixation of DIN rail mounting type manifold.



#### How to Order Valves (With mounting screw)

Refer to page 136 for valve specifications.

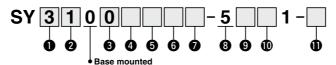

#### 1 Series

3	SY3000
5	SY5000
7	SY7000

2 Type of actuation

• ',		•								
1	2-position	Single								
2	2-position	Double								
3		Closed center								
4	3-position	Exhaust center								
5		Pressure center								
<b>A</b> *1	4	N.C./N.C.								
B*1	4-position dual 3-port valve	N.O./N.O.								
C*1	3-port valve	N.C./N.O.								
40.										

\*1: Select the rubber seal type for the 4-position dual 3-port valve.

#### 6 Pilot valve option

Nil	Standard (0.7 MPa)
В	Quick response type (0.7 MPa)
<b>K</b> *1	High pressure type (1.0 MPa)


\*1: Select the metal seal type for high pressure type.

#### Coil type

	, , , , , , , , , , , , , , , , ,
Nil	Standard
Т	With power saving circuit (Continuous duty type)*1*2

- \*1: Be sure to select the power saving circuit type when the valve is continuously energized for long periods of time.
- \*2: Be careful of the energizing time when the power saving circuit is selected. For details, refer to page 391.

#### Manual override

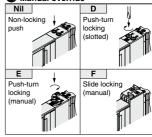

\*: Refer to page 154 for with the safety slide locking manual override.

#### 3 Seal type

0	Rubber seal
1	Metal seal

#### 4 Pilot type

Nil	Internal pilot
R	External pilot

#### Back pressure check valve

Nil	None
H*1	Built-in

- \*1: Select the rubber seal type when the back pressure check valve is built-in. Manifold installed type is available if the back pressure check valve is required for a valve with metal seal. For ordering example, refer to page 379. However, it is not recommended to use the built-in valve type and the manifold installed type at the same time because it will reduce the flow.
- \*: Select "Nil" for 3-position type and the SY7000.

#### 8 Rated voltage

5	24 VDC

#### 9 Light/surge voltage suppressor and common specification

	With light	Surge voltage suppressor	Common specification
R		_	Non-polar
NS	ı	•	Negative
NZ	•		common

\*: Select "NZ" for with the power saving circuit.

#### Type of mounting screw

Nil	Round head combination screw								
В	Hexagon socket head cap screw								
К	Round head combination screw (Falling-out-prevention type)*1								
н	Hexagon socket head cap screw (Falling-out-prevention type)*1								

- \*1: For "K" and "H", the valve body cover has a drop prevention construction to stop the mounting screws from falling out when the valve is removed for maintenance etc.
- When ordering a valve individually, the base gasket is not included. Since the base gasket is attached to the manifold, please order the base gasket separately if it is needed for maintenance service.

Refer to page 367 for part numbers of the base gasket and mounting screw.


\*: Select "Nil" or "K" for the optional individual SUP/EXH spacer assembly, interface regulator or double check spacer assembly with residual pressure release valve.


## Plus-in Connector Connecting Base SY3000/5000/7000 Series

Dimensions: SY3000 Series

Plug-in Connector Connecting Base Type 10/Side Ported EX500 (128 Points)

SS5Y3-10SA3N-Stations D-C2, N1 (D)

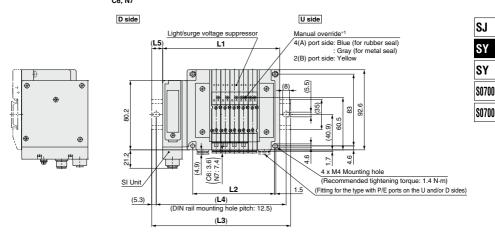

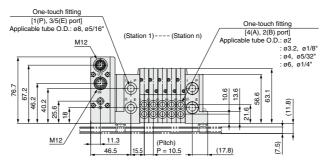

- \*1: Refer to page 328 for dimensions of external pilot, silencer, elbow fittings and slide locking manual override.
- \*: These figures show the "SS5Y3-10SA3N-05D-C6".
- \*: Refer to page 333 for dimensions of A or B port top-ported type.

L: Dime	L: Dimensions n: Station													n: Stations	
_ n	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
L1	103.7	114.2	124.7	135.2	145.7	156.2	166.7	177.2	187.7	198.2	208.7	219.2	229.7	240.2	250.7
L2	63	73.5	84	94.5	105	115.5	126	136.5	147	157.5	168	178.5	189	199.5	210
L3	135.5	148	148	160.5	173	185.5	198	210.5	223	223	235.5	248	260.5	273	285.5
L4	125	137.5	137.5	150	162.5	175	187.5	200	212.5	212.5	225	237.5	250	262.5	275
L5	16	17	11.5	12.5	13.5	14.5	15.5	16.5	17.5	12.5	13.5	14.5	15.5	16.5	17.5


L	n 17 18		19	20	21	22	23	24
L1	261.2	271.7	282.2	292.7	303.2	313.7	324.2	334.7
L2	220.5	231	241.5	252	262.5	273	283.5	294
L3	285.5	298	310.5	323	335.5	348	348	360.5
L4	275	287.5	300	312.5	325	337.5	337.5	350
L5	12	13	14	15	16	17	12	13


Dimensions: SY5000 Series

Plug-in
Connector Connecting Base

Type 10/Side Ported EX500 (128 Points)

SS5Y5-10SA3N-Stations D-C6, N7 (D)

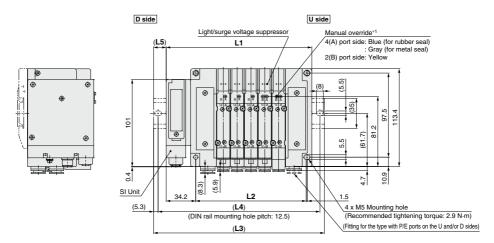

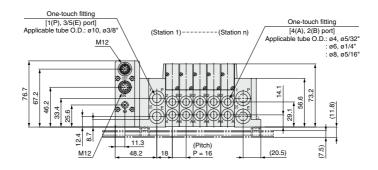

- \*1: Refer to page 329 for dimensions of external pilot, silencer, elbow fittings and slide locking manual override.
- \*: These figures show the "SS5Y5-10SA3N-05D-C8".
- \*: Refer to page 334 for dimensions of A or B port top-ported type.

L: Dimensions n: Stations												: Stations			
L	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
L1	120.7	136.7	152.7	168.7	184.7	200.7	216.7	232.7	248.7	264.7	280.7	296.7	312.7	328.7	344.7
L2	80	96	112	128	144	160	176	192	208	224	240	256	272	288	304
L3	148	160.5	185.5	198	210.5	235.5	248	260.5	273	298	310.5	323	348	360.5	373
L4	137.5	150	175	187.5	200	225	237.5	250	262.5	287.5	300	312.5	337.5	350	362.5
L5	13.5	12	16.5	14.5	13	17.5	15.5	14	12	16.5	15	13	17.5	16	14

L	17	18	19	20	21	22	23	24
L1	360.7	376.7	392.7	408.7	424.7	440.7	456.7	472.7
L2	320	336	352	368	384	400	416	432
L3	385.5	410.5	423	435.5	448	473	485.5	498
L4	375	400	412.5	425	437.5	462.5	475	487.5
L5	12.5	17	15	13.5	11.5	16	14.5	12.5


#### Plus-in Connector Connecting Base SY3000/5000/7000 Series


Dimensions: SY7000 Series

Plug-in
Connector Connecting Base

Type 10/Side Ported EX500 (128 Points)

SS5Y7-10SA3N-<u>Stations</u> D C6, N7 C8, N9 C10, N11 (D)

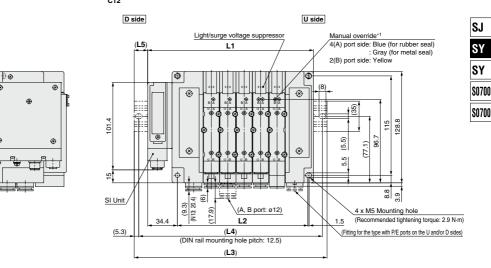

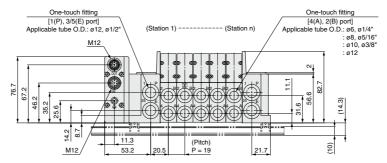

- \*1: Refer to page 330 for dimensions of external pilot, silencer, elbow fittings and slide locking manual override.
- \*: These figures show the "SS5Y7-10SA3N-05D-C10".
- \*: Refer to page 335 for dimensions of A or B port top-ported type.

L: Dim	L: Dimensions n: Stations														
L	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
L1	134.9	153.9	172.9	191.9	210.9	229.9	248.9	267.9	286.9	305.9	324.9	343.9	362.9	381.9	400.9
L2	94	113	132	151	170	189	208	227	246	265	284	303	322	341	360
L3	160.5	185.5	198	223	235.5	260.5	273	298	310.5	335.5	348	373	398	410.5	435.5
L4	150	175	187.5	212.5	225	250	262.5	287.5	300	325	337.5	362.5	387.5	400	425
L5	13	16	12.5	15.5	12.5	15.5	12	15	12	15	11.5	14.5	17.5	14.5	17.5

_ n	17	18	19	20	21	22	23	24
L1	419.9	438.9	457.9	476.9	495.9	514.9	533.9	552.9
L2	379	398	417	436	455	474	493	512
L3	448	473	485.5	510.5	523	548	560.5	585.5
L4	437.5	462.5	475	500	512.5	537.5	550	575
L5	14	17	14	17	13.5	16.5	13.5	16.5

Type 10 **Type 11 Bottom Ported** 

## Plug-in Connector Connecting Base

EX500 Gateway Decentralized System (64 Points)

# SY3000/5000/7000 Series

C C CRING ROHS



#### **How to Order Manifold**

Refer to pages 331 (SY5000) and 332 (SY7000) for dimensions of Type 11/Bottom ported type.

#### Series

3	SY3000
5	SY5000
7	SY7000

\*: For mixed mounting, refer to page 336 and later.

<b>②</b> Typ	oe .
10	Side ported
11	Bottom ported*1

- \*1: The SY5000 manifold base is used for the bottom ported of the SY3000. When ordering, refer to "Plug-in Mixed Mounting Type Manifold" (from page 336).
- \*: When mixing top ported configurations, select from page 283. In this case, use caution as there is also output on the A and B port on base side. Specify on a manifold specification sheet if plugs are required on the A and B port on base side.

#### SI Unit (Number of outputs, Output polarity, mhar of valva etatione)

IVIGA	wax. number of varve stations							
0 Without SI Unit								
	16 outputs,							
A2	Positive common*1,							
	2 to 8 stations (16 stations)*2							
	16 outputs,							
A2N	Negative common*1,							
	2 to 8 stations (16 stations)*2							


- \*1: Ensure a match with the common specification of the valve to be used.
- \*2: ( ): Maximum number of stations for mixed single and double wiring.

#### Valve stations

_		otation.					
	Stations	Note					
02	2 stations						
:	1	Double wiring*1					
08	8 stations						
02	2 stations	0					
:	- :	Specified layout*2 (Available up to 16 solenoids)					
16	16 stations	(Available up to 10 soleriolus)					

- \*1: Double wiring: 2-position single, double, 3-position and 4-position valves can be used on all manifold stations. Use of a 2-position single solenoid will result in an unused control signal. If this is not desired, order with a specified layout.
- \*2: Specified layout: Indicate the wiring specifications on the manifold specification sheet. (Note that 2-position double, 3-position and 4-position valves cannot be used where single wiring has been specified.)
- \*: When the product without the SI Unit (S0) is selected, note the maximum number of solenoids of the SI Unit that will be mounted. If the layout is specified, indicate it on the manifold specification sheet
- \*: This also includes the number of blanking plate assembly

#### **How to Order Manifold Assembly**

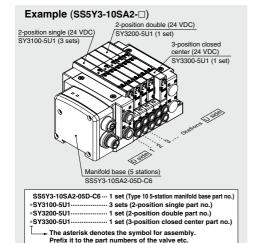

• The valve arrangement is numbered as the 1st station from the D side. . Under the manifold part number, state the valves to be mounted in order from the 1st station as shown in the figure above. If the arrangement becomes complicated, specify on a manifold specification sheet.

#### 6 P, E port entry

U	U side (2 to 10 stations)
D	D side (2 to 10 stations)
В	Both sides (2 to 16 stations)

#### 6 SUP/FXH block assembly

	• •• /=/:: =:•• =:•								
Nil Internal pilot									
S	Internal pilot, Built-in silencer								
R	External pilot								

- \*: 3/5(E) port is plugged for the built-in silencer type
- \*: When the built-in silencer type is used, keep the exhaust port from coming in direct contact with water or other liquids.

\*: A separate GW Unit and communication cable are required.

For details about the EX500 Gateway-type Serial Transmission System, refer to pages 845 to 876 and the Operation Manual. For details about part numbers of SI Units to be mounted, refer to page 359. Please download the Operation Manual via SMC website, http://www.smcworld.com

#### Plug-in Connector Connecting Base SY3000/5000/7000 Series

SJ

A, B port size (Inch/One-touch fitting)

Type 10/Side Ported Type 11/Bottom Ported

SY

S0700 S0700

Ø.	Α, Ι	Вр	ort size	(Metri	c/One	-touch	fitting	3)	
				Type 1	0/Side	Ported	Type 11/Bo	ttom Ported	
		Α,	B port	SY3000	SY5000	SY7000	SY5000	SY7000	
C2			ø2	•	_	_	_	_	
СЗ			ø3.2	•	_	_	_	_	
C4	_		ø4	•	•	_	•	_	
C6	ight		ø6	•	•	•	•	•	
C8	Straight		ø8	_	•	•	•	•	24.0
C10	,		ø10	_	_	•	_	•	G SEESE
C12			ø12	_	_	•	_	•	•
CM*1		Mi	xed sizes	•	•	•	•	•	
L4			ø4	•	•	_	_	_	
L6		힏	ø6	•	•	•	_	_	
L8		Upward	ø8	_	•	•	_		
L10			ø10	_	_	•	_	_	
L12	2		ø12	_	_	•	_	_	The state of the s
B4	Elbow*2	_	ø4	•	•	_	_	_	
B6	ă	/arc	ø6	•	•	•	_	_	
B8		Downward	ø8	_	•	•	_	_	
B10		á	ø10	—	_	•	_	_	
B12			ø12	_	_	•	_	_	
LM*1		Mi	xed sizes	•	•	•	_	_	
(Or	P, E port*3 (One-touch fittings)			ø8	ø10	ø12	ø10	ø12	

		A, B port		71			71		
		Α,	ь роп	SY3000	SY5000	SY7000	SY5000	SY7000	
N1			ø1/8"	•	_	_	_	_	
N3		ø5/32"		•	•	_	•	_	
N7	Straight		ø1/4"	•	•	•	•	•	
N9	stra		ø5/16"	_	•	•	•	•	
N11	0,		ø3/8"	_	_	•	_	•	0 1500E
CM*1		Mi	xed sizes	•	•	•	•	•	
LN3			ø5/32"	•	_				
LN7		/ard	ø1/4"	•	•	_	_	_	
LN9		Jpward	ø5/16"	_	•	_	_	_	
LN11	١	_	ø3/8"	_	_	•		_	G G G G G G G G G G G G G G G G G G G
BN3	Elbow*2	5	ø5/32"	•	_	_	_	_	
BN7	읦	Downward	ø1/4"	•	•	_	_	_	
BN9		W	ø5/16"	_	•	_		_	
BN11		ŏ	ø3/8"	_	_	•	_	_	
LM*1		Mi	xed sizes	•	•	•	_	_	
(On	P, E port*3 (One-touch fittings)		ø5/16"	ø3/8"	ø1/2"	ø3/8"	ø1/2"		

- \*1: Indicate the sizes on the manifold specification sheet.
- \*2: To avoid interference with the body or piping, select downward elbow port when mounting the optional spacer assembly (pages 373 to 375).
- \*3: The direction of P, E port fittings is the same as for A, B port. If selecting "LM", indicate it on the manifold specification sheet for the P, E port fitting direction.

#### **8** Mounting and Option

	Maunting	Option			
	Mounting	Name plate	Station number		
Nil	Diment	_	_		
AA	Direct mounting	•	•		
BA	mounting	•			
<b>D</b> □*1		_	_		
<b>A</b> □*1	DIN rail mounting	•	•		
<b>B</b> □*1	mounting	•	_		

- \*1: Refer to "DIN Rail Option" below.
- \*: Select the direct mounting type for Type 11 (Bottom ported).


#### **DIN Rail Option**

DIN Hall Option										
Nil	With DIN bracket, DIN rail with standard length									
0	With DIN bracket, without DIN rail									
<b>3</b> *1	With DIN bracket, DIN rail for 3 stations									
:	:									
16*1	With DIN bracket, DIN rail for 16 stations									

- \*1: Specify a longer rail than the length of valve stations.
- If the DIN rail must be mounted without an SI Unit, select "D0" and order the DIN rail separately. Refer to L3 of the dimensions for the DIN rail length. Refer to page 372 for the DIN rail part number.
- \*: Refer to page 394 for the fixation of DIN rail mounting type manifold.

#### How to Order Valves (With mounting screw)

lefer to page 136 for valve specifications

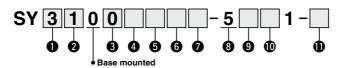

#### Series

3	SY3000
5	SY5000
7	SY7000

#### 2 Type of actuation

1	Onneitien	Single					
2	2-position	Double					
3		Closed center					
4	3-position	Exhaust center					
5		Pressure center					
<b>A</b> *1	4-position	N.C./N.C.					
B*1 C*1	dual 3-port	N.O./N.O.					
	duai 5-port	N.C./N.O.					

\*1: Only rubber seal type is available for the 4-position dual 3-port valve.

#### A Seal type

0	Rubber seal
1	Metal seal

#### 4 Pilot type

	ot typo
Nil	Internal pilot
R	External pilot

## Back pressure check valve (Built-in valve type)

Nil	None
Н	Built-in

- \*: Only rubber seal type. Manifold installed type is available if the back pressure check valve is required for a valve with metal seal. Refer to page 379 for Ordering Example. However, it is not recommended to use the built-in valve type and the manifold installed type at the same time because it will reduce the flow.
- \*: The built-in valve type back pressure check valve is not available for the 3-position type and the SY7000.

#### 6 Pilot valve option

	or raire opiion
Nil	Standard (0.7 MPa)
В	Quick response type (0.7 MPa)
<b>K</b> *1	High pressure type (1.0 MPa)

\*1: Only metal seal type is available for the high pressure type.

#### Coil type

NII	Standard					
Т	With power saving circuit (Continuous duty type)					
* Be sure to select the power saving circuit						

- \*: Be sure to select the power saving circuit type when the valve is continuously energized for long periods of time.
- \*: Be careful of the energizing time when the power saving circuit is selected. Refer to page 391 for details.

#### 8 Rated voltage


5	24 VDC

#### 9 Light/surge voltage suppressor and common specification

Symbol	With light	Surge voltage suppressor	Common specification			
R	-		Non-polar			
U	•		Non-polai			
S	_	•	Positive			
Z	•	_	common			
NS	_		Negative			
NZ	•		common			

only "Z" and "NZ" are available for with the power saving circuit. Select a valve from R, U, S or Z when the SI Unit specification is A2 (positive common). Select a valve from R, U, NS or NZ when the SI Unit specification is A2N (negative common).

#### Manual override

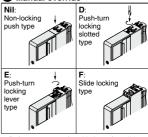

 Refer to page 154 for with the safety slide locking manual override.

#### Type of mounting screw

Nil	Nil Round head combination screw								
В	Hexagon socket head cap screw								
K	Round head combination screw (Falling-out-prevention type)								
Н	Hexagon socket head cap screw (Falling-out-prevention type)								

- \*: For "K" and "H", the valve body cover has a drop prevention construction to stop the mounting screws from falling out when the valve is removed for maintenance etc.
- When ordering a valve individually, the base gasket is not included. Since the base gasket is attached to the manifold, please order the base gasket separately if it is needed for maintenance service.
- Refer to page 367 for part numbers of the base gasket and mounting screw.
- \*: "B" and "H" cannot be selected for the individual SUP/EXH spacer assembly, interface regulator or double check spacer assembly with residual pressure release


#### Plus-in Connector Connecting Base SY3000/5000/7000 Series


Dimensions: SY3000 Series

Plug-in Connecting Base

Type 10/Side Ported EX500 (64 Points)

SS5Y3-10SA2-<u>Stations</u> D C2, N1 (D) C6, N7 (D)

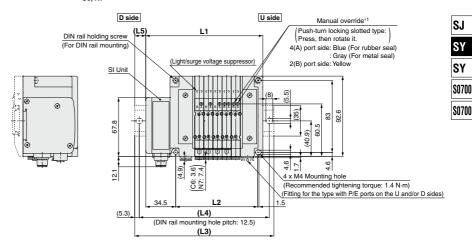

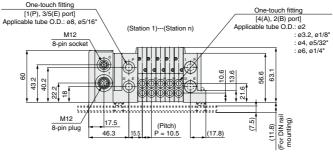

- \*1: Refer to page 328 or dimensions of external pilot, silencer, elbow fittings and slide locking manual override.
- \*: These figures show the "SS5Y3-10SA2-05D-C6".
- \*: Refer to page 333 for dimensions of A or B port top-ported type.

n: Stations	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
L1	103.5	114	124.5	135	145.5	156	166.5	177	187.5	198	208.5	219	229.5	240	250.5
L2	63	73.5	84	94.5	105	115.5	126	136.5	147	157.5	168	178.5	189	199.5	210
L3	135.5	148	148	160.5	173	185.5	198	210.5	223	223	235.5	248	260.5	273	285.5
L4	125	137.5	137.5	150	162.5	175	187.5	200	212.5	212.5	225	237.5	250	262.5	275
L5	16	17	12	13	14	15	16	17	18	12.5	13.5	14.5	15.5	16.5	17.5





Dimensions: SY5000 Series

Plug-in
Connector Connecting Base

Type 10/Side Ported EX500 (64 Points)

SS5Y5-10SA2-Stations D - C6, N3 (D)

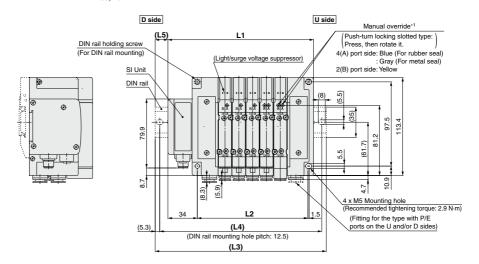

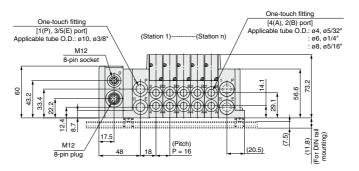

- \*1: Refer to page 329 for dimensions of external pilot, silencer, elbow fittings and slide locking manual override.
- \*: These figures show the "SS5Y5-10SA2-05D-C8".
- \*: Refer to page 334 for dimensions of A or B port top-ported type.

n: Stations	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
L1	120.5	136.5	152.5	168.5	184.5	200.5	216.5	232.5	248.5	264.5	280.5	296.5	312.5	328.5	344.5
L2	80	96	112	128	144	160	176	192	208	224	240	256	272	288	304
L3	148	160.5	185.5	198	210.5	235.5	248	260.5	273	298	310.5	323	348	360.5	373
L4	137.5	150	175	187.5	200	225	237.5	250	262.5	287.5	300	312.5	337.5	350	362.5
L5	14	12	16.5	15	13	17.5	16	14	12.5	17	15	13.5	18	16	14.5

#### Plus-in Connector Connecting Base SY3000/5000/7000 Series

Dimensions: SY7000 Series

Plug-in Connecting Base

Type 10/Side Ported EX500 (64 Points)


SJ


SY


S0700

S0700

SS5Y7-10SA2-<u>Stations</u> D C6, N7 C8, N9 C10, N11 (D)

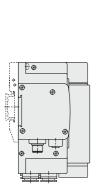

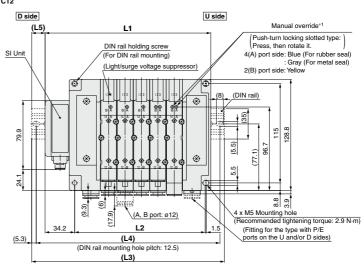

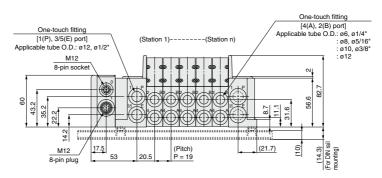

- \*1: Refer to page 330 for dimensions of external pilot, silencer, elbow fittings and slide locking manual override.
- \*: These figures show the "SS5Y7-10SA2-05D-C10".
- \*: Refer to page 335 for dimensions of A or B port top-ported type.

n: Stations	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
L1	134.7	153.7	172.7	191.7	210.7	229.7	248.7	267.7	286.7	305.7	324.7	343.7	362.7	381.7	400.7
L2	94	113	132	151	170	189	208	227	246	265	284	303	322	341	360
L3	160.5	185.5	198	223	235.5	260.5	273	298	310.5	335.5	348	373	398	410.5	435.5
L4	150	175	187.5	212.5	225	250	262.5	287.5	300	325	337.5	362.5	387.5	400	425
L5	13	16	12.5	15.5	12.5	15.5	12	15	12	15	11.5	14.5	17.5	14.5	17.5



## Plug-in Connector Connecting Base

EX500 Gateway Decentralized System 2 (128 Points)

## Type 12 Top Ported

# SY3000/5000/7000 Series

( E c RoHS



#### **How to Order Manifold**



Refer to pages 333 to 335 for dimensions of Type 12/Top ported type

#### Series

3	SY3000
5	SY5000
7	SY7000

\*: For mixed mounting, refer to page 336 and

#### SI Unit (Number of outputs, Output polarity, Max. number of valve stations)

0	Without SI Unit
	32 outputs*1*4, 2 to 16 stations (24 stations*3), Negative common*2

- \*1: 16 outputs can be set by switching the built-in setting switch
- \*2: Ensure a match with the common specification of the valve.
- \*3: ( ): Maximum number of stations for mixed single and double wiring.
- \*4: When using the SI Unit with 32 outputs, use the GW Unit compatible with the EX500 Gateway Decentralized System 2 (128 points).

#### Valve stations

	Stations	Note			
0	2 stations				
	:	Double wiring*1			
1	6 16 stations				
0	2 stations	Considered lawayets?			
		Specified layout*2			
2	4 24 stations	(Available up to 32 solenoids)			

- \*1: Double wiring: 2-position single, double, 3-position and 4-position valves can be used on all manifold stations. Use of a 2-position single solenoid will result in an unused control signal. If this is not desired, order with a specified layout.
- \*2: Specified layout: Indicate the wiring specifications on the manifold specification sheet. (Note that 2-position double, 3-position and 4-position valves cannot be used where single wiring has been specified.)
- \*: When the product without the SI Unit (S0) is selected, note the maximum number of solenoids of the SI Unit that will be mounted. If the layout is specified, indicate it on the manifold specification sheet.
- \*: This also includes the number of blanking plate assembly.

#### 4 P, E port entry

U*1	U side (2 to 10 stations)
<b>D</b> *1	D side (2 to 10 stations)
В	Both sides (2 to 24 stations)

\*1: For type "S", supply/exhaust block assembly with built-in silencer, choose "U" or "D" for P, E port entry.

#### 5 SUP/EXH block assembly

Nil	Internal pilot
S*1	Internal pilot, Built-in silencer*2
R	External pilot

- \*1: For type "S", supply/exhaust block assembly with built-in silencer, choose "U" or "D" for P, E port entry. 3/5(E) port is plugged. The silencer exhaust port is located on the opposite side of P, E port entry. (Example: When the P, E port entry is D side, the silencer exhaust port is U side.)
- \*2: When the built-in silencer type is used, keep the exhaust port from coming in direct contact with water or other liquids.

#### How to Order Manifold Assembly

# Example Manifold base

SS5Y3-12SA3N-05D ......1 set (Manifold base part number) \* SY3230-5U1-C6 .....5 sets (2-position double part number)

- The asterisk denotes the symbol for assembly. Prefix it to the part numbers of the valve etc.
- The valve arrangement is numbered as the 1st station from the D side. . Under the manifold base part number, state the valves to be mounted in order from the 1st station as shown in the figure above. If the arrangement becomes complicated, specify on the manifold specification sheet

#### A P F port size (One-touch fittings)

T , 2 port size (one todon intinge)							
	SY3000	SY5000	SY7000				
Nil	ø8	ø10	ø12				
<b>N</b> *1	ø5/16"	ø3/8"	ø1/2"				

\*1: For "N", sizes are in inches.

#### Mounting

Wildunting				
Nil	Direct mounting			
D	With DIN bracket, DIN rail with standard length			
D0	With DIN bracket, without DIN rail			
D3*1	With DIN bracket, DIN rail for 3 stations			
:	:			
D24*1	With DIN bracket, DIN rail for 24 stations			

- \*1: Specify a longer rail than the length of valve stations.
- \*: If the DIN rail must be mounted without an SI Unit, select "D0". Then, refer to L3 of the dimensions for the DIN rail length and order separately. Refer to page 372 for the DIN rail part number.
- \*: Refer to page 394 for the fixation of DIN rail mounting type
- \*: A separate GW Unit and communication cable are required.

For details about the EX500 Gateway-type Serial Transmission System, refer to pages 845 to 876 and the Operation Manual. For details about part numbers of SI Units to be mounted, refer to page 358. Please download the Operation Manual via SMC website, http://www.smcworld.com

### Connector Connecting Base SY3000/5000/7000 Series


#### How to Order Valves (With mounting screw)

Refer to page 136 for valve specifications.

SJ

S0700

S0700

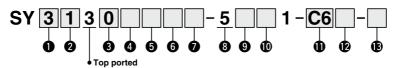

#### Series

3	SY3000
5	SY5000
7	SY7000

#### 2 Type of actuation

• ',	oc or actuali	O.,
1	O position	Single
2	2-position	Double
3		Closed center
4	3-position	Exhaust center
5		Pressure center
<b>A</b> *1	4-position dual	N.C./N.C.
B*1		N.O./N.O.
C*1	o port vaive	N.C./N.O.

\*1: Select the rubber seal type for the 4-position dual 3-port valve.

#### Seal type

0	Rubber seal
1	Metal seal

#### 4 Pilot type

Nil	Internal pilot
R	External pilot

#### Back pressure check valve (Built-in valve type)

<b>O</b> Duo.	k procedure encok varre (Bank in varre type)
Nil	None
<b>L</b> l≈1	Built-in

- \*1: Select the rubber seal type when the back pressure check valve is built-in. Manifold installed type is available if the back pressure check valve is required for a valve with metal seal. For ordering example, refer to page 379. However, it is not recommended to use the built-in valve type and the manifold installed type at the same time because it will reduce the flow.
- \*: Select "Nil" for 3-position type and the SY7000

#### 6 Pilot valve option

• ra op		
Nil	Standard (0.7 MPa)	
В	Quick response type (0.7 MPa)	
<b>K</b> *1	High pressure type (1.0 MPa)	

\*1: Select the metal seal type for high pressure type.

#### Coil type

Standard
With power saving circuit (Continuous duty type)*1*2

- \*1: Be sure to select the power saving circuit type when the valve is continuously energized for long periods of time.
- \*2: Be careful of the energizing time when the power saving circuit is selected. For details, refer to page 391.

#### Rated voltage


5	24 VDC

## 9 Light/surge voltage suppressor and common specification

	With light	Surge voltage suppressor	Common specification
R	_	•	Non noles
U	•		Non-polar
NS	1		Negative
NZ	•		common

\*: Select "NZ" for with the power saving circuit.

#### Manual override

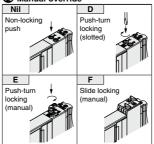

\*: Refer to page 154 for with the safety slide locking manual override.

#### A, B port size

#### Thread piping

	Port size	SY3000	SY5000	SY7000
M	M5 x 0.8	•	_	_
01	1/8	_	•	_
02	1/4	_	_	•

#### One-touch fitting (Metric)

	A, B port	SY3000	SY5000	SY7000
C2	ø2	•	_	_
C2 C3 C4 C6	ø3.2	•	_	_
C4	ø4	•	•	_
C6	ø6	•	•	•
C8	ø8	_	•	•
C10	ø10	_	_	•
C12	ø12		_	•

#### One-touch fitting (Inch)

touch many (mon)				
	A, B port	SY3000	SY5000	SY7000
N1	ø1/8"	•	_	_
N3	ø5/32"	•	•	_
N7	ø1/4"	•	•	•
N9	ø5/16"	I -	•	•
N11	ø3/8"	_	_	•

#### A. B port thread type

Nil	Rc
F	G
N	NPT
Т	NPTF

\*: Select "Nil" for M5.

service.

#### B Type of mounting screw

Type or mounting cores		
Nil	Nil Round head combination screw	
В	Hexagon socket head cap screw	
Round head combination screw (Falling-out-prevention type*1)		
н	Hexagon socket head cap screw (Falling-out-prevention type*1)	

- \*1: For "K" and "H", the valve body cover has a drop prevention construction to stop the mounting screws from falling out when the valve is removed for maintenance etc.
- \*: When ordering a valve individually, the base gasket is not included.
  Since the base gasket is attached to the manifold, please order the base gasket separately if it is needed for maintenance
  - Refer to page 367 for part numbers of the base gasket and mounting screw.
- \*: Select "Nil" or "K" for the optional individual SUP/EXH spacer assembly or interface regulator.

Protective class class II (Mark: (iii))

## Plug-in Connector Connecting Base

EX500 Gateway Decentralized System (64 Points)

Type 12

# SY3000/5000/7000 Series

C C CRING ROHS



#### **How to Order Manifold**



dimensions of Type 12/Top ported type.

#### Series SY3000 5 SY5000 SY7000

\*: For mixed mounting, refer to page 336 and

#### SI Unit (Number of outputs, Output polarity, Max. number of valve stations)

0	Without SI Unit	
A2	16 outputs, Positive common*1, 2 to 8 stations (16 stations)*2	
A2N	16 outputs, Negative common*1, 2 to 8 stations (16 stations)*2	

- \*1: Ensure a match with the common specification of the valve to be used.
- \*2: ( ): Maximum number of stations for mixed single and double wiring.

#### P, E port entry

U*1	U side (2 to 10 stations)
<b>D</b> *1	D side (2 to 10 stations)
В	Both sides (2 to 16 stations)

\*1: 6 For type "S", supply/exhaust block assembly with built-in silencer, choose U or D for P port entry.

#### 5 SUP/EXH block assembly

NII	internal pilot
S Internal pilot/Built-in silencer	
R	External pilot
*: For bu	ilt-in silencer type, P and E ports are


- available on U and D sides. 3/5(E) port is plugged. The silencer exhaust port is located on the opposite side of P, E port entry. (Example: When the P, E port entry is D side, the silencer exhaust port is U side.)
- When the built-in silencer type is used, keep the exhaust port from coming in direct contact with water or other liquids.

#### Valve stations

Symbol	Stations	Note
02	2 stations	Double wiring∗1
:	- :	
08	8 stations	
02	2 stations	Specified layout*2 (Available up to 16 solenoids)
:	- :	
16	16 stations	

- \*1: Double wiring: 2-position single, double, 3-position and 4-position valves can be used on all manifold stations. Use of a 2-position single solenoid will result in an unused control signal. If this is not desired, order with a specified layout.
- \*2: Specified layout: Indicate the wiring specifications on the manifold specification sheet. (Note that 2-position double, 3-position and 4-position valves cannot be used where single wiring has been specified.)
- \*: When the product without the SI Unit (S0) is selected, note the maximum number of solenoids of the SI Unit that will be mounted. If the layout is specified, indicate it on the manifold specification sheet
- \*: This also includes the number of blanking plate assembly

#### How to Order Manifold Assembly

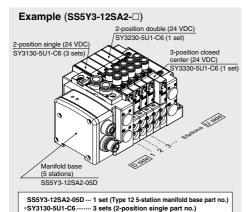

Prefix it to the part numbers of the valve etc. • The valve arrangement is numbered as the 1st station from the D side. . Under the manifold part number, state the valves to be mounted in order from the 1st station as shown in the figure above. If the arrangement becomes complicated, specify on a manifold specification sheet.

\*SY3230-5U1-C6 ...... 1 set (2-position double part no.) SY3330-5U1-C6 ...... 1 set (3-position closed center part no.)

The asterisk denotes the symbol for assembly.

#### 6 P. E nort size (One-touch fittings)

	- p	(0		_
Symbol	SY3000	SY5000	SY7000	
Nil	ø8	ø10	ø12	
N	ø5/16"	ø3/8"	ø1/2"	

\* For N sizes are in inches

#### Mounting 1

Nil	Direct mounting	
D	With DIN bracket, DIN rail with standard length	
D0	With DIN bracket, without DIN rail	
D3*1	With DIN bracket, DIN rail for 3 stations	
- :	:	
D16*1	With DIN bracket, DIN rail for 16 stations	


- \*1: Specify a longer rail than the length of valve stations.
- \*: If the DIN rail must be mounted without an SI Unit, select "D0". Then, refer to L3 of the dimensions for the DIN rail length and order separately. Refer to page 372 for the DIN rail part number.
- \*: Refer to page 394 for the fixation of DIN rail mounting type manifold
- \*: A separate GW Unit and communication cable are required.

For details about the EX500 Gateway-type Serial Transmission System, refer to pages 845 to 876 and the Operation Manual. For details about part numbers of SI Units to be mounted, refer to page 359. Please download the Operation Manual via SMC website, http://www.smcworld.com

#### Plug-in Connector Connecting Base SY3000/5000/7000 Series

#### How to Order Valves (With mounting screw)

Refer to page 136 for valve specifications.

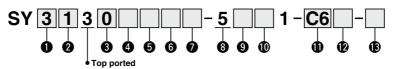

#### Series

•	
3	SY3000
5	SY5000
7	SY7000

#### 2 Type of actuation

1	2-position	Single
2		Double
3	3-position	Closed center
4		Exhaust center
5		Pressure center
<b>A</b> *1	4-position dual 3-port	N.C./N.C.
<b>B</b> ∗1		N.O./N.O.
C*1		N.C./N.O.

\*1: Only rubber seal type is available for the 4-position dual 3-port valve.

#### Seal type

0	Rubber seal
1	Metal seal

#### A Pilot type

• • • • • • • • • • • • • • • • • • • •	
Nil	Internal pilot
R	External pilot

#### Back pressure check valve (Built-in valve type)

(Danie in Tairo typo)	
Nil	None
Н	Built-in

- \*: Only rubber seal type. Manifold installed type is available if the back pressure check valve is required for a valve with metal seal. Refer to page 379 for Ordering Example. However, it is not recommended to use the built-in valve type and the manifold installed type at the same time because it will reduce the flow.
- \*: The built-in valve type back pressure check valve is not available for the 3-position type and the SY7000.

#### 6 Pilot valve option

• I not tuite opiion		
Nil	Standard (0.7 MPa)	
В	Quick response type (0.7 MPa)	
<b>K</b> *1	High pressure type (1.0 MPa)	

\*1: Only metal seal type is available for the high pressure type.

#### 7 Coil type

- Standard Nil With power saving circuit (Continuous duty type) \*: Be sure to select the power saving circuit type when the valve is continuously energized for long periods of time.
- \*: Be careful of the energizing time when the power saving circuit is selected. Refer to page 391 for details.


#### 8 Rated voltage

#### 9 Light/surge voltage suppressor and common specification

With light	Surge voltage suppressor	Common specification
_	•	Non-polar
•		Non-polai
_		Positive
•		common
_		Negative
•		common
	With light  —  —  —  —  —  —  —  —  —  —  —	suppressor

\*: Select "Z" or "NZ" for with the power saving circuit. Select a valve from R, U, S or Z when the SI Unit specification is A2 (positive common). Select a valve from R, U, NS or NZ when the SI Unit specification is A2N (negative common).

#### Manual override

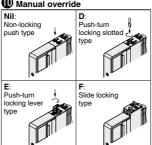

\*: Refer to page 154 for with the safety slide locking manual override.

#### A, B port size

#### Thread nining

Symbol	Port size	Applicable series			
M5	M5 x 0.8	SY3000			
01	1/8	SY5000			
02	1/4	SY7000			

One-touch litting (wethe)						
Symbol	A, B port	SY3000	SY5000	SY7000		
C2	ø2	•	_	_		
C3	ø3.2	•	_	_		
C4	ø4	•	•	_		
C6	ø6	•	•	•		
C8	ø8	_	•	•		
C10	ø10	_	_	•		
C12	ø12	_	_	•		

#### One-touch fitting (Inch)

One-touch nitting (inten)					
A, B port	SY3000	SY5000	SY7000		
ø1/8"	•	_	_		
ø5/32"	•	•	_		
ø1/4"	•	•	•		
ø5/16"	_	•	•		
ø3/8"	_	_	•		
	A, B port Ø1/8" Ø5/32" Ø1/4" Ø5/16"	A, B port SY3000  Ø1/8"  Ø5/32"  Ø1/4"  Ø5/16"  —	A, B port SY3000 SY5000		

#### 12 Thread type

Nil	Rc
F	G
N	NPT
Т	NPTF

\*: Only Nil is available for M5.

#### (B) Type of mounting screw

Nil Round head combination screw		
В	Round head combination screw (Falling-out-prevention type	
K		
Н		

- \*: For "K" and "H", the valve body cover has a drop prevention construction to stop the mounting screws from falling out when the valve is removed for maintenance etc.
- \*: When ordering a valve individually, the base gasket is not included. Since the base gasket is attached to the manifold, please order the base gasket separately if it is needed for maintenance service.

Refer to page 367 for part numbers of the base gasket and mounting screw.

\*: "B" and "H" cannot be selected for the individual SUP/EXH spacer assembly or interface regulator.



SJ

SY

S0700

S0700

Type 10
Side Ported
Type 11
Bottom Ported

## **Plug-in** Connector Connecting Base


EX600

# SY3000/5000/7000 Series

( ( c RoHS

#### **How to Order Manifold**

Refer to pages 331 (SY5000) and 332 (SY7000) for dimensions of Type 11/Bottom ported type.

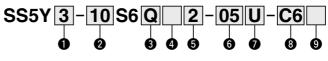

#### Series

3	SY3000
5	SY5000
7	SY7000

#### 2 Туре

ſ	10	Side ported
	11	Bottom ported*1

\*1: The SY5000 manifold base is used for the bottom ported of the SY3000. When ordering, refer to "Plug-in Mixed Mounting Type Manifold" (from page 336).

#### SI Unit

Si Unit			
0	Without SI Unit		
Q	DeviceNet™ (Version A)		
N	PROFIBUS DP (Version A)		
V	CC-Link		
ZE	EtherNet/IP™ (1 port)		
EA	EtherNet/IP™ (2 ports)		
D	EtherCAT		
F	PROFINET		
WE	EtherNet/IP™ compatible wireless base*1		
WF	PROFINET compatible wireless base*1		
ws	Wireless remote*1		
4 77 1 1 1 1 1 1 1 1 1 1 1			

- \*1: The wireless system is suitable for use only in a country where it is in accordance with the Radio Act and regulations of that country.
- \*: I/O Unit cannot be mounted without SI Unit.
- \*: Valve plate which connects manifold and SI Unit is included, but it is not mounted to a valve without SI Unit. Refer to the EX600 (page 843) for mounting.

#### 6 I/O Unit stations

Nil	None	
1	1 station	
	:	
9	9 stations	

- \*: Without SI Unit, the symbol is nil.
- \*: SI Unit is not included in I/O Unit stations.
- \*: When I/O Unit is selected, it is shipped separately, and assembled by users. Refer to the attached operation manual for mounting.

#### 6 Valve stations

Symbol	Stations	Note	
02	2 stations		
:	:	Double wiring*1	
16	16 stations		
02	2 stations	Considered lawaretes	
	:	Specified layout*2 (Available up to 32 solenoids)	
24	24 stations	(Available up to 32 soleriolus)	

- \*1: Double wiring: 2-position single, double, 3-position and 4-position valves can be used on all manifold stations. Use of a 2-position single solenoid will result in an unused control signal. If this is not desired, order with a specified layout. \*2: Specified layout indicate the wiring.
- \*2: Specified layout: Indicate the wiring specifications on the manifold specification sheet. (Note that 2-position double, 3-position and 4-position valves cannot be used where single wiring has been specified.)
- \*: This also includes the number of blanking plate assembly.

#### Mounting and Option

Symbol	Mounting	Option	
Symbol	wounting	Name plate	Station number
Nil	Direct mounting	_	_
AA		•	•
BA	mounting	•	
D□	DIN!!	_	_
A□	DIN rail mounting	•	•
B□		•	

- \*: Enter the number of stations inside ☐ when it is larger than the number of valve stations. (Refer to "DIN Rail Option" below.)
- \*: Only direct mounting is available for Type 11 (Bottom ported).
- \*: Refer to page 394 for the fixation of DIN rail mounting type manifold.

#### **DIN Rail Option**

zar rian option					
Nil		Direct mounting			
0	Without DIN rail (with bracket)				
3	For 3 stations	Consider a language wail than the			
:	:	Specify a longer rail than the			
24	For 24 stations	total length of specified station			
	•				

\*: If the DIN rail must be mounted without an SI Unit, select D0. Then, refer to L3 of the dimensions for the DIN rail length and order separately. (Refer to page 372 for the DIN rail part number.)

#### 4 SI Unit output polarity, end plate type (Part no.)

Or office output pe	Jianty, cm	a plate ty	30 (i ai i iii	J.,	
	M12 power supply	7/8 inch power supply	M12 power supply connector IN/OUT, A-coded		
SI Unit output polarity	connector B-coded (EX600-ED2)	connector (EX600-ED3)	Pin arrangement 1 (EX600-ED4)	Pin arrangement 2 (EX600-ED5)	
Without SI Unit	Nil				
SI Unit positive common	2	3	6	8	
SI Unit negative common	4	5	7	9	

- \*: Ensure a match with the common specification of the valve to be used.
- \*: Without SI Unit, the symbol is nil.

#### P, E port entry, SUP/EXH block assembly

P, E port entry	Internal pilot	Internal pilot, Built-in silencer	External pilot
U side (2 to 10 stations)	U	С	G
D side (2 to 10 stations)	D	E	Н
Both sides (2 to 24 stations)	В	F	7

- \*: 3/5(E) port is plugged for the built-in silencer type.
- \*: When the built-in silencer type is used, keep the exhaust port from coming in direct contact with water or other liquids.

#### Refer to the page on the right for 8.

For details about the EX600 Integrated-type (For Input/Output) Serial Transmission System, refer to pages 815 to 843 and the Operation Manual. For details about part numbers of SI Units to be mounted, refer to pages 360 and 361. (IP40 specifications may be required according to the I/O Unit to be selected.) Please download the Operation Manual via SMC website, http://www.smcworld.com



#### Plusin Connector Connecting Base SY3000/5000/7000 Series

SJ

S0700 S0700

A, B port size (Inch/One-touch fitting) Type 10/Side ported Type 11/Bottom ported

Elbow port, mixed siz (Including upward and P, E port size

(One-touch fittings)

Oymbor	, b port		SY3000	SY5000	SY7000	SY5000	SY7000				
N1			ø1/8"	•	_	_	_	_			
N3			ø5/32"	•	•		•				
N7	Straight		ø1/4"	•	•	•	•	•			
N9	stra		ø5/16"	_	•	•	•	•			
N11	0)		ø3/8"	_	_	•	_	•	O DESCRIPTION OF THE PROPERTY		
CM*1		Straig	ht port, mixed sizes	•	•	•	•	•			
LN3			ø5/32"	•	_	_	_	_			
LN7	1 1	1		Jpward	ø1/4"	•	•	_	_	_	
LN9		ఠ	ø5/16"	_	•	_	_	_			
LN11	1  -	-	ø3/8"	_	_	•	_	_			
BN3	1015	Б	ø5/32"	•	_	_	_	_			
BN7		wa	ø1/4"	•	•	_	_	_			
BN9	_	W	ø5/16"	_	•	_	_	_			
BN11	2	۵	ø3/8"		_	•	_	_			

ø3/8" ø1/21 ø3/8" a1/2

a5/16'

	A, B port		21			71				
Symbol		A, B port		SY3000	SY5000	SY7000	SY5000	SY7000		
C2			ø2	•	_	_	_	_		
СЗ			ø3.2	•	_	_	_	_		
C4			ø4	•	•	_	•	_		
C6	ighi		ø6	•	•	•	•	•		
C8	Straight		ø8	_	•	•	•	•	2010	
C10	0,		ø10	_	_	•	_	•	O STEEL	
C12			ø12	_	_	•	_	•	•	
CM*1		Straig	ght port, mixed sizes	•	•	•	•	•		
L4			ø4	•	•	_	_	_		
L6		2	ø6	•	•	•	_	_		
L8		Upward	ø8	_	•	•	_	_		
L10		5	ø10	_	_	•	_	_		
L12	O.		ø12	_	-	•	-	-	S del Comment	
В4	∃lbow*²		ø4	•	•	_	_	_		
В6	qιΞ	Downward	ø6	•	•	•	_			
B8	_	Š	ø8	_	•	•	_	_		
B10		lá	lá	ø10	_	-	•	_	_	
B12			ø12	_	ı	•	I	I		
LM*1		Elbow port, mixed sizes (Including upward and downward piping)		•	•	•	_	_		
P, E port size (One-touch fittings)			ø8	ø10	ø12	ø10	ø12			

A, B port size (Metric/One-touch fitting)


Type 10/Side ported Type 11/Bottor

Type 11/Bottor

Type 10/Side ported Type 11/Bottom ported

\*1: Indicate the sizes on the manifold specification sheet in the case of "CM", "LM". The direction of P, E port fittings is the same as for A, B port. If selecting "LM", indicate it on the manifold specification sheet for the P, E port fitting direction.

#### **How to Order Manifold Assembly**

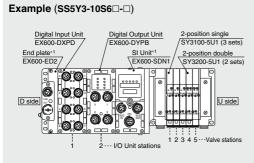

*SY3100 *SY3200	0S6Q42-05B-C6 1 set (Type 10 5-station manifold base part no.) 5U1
L_ Th	YPB1 set I/O Unit part number (Station 2) e asterisk denotes the symbol for assembly. fix it to the part numbers of the valve etc.
	arrangement is numbered as the 1st station from the D side.


- I/O Units in order from the 1st station as shown in the figure above. If the arrangement becomes complicated, specify on a manifold specification sheet.
- \*1: Do not enter the SI Unit part number and the end plate part number together
- \*: When mixing top ported configurations, select from page 295. In this case, use caution as there is also output on the A and B port on base
- Specify on a manifold specification sheet if plugs are required on the A and B port on base side.

285

<sup>\*2:</sup> To avoid interference with the body or piping, select downward elbow port when mounting the optional spacer assembly (pages 373 to 375).

#### How to Order Valves (With mounting screw)

Refer to page 136 for valve specifications.

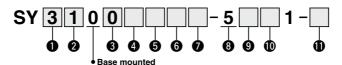

#### A Series

_	_	
	3	SY3000
	5	SY5000
	7	SY7000

#### 2 Type of actuation

1	2-position	Single
2	2-position	Double
3	3-position	Closed center
4		Exhaust center
5		Pressure center
<b>A</b> *1	4-position	N.C./N.C.
B*1		N.O./N.O.
C*1	duai 5-port	N.C./N.O.

\*1: Only rubber seal type is available for the 4-position dual 3-port valve.

#### Seal type

0	Rubber seal
1	Metal seal

#### 4 Pilot type

286

	Nil	Internal pilot		
	R	External pilot		

## Back pressure check valve

(Built-III valve type)		
	Nil	None
	Н	Built-in

- Only rubber seal type. Manifold installed type is available if the back pressure check valve is required for a valve with metal seal. Refer to page 379 for Ordering Example. However, it is not recommended to use the built-in valve type and the manifold installed type at the same time hecause it will reduce the flow
- \*: The built-in valve type back pressure check valve is not available for the 3-position type and the SY7000.

#### 6 Pilot valve option

	Pilot valve option					
Nil		Standard (0.7 MPa)				
	В	Quick response type (0.7 MPa)				
	<b>K</b> *1	High pressure type (1.0 MPa)				

\*1: Only metal seal type is available for the high pressure type.

#### Coil type

Nil	Standard
T	With power saving circuit (Continuous duty type
Da a	ro to coloot the newer coving circuit

- \*: Be sure to select the power saving circuit type when the valve is continuously energized for long periods of time.
- \*: Be careful of the energizing time when the power saving circuit is selected. Refer to page 391 for details.

#### 8 Rated voltage


5	24 VDC

## Light/surge voltage suppressor and common specification

Symbol	With light	Surge voltage suppressor	Common specification
R	1		Non-polar
U	•		Non-polar
S	_	•	Positive
Z	•	_	common
NS	_		Negative
NZ	•		common

- \*: Select a valve from R, U, S or Z when the SI Unit polarity is positive common. Select a valve from R, U, NS or NZ when the SI Unit output polarity is negative common.
- \*: Only "Z" and "NZ" types are available for with the power saving circuit.

#### Manual override

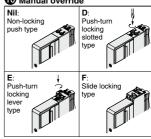


\*: Refer to page 154 for with the safety slide locking manual override.

#### Type of mounting screw

Nil	Round head combination screw
В	Hexagon socket head cap screw
K	Round head combination screw (Falling-out-prevention type)
Н	Hexagon socket head cap screw (Falling-out-prevention type)

- \*: For "K" and "H", the valve body cover has a drop prevention construction to stop the mounting screws from falling out when the valve is removed for maintenance etc.
- When ordering a valve individually, the base gasket is not included. Since the base gasket is attached to the manifold, please order the base gasket separately if it is needed for maintenance service.
- Refer to page 367 for part numbers of the base gasket and mounting screw.
- \*: "B" and "H" cannot be selected for the individual SUP/EXH spacer assembly, interface regulator or double check spacer assembly with residual pressure release

#### Plusin Connector Connecting Base SY3000/5000/7000 Series

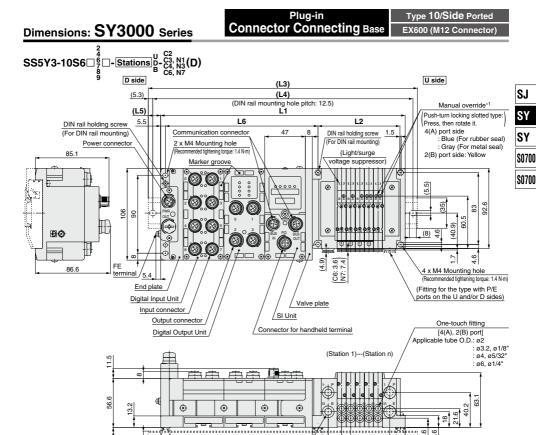

L1 = 10.5 x n1 + 135.5 + 47 x n2 L2 = 10.5 x n1 + 42

(For DIN rail mounting)

(11.8)

- L4 = L3 10.5
- L5 = (L3 L1)/2
- $L6 = 47 \times n2 + 82$ n1: Valve stations
- n2: I/O Unit stations
- 1.3: DIN Rail Overall Length

Valve stations (n1) 2 3 4 5 6 7 8 9 10 11 12 13 1	20. 2	• •	Ciuii	-011	,									
	I/O stations	2		4	5	6	7	8	9	10	11	12	13	14

	stations (n1) Unit stations (n2)	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	
	0	185.5	198	210.5	223	223	235.5	248	260.5	273	285.5	285.5	298	310.5	323	335.5	348	348	360.5	373	385.5	398	410.5	423	
	1	235.5	248	248	260.5	273	285.5	298	310.5	323	323	335.5	348	360.5	373	385.5	385.5	398	410.5	423	435.5	448	448	460.5	
	2	285.5	285.5	298	310.5	323	335.5	348	348	360.5	373	385.5	398	410.5	410.5	423	435.5	448	460.5	473	485.5	485.5	498	510.5	
Ī	3	323	335.5	348	360.5	373	385.5	385.5	398	410.5	423	435.5	448	448	460.5	473	485.5	498	510.5	510.5	523	535.5	548	560.5	
	4	373	385.5	398	410.5	410.5	423	435.5	448	460.5	473	473	485.5	498	510.5	523	535.5	548	548	560.5	573	585.5	598	610.5	
	5	423	435.5	448	448	460.5	473	485.5	498	510.5	510.5	523	535.5	548	560.5	573	573	585.5	598	610.5	623	635.5	635.5	648	
	6	473	473	485.5	498	510.5	523	535.5	535.5	548	560.5	573	585.5	598	610.5	610.5	623	635.5	648	660.5	673	673	685.5	698	
ı	7	510.5	523	535.5	548	560.5	573	573	585.5	598	610.5	623	635.5	635.5	648	660.5	673	685.5	698	698	710.5	723	735.5	748	
	8	560.5	573	585.5	598	598	610.5	623	635.5	648	660.5	673	673	685.5	698	710.5	723	735.5	735.5	748	760.5	773	785.5	798	
- 1	9	610.5	623	635.5	635.5	648	660.5	673	685.5	698	698	710.5	723	735.5	748	760.5	760.5	773	785.5	798	810.5	823	835.5	835.5	

One-touch fitting

[1(P), 3/5(E) port]

Applicable tube O.D.: ø8, ø5/16"

\*: Refer to page 333 for dimensions of A or B port top-ported type.

\*: These figures show the "SS5Y3-10S6Q22-05D-C6".

(Pitch)

P = 10.5


\*1: Refer to page 328 for dimensions of external pilot, silencer, elbow fittings and slide locking manual override.


(17.8)

Dimensions: SY3000 Series

Plug-in Connector Connecting Base EX600 (7/8 Inch Connector)

Type 10/Side Ported

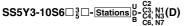

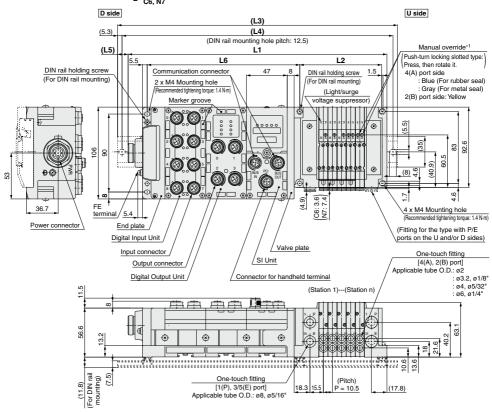

- L1 = 10.5 x n1 + 152 + 47 x n2 L2 = 10.5 x n1 + 42
- L4 = L3 10.5
- L5 = (L3 L1)/2 $L6 = 47 \times n2 + 82$
- n1: Valve stations n2: I/O Unit stations

L3: DIN Ra	ail Ov	rerall	Leng	gth																			
Valve stations (n1) stations (n2)	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
0	198	210.5	223	235.5	248	260.5	260.5	273	285.5	298	310.5	323	323	335.5	348	360.5	373	385.5	385.5	398	410.5	423	435.5
1	248	260.5	273	285.5	285.5	298	310.5	323	335.5	348	360.5	360.5	373	385.5	398	410.5	423	423	435.5	448	460.5	473	485.5
2	298	310.5	323	323	335.5	348	360.5	373	385.5	385.5	398	410.5	423	435.5	448	448	460.5	473	485.5	498	510.5	523	523
3	348	348	360.5	373	385.5	398	410.5	423	423	435.5	448	460.5	473	485.5	485.5	498	510.5	523	535.5	548	548	560.5	573
4	385.5	398	410.5	423	435.5	448	448	460.5	473	485.5	498	510.5	510.5	523	535.5	548	560.5	573	585.5	585.5	598	610.5	623
5	435.5	448	460.5	473	485.5	485.5	498	510.5	523	535.5	548	548	560.5	573	585.5	598	610.5	610.5	623	635.5	648	660.5	673
6	485.5	498	510.5	510.5	523	535.5	548	560.5	573	573	585.5	598	610.5	623	635.5	648	648	660.5	673	685.5	698	710.5	710.5
7	535.5	548	548	560.5	573	585.5	598	610.5	610.5	623	635.5	648	660.5	673	673	685.5	698	710.5	723	735.5	735.5	748	760.5
- 8	573	585.5	598	610.5	623	635.5	635.5	648	660.5	673	685.5	698	710.5	710.5	723	735.5	748	760.5	773	773	785.5	798	810.5
9	623	635.5	648	660.5	673	673	685.5	698	710.5	723	735.5	735.5	748	760.5	773	785.5	798	798	810.5	823	835.5	848	860.5


\*: These figures show the "SS5Y3-10S6Q32-05D-C6".

\*: Refer to page 333 for dimensions of A or B port top-ported type.

\*1: Refer to page 328 for dimensions of external pilot, silencer, elbow fittings and slide locking manual override.

#### Plusin Connector Connecting Base SY3000/5000/7000 Series



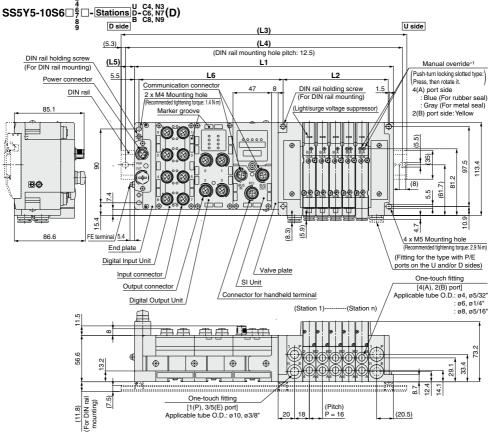

- L1 = 16 x n1 + 141.5 + 47 x n2 L2 = 16 x n1 + 48
- L4 = L3 10.5
- L5 = (L3 L1)/2 $L6 = 47 \times n2 + 81.5$
- n1: Valve stations

- n2: I/O Unit stations

*1: Refer to page 329 for	dimensions of externa	al pilot, silencer	, elbow tittings and s	slide locking manu	al override.
T 0 1 1	"COENTE 4000000 05	D 00"			

- \*: These figures show the "SS5Y5-10S6Q22-05D-C8".
- \*: Refer to page 334 for dimensions of A or B port top-ported type.

L3:	DIN	Rail	Overall	Length
-----	-----	------	---------	--------

L3: DIN Ra	ali Ov	eraii	Lenç	gtn																			
Valve stations (n1) stations (n2)		3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
0	198	223	235.5	248	273	285.5	298	310.5	335.5	348	360.5	373	398	410.5	423	448	460.5	473	485.5	510.5	523	535.5	560.5
1	248	260.5	285.5	298	310.5	335.5	348	360.5	373	398	410.5	423	448	460.5	473	485.5	510.5	523	535.5	548	573	585.5	598
2	298	310.5	323	348	360.5	373	398	410.5	423	435.5	460.5	473	485.5	510.5	523	535.5	548	573	585.5	598	623	635.5	648
3	348	360.5	373	398	410.5	423	435.5	460.5	473	485.5	498	523	535.5	548	573	585.5	598	610.5	635.5	648	660.5	685.5	698
4	385.5	410.5	423	435.5	460.5	473	485.5	498	523	535.5	548	573	585.5	598	610.5	635.5	648	660.5	673	698	710.5	723	748
5	435.5	448	473	485.5	498	523	535.5	548	560.5	585.5	598	610.5	635.5	648	660.5	673	698	710.5	723	748	760.5	773	785.5
6	485.5	498	523	535.5	548	560.5	585.5	598	610.5	623	648	660.5	673	698	710.5	723	735.5	760.5	773	785.5	810.5	823	835.5
7	535.5	548	560.5	585.5	598	610.5	623	648	660.5	673	698	710.5	723	735.5	760.5	773	785.5	798	823	835.5	848	873	885.5
8	573	598	610.5	623	648	660.5	673	685.5	710.5	723	735.5	760.5	773	785.5	798	823	835.5	848	873	885.5	898	910.5	935.5
9	623	648	660.5	673	685.5	710.5	723	735.5	748	773	785.5	798	823	835.5	848	860.5	885.5	898	910.5	935.5	948	960.5	973

SJ


S0700


S0700

Dimensions: SY5000 Series

Plug-in Connector Connecting Base EX600 (7/8 Inch Connector)

Type 10/Side Ported

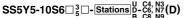

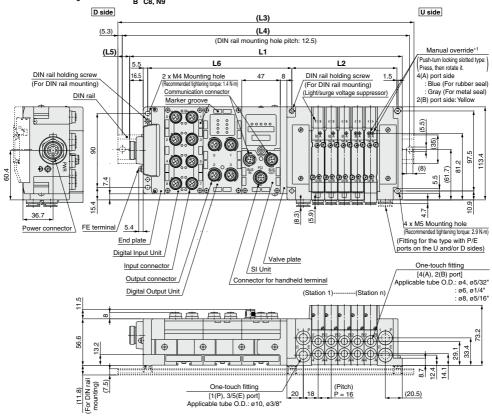

- L1 = 16 x n1 + 158 + 47 x n2 L2 = 16 x n1 + 48
- L4 = L3 10.5
- L5 = (L3 L1)/2 $L6 = 47 \times n2 + 81.5$
- n1: Valve stations
- n2: I/O Unit stations

#### L3: DIN Rail Overall Length


LO. Dire ric	• •	<b>0. u</b>		,···																			
Valve stations (n1) stations (n2)	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
0	223	235.5	248	273	285.5	298	310.5	335.5	348	360.5	385.5	398	410.5	423	448	460.5	473	485.5	510.5	523	535.5	560.5	573
1	260.5	285.5	298	310.5	335.5	348	360.5	373	398	410.5	423	448	460.5	473	485.5	510.5	523	535.5	560.5	573	585.5	598	623
2	310.5	335.5	348	360.5	373	398	410.5	423	435.5	460.5	473	485.5	510.5	523	535.5	548	573	585.5	598	623	635.5	648	660.5
3	360.5	373	398	410.5	423	435.5	460.5	473	485.5	510.5	523	535.5	548	573	585.5	598	610.5	635.5	648	660.5	685.5	698	710.5
4	410.5	423	435.5	460.5	473	485.5	498	523	535.5	548	573	585.5	598	610.5	635.5	648	660.5	685.5	698	710.5	723	748	760.5
5	460.5	473	485.5	498	523	535.5	548	560.5	585.5	598	610.5	635.5	648	660.5	673	698	710.5	723	748	760.5	773	785.5	810.5
6	498	523	535.5	548	560.5	585.5	598	610.5	635.5	648	660.5	673	698	710.5	723	735.5	760.5	773	785.5	810.5	823	835.5	848
7	548	560.5	585.5	598	610.5	623	648	660.5	673	698	710.5	723	735.5	760.5	773	785.5	810.5	823	835.5	848	873	885.5	898
8	598	610.5	623	648	660.5	673	685.5	710.5	723	735.5	760.5	773	785.5	798	823	835.5	848	873	885.5	898	910.5	935.5	948
9	648	660.5	673	685.5	710.5	723	735.5	760.5	773	785.5	798	823	835.5	848	860.5	885.5	898	910.5	935.5	948	960.5	973	_

\*: These figures show the "SS5Y5-10S6Q32-05D-C8".

\*: Refer to page 334 for dimensions of A or B port top-ported type.

\*1: Refer to page 329 for dimensions of external pilot, silencer, elbow fittings and slide locking manual override.

#### Plusin Connector Connecting Base SY3000/5000/7000 Series

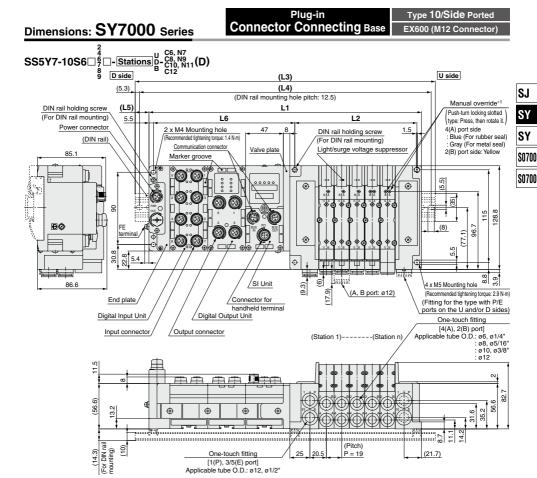

- L1 = 19 x n1 + 149.7 + 47 x n2
- $L2 = 19 \times n1 + 56$
- L3 = DIN rail dimension
- L4 = L3 10.5
- L5 = (L3 L1)/2
- L6 = 47 x n2 + 81.7 n1: Valve stations
- n2: I/O Unit stations

\*1: Refer to page 330 for dimensions of external pilot, silencer, elbow fittings and slide locking manual override.

P = 19

(21.7)

\*: These figures show the "SS5Y7-10S6Q22-05D-C10".

One-touch fitting

[1(P), 3/5(E) port] Applicable tube O.D.: ø12, ø1/2"

\*: Refer to page 335 for dimensions of A or B port top-ported type.


1 3. DIN Rail Overall Length

LJ. DIN NO	all Ov	eran	reni	jui																			
Valve stations (n1) stations (n2)		3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
0	223	235.5	260.5	273	298	310.5	335.5	348	373	385.5	410.5	423	448	460.5	485.5	498	523	535.5	560.5	573	598	610.5	635.5
1	260.5	285.5	298	323	335.5	360.5	373	398	410.5	435.5	448	473	498	510.5	535.5	548	573	585.5	610.5	623	648	660.5	685.5
2	310.5	335.5	348	373	385.5	410.5	423	448	460.5	485.5	498	523	535.5	560.5	573	598	610.5	635.5	648	673	685.5	710.5	723
3	360.5	373	398	410.5	435.5	448	473	485.5	510.5	523	548	573	585.5	610.5	623	648	660.5	685.5	698	723	735.5	760.5	773
4	410.5	423	448	460.5	485.5	498	523	535.5	560.5	573	598	610.5	635.5	648	673	685.5	710.5	723	748	760.5	785.5	798	823
5	448	473	485.5	510.5	523	548	560.5	585.5	598	623	648	660.5	685.5	698	723	735.5	760.5	773	798	810.5	835.5	848	873
6	498	523	535.5	560.5	573	598	610.5	635.5	648	673	685.5	710.5	723	748	760.5	785.5	798	823	835.5	860.5	873	898	923
7	548	560.5	585.5	598	623	635.5	660.5	673	698	723	735.5	760.5	773	798	810.5	835.5	848	873	885.5	910.5	923	948	960.5
8	598	610.5	635.5	648	673	685.5	710.5	723	748	760.5	785.5	798	823	835.5	860.5	873	898	910.5	935.5	948	973	_	_
9	635.5	660.5	673	698	710.5	735.5	748	773	798	810.5	835.5	848	873	885.5	910.5	923	948	960.5	985.5	-	-	_	_

Dimensions: SY7000 Series

Plug-in Connector Connecting Base EX600 (7/8 Inch Connector)

Type 10/Side Ported

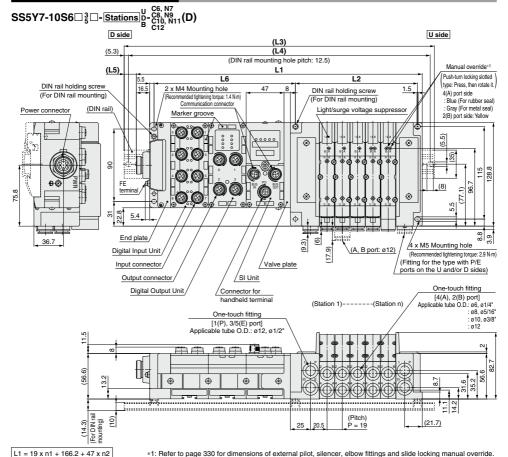

- L2 = 19 x n1 + 56
- L4 = L3 10.5
- L5 = (L3 L1)/2
- $L6 = 47 \times n2 + 81.7$
- n1: Valve stations
- n2: I/O Unit stations
- \*: These figures show the "SS5Y7-10S6Q32-05D-C10".
  - \*: Refer to page 335 for dimensions of A or B port top-ported type.

#### L3: DIN Rail Overall Length

Valve I/O stations Unit (n1) stations (n2)		3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
0	235.5	248	273	285.5	310.5	323	348	360.5	385.5	410.5	423	448	460.5	485.5	498	523	535.5	560.5	573	598	610.5	635.5	648
1	285.5	298	323	335.5	360.5	373	398	410.5	435.5	448	473	485.5	510.5	523	548	560.5	585.5	598	623	635.5	660.5	685.5	698
2	323	348	360.5	385.5	398	423	435.5	460.5	485.5	498	523	535.5	560.5	573	598	610.5	635.5	648	673	685.5	710.5	723	748
3	373	398	410.5	435.5	448	473	485.5	510.5	523	548	560.5	585.5	598	623	635.5	660.5	673	698	710.5	735.5	760.5	773	798
4	423	435.5	460.5	473	498	510.5	535.5	560.5	573	598	610.5	635.5	648	673	685.5	710.5	723	748	760.5	785.5	798	823	835.5
5	473	485.5	510.5	523	548	560.5	585.5	598	623	635.5	660.5	673	698	710.5	735.5	748	773	785.5	810.5	835.5	848	873	885.5
6	510.5	535.5	548	573	585.5	610.5	635.5	648	673	685.5	710.5	723	748	760.5	785.5	798	823	835.5	860.5	873	898	910.5	935.5
7	560.5	585.5	598	623	635.5	660.5	673	698	710.5	735.5	748	773	785.5	810.5	823	848	860.5	885.5	910.5	923	948	960.5	985.5
8	610.5	623	648	660.5	685.5	710.5	723	748	760.5	785.5	798	823	835.5	860.5	873	898	910.5	935.5	948	973	985.5	_	_
9	660.5	673	698	710.5	735.5	748	773	785.5	810.5	823	848	860.5	885.5	898	923	935.5	960.5	985.5	_	_	_	_	_

SJ

SY SY

\$0700

S0700

Plug-in Connector Connecting Base

EX600

# **SY3000/5000/7000** Series






#### **How to Order Manifold**

Refer to pages 333 to 335 for dimensions of Type 12/Top ported type.

SY7000

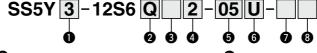

#### Series SY3000 5 SY5000

2 SI Unit

0

Type 12

Top Ported

Without SI Unit

#### 3 SI Unit output polarity, end plate type (Part no.)

	M12 power supply	7/8 inch power supply	M12 power supply connector IN/OUT, A-coded			
SI Unit output polarity	connector B-coded (EX600-ED2)	connector (EX600-ED3)	Pin arrangement 1 (EX600-ED4)	Pin arrangement 2 (EX600-ED5)		
Without SI Unit	Nil					
SI Unit positive common	2	3	6	8		
SI Unit negative common	4	5	7	9		

- \*: Without SI Unit, the symbol is nil.
- \*: Ensure a match with the common specification of the valve to be used.

_				
<b>(4)</b>	I/O	Unit	etatione	

A)	
A)	
)	
5)	
a baaast	

Q	DeviceNet™ (Version A)					
N	PROFIBUS DP (Version A)					
٧	CC-Link					
ZE	EtherNet/IP™ (1 port)					
EA	EtherNet/IP™ (2 ports)					
D	EtherCAT					
F	PROFINET					
WE	EtherNet/IP™ compatible wireless base*1					
WF	PROFINET compatible wireless base*1					
ws	Wireless remote*1					

- Nil None 1 station 9 9 stations Without SI Unit the symbol is nil \* SI Unit is not included in I/O Unit stations \*: When I/O Unit is selected, it is shipped
  - separately, and assembled by users. Refer to the attached operation manual for mounting.

#### Valve stations

Symbol	Stations	Note			
02	2 stations				
:	:	Double wiring*1			
16	16 stations	-			
02	2 stations	0 15 11 12			
:	- :	Specified layout*2			
24	24 stations	(Available up to 32 solenoids)			

- \*1: Double wiring: 2-position single, double, 3-position and 4-position valves can be used on all manifold stations. Use of a 2-position single solenoid will result in an unused control signal. If this is not desired, order with a specified layout.
- \*2: Specified layout: Indicate the wiring specifications on the manifold specification sheet. (Note that 2-position double, 3-position and 4-position valves cannot be used where single wiring has been specified.)
- \*: This also includes the number of blanking plate assembly.

#### \*1: The wireless system is suitable for use only in a country where it is in accordance with the Radio Act and regulations of that country. \*: I/O Unit cannot be mounted without SI Unit.

\*: Valve plate which connects manifold and SI Unit is included, but it is not mounted to a valve without SI Unit. Refer to the EX600 catalog (page 843) for mounting.


P, E port entry	Internal pilot	Built-in silencer	External pilot	
U side (2 to 10 stations)	U	C*1	G	
D side (2 to 10 stations)	D	E*1	Н	
Both sides (2 to 24 stations)	В	_	J	
1. For CLID/FVI block accombly applifications built in alleges times will				

6 P, E port entry, SUP/EXH block assembly

- \*1: For SUP/EXH block assembly specifications, built-in silencer types will have P port entry stipulated.
- \*: For built-in silencer type, P and E ports are available on U and D sides. 3/5(E) port is plugged. The silencer exhaust port is located on the opposite side of P, E port entry. (Example: When the P, E port entry is D side, the silencer exhaust port is U side.)
- \*: When the built-in silencer type is used, keep the exhaust port from

#### Example (SS5Y3-12S6□-□)

How to Order Manifold Assembly

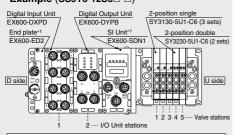

)

The asterisk denotes the symbol for assembly. Prefix it to the part numbers of the valve etc.

- The valve arrangement is numbered as the 1st station from the D side . Under the manifold part number, state the valves to be mounted, then the I/O Units in order from the 1st station as shown in the figure above. If the arrangement becomes complicated, specify on a manifold specification sheet.
- \*1: Do not enter the SI Unit part number and the end plate part number together.

#### coming in direct contact with water or other liquids. P F nort size (One-touch fittings)

• 1, = peri elle (elle telle lillinge)							
Symbol	SY3000	SY5000	SY7000	0			
Nil	ø8	ø10	ø12				
N	ø5/16"	ø3/8"	ø1/2"	M			
				101024 2			

\*: For N, sizes are in inches

Wounting						
Nil	Direct mounting					
D	DIN rail mounting (With DIN rail)					
D0	DIN rail mounting (Without DIN rail)					
D3	For 3 stations	Specify a longer rail than the standard length.				
•	:					
D24	For 24 stations	ulan ille standard lengin.				


- \*: When it is necessary to mount a DIN rail without an SI Unit, select D0 and order DIN rail length separately, referring to L3 in the dimensions. (Refer to page 372 for part numbers of DIN rail.)
- \*: Refer to page 394 for the fixation of DIN rail mounting type manifold.

For details about the EX600 Integrated-type (For Input/Output) Serial Transmission System, refer to pages 815 to 843 and the Operation Manual. For details about part numbers of SI Units to be mounted, refer to pages 360 and 361. (IP40 specifications may be required according to the I/O Unit to be selected.) Please download the Operation Manual via SMC website, http://www.smcworld.com

## Plug-in Connector Connecting Base SY3000/5000/7000 Series

#### How to Order Valves (With mounting screw)

Refer to page 136 for valve specifications.

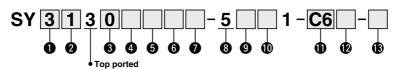

#### Series

2

3

4

5

**A**\*1

B\*1

C\*1

Seal type

4 Pilot type Nil

R

Nil

н

and the SY7000.

Type of actuation

2-position

3-position

4-position

dual 3-port

\*1: Only rubber seal type is available for the 4-position dual 3-port valve.

Rubber seal

Metal seal

Internal nilot

External pilot

None

Built-in

Only rubber seal type. Manifold installed type

is available if the back pressure check valve is required for a valve with metal seal. Refer

to page 379 for Ordering Example. However, it is not recommended to use the built-in

valve type and the manifold installed type at

the same time because it will reduce the flow.

\*: The built-in valve type back pressure check

valve is not available for the 3-position type

5 Back pressure check valve

3	SY3000
5	SY5000
7	SY7000

Single

Double

Closed center

Exhaust center

Pressure center

N.C./N.C

N.O./N.O.

N.C./N.O

### 6 Pilot valve option

Nil	Standard (0.7 MPa)
В	Quick response type (0.7 MPa)
<b>K</b> *1	High pressure type (1.0 MPa)

K*1	High pressure type (1.0 MPa)
*1: Only	metal seal type is available for the
high	nressure type

#### Coil type

1411	Staridard
T	With power saving circuit (Continuous duty type)
*: Be sure to select the power saving circuit	
type when the valve is continuously	
energi	zed for long periods of time.

\*: Be careful of the energizing time when the power saving circuit is selected. Refer to page 391 for details.


### Rated voltage

5	24 VDC	

#### 9 Light/surge voltage suppressor and common specification

Symbol	With light	Surge voltage suppressor	Common specification
R	ı		Non-polar
U	•		Non-polar
S	ı	•	Positive
Z	•	•	common
NS	_		Negative
NZ	•		common

- \*: Select a valve from R, U, S or Z when the SI Unit polarity is positive common. Select a valve from R, U, NS or NZ when the SI Unit output polarity is negative common.
- \*: Only "Z" and "NZ" types are available for with the power saving circuit.

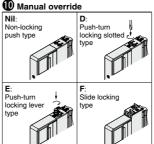

\*: Refer to page 154 for with the safety slide locking manual override.

#### A, B port size

#### Thread piping

Symbol	Port size	Applicable series
M5	M5 x 0.8	SY3000
01	1/8	SY5000
02	1/4	SY7000

#### touch fitting (Matric)

One-touch fitting (wetric)				
Symbol	A, B port	SY3000	SY5000	SY7000
C2	ø2	•	_	_
СЗ	ø3.2	•	_	_
C4	ø4	•	•	_
C6	ø6	•	•	•
C8	ø8	_	•	•
C10	ø10	_	_	•
C12	ø12	_	_	•
		•		•

#### One-touch fitting (Inch)

one todon namy (mon)				
A, B port	SY3000	SY5000	SY7000	
ø1/8"	•	_	_	
ø5/32"	•	•	_	
ø1/4"	•	•	•	
ø5/16"	_	•	•	
ø3/8"	_	_	•	
	A, B port Ø1/8" Ø5/32" Ø1/4" Ø5/16"	A, B port SY3000  ø1/8"  ø5/32"  ø1/4"  ø5/16"  —	A, B port SY3000 SY5000  ∅1/8"	

#### Thread type

Rc
G
NPT
NPTF

\*: Only Nil is available for M5.

#### 13 Type of mounting screw

Nil	Round head combination screw
В	Hexagon socket head cap screw
K	Round head combination screw (Falling-out-prevention type)
Н	Hexagon socket head cap screw (Falling-out-prevention type)

- \*: For "K" and "H", the valve body cover has a drop prevention construction to stop the mounting screws from falling out when the valve is removed for maintenance etc.
- \*: When ordering a valve individually, the base gasket is not included. Since the base gasket is attached to the manifold, please order the base gasket separately if it is needed for maintenance service

Refer to page 367 for part numbers of the base gasket and mounting screw.

\*: "B" and "H" cannot be selected for the individual SUP/EXH spacer assembly or interface regulator.

> Protective class class II (Mark: (ii))

> > 295

SJ

SY

S0700

S0700



EX245

## **SY3000/5000** Series

#### **How to Order Manifold**

## Side Ported/Bottom Ported SS5Y 3 -Refer to page 295-4 (SY5000) for dimensions of Type 11/Bottom ported type

Only direct mounting is selectable for the manifold.

## Series

### 3 SY3000 SY5000

	<b>☑</b> Type		
	10	Side ported	
	11*1	Bottom ported	
*1: For Type 11, only the			

#### Number of I/O modules

Nil	Without I/O module (Without SI Unit)
1	1 station
- :	:
8	8 stations

#### 6 Valve stations

#### (In the case of the 32-output SI Unit)

Symbol	Stations	Note
02	2 stations	
:	:	Double wiring*1
16	16 stations	
02	2 stations	Specified layout*2
:	:	(Available up to 32
24	24 stations	solenoids)

- \*1: Double wiring: 2-position single, double, 3-position and 4-position valves can be used on all manifold stations. Use of a 2-position single solenoid will result in an unused control signal. If this is not desired, order with a specified layout
- \*2: Specified layout: Indicate the wiring specifications on the manifold specification sheet
  - (Note that 2-position double, 3-position and 4-position valves cannot be used where single wiring has been specified.)
- \*3: This also includes the number of blanking plate assembly.

#### P, E port entry

U	U side (2 to 10 stations)
D	D side (2 to 10 stations)
В	Both sides (2 to 24 stations)

#### 8 SUP/EXH block assembly

Nil Internal pilot	
S	Internal pilot, Built-in silencer
R	External pilot

- \*: 3/5(E) port is plugged for the built-in silencer type.
- \*: When the built-in silencer type is used, keep the exhaust port from coming in direct contact with water or other liquids.

#### 3 SI Unit specifications

Symbol (output polarity)	Protocol	Communication	Communication connector
Negative common (PNP)	Protocoi	connector	specifications
0		Without SI Unit	
AAN		Push/Pull	Push/Pull
AAN		(SCRJ): 2 pcs.	(24 V): 2 pcs.
ABN	PROFINET	Push/Pull	Push/Pull
ADN		(RJ45): 2 pcs.	(24 V): 2 pcs.
ACN		M12: 2 pcs.	7/8 inch: 2 pcs.

\*: The valve output polarity for the SI unit is negative common (PNP).

## With or without

I/O modules		
Nil	Without I/O module	
Y	With I/O module	

#### A, B port size (Metric)

Cumbal	A B port		A, B port 10 (Side ported) series		11 (Bottom ported) series					
Symbol		А, В роп		SY3000	SY5000	SY5000				
C2			ø2	•	_	_				
C3	+		ø3.2	•	_	_	١.,			
C4	ig		ø4	•	•	•	1			
C6	Straight		ø6	•	•	•	l			
C8	(O)		ø8	_	•	•				
CM*2		Str	aight port, mixed sizes	•	•	•				
L4		5	ø4	•	•	_				
L6	Elbow :	*1 moq	Jpward	ø6	•	•	_	١.		
L8			*1 moq	5	ø8	_	•	_	(	
B4				ard	ø4	•	•		Г,	
B6				8	8	8	Downward	ø6	•	•
B8		8	ø8	_	•	_	Ę			
LM		Elbow port, mixed sizes (Including upward and downward piping)		•	•	_				
P, E port size (One-touch fittings)			One-touch fittings)	ø8	ø10	ø10				

#### A, B port size (Inch)

0	A, B port		A Dt	10 (Side ported) series		11 (Bottom ported) series	
Symbol			A, B port	SY3000	SY5000	SY5000	
N1	П		ø1/8"	•	_	_	
N3	ᆂ		ø5/32"	•	•	•	
N7	Straight		ø1/4"	•	•	•	
N9	퍐		ø5/16"	_	•	•	
CM*2		Str	aight port, mixed sizes	•	•	•	
LN3			ard	ø5/32"	•	_	_
LN7		×	ø1/4"	•	•	_	
LN9		Upw	ø5/16"	_	•	_	
BN3	*1	ard	ø5/32"	•	_	_	
BN7	Elbow	Downward	ø1/4"	•	•	_	
BN9	Ш	I	õ	ø5/16"	_	•	_
LM			bw port, mixed sizes luding upward and downward piping)	•	•	_	
P, E port size (One-touch fittings)			One-touch fittings)	ø5/16"	ø3/8"	ø3/8"	


- \*1: To avoid interference with the body or piping, select downward elbow port when mounting the optional spacer assembly (pages 373 to 375).
  - \*2: When using mixed sizes for the A and B ports, please indicate so on the separate manifold specification sheet.

For details about the EX245 Integrated-type (For Input/Output) Serial Transmission System, refer to pages 133-1 to 133-15 and the Operation Manual. For details about part numbers of SI Units to be mounted, refer to pages 361-1 and 361-2. Please download the Operation Manual via SMC website, https://www.smcworld.com



### SY3000/5000 Series


#### **How to Order Manifold Assembly**

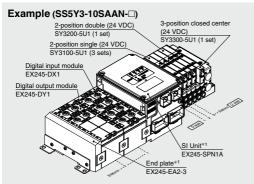

SS5Y3-10SAANY2-05D-C6 ···1 set (Type 10 5-station manifold base part no.) \*SY3100-5U1------3 sets (2-position single part no.) ···1 set (2-position double part no.) \*SY3200-5U1-\*SY3300-5U1---1 set (3-position closed center part no.) \*EX245-DX1 ..... ...1set I/O module part no. EX245-DY1 ..... ..1set I/O module part no. The asterisk denotes the symbol for assembly. Prefix it to the part numbers of the valve etc.

- The valve arrangement is numbered as the 1st station from the D side.
- The I/O module station arrangement is numbered starting from the SI unit side.
- Under the manifold part number, state the valves to be mounted, then the I/O module in order from the 1st station as shown in the figure above. If the arrangement becomes complicated, specify on a manifold specification sheet.
- \*1: Do not enter the SI Unit part number and the end plate part number together. \*: When mixing top ported configurations, select from page 295. In this case, use caution as there is also output on the A and B port on base side. Specify on a manifold specification sheet if plugs are required on the A and B port on base side.

#### How to Order Valves (With mounting screw) Refer to page 136 for valve specifications.

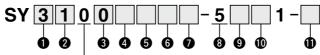

#### Base mounted

#### Series

3	SY3000
5	SY5000

2 Type of actuation

1	2-position	Single
2	2-position	Double
3	3-position	Closed center
4 5		Exhaust center
		Pressure center
<b>A</b> *1	4	N.C./N.C.
B*1 C*1	4-position dual 3-port	N.O./N.O.
		N.C./N.O.

\*1: Only rubber seal type is available for the 4-position dual 3-port valve.

#### 3 Seal type

ı	0	Rubber seal
	1	Metal seal

Pilot type		
Nil	Internal pilot	
R	External pilot	

#### Back pressure check valve (Built-in valve type)

Nil	None
Н	Built-in

- \*: Only rubber seal type. Manifold installed type is available if the back pressure check valve is required for a valve with metal seal. Refer to page 379 for Ordering Example. However, it is not recommended to use the built-in valve type and the manifold installed type at the same time because it will reduce the flow.
- \*: The built-in valve type back pressure check valve is not available for the 3-position type.

#### 6 Pilot valve option

Nil	Standard (0.7 MPa)
В	Quick response type (0.7 MPa)
<b>K</b> *1	High pressure type (1.0 MPa)

\*1: Only metal seal type is available for the high pressure type.

#### Coil type

Nil	Standard
Т	With power saving circuit (Continuous duty type
*: Be su	re to select the power saving circuit

- type when the valve is continuously energized for long periods of time.
- Be careful of the energizing time when the power saving circuit is selected. Refer to page 391 for details.

#### Rated voltage

_	


24 VDC

#### 9 Light/surge voltage suppressor and common specification

Symb	ol	With light	Surge voltage suppressor	Common specification
R				Non-polar
NS		_	•	Negative
NZ		•		common

- \*: "R" and "U" are applicable for every SI Unit.
- \*: Only "NZ" types are available for with the power saving circuit.

#### Manual override

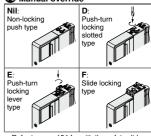

\*: Refer to page 154 for with the safety slide locking manual override.

#### Type of mounting screw

<u>• ,,</u>	oo or mountaing coron
Nil	Round head combination screw
В	Hexagon socket head cap screw
K	Round head combination screw (Falling-out-prevention type)
Н	Hexagon socket head cap screw (Falling-out-prevention type)

- \*: For "K" and "H", the valve body cover has a drop prevention construction to stop the mounting screws from falling out when the valve is removed for maintenance etc.
- \*: When ordering a valve individually, the base gasket is not included. Since the base gasket is attached to the manifold, please order the base gasket separately if it is needed for maintenance service.

Refer to page 367 for part numbers of the base gasket and mounting screw.

\*: "B" and "H" cannot be selected for the individual SUP/EXH spacer assembly, interface regulator or double check spacer assembly with residual pressure release valve.









## **SY3000/5000** Series

Plug-in Connector Connecting Base Type 10/Side Ported
EX245

Dimensions: **SY3000** Series

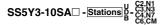

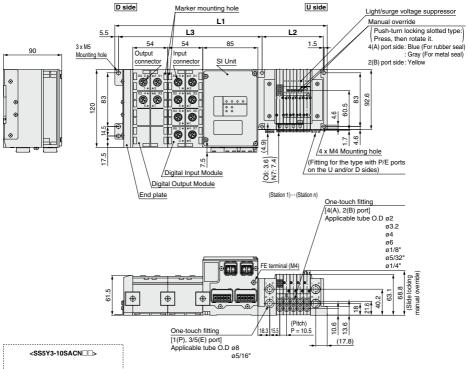

- \*: These figures show the "SS5Y3-10SAANY2-05D-C6".
- \*: Refer to page 328 for dimensions of external pilot, silencer and elbow fittings.
- \*: Refer to page 333 for dimensions of A or B port top-ported type.

L3 = 54n2 + 113.6

FE terminal (M4)

Dimensi	ons	Formula	a/L1 = 10	.5n1 + 16	7.1 L2 = 1	10.5n1 + 4	42 * Th	e L1 dime	ension is	the dimer	sion with	out an I/C	module.	Add 54 m	nm to this	dimensio	n for eac	h I/O mod	lule. * n2	is the nu	mber of I	O module	e stations.
Stations n1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
L1	188.1	198.6	209.1	219.6	230.1	240.6	251.1	261.6	272.1	282.6	293.1	303.6	314.1	324.6	335.1	345.6	356.1	366.6	377.1	387.6	398.1	408.6	419.1
L2	63	73.5	84	94.5	105	115.5	126	136.5	147	157.5	168	178.5	189	199.5	210	220.5	231	241.5	252	262.5	273	283.5	294

## Plug-in Connector Connecting Base SY3000/5000 Series

Type 10/Side Ported EX245


SJ


SY

S0700

S0700

### Dimensions: SY5000 Series

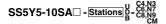

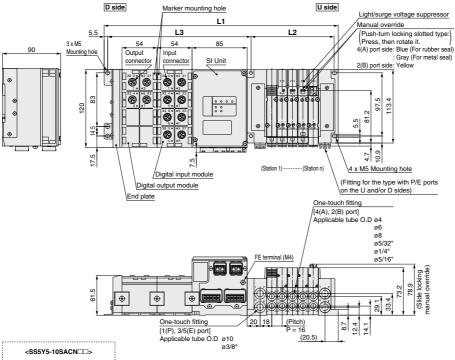

- \* These figures show the "SS5Y5-10SAANY2-05D-C8".
  - \* Refer to page 329 for dimensions of external pilot, silencer and elbow fittings.
  - \* Refer to page 334 for dimensions of A or B port top-ported type.

L3 = 54n2 + 113.1

FE terminal (M4)

Dimension	ons	Formul	a/L1 = 16	in1 + 173	.1 L2 = 1	6n1 + 48	* The l	L1 dimen:	sion is the	e dimensi	on withou	ıt an I/O r	nodule. A	idd 54 mi	n to this o	limension	for each	I/O modu	ıle. * n2	is the nu	mber of I/	O module	e stations.
Stations n1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
L1	205.1	221.1	237.1	253.1	269.1	285.1	301.1	317.1	333.1	349.1	365.1	381.1	397.1	413.1	429.1	445.1	461.1	477.1	493.1	509.1	525.1	541.1	557.1
1.2	80	96	112	128	144	160	176	192	208	224	240	256	272	288	304	320	336	352	368	384	400	416	432


EX245

Type 12
Top ported

# **SY3000/5000** Series

**( (** RoHS

#### **How to Order Manifold**

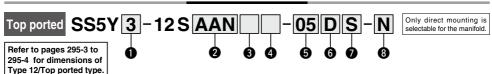

#### 1 Series

SY3000
SY5000

#### 3 With or without I/O modules

Nil	Without I/O module
Υ	With I/O module

#### 4 Number of I/O modules

Nil	Without I/O module (Without SI Unit)
1	1 station
:	:
8	8 stations

#### 6 P, E port entry

		. ,
U	Т	U side (2 to 10 stations)
D		D side (2 to 10 stations)
В	Т	Both sides (2 to 24 stations)

For details about the EX245 Integrated-type (For Input/Output) Serial Transmission System, refer to pages 133-1 to 133-15 and the Operation Manual. For details about part numbers of SI Units to be mounted, refer to pages 361-1 and 361-2. Please download the Operation Manual via SMC website, https://www.smcworld.com

#### 2 SI Unit specifications

Symbol (output polarity) Negative common (PNP)		Communication connector	Communication connector specifications
0	Without SI Unit		
AAN		Push/Pull (SCRJ): 2 pcs.	Push/Pull (24 V): 2 pcs.
ABN	PROFINET	Push/Pull (RJ45): 2 pcs.	Push/Pull (24 V): 2 pcs.
ACN		M12: 2 pcs.	7/8 inch: 2 pcs.

\*: The valve output polarity for the SI unit is negative common (PNP).

#### Valve stations

#### (In the case of the 32-output SI Unit)

Stations	Note
2 stations	
	Double wiring*1
16 stations	
2 stations	Specified layout*2
	(Available up to 32
24 stations	solenoids)
	2 stations : 16 stations 2 stations :

- \*1: Double wiring: 2-position single, double, 3-position and 4-position valves can be used on all manifold stations. Use of a 2-position single solenoid will result in an unused control signal. If this is not desired, order with a specified layout
- 2: Specified layout: Indicate the wiring specifications on the manifold specification sheet. (Note that 2-position double, 3-position and 4-position valves cannot be used where single
- wiring has been specified.)

  \*: This also includes the number of blanking plate
  assembly

#### 7 SUP/EXH block assembly


Nil	Internal pilot
S	Internal pilot, Built-in silencer
R	External pilot

- \*: 3/5(E) port is plugged for the built-in silencer type.The silencer exhaust port is located on the opposite side of P, E port entry. (Example: When the P, E port entry is D side, the silencer exhaust port is U side.)
- \*: When the built-in silencer type is used, keep the exhaust port from coming in direct contact with water or other liquids.

## P, E port size

(One-touch littings)		
Symbol	SY3000	SY5000
Nil	ø8	ø10
N	ø5/16"	ø3/8"

#### **How to Order Manifold Assembly**

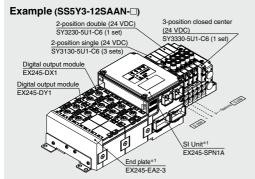

SS5Y3-12SAANY2-05DS-N·····1 set (Type 12 5-station manifold base part no.)
*SY3130-5U1-C63 sets (2-position single part no.)
*SY3220-5U1-C61 set (2-position double part no.)
*SY3330-5U1-C61 set (3-position closed center part no.)
*EX245-DX11set I/O module part no.
*EX245-DY11set I/O module part no.
I

The asterisk denotes the symbol for assemb Prefix it to the part numbers of the valve etc.

- The valve arrangement is numbered as the 1st station from the D side.
- The I/O module station arrangement is numbered starting from the SI unit side.
   Under the manifold part number, state the valves to be mounted, then the I/O.
- Under the manifold part number, state the valves to be mounted, then the I/O module in order from the 1st station as shown in the figure above. If the arrangement becomes complicated, specify on a manifold specification sheet.
- \*1: Do not enter the SI Unit part number and the end plate part number together.
  \*: When mixing top ported configurations, select from page 295. In this case, use caution as there
- is also output on the A and B port on base side.

  Specify on a manifold specification sheet if plugs are required on the A and B port on base side.

## Plug-in Connector Connecting Base SY3000/5000 Series

#### How to Order Valves (With mounting screw)


Refer to page 136 for valve specifications.

SJ

SY

S0700

S0700

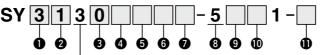

#### Top mounted

#### Series

3	SY3000
5	SY5000

#### 2 Type of actuation

1	2-position	Single
2		Double
3		Closed center
4	3-position	Exhaust center
5		Pressure center
<b>A</b> *1	4-position dual 3-port valve	N.C./N.C.
<b>B</b> ∗1		N.O./N.O.
C*1		N.C./N.O.

\*1: Select the rubber seal type for the 4-position dual 3-port valve.

### Seal type

0	Rubber seal
1	Metal seal

#### 4 Pilot type

Nil	Internal pilot
R	External pilot

#### 5 Back pressure check valve Nil None

*1: Select the rubber seal type when the back
pressure check valve is built-in. Manifold
installed type is available if the back
pressure check valve is required for a valve
with metal seal. For ordering example, refe
to page 379. However, it is not

Built-in

recommended to use the built-in valve type and the manifold installed type at the same

time because it will reduce the flow. \*: Select "Nil" for 3-position type.

#### 6 Pilot valve option

Nil	Standard (0.7 MPa)
В	Quick response type (0.7 MPa)
<b>K</b> *1	High pressure type (1.0 MPa)

\*1: Select the metal seal type for high pressure type.

#### Coil type

Nil	Standard
Т	With power saving circuit (Continuous duty type)*1*2

- \*1: Be sure to select the power saving circuit type when the valve is continuously energized for long periods of time.
- \*2: Be careful of the energizing time when the power saving circuit is selected. For details, refer to page 391.

#### Rated voltage


•	.ou .ougo
5	24 VDC

#### 9 Light/surge voltage suppressor and common specification

	With light	Surge voltage suppressor	Common specification	
R	_		Non-polar	
U	•	•		
NS	_	•	Negative	
NZ	•		common	

\*: Select "NZ" for with the power saving circuit.

#### Manual override

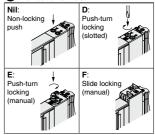

\*: Refer to page 154 for with the safety slide locking manual override.

#### Type of mounting screw

Nil	Round head combination screw
В	Hexagon socket head cap screw
к	Round head combination screw (Falling-out-prevention type)*1
н	Hexagon socket head cap screw (Falling-out-prevention type)*1

- \*1: For "K" and "H", the valve body cover has a drop prevention construction to stop the mounting screws from falling out when the valve is removed for maintenance etc.
- \*: When ordering a valve individually, the base gasket is not included. Since the base gasket is attached to the manifold, please order the base gasket separately if it is needed for maintenance service

Refer to page 367 for part numbers of the base gasket and mounting screw.

\*: Select "Nil" or "K" for the optional individual SUP/EXH spacer assembly, interface regulator or double check spacer assembly with residual pressure release valve.

**ØSMC** 

Type 10 **Type 11 Bottom Ported** 

## Plug-in Connector Connecting Base

# SY3000/5000/7000 Series

( E c RoHS



#### **How to Order Manifold**

Refer to pages 331 (SY5000) and 332 (SY7000) for dimensions of Type 11/Bottom ported type.

SS5Y 3 -

#### Series SY3000 SY5000

**2** Т<u>уре</u> Side ported Bottom ported\*

\*1: The SY5000 manifold base is used for the bottom ported of the SY3000. When ordering, refer to "Plug-in Mixed Mounting Type Manifold" (from page 336).

#### Input block stations

None						
1 station						
8 stations						

\*: Without SI Unit, the symbol is nil. The maximum number of stations is limited for the AS-Interface applicable SI Unit.

#### SI Unit

0	Without SI Unit							
Q	Device	Net™ (N	legative common)					
N	PROFIB		Negative common)					
TA		2 power supply	8 in/8 out, 31 slave modes					
TB	AS-Interface	systems 1 power	4 in/4 out, 31 slave modes					
TC	(Negative common)		8 in/8 out, 31 slave modes					
TD	Common	supply systems	4 in/4 out, 31 slave modes					
Υ	CAN	CANopen (Negative common)						
ZE	EtherNe	et/IP™ (I	Negative common)					

- \*: Ensure a match with the common specification of the valve to be used.
- \*: Input block cannot be mounted without SI Unit.
- \*: The supply current from the SI Unit of AS-Interface applicable 1 power supply system specification to the input block and valve is limited.

#### Input block type


	PNP sensor input	NPN sensor input					
Without input block	Nil						
M12, 2 inputs	Α	D					
M12, 4 inputs	В	E					
M8, 4 inputs	С	F					
*: Without SI I Init the symbol is nil							

#### 6 Valve stations

Stations	Note
2 stations	
- :	Double wiring*1
16 stations	
2 stations	Cassified lavaute?
- :	Specified layout*2 (Available up to 32 solenoids)
24 stations	(Available up to 32 soleriolus)
	2 stations : 16 stations

- \*1: Double wiring: 2-position single, double, 3-position and 4-position valves can be used on all manifold stations. Use of a 2-position single solenoid will result in an unused control signal. If this is not desired, order with a specified layout.
- \*2: Specified layout: Indicate the wiring specifications on the manifold specification sheet. (Note that 2-position double, 3-position and 4-position valves cannot be used where single wiring has been specified.) When determining the number of valve stations note that the maximum number of solenoids for the AS-Interface applicable SI Unit specification is as follows.
  - · 8 in/8 out specification; Max. 8 solenoids
  - 4 in/4 out specification: Max. 4 solenoids
- \*: This also includes the number of blanking plate assembly.
- \*: For the product without the SI Unit (S0), note the maximum number of solenoids of the SI Unit that will be mounted. If the layout is specified, indicate it on the manifold specification sheet.

## How to Order Manifold Assembly

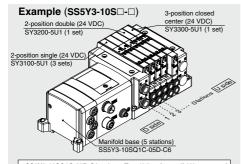

SS5Y3-10SQ1C-05D-C6	1	set (Type 10 5-station manifold base part no.)
*SY3100-5U1	3	sets (2-position single part no.)
*SY3200-5U1	1	set (2-position double part no.)
*SV3300-5111	1	set (3-nosition closed center part no.)

- The asterisk denotes the symbol for assembly. Prefix it to the part numbers of the valve etc.
- The valve arrangement is numbered as the 1st station from the D side. . Under the manifold part number, state the valves to be mounted in order from the 1st station as shown in the figure above. If the arrangement becomes complicated, specify on a manifold specification sheet.
- \*: When mixing top ported configurations, select from page 303. In this case, use caution as there is also output on the A and B port on base side. Specify on a manifold specification sheet if plugs are required on the A and B nort on base side

#### P, E port entry, SUP/EXH block assembly

P, E port entry	Internal pilot	Internal pilot, Built-in silencer	External pilot
U side (2 to 10 stations)	U	С	G
D side (2 to 10 stations)	D	E	Н
Both sides (2 to 24 stations)	В	F	J

\*: 3/5(E) port is plugged for the built-in silencer type.

\*: When the built-in silencer type is used, keep the exhaust port from coming in direct contact with water or other liquids.

For details about the EX250 Integrated-type (For Input/Output) Serial Transmission System, refer to pages 802 to 814 and the Operation Manual. For details about part numbers of SI Units to be mounted, refer to page 362. Please download the Operation Manual via SMC website, http://www.smcworld.com

## Plusin Connector Connecting Base SY3000/5000/7000 Series

SJ

S0700

S0700

8 A, B port size (Metric/One-touch fitting)

Symbol		A, B port		Type 1	10/Side	ported	Type 11/Bo	ttom ported		
Symbol		Α,	в роп	SY3000	SY5000	SY7000	SY5000	SY7000		
C2			ø2	•	_	_	_	_		
СЗ			ø3.2	•	_	_	_	_		
C4	+		ø4	•	•	_	•	-		
C6	igh		ø6	•	•	•	•	•		
C8	Straight		ø8	_	•	•	•	•	2 4 0	
C10			ø10	_	_	•	_	•	S SEE	
C12			ø12	_	_	•	_	•		
CM*1		Straig	ht port, mixed sizes	•	•	•	•	•		
L4			ø4	•	•	_	_	_		
L6		Upward	ø6	•	•	•	_	_		
L8			ø8	_	•	•				
L10			=	ø10	_	_	•	_	_	
L12	2		ø12	_	_	•	_	_	₩ Jaller	
B4	Elbow*2	_	ø4	•	•	_	_	_		
B6	ΕIΡ	/arc	ø6	•	•	•	_	_		
B8		Downward	ø8	_	•	•	_	_		
B10		8	ø10	_	_	•	_	_		
B12			ø12	_	_	•	_	_		
LM*1		(Ind	w port, mixed sizes uding upward and wnward piping)	•	•	•	_	_		
	P, E port size (One-touch fittings)		ø8	ø10	ø12	ø10	ø12			

				313000	313000	317000	313000	317000	
N1			ø1/8"	•	_	_	_	_	
N3			ø5/32"	•	•	_	•	_	
N7	igh		ø1/4"	•	•	•	•	•	
N9	Stra		ø5/16"	_	•	•	•	•	
N11	0,		ø3/8"	_	_	•	_	•	ol Source
CM*1		Straig	ht port, mixed sizes	•	•	•	•	•	
LN3			ø5/32"	•					
LN7		vard	ø1/4"	•	•	_	_	_	
LN9		흑	ø5/16"	_	•	_	_	_	
	N3 N7 N9 N11 CM*1 LN3 LN7	N3 N7 N9 N11 CM*1 LN3 LN7	N3 N7 Hubit 1	N1 N3 N7 N9 N9 N11 CM-1 Straight port, mixed sizes LN3	N1 N3 N7 N9 05/32"	N1 N3 N7 N9 05/32"	N1   01/8*	N1	N3

Type 10/Side ported Type 11/Bottom ported SYSURIEVENING SYSURIEVENING SYSURIE

a3/8" a1/2"

A, B port size (Inch/One-touch fitting)

ø3/8" ø1/21

\*1: Indicate the sizes on the manifold specification sheet in the case of "CM", "LM". The direction of P, E port fittings is the same as for A, B port. If selecting "LM", indicate it on the manifold specification sheet for the P, E port fitting direction.

LN11

BN3

BN7

BN9

BN11

LM\*

ø3/8'

ø5/32

a1/4

ø5/16'

ø3/8

(Including upward and downward piping) P, E port size

(One-touch fittings)

.

•

a5/16'

\*2: To avoid interference with the body or piping, select downward elbow port when mounting the optional spacer assembly (pages 373 to 375).

#### Mounting and Option

•	O mounting and option									
0	Manager	Opt	tion	DIN Rai	il Option					
Symbol	Mounting	Name plate	Station number	Nil		mounting				
Nil	l .		_	0		rail (with bracket)				
AA	Direct mounting	•	•	3	For 3 stations	Specify a longer				
BA	mounting	•	_	:	- :	rail than the total length of specified				
D□		_	_	24	For 24 stations	stations.				
A□	DIN rail mounting	•	•							
B□	inounting	•	_							
		_								

- \*: Enter the number of stations inside 


  when it is larger than the number of valve stations. (Refer to "DIN Rail Option" above.)
- \*: Only direct mounting is available for Type 11 (Bottom ported).
   \*: Refer to page 394 for the fixation of DIN rail mounting type manifold.
- \*: When it is necessary to mount a DIN rail without an SI Unit, select D0 and order DIN rail length separately, referring to L3 in the dimensions. (Refer to page 372 for part numbers of DIN rail.)

297



#### How to Order Valves (With mounting screw)

Refer to page 136 for valve specifications.

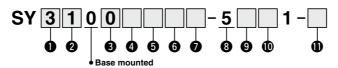

#### 1 Series

SY3000
SY5000
SY7000

#### 2 Type of actuation

1	O manitian	Single							
2	2-position	Double							
3		Closed center							
4	3-position	Exhaust center							
5		Pressure center							
<b>A</b> *1	4 position	N.C./N.C.							
B*1 C*1	4-position dual 3-port	N.O./N.O.							
	duai o-poit	N.C./N.O.							

\*1: Only rubber seal type is available for the 4-position dual 3-port valve.

9 00	ai type
0	Rubber seal
1	Metal seal

#### Pilot type

Seal type

Nil	Internal pilot
R	External pilot

## Back pressure check valve (Built-in valve type)

Nil		None		
Н		Built-in		
	. de le	A 4 14 - 1 -1	to a kar Harat	A

- «: Only rubber seal type. Manifold installed type is available if the back pressure check valve is required for a valve with metal seal. Refer to page 379 for Ordering Example. However, it is not recommended to use the built-in valve type and the manifold installed type at the same time because it will reduce the flow.
- \*: The built-in valve type back pressure check valve is not available for the 3-position type and the SY7000.

#### 6 Pilot valve option

	ot raire option									
Nil Standard (0.7 MPa)										
В	Quick response type (0.7 MPa)									
<b>K</b> *1	High pressure type (1.0 MPa)									

\*1: Only metal seal type is available for the high pressure type.

#### Coil type

NII	Standard
Т	With power saving circuit (Continuous duty type)
*: Be sui	re to select the power saving circuit

- \*: Be sure to select the power saving circuit type when the valve is continuously energized for long periods of time.
- \*: Be careful of the energizing time when the power saving circuit is selected. Refer to page 391 for details.

#### Rated voltage


5	24 VDC

#### Light/surge voltage suppressor and common specification

Symbol	With light	Surge voltage suppressor	Common specification				
R	ı		Non-polar				
U	•		INOI1-polai				
S	_	•	Positive				
Z	•	_	common				
NS	1		Negative				
NZ	•		common				

- \*: "R" and "U" are applicable for every SI Unit. However, "S" and "Z" can be used only for CC-Link applicable Unit and "NS" and "NZ" are for Units which are not CC-Link applicable.
- \*: Only "Z" and "NZ" types are available for with the power saving circuit.

#### Manual override

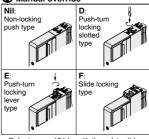

\*: Refer to page 154 for with the safety slide locking manual override.

#### Type of mounting screw

- ,,	· · · · · · · · · · · · · · · · ·
Nil	Round head combination screw
В	Hexagon socket head cap screw
K	Round head combination screw (Falling-out-prevention type)
Н	Hexagon socket head cap screw (Falling-out-prevention type)

- \*: For "K" and "H", the valve body cover has a drop prevention construction to stop the mounting screws from falling out when the valve is removed for maintenance etc.
- When ordering a valve individually, the base gasket is not included. Since the base gasket is attached to the manifold, please order the base gasket separately if it is needed for maintenance service.

Refer to page 367 for part numbers of the base gasket and mounting screw.


\*: "B" and "H" cannot be selected for the individual SUP/EXH spacer assembly, interface regulator or double check spacer assembly with residual pressure release


## Plusin Connector Connecting Base SY3000/5000/7000 Series

Dimensions: SY3000 Series

Plug-in Connector Connecting Base Type 10/Side Ported EX250

C2 -C3, N1 C4, N3 C6, N7 SS5Y3-10S ... Stations D

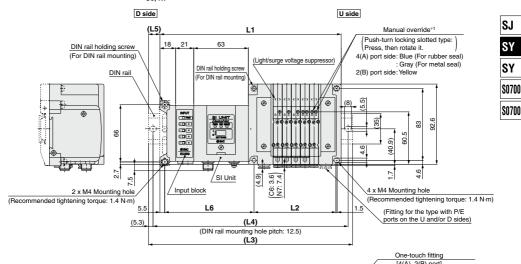

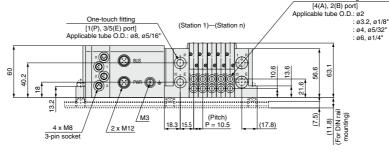

\*1: Refer to page 328 for dimensions of external pilot, silencer, elbow fittings and slide locking manual override.

- L1 = 10.5 x n1 + 135.5 + 21 x n2
- L2 = 10.5 x n1 + 42
- L4 = L3 10.5
- L5 = (L3 L1)/2
- $L6 = 21 \times n2 + 82$
- n1: Valve stations
- n2: Input block stations

L3: DIN Ra	ail Ov	erall	Leng	gth																			
Valve stations (n1) block stations (n2)	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
0	185.5	198	210.5	223	223	235.5	248	260.5	273	285.5	285.5	298	310.5	323	335.5	348	348	360.5	373	385.5	398	410.5	423
1	210.5	223	223	235.5	248	260.5	273	285.5	285.5	298	310.5	323	335.5	348	348	360.5	373	385.5	398	410.5	423	423	435.5
2	223	235.5	248	260.5	273	285.5	285.5	298	310.5	323	335.5	348	348	360.5	373	385.5	398	410.5	423	423	435.5	448	460.5
3	248	260.5	273	285.5	285.5	298	310.5	323	335.5	348	348	360.5	373	385.5	398	410.5	423	423	435.5	448	460.5	473	485.5
4	273	285.5	285.5	298	310.5	323	335.5	348	348	360.5	373	385.5	398	410.5	423	423	435.5	448	460.5	473	485.5	485.5	498
5	285.5	298	310.5	323	335.5	348	348	360.5	373	385.5	398	410.5	423	423	435.5	448	460.5	473	485.5	485.5	498	510.5	523
6	310.5	323	335.5	348	348	360.5	373	385.5	398	410.5	423	423	435.5	448	460.5	473	485.5	485.5	498	510.5	523	535.5	548
7	335.5	348	348	360.5	373	385.5	398	410.5	423	423	435.5	448	460.5	473	485.5	485.5	498	510.5	523	535.5	548	548	560.5
8	348	360.5	373	385.5	398	410.5	423	423	435.5	448	460.5	473	485.5	485.5	498	510.5	523	535.5	548	548	560.5	573	585.5

\*: These figures show the "SS5Y3-10SQ1A-05D-C6".


\*: Refer to page 333 for dimensions of A or B port top-ported type.

Dimensions: SY5000 Series

Plug-in Connector Connecting Base

Type 10/Side Ported

SS5Y5-10S - Stations D - C6, N7 (D)

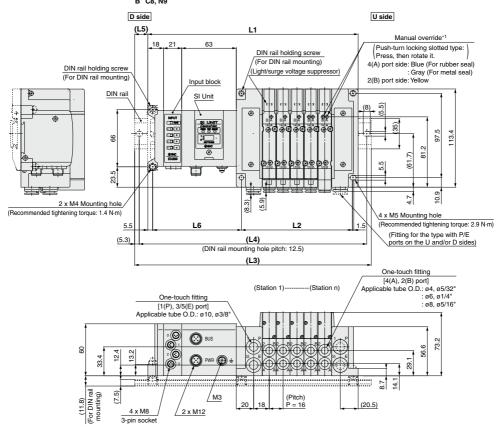

L1 = 16 x n1 + 141.5 + 21 x n2  $L2 = 16 \times n1 + 48$ 

L4 = L3 - 10.5L5 = (L3 - L1)/2

 $L6 = 21 \times n2 + 81.5$ 

n1: Valve stations

n2: Input block stations

L3: DIN Ra	ail Ov	erall	Leng	gth																			
Valve stations (n1) lnput block stations (n2)	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
0	198	223	235.5	248	273	285.5	298	310.5	335.5	348	360.5	373	398	410.5	423	448	460.5	473	485.5	510.5	523	535.5	560.5
1	223	235.5	260.5	273	285.5	298	323	335.5	348	373	385.5	398	410.5	435.5	448	460.5	485.5	498	510.5	523	548	560.5	573
2	248	260.5	273	298	310.5	323	335.5	360.5	373	385.5	410.5	423	435.5	448	473	485.5	498	523	535.5	548	560.5	585.5	598
3	260.5	285.5	298	310.5	335.5	348	360.5	373	398	410.5	423	448	460.5	473	485.5	510.5	523	535.5	548	573	585.5	598	623
4	285.5	298	323	335.5	348	373	385.5	398	410.5	435.5	448	460.5	473	498	510.5	523	548	560.5	573	585.5	610.5	623	635.5
5	310.5	323	335.5	360.5	373	385.5	398	423	435.5	448	473	485.5	498	510.5	535.5	548	560.5	585.5	598	610.5	623	648	660.5
6	323	348	360.5	373	398	410.5	423	435.5	460.5	473	485.5	510.5	523	535.5	548	573	585.5	598	623	635.5	648	660.5	685.5
7	348	360.5	385.5	398	410.5	435.5	448	460.5	473	498	510.5	523	548	560.5	573	585.5	610.5	623	635.5	648	673	685.5	698
8	373	385.5	398	423	435.5	448	473	485.5	498	510.5	535.5	548	560.5	573	598	610.5	623	648	660.5	673	685.5	710.5	723

\*: These figures show the "SS5Y5-10SQ1A-05D-C8".

\*: Refer to page 334 for dimensions of A or B port top-ported type.


\*1: Refer to page 329 for dimensions of external pilot, silencer, elbow fittings and slide locking manual override.

## Plusin Connector Connecting Base SY3000/5000/7000 Series



Plug-in Connector Connecting Base Type 10/Side Ported EX250

C6, N7 -C8, N9 -C10, N11 C12 SS5Y7-10S . . Stations D

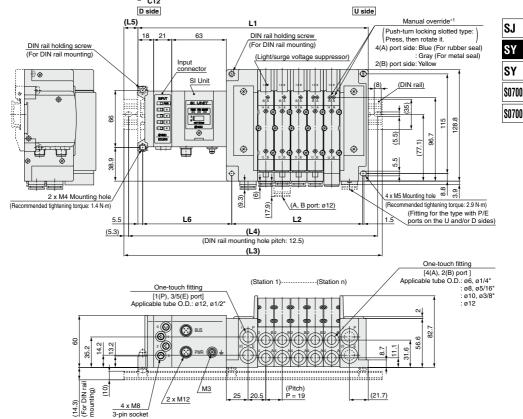

L1 = 19 x n1 + 149.7 + 21 x n2 L2 = 19 x n1 + 56

L4 = L3 - 10.5

L5 = (L3 - L1)/2 $L6 = 21 \times n2 + 81.7$ 

n1: Valve stations

- n2: Input block stations
- \*1: Refer to page 330 for dimensions of external pilot, silencer, elbow fittings and slide locking manual override. \*: These figures show the "SS5Y7-10SQ1A-05D-C10".

P = 19

(21.7)

\*: Refer to page 335 for dimensions of A or B port top-ported type.

/2 x M12

4 x M8 3-pin socket 20.5

L3: DIN Ra	L3: DIN Rail Overall Length																						
Valve stations (n1)	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
I/O Unit stations (n2)																							
0	223	235.5	260.5	273	298	310.5	335.5	348	373	385.5	410.5	423	448	460.5	485.5	498	523	535.5	560.5	573	598	610.5	635.5
1	235.5	260.5	273	298	310.5	335.5	348	373	385.5	410.5	423	448	460.5	485.5	498	523	548	560.5	585.5	598	623	635.5	660.5
2	260.5	273	298	310.5	335.5	348	373	398	410.5	435.5	448	473	485.5	510.5	523	548	560.5	585.5	598	623	635.5	660.5	673
3	285.5	298	323	335.5	360.5	373	398	410.5	435.5	448	473	485.5	510.5	523	548	560.5	585.5	598	623	635.5	660.5	673	698
4	298	323	335.5	360.5	373	398	410.5	435.5	448	473	485.5	510.5	523	548	573	585.5	610.5	623	648	660.5	685.5	698	723
5	323	335.5	360.5	373	398	423	435.5	460.5	473	498	510.5	535.5	548	573	585.5	610.5	623	648	660.5	685.5	698	723	735.5
6	348	360.5	385.5	398	423	435.5	460.5	473	498	510.5	535.5	548	573	585.5	610.5	623	648	660.5	685.5	698	723	748	760.5
7	360.5	385.5	398	423	435.5	460.5	473	498	510.5	535.5	548	573	598	610.5	635.5	648	673	685.5	710.5	723	748	760.5	785.5
8	385.5	398	423	448	460.5	485.5	498	523	535.5	560.5	573	598	610.5	635.5	648	673	685.5	710.5	723	748	760.5	785.5	798

## Type 12 Top Ported

## **Plug-in Connector Connecting Base**


EX250

## **SY3000/5000/7000** Series





#### **How to Order Manifold**

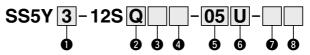

Refer to pages 333 to 335 for dimensions of Type 12/Top ported type.

## ported type. Series

3 SY3000 5 SY5000 7 SY7000

3 Input block stations

Nil	None			
1	1 station			
:	:			
8	8 stations			
MONEY COLLEGE OF THE				

\*: Without SI Unit, the symbol is nil. The maximum number of stations is limited for the AS-Interface applicable SI Unit.

4 Input block type

	PNP sensor input	NPN sensor input
Without input block	N	il
M12, 2 inputs	Α	D
M12, 4 inputs	В	E
M8, 4 inputs	C	F

\*: Without SI Unit, the symbol is nil.

## 2 SI Unit

0	Without SI Unit  DeviceNet™ (Negative common)  PROFIBUS DP (Negative common)					
Q						
N						
TA	AS-Interface (Negative common)	2 power supply	8 in/8 out, 31 slave modes			
TB		systems	4 in/4 out, 31 slave modes			
TC		1 power	8 in/8 out, 31 slave modes			
TD		supply systems	4 in/4 out, 31 slave modes			
Υ	CANopen (Negative common) EtherNet/IP™ (Negative common)					
ZE						
*: Encure a match with the common enceification						

- Ensure a match with the common specification of the valve to be used.
- \*: Input block cannot be mounted without SI Unit. \*: The supply current from the SI Unit of
- AS-Interface applicable 1 power supply system specification to the input block and valve is limited


#### Valve stations

_		, o.u					
Symbol	Stations	Note					
02	2 stations						
1	- :	Double wiring*1					
16	16 stations	Ü					
02	2 stations	0					
:	- :	Specified layout*2 (Available up to 32 solenoids)					
24	24 stations	(Available up to 32 soleriolds)					
*1: Double wiring: 2-position single double							

- Double wiring: 2-position single, double, 3-position and 4-position valves can be used on all manifold stations.
   Use of a 2-position single solenoid will result in an unused control signal. If this is not desired, order with a specified layout.
- \*2: Specified layout: Indicate the wiring specifications on the manifold specification sheet. (Note that 2-position double, 3-position and 4-position valves cannot be used where single wiring has been specified.) When determining the number of valve stations, note that the maximum number of solenoids for the AS-Interface applicable SI
  - Unit specification is as follows.

     8 in/8 out specification: Max. 8 solenoids
- 4 in/4 out specification: Max. 4 solenoids
   This also includes the number of blanking plate
- assembly.
  \*: For the product without the SI Unit (S0), note the maximum number of solenoids of the SI Unit that will be mounted. If the layout is specified, indicate it on the manifold specification sheet

### **How to Order Manifold Assembly**

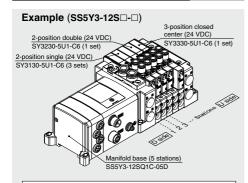

\$\$573-12\$Q1C-05D \cdots 1 set (Type 12 5-station manifold base part no.)
\$\$Y3130-5U1-C6 \cdots 3 sets (2-position single part no.)
\$\$Y3230-5U1-C6 \cdots 1 set (2-position double part no.)

Prefix it to the part numbers of the valve etc.

The valve arrangement is numbered as the 1st station from the D side.
Under the manifold part number, state the valves to be mounted in order from the 1st station as shown in the figure above. If the arrangement becomes complicated, specify on a manifold specification sheet.

#### 6 P, E port entry, SUP/EXH block assembly

P, E port entry	Internal pilot	Internal pilot, Built-in silencer	External pilot
U side (2 to 10 stations)	U	C*1	G
D side (2 to 10 stations)	D	E*1	Н
Both sides (2 to 24 stations)	В	_	J

- \*1: For SUP/EXH block assembly specifications, built-in silencer types will have P port entry stipulated.
- \*: For built-in silencer type, P and E ports are available on U and D sides. 3/5(E) port is plugged. The silencer exhaust port is located on the opposite side of P, E port entry.
- Example: When the P, E port entry is D side, the silencer exhaust port is U side.)

  \*: When the built-in silencer type is used, keep the exhaust port from coming in direct contact with water or other liquids.

#### P, E port size (One-touch fittings)

Symbol	SY3000	SY5000	SY7000	
Nil	ø8	ø10	ø12	
N	ø5/16"	ø3/8"	ø1/2"	

\*: For N, sizes are in inches.

Nil Direct mounting
D DIN rail mounting (With DIN rail)
D0 DIN rail mounting (Without DIN rail)
D3 For 3 statios | Specify a longer
| : | rail than the

D24 For 24 stations standard length.


- If the DIN rail must be mounted without an SI Unit, select Do. Then, refer to L3 of the dimensions for the DIN rail length and order separately. (Refer to page 372 for the DIN rail part number.)
- \*: Refer to page 394 for the fixation of DIN rail mounting type manifold.

For details about the EX250 Integrated-type (For Input/Output) Serial Transmission System, refer to pages 802 to 814 and the Operation Manual. For details about part numbers of SI Units to be mounted, refer to page 362. Please download the Operation Manual via SMC website, http://www.smcworld.com

## Plug-in Connector Connecting Base SY3000/5000/7000 Series

#### How to Order Valves (With mounting screw)

Refer to page 136 for valve specifications.

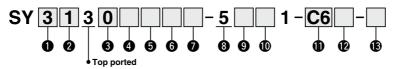

#### Series

3	SY3000
5	SY5000
7	SY7000

#### 2 Type of actuation

1	2-position	Single		
2	2-position	Double		
3		Closed center		
4	3-position	Exhaust center		
5	1	Pressure center		
<b>A</b> *1	4 position	N.C./N.C.		
B*1	4-position dual 3-port	N.O./N.O.		
C*1	addi 5-port	N.C./N.O.		

\*1: Only rubber seal type is available for the 4-position dual 3-port valve.

#### Seal type

0	Rubber seal
1	Metal seal

#### A Pilot type

<u> </u>	ot typo
Nil	Internal pilot
R	External pilot

## Back pressure check valve (Built-in valve type)

(DL	ilit-ili vaive type)
Nil	None
Н	Built-in

- \*: Only rubber seal type. Manifold installed type is available if the back pressure check valve is required for a valve with metal seal. Refer to page 379 for Ordering Example. However, it is not recommended to use the built-in valve type and the manifold installed type at the same time because it will reduce the flow.
- \*: The built-in valve type back pressure check valve is not available for the 3-position type and the SY7000.

#### 6 Pilot valve option

	• : ::e: :a::e ep::e::				
Nil Standard (0.7 MPa)					
B Quick response type (0.7 MPa)					
K*1 High pressure type (1.0 MPa)					

\*1: Only metal seal type is available for the high pressure type.

#### Coil type

Nil Standard		
T With power saving circuit (Continuous duty		With power saving circuit (Continuous duty type
*	Be su	re to select the power saving circuit
	timou	then the value is continuously

- energized for long periods of time.
  Ee careful of the energizing time when the power saving circuit is selected. Refer to page 391 for details.
- 8 Rated voltage


## 5 24 VDC

#### Light/surge voltage suppressor and common specification

Symbol	With light	Surge voltage suppressor	Common specification	
R	-		Non-polar	
U	•		ivon-polar	
S	1		Positive	
Z	•	•	common	
NS	ı		Negative	
NZ	•		common	

\*: "R" and "U" are applicable for every SI Unit.
\*: Only "Z" and "NZ" types are available for with the power saving circuit.

#### Manual override

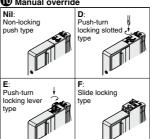

\*: Refer to page 154 for with the safety slide locking manual override.

#### A, B port size

#### Thread piping

Symbol	Port size	Applicable series
M5	M5 x 0.8	SY3000
01	1/8	SY5000
02	1/4	SY7000

#### One-touch fitting (Metric)

Symbol	A, B port	SY3000	SY5000	SY7000
C2	ø2	•	_	_
C2 C3 C4	ø3.2	•	_	_
C4	ø4	•	•	_
C6 C8	ø6	•	•	•
C8	ø8	_	•	•
C10	ø10			•
C12	ø12	_	_	•

#### One-touch fitting (Inch)

Symbol	A, B port	SY3000	SY5000	SY7000
N1	ø1/8"	•	_	_
N3	ø5/32"	•	•	_
N7	ø1/4"	•	•	•
N9	ø5/16"	_	•	•
N11	ø3/8"	_	_	•

#### 12 Thread type

Г	Nil	Rc
	F	G
Г	N	NPT
ſ	T	NPTF

\*: Only Nil is available for M5.

#### (R) Type of mounting screw

• Type of incurring corew		
Nil Round head combination screw		
В	Hexagon socket head cap screw	
K	Round head combination screw (Falling-out-prevention type)	
н	Hexagon socket head cap screw (Falling-out-prevention type)	

- \*: For "K" and "H", the valve body cover has a drop prevention construction to stop the mounting screws from falling out when the valve is removed for maintenance etc.
- When ordering a valve individually, the base gasket is not included. Since the base gasket is attached to the manifold, please order the base gasket separately if it is needed for maintenance service.

Refer to page 367 for part numbers of the base gasket and mounting screw.

\*: "B" and "H" cannot be selected for the individual SUP/EXH spacer assembly or interface regulator.



**EX260** 


# SY3000/5000/7000 Series

( E c RoHS



#### **How to Order Manifold**

Refer to pages 331 (SY5000) and 332 (SY7000) for dimensions of Type 11/Bottom ported type

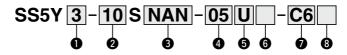

## A Series

<b>U</b> 3e	ies
3	SY3000
5	SY5000
7	SY7000

#### Туре Side ported Bottom ported\*

- \*1: The SY5000 manifold base is used for the bottom ported of the SY3000. When ordering, refer to "Plug-in Mixed Type Manifold" (from page 336).
- 3 SI Unit specifications

(output p	olarity, protocol,	number of outputs, comm	nunication	connector
Symbol (out Positive common (NPN)		Protocol	Number of outputs	Communication connector
(141.14)		Without		t
QA	QAN	B : N :TH	32	
QB	QBN	DeviceNet™	16	M12
NA	NAN		32	M12
NB	NBN	PROFIBUS	16	
NC	NCN	DP	32	D-sub
ND	NDN		16	D-80D
VA	VAN	CC-Link	32	M12
VB	VBN	OO-LIIK	16	IVITZ
DA	DAN	EtherCAT	32	M12
DB	DBN	Luicionii	16	IVITZ
FA	FAN	PROFINET	32	M12
FB	FBN	THOTHE	16	10112
EA	EAN	EtherNet/IP™	32	M12
EB	EBN	Luionvevii	16	IVITZ
—*3	GAN	Ethernet	32	M12
*3	GBN	POWERLINK	16	
*3	KAN	IO-Link	32*5	M12

- \*1: Without SI Unit, the output polarity is decied by the SI unit used Ensure a match with the common
- specification of the valves to be used \*2: DIN rail cannot be mounted without SI Unit.
- \*3: Positive common (NPN) type is not applicble.
- \*4: IP40 for the D-sub applicable communication connector specification.
- \*5: Only the 32 outputs type is available.

#### 4 Valve stations In the case of the 32-output SI Unit

:

#### mbol Stations Note 02 2 stations Double wiring\*1 16 16 stations 02 2 stations Specified layout\*2

(Available up to 32 solenoids)

#### In the case of the 16-output SI Unit

Symbo	Stations	Note
02	2 stations	
:	-	Double wiring*1
08	8 stations	
02	2 stations	0 15 11 12
:	-	Specified layout*2
16	16 stations	(Available up to 16 solenoids)

- \*1: Double wiring: 2-position single, double. 3-position and 4-position valves can be used on all manifold stations. Use of a 2-position single solenoid will result in an unused control signal. If this is not desired, order with a specified layout
- \*2: Specified layout: Indicate the wiring specifications on the manifold specification sheet
  - (Note that 2-position double, 3-position and 4-position valves cannot be used where
- single wiring has been specified.) \*: This also includes the number of blanking plate assembly.
- \*: For the model without the SI Unit (S0), note the maximum number of solenoids of the SI Unit that will be mounted. If the layout is specified, indicate it on the manifold specification sheet.

#### 6 P, E port entry

U	U side (2 to 10 stations)			
D	D side (2 to 10 stations)			
В	Both sides (2 to 24 stations)			

#### 6 SUP/EXH block assembly

Nil	Internal pilot
S	Internal pilot, Built-in silencer
R	External pilot

- \*: 3/5(E) port is plugged for the built-in silencer
- \*: When the built-in silencer type is used, keep the exhaust port from coming in direct contact with water or other liquids.

Refer to the page on the right for .



### Mounting and Option

Symbol	Mounting	Option		
Symbol	Mounting	Name plate	Station number	
Nil	Di	_	_	
AA	Direct mounting	•	•	
BA	mounting	•	_	
D□	DIN rail	_	_	
A□	mounting	•	•	
B□	mounting	•	_	

- \* Enter the number of stations inside □ when it is larger than the number of valve stations. (Refer to "DIN Rail Option" below.)
- \*: Only direct mounting is available for Type 11 (Bottom ported).
- \*: Refer to page 394 for the fixation of DIN rail mounting type manifold.

#### DIN Rail Ontion

<b></b>	- p		
Nil	Standard length		
0	Without DIN rail (with bracket)		
3	For 3 stations	Consider a language sail than the	
:	- :	Specify a longer rail than the total length of specified stations.	
24	For 24 stations	total lerigiti of specified stations.	

\*: When it is necessary to mount a DIN rail without an SI Unit, select D0 and order DIN rail length separately, referring to L3 in the dimensions. (Refer to page 372 for part numbers of DIN rail.)

For details about the EX260 Integrated-type (For Output) Serial Transmission System, refer to pages 789 to 800 and the Operation Manual. For details about part numbers of SI Units to be mounted, refer to page 363. Please download the Operation Manual via SMC website, http://www.smcworld.com



## Plus-in Connector Connecting Base SY3000/5000/7000 Series

SJ

SY

S0700

S0700

A, B port size (Inch/One-touch fitting) Type 10/Side ported Type 11/Bottom ported

A, B port SY3000 SY5000 SY7000 SY5000 SY7000 ø1/8"

N3			ø5/32"	•	•		•	_
N7	ig		ø1/4"	•	•	•	•	•
N9	Straight		ø5/16"	_	•	•	•	•
N11	0,		ø3/8"			•		•
CM*1		Straig	ht port, mixed sizes	•	•	•	•	•
LN3			ø5/32"	•	_	_	_	_
LN7		/ard	ø1/4"	•	•			_
LN9		Jpward	ø5/16"	_	•	_	_	_
LN11	.	-	ø3/8"	_	_	•	_	_
BN3	Elbow*2	5	ø5/32"	•	_	_	_	_
BN7	쯢	Downward	ø1/4"	•	•	_	_	_
BN9	_	Š	ø5/16"	_	•	_	_	_
BN11		Δ	ø3/8"	_	_	•	_	_
LM*1		Elbow port, mixed sizes (Including upward and downward piping)		•	•	•	_	_
P, E port size (One-touch fittings)			ø5/16"	ø3/8"	ø1/2"	ø3/8"	ø1/2"	

C3			ø3.2	•	_	_	_	_	
C4		ø4		•	•	_	•	_	
C6	Straight		ø6	•	•	•	•	•	
C8	Stra		ø8	_	•	•	•	•	2010
C10	0,		ø10	_	_	•	_	•	O SEE
C12			ø12	_	_	•	_	•	
CM*1		Straig	ht port, mixed sizes	•	•	•	•	•	
L4			ø4	•	•	_	_	_	
L6		5	ø6	•	•	•	_	_	
L8		Upward	ø8	_	•	•	_	_	
L10		5	ø10	_	_	•	_	_	
L12	01		ø12	_	_	•	_	_	O Jaione
<b>B4</b>	,,МC		ø4	•	•	-	-	_	
<b>B6</b>	Elbow*2	Downward	ø6	•	•	•	_	_	
B8	ш	Š	ø8	_	•	•	_	_	
B10		á	ø10	-	-	•	-	-	
B12			ø12	_	_	•	_	_	
LM*1		Elbow port, mixed sizes (Including upward and downward piping)		•	•	•	_	_	
	P, E port size (One-touch fittings)		ø8	ø10	ø12	ø10	ø12		

Type 10/Side ported Type 11/Bottom ported

SY3000 SY5000 SY7000 SY5000 SY7000


A, B port size (Metric/One-touch fitting)

A, B port

ø2

C2

#### **How to Order Manifold Assembly**

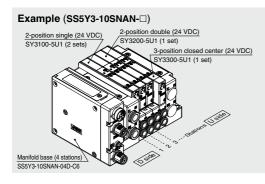


- SS5Y3-10SNAN-04D-C6---1 set (Type 10 4-station manifold base part no.) \*SY3100-5U1-----2 sets (2-position single part no.) \*SY3200-5U1-----1 set (2-position double part no.) \*SY3300-5U1---......1 set (3-position closed center part no.) The asterisk denotes the symbol for assembly. Prefix it to the part numbers of the valve etc.
- The valve arrangement is numbered as the 1st station from the D side.
- Under the manifold part number, state the valves to be mounted in order from the 1st station as shown in the figure above. If the arrangement becomes complicated, specify on a manifold specification sheet.
- \*: When mixing top ported configurations, select from page 311. Specify on a manifold specification sheet if plugs are required on the A and B port on the manifold.

<sup>\*1:</sup> Indicate the sizes on the manifold specification sheet in the case of "CM", "LM". The direction of P, E port fittings is the same as for A, B port. If selecting "LM", indicate it on the manifold specification sheet for the P, E port fitting direction

<sup>\*2:</sup> To avoid interference with the body or piping, select downward elbow port when mounting the optional spacer assembly (pages 373 to 375).

#### How to Order Valves (With mounting screw)

Refer to page 136 for valve specifications.

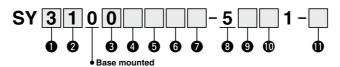

#### Series

3	SY3000
5	SY5000
7	SY7000

#### 2 Type of actuation

1	2-position	Single
2	2-position	Double
3		Closed center
4	3-position	Exhaust center
5		Pressure center
<b>A</b> *1	4-position dual 3-port	N.C./N.C.
B*1		N.O./N.O.
C*1	duai 5-poit	N.C./N.O.

\*1: Only rubber seal type is available for the 4-position dual 3-port valve.

### **8** F

#### 3 Seal type

0	Rubber seal
1	Metal seal

#### Pilot type

_	•		
- 1	Nil	Internal pilot	
	R	External pilot	

#### Back pressure check valve (Built-in valve type)

Nil	None
Н	Built-in

- Only rubber seal type. Manifold installed type is available if the back pressure check valve is required for a valve with metal seal. Refer to page 379 for details. However, it is not recommended to use the built-in valve type and the manifold installed type at the same time because it will reduce the flow.
- \*: The built-in valve type back pressure check valve is not available for the 3-position type and the SY7000.

#### 6 Pilot valve option

	or raire option
Nil	Standard (0.7 MPa)
В	Quick response type (0.7 MPa)
<b>K</b> *1	High pressure type (1.0 MPa)

\*1: Only metal seal type is available for the high pressure type.

#### Coil type

• •• •, p•			
Nil	Standard		
Т	With power saving circuit (Continuous duty type)		

- \*: Be sure to select the power saving circuit type when a valve is continuously energized for long periods of time.
- \*: Be careful of the energizing time when the power saving circuit is selected. Refer to page 391 for details.

#### 8 Rated voltage


	5	24 VDC
--	---	--------

#### Light/surge voltage suppressor and common specification

Symbol	With light	Surge voltage suppressor	Common specification
R			Non-polar
U	•		Non-polar
S	_	•	Positive
Z	•	_	common
NS	_		Negative
NZ	•		common

- \*: Select a valve from R, U, S or Z when the SI Unit output polarity is NiI (positive common). Select a valve from R, U, NS or NZ when the SI Unit output polarity is N (negative common).
- \*: Only "Z" and "NZ" types are available for with the power saving circuit.

#### Manual override

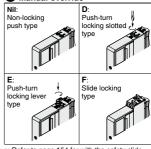

\*: Refer to page 154 for with the safety slide locking manual override.

#### Type of mounting screw

Nil	Round head combination screw						
В	Hexagon socket head cap screw						
	Round head combination screw (Falling-out-prevention type)						
	Hexagon socket head cap screw Falling-out-prevention type)						

- \*: For "K" and "H", the valve body cover has a drop prevention construction to stop the mounting screws from falling out when the valve is removed for maintenance etc.
- \*: When ordering a valve individually, the base gasket is not included. Since the base gasket is attached to the manifold, please order the base gasket separately if it is needed for maintenance service.

Refer to page 367 for part numbers of the base gasket and mounting screw.

\*: "B" and "H" cannot be selected for the individual SUP/EXH spacer assembly, interface regulator or double check spacer assembly with residual pressure release valve.

## Plus-in Connector Connecting Base SY3000/5000/7000 Series

Dimensions: SY3000 Series

Plug-in
Connector Connecting Base

Type 10/Side Ported EX260


SJ


SY


S0700


S0700

SS5Y3-10S $\square$ -Stations $\stackrel{\text{U}}{\stackrel{\text{C2}}{\stackrel{\text{C3}}{\stackrel{\text{N1}}{\stackrel{\text{C2}}{\stackrel{\text{C3}}{\stackrel{\text{N1}}{\stackrel{\text{C2}}{\stackrel{\text{C3}}{\stackrel{\text{N1}}{\stackrel{\text{C3}}{\stackrel{\text{C4}}{\stackrel{\text{C5}}{\stackrel{\text{C5}}{\stackrel{\text{C5}}{\stackrel{\text{C5}}{\stackrel{\text{C5}}{\stackrel{\text{C5}}{\stackrel{\text{C5}}{\stackrel{\text{C5}}{\stackrel{\text{C5}}{\stackrel{\text{C5}}{\stackrel{\text{C5}}{\stackrel{\text{C5}}{\stackrel{\text{C5}}{\stackrel{\text{C5}}{\stackrel{\text{C5}}{\stackrel{\text{C5}}{\stackrel{\text{C5}}{\stackrel{\text{C5}}{\stackrel{\text{C5}}{\stackrel{\text{C5}}{\stackrel{\text{C5}}{\stackrel{\text{C5}}{\stackrel{\text{C5}}{\stackrel{\text{C5}}{\stackrel{\text{C5}}{\stackrel{\text{C5}}{\stackrel{\text{C5}}{\stackrel{\text{C5}}{\stackrel{\text{C5}}{\stackrel{\text{C5}}{\stackrel{\text{C5}}{\stackrel{\text{C5}}{\stackrel{\text{C5}}{\stackrel{\text{C5}}{\stackrel{\text{C5}}{\stackrel{\text{C5}}{\stackrel{\text{C5}}{\stackrel{\text{C5}}{\stackrel{\text{C5}}{\stackrel{\text{C5}}{\stackrel{\text{C5}}{\stackrel{\text{C5}}{\stackrel{\text{C5}}{\stackrel{\text{C5}}{\stackrel{\text{C5}}{\stackrel{\text{C5}}{\stackrel{\text{C5}}{\stackrel{\text{C5}}{\stackrel{\text{C5}}{\stackrel{\text{C5}}{\stackrel{\text{C5}}{\stackrel{\text{C5}}{\stackrel{\text{C5}}{\stackrel{\text{C5}}{\stackrel{\text{C5}}{\stackrel{\text{C5}}{\stackrel{\text{C5}}{\stackrel{\text{C5}}{\stackrel{\text{C5}}{\stackrel{\text{C5}}{\stackrel{\text{C5}}{\stackrel{\text{C5}}{\stackrel{\text{C5}}{\stackrel{\text{C5}}{\stackrel{\text{C5}}{\stackrel{\text{C5}}{\stackrel{\text{C5}}{\stackrel{\text{C5}}{\stackrel{\text{C5}}{\stackrel{\text{C5}}{\stackrel{\text{C5}}{\stackrel{\text{C5}}{\stackrel{\text{C5}}{\stackrel{\text{C5}}{\stackrel{\text{C5}}{\stackrel{\text{C5}}{\stackrel{\text{C5}}{\stackrel{\text{C5}}{\stackrel{\text{C5}}{\stackrel{\text{C5}}{\stackrel{\text{C5}}{\stackrel{\text{C5}}{\stackrel{\text{C5}}{\stackrel{\text{C5}}{\stackrel{\text{C5}}{\stackrel{\text{C5}}{\stackrel{\text{C5}}{\stackrel{\text{C5}}{\stackrel{\text{C5}}{\stackrel{\text{C5}}{\stackrel{\text{C5}}{\stackrel{\text{C5}}{\stackrel{\text{C5}}{\stackrel{\text{C5}}{\stackrel{\text{C5}}{\stackrel{\text{C5}}{\stackrel{\text{C5}}{\stackrel{\text{C5}}{\stackrel{\text{C5}}{\stackrel{\text{C5}}{\stackrel{\text{C5}}{\stackrel{\text{C5}}{\stackrel{\text{C5}}{\stackrel{\text{C5}}{\stackrel{\text{C5}}{\stackrel{\text{C5}}{\stackrel{\text{C5}}{\stackrel{\text{C5}}{\stackrel{\text{C5}}{\stackrel{\text{C5}}{\stackrel{\text{C5}}{\stackrel{\text{C5}}{\stackrel{\text{C5}}{\stackrel{\text{C5}}}{\stackrel{\text{C5}}{\stackrel{\text{C5}}{\stackrel{\text{C5}}{\stackrel{\text{C5}}{\stackrel{\text{C5}}}{\stackrel{\text{C5}}{\stackrel{\text{C5}}{\stackrel{\text{C5}}}{\stackrel{\text{C5}}}{\stackrel{\text{C5}}{\stackrel{\text{C5}}}{\stackrel{\text{C5}}{\stackrel{\text{C5}}{\stackrel{\text{C5}}{\stackrel{\text{C5}}{\stackrel{\text{C5}}}{\stackrel{\text{C5}}}{\stackrel{\text{C5}}}{\stackrel{\text{C5}}}{\stackrel{\text{C5}}}}\stackrel{\text{C5}}{\stackrel{\text{C5}}}\stackrel{\text{C5}}}\stackrel{\text{C5}}{\stackrel{\text{C5}}}\stackrel{\text{C5}}{\stackrel{\text{C5}}}\stackrel{\text{C5}}}\stackrel{\text{C5}}}\stackrel{\text{C5}}}\stackrel{\text{C5}}}\stackrel{\text{C5}}}\stackrel{\text{C5}}}\stackrel{\text{C5}}}\stackrel{\text{C5}}}\stackrel{\text{C5}}}\stackrel{\text{C5}}}\stackrel{\text{C5}}}\stackrel{\text{C5}}}\stackrel{\text{C5}}}\stackrel{\text{C5}}}\stackrel{\text{C5}}}\stackrel{\text{C5}}}\stackrel{\text{C5}}}\stackrel{\text{C5}}}\stackrel{\text{C5}}}\stackrel{\text{C5}}}\stackrel{\text{C5}}}\stackrel{\text{C5}}}\stackrel{\text{C5}}}\stackrel{\text{C5}}}\stackrel{\text{C5}}}\stackrel{\text{C5}}}\stackrel{\text{C5}}}\stackrel{\text{C5}}}\stackrel{\text{C5}}}\stackrel{\text{C5}}}\stackrel{\text{C5}}}\stackrel{\text{C5}}}\stackrel{\text{C5}}}\stackrel{\text{C5}}}\stackrel{\text{C5}}}\stackrel{\text{C5}}}\stackrel{\text{C5}}}\stackrel{\text{C5}}}\stackrel{\text{C5}}}\stackrel{\text{C5}}}\stackrel{\text{C5}}}\stackrel{\text{C5}}}\stackrel{\text{C5}}}\stackrel{\text{C5}}}\stackrel{\text{C5}}}\stackrel{\text{C5}}}\stackrel{\text{C5}}}\stackrel{\text{C5}}}\stackrel{\text{C5}}}\stackrel{\text{C5}}}\stackrel{\text{C5}}}\stackrel{\text{C5}}}\stackrel{\text{C5}}}\stackrel{\text{C5}}}\stackrel{\text{C5}}}\stackrel{\text{C5}}}\stackrel{\text{C5}}}\stackrel{\text{C5}}}\stackrel{\text{C5}}}\stackrel{\text{C5}}}\stackrel{\text{C5}}}\stackrel{\text{C5}}}\stackrel{\text{C5}}}\stackrel{\text{C5}}}\stackrel{\text{C5}}}\stackrel{\text{C5}}}\stackrel{\text{C5}}}\stackrel{\text{C5}}}\stackrel{\text{C5}}}\stackrel{\text{C5}}}\stackrel{\text{C5}$ 

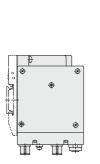

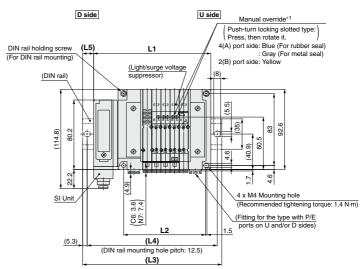

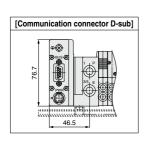

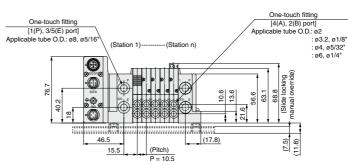

- \*1: Refer to page 328 for dimensions of external pilot, silencer, elbow fittings and slide locking manual override.
- \*: These figures show the "SS5Y3-10SQA-05D-C6"
- \*: Refer to page 333 for dimensions of A or B port top-ported type.

n: Stations	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17
L1	103.7	114.2	124.7	135.2	145.7	156.2	166.7	177.2	187.7	198.2	208.7	219.2	229.7	240.2	250.7	261.2
L2	63	73.5	84	94.5	105	115.5	126	136.5	147	157.5	168	178.5	189	199.5	210	220.5
L3	135.5	148	148	160.5	173	185.5	198	210.5	223	223	235.5	248	260.5	273	285.5	285.5
L4	125	137.5	137.5	150	162.5	175	187.5	200	212.5	212.5	225	237.5	250	262.5	275	275
L5	16	17	11.5	12.5	13.5	14.5	15.5	16.5	17.5	12.5	13.5	14.5	15.5	16.5	17.5	12


n: Stations	18	19	20	21	22	23	24
L1	271.7	282.2	292.7	303.2	313.7	324.2	334.7
L2	231	241.5	252	262.5	273	283.5	294
L3	298	310.5	323	335.5	348	348	360.5
L4	287.5	300	312.5	325	337.5	337.5	350
L5	13	14	15	16	17	12	13


Dimensions: SY5000 Series


Plug-in
Connector Connecting Base

Type 10/Side Ported EX260

SS5Y5-10S - Stations D - C6, N3 (D)

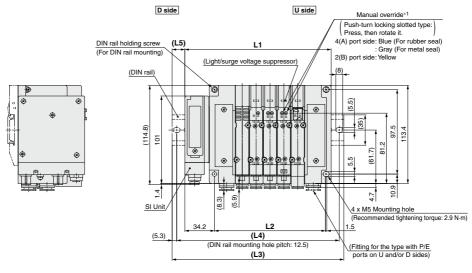

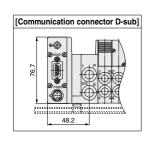

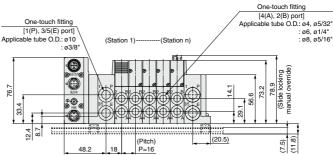

- \*1: Refer to page 329 for dimensions of external pilot, silencer, elbow fittings and slide locking manual override.
- \*: These figures show the "SS5Y5-10SQA-05D-C8".
- \*: Refer to page 334 for dimensions of A or B port top-ported type.

n: Stations	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17
L1	120.7	136.7	152.7	168.7	184.7	200.7	216.7	232.7	248.7	264.7	280.7	296.7	312.7	328.7	344.7	360.7
L2	80	96	112	128	144	160	176	192	208	224	240	256	272	288	304	320
L3	148	160.5	185.5	198	210.5	235.5	248	260.5	273	298	310.5	323	348	360.5	373	385.5
L4	137.5	150	175	187.5	200	225	237.5	250	262.5	287.5	300	312.5	337.5	350	362.5	375
L5	13.5	12	16.5	14.5	13	17.5	15.5	14	12	16.5	15	13	17.5	16	14	12.5

n: Stations	18	19	20	21	22	23	24
L1	376.7	392.7	408.7	424.7	440.7	456.7	472.7
L2	336	352	368	384	400	416	432
L3	410.5	423	435.5	448	473	485.5	498
L4	400	412.5	425	437.5	462.5	475	487.5
L5	17	15	13.5	11.5	16	14.5	12.5


## Plus-in Connector Connecting Base SY3000/5000/7000 Series


Dimensions: SY7000 Series

Plug-in
Connector Connecting Base

Type 10/Side Ported

SS5Y7-10S - Stations D - C6, N7 C7, N9 C10, N11 (D)

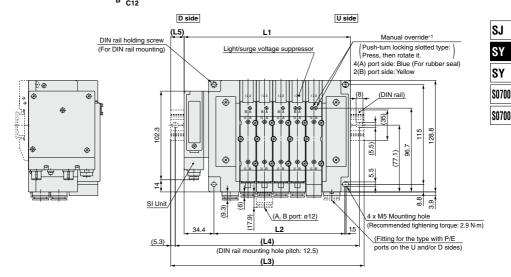

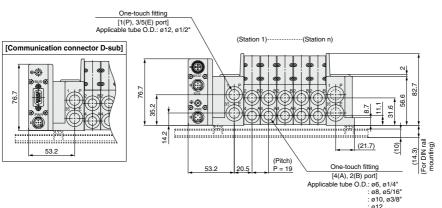

- \*1: Refer to page 330 for dimensions of external pilot, silencer, elbow fittings and slide locking manual override.
- \*: These figures show the "SS5Y7-10SQA-05D-C10".
- \*: Refer to page 335 for dimensions of A or B port top-ported type.

n: Stations	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
L1	134.9	153.9	172.9	191.9	210.9	229.9	248.9	267.9	286.9	305.9	324.9	343.9	362.9	381.9	400.9	419.9	438.9	457.9	476.9	495.9	514.9	533.9	552.9
L2	94	113	132	151	170	189	208	227	246	265	284	303	322	341	360	379	398	417	436	455	474	493	512
L3	160.5	185.5	198	223	235.5	260.5	273	298	310.5	335.5	348	373	398	410.5	435.5	448	473	485.5	510.5	523	548	560.5	585.5
L4	150	175	187.5	212.5	225	250	262.5	287.5	300	325	337.5	362.5	387.5	400	425	437.5	462.5	475	500	512.5	537.5	550	575
L5	13	16	12.5	15.5	12.5	15.5	12	15	12	15	11.5	14.5	17.5	14.5	17.5	14	17	14	17	13.5	16.5	13.5	16.5

EX260

Type 12
Top Ported

## **SY3000/5000/7000** Series





#### **How to Order Manifold**

Refer to pages 333 to 335 for Type 12/Top ported dimensions.

SS5Y 3-12S	NAN	- 05	U	-	-	
•	2		4	6	6	0

1 Sei	ries
3	SY3000
5	SY5000
7	SY7000

### 5 SY5000 7 SY7000

_	(outpu				, numb		comr	nunio	ation	conne	ctor
0	L - I /-	dom d	 Lond	L. A							

Symbol (out	put polarity)		Number	Communication	
Positive common (NPN)	(PNP)	Protocol	of outputs	connector	
0	*1	Without	SI Uni	t	
QA	QAN	DeviceNet™	32	M12	
QB	QBN	Devicemet	16	IVITZ	
NA	NAN		32	M12	
NB	NBN	PROFIBUS	16	IVITZ	
NC	NCN	DP	32	*1 D-sub	
ND	NDN		16	D-Sub	
VA	VAN	CC-Link	32		
VB	VBN	CC-LINK	16	M12	
DA	DAN	EtherCAT	32	M12	
DB	DBN	EllielCAT	16	IVIIZ	
FA	FAN	PROFINET	32	M12	
FB	FBN	PROFINE	16	IVIIZ	
EA	EAN	EtherNet/IP™	32	M12	
EB	EBN	Ethernetherm	16	WH2	
*3	GAN	Ethernet	32	M12	
*3	GBN	POWERLINK	IVIIZ		
*3	KAN	IO-Link	M12		

- \*1: Without SI Unit, the output polarity is decied by the SI unit used. Ensure a match with the common specification
- Ensure a match with the common specification of the valves to be used. \*2: DIN rail cannot be mounted without SI Unit.
- \*3: Positive common (NPN) type is not applicble.
- \*4: IP40 for the D-sub applicable communication connector specification.
- \*5: Only the 32 outputs type is available.

3 Valve stations

In the case of the 32-output SI Unit

Symbol	Stations	Note
02	2 stations	Double wiring*1
:	- :	
16	16 stations	
02	2 stations	0
:	- :	Specified layout*2 (Available up to 32 solenoids)
24	24 stations	

#### In the case of the 16-output SI Unit

Symbol	Stations	Note
02	2 stations	
:	- :	Double wiring*1
08	8 stations	
02	2 stations	0
:	- :	Specified layout*2
16	16 stations	(Available up to 16 solenoids)

- \*1: Double wiring: 2-position single, double, 3-position and 4-position valves can be used on all manifold stations. Use of a 2-position single solenoid will result in an unused control signal. If this is not desired,
- order with a specified layout.

  \*2: Specified layout: Indicate the wiring specifications on the manifold specification sheet.
  - (Note that 2-position double, 3-position and 4-position valves cannot be used where single wiring has been specified.)
- \*: This also includes the number of blanking plate assembly.
- \*: For the model without the SI Unit (S0), note the maximum number of solenoids of the SI Unit that will be mounted. If the layout is specified, indicate it on the manifold specification sheet.

4 P, E port entry

T, E port citity		
U*1	U side (2 to 10 stations)	
<b>D</b> *1	D side (2 to 10 stations)	
В	Both sides (2 to 24 stations)	

\*1: For type "S", supply/exhaust block assembly with built-in silencer, choose U or D for P port entry.

#### 5 SUP/EXH block assembly

Nil	Internal pilot
S	Internal pilot, Built-in silencer
R	External pilot

- For built-in silencer type, P and E ports are available on U and D sides. 3/5(E) port is plugged. The silencer exhaust port is located on the opposite side of P. E port entry. (Example: When the P, E port entry is D side, the silencer exhaust port is U side.)
- \*: When the built-in silencer type is used, keep the exhaust port from coming in direct contact with water or other liquids.

#### 6 P, E port size (One-touch fittings)

ø1/2"

Symbol	SY3000	SY5000	SY7000	<b>V</b> ô
Nil	ø8	ø10	ø12	

N ø5/16" ø3/8"


#### Mounting

Nil	Direct mounting		
D	DIN rail mounting (With DIN rail)		
D0	DIN rail mounting (Without DIN rail)		
D3	For 3 stations	Cassify a languar rail than	
:	:	Specify a longer rail than the standard length.	
D24	For 24 stations	life standard length.	

- \*: When it is necessary to mount a DIN rail without an SI Unit, select D0 and order DIN rail length separately, referring to L3 in the dimensions.
- Refer to page 372 for part numbers of DIN rail.

  \*: Refer to page 394 for the fixation of DIN rail mounting type manifold.

### How to Order Manifold Assembly

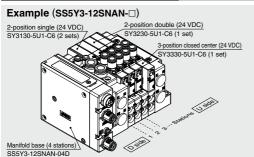

363. Please download the Operation Manual via SMC website, http://www.smcworld.com

For details about the EX260 Integrated-type (For Output) Serial Transmission System, refer to pages 789

to 800 and the Operation Manual. For details about part numbers of SI Units to be mounted, refer to page


- \$\$573-12\$NAN-04D .... 1 set (Type 12 4-station manifold base part no.)
  \$\$73130-\$U1-C6 ............. 2 sets (2-position single part no.)
  \$\$73230-\$U1-C6 ............. 1 set (2-position double part no.)
  \$\$73330-\$U1-C6 ............... 1 set (3-position closed center part no.)
  - The asterisk denotes the symbol for assembly.

    Prefix it to the part numbers of the valve etc.
- The valve arrangement is numbered as the 1st station from the D side.
   Under the manifold part number, state the valves to be mounted in order from the 1st station as shown in the figure above.
   If the arrangement becomes complicated, specify on a manifold specification sheet.

## Plug-in Connector Connecting Base SY3000/5000/7000 Series

#### How to Order Valves (With mounting screw)

Refer to page 136 for valve specifications.

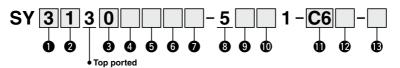

#### Series

•	
3	SY3000
5	SY5000
7	SY7000

#### 2 Type of actuation

2-position	Single
	Double
	Closed center
3-position	Exhaust center
	Pressure center
4 position	N.C./N.C.
dual 3-port	N.O./N.O.
	N.C./N.O.
	3-position 4-position

\*1: Only rubber seal type is available for the 4-position dual 3-port valve.

#### Seal type

0	Rubber seal
1	Metal seal

#### A Pilot type

•	···, p ·
Nil	Internal pilot
R	External pilot

## Back pressure check valve

	(DI	ilit-ili vaive type)
	Nil	None
ı	н	Built-in

- «: Only rubber seal type. Manifold installed type is available if the back pressure check valve is required for a valve with metal seal. Refer to page 379 for details. However, it is not recommended to use the built-in valve type and the manifold installed type at the same time because it will reduce the flow.
- \*: The built-in valve type back pressure check valve is not available for the 3-position type and the SY7000.

#### A Pilot valve option

• : op	
Nil	Standard (0.7 MPa)
В	Quick response type (0.7 MPa)
<b>K</b> *1	High pressure type (1.0 MPa)

\*1: Only metal seal type is available for the high pressure type.

### Coil type

Con type		
Nil	Standard	
Т	With power saving circuit (Continuous duty type)	
B 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1		

- \*: Be sure to select the power saving circuit type when a valve is continuously energized for long periods of time.
- \*: Be careful of the energizing time when the power saving circuit is selected. Refer to page 391 for details.

#### Rated voltage


١	5	24 VDC

## 9 Light/surge voltage suppressor and common specification

Symbol	With light	Surge voltage suppressor	Common specification
R	-		Non-polar
U	•		Non-polar
S	_	•	Positive
Z	•		common
NS	I		Negative
NZ	•		common

- \*: Select a valve from R, U, S or Z when the SI Unit output polarity is Nil (positive common). Select a valve from R, U, NS or NZ when the SI Unit output polarity is N (negative common).
- \*: Only "Z" and "NZ" types are available for with the power saving circuit.

#### Manual override

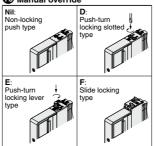

\*: Refer to page 154 for with the safety slide locking manual override.

#### A, B port size

#### Thread nining

····ouu pipiiig		
Symbol	Port size	Applicable series
M5	M5 x 0.8	SY3000
01	1/8	SY5000
02	1/4	SY7000

#### One-touch fitting (Metric)

One-touch litting (Metric)			
A, B port	SY3000	SY5000	SY7000
ø2	•	_	_
ø3.2	•	_	_
ø4	•	•	_
ø6	•	•	•
ø8	_	•	•
ø10	_	_	•
ø12	_	_	•
	A, B port ø2 ø3.2 ø4 ø6 ø8 ø10	A, B port SY3000  02  03.2  04  06  08   010	A, B port SY3000 SY5000 Ø2 — — — — — — — — — — — — — — — — — —

#### One-touch fitting (Inch)

0 1 1	A Dt	01/0000	OVEDDO	01/7000
Symbol	A, B port	SY3000	515000	517000
N1	ø1/8"	•	-	_
N3	ø5/32"	•	•	_
N7	ø1/4"	•	•	•
N9	ø5/16"	_	•	•
N11	ø3/8"	_	_	•

#### Thread type

Nil	Rc
F	G
N	NPT
Т	NPTF

\*: Only Nil is available for M5.

#### Type of mounting screw

Nil	Round head combination screw
В	Hexagon socket head cap screw
К	Round head combination screw (Falling-out-prevention type)
н	Hexagon socket head cap screw (Falling-out-prevention type)

- \*: For "K" and "H", the valve body cover has a drop prevention construction to stop the mounting screws from falling out when the valve is removed for maintenance etc.
- \*: When ordering a valve individually, the base gasket is not included. Since the base gasket is attached to the manifold, please order the base gasket separately if it is needed for maintenance service.
  - Refer to page 367 for part numbers of the base gasket and mounting screw.
- \*: "B" and "H" cannot be selected for the individual SUP/EXH spacer assembly or interface regulator.



SJ

SY

S0700 S0700




EX126

# SY3000/5000/7000 Series

( **(** RoHS)

#### **How to Order Manifold**

Refer to pages 331 (SY5000) and 332 (SY7000) for dimensions of Type 11/Bottom ported type.

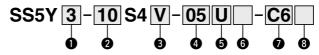

# 3 SY3000 5 SY5000 7 SY7000

<b>2</b> Туре		
	10	Side ported
	11	Bottom ported

\*1: The SY5000 manifold base is used for the bottom ported of the SY3000. When ordering, refer to "Plug-in Mixed Mounting Type Manifold" (from page 336).

3 SI Unit		
0	Without SI Unit	
٧	CC-Link (Positive common NPN)	


 Only a terminal block plate is mounted for the valve without SLUnit

#### 4 Valve stations

_		Juliona	
Symbol	Stations	Note	
02	2 stations		
:	- :	Double wiring*1  Specified layout*2	
08	8 stations		
02	2 stations		
:	-		
16	16 stations	(Available up to 16 solenoids)	

- \*1: Double wiring: 2-position single, double, 3-position and 4-position valves can be used on all manifold stations. Use of a 2-position single solenoid will result in an unused control signal. If this is not desired, order with a specified layout.
- \*2: Specified layout: Indicate the wiring specification with the manifold specification sheat. (Note that 2-position double, 3-position and 4-position valves cannot be used where single wiring has been specified.)
- \*: This also includes the number of blanking plate assembly.

## How to Order Manifold Assembly

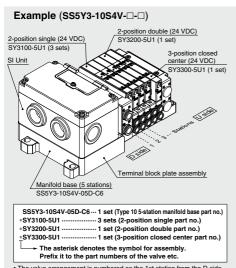

 The valve arrangement is numbered as the 1st station from the D side.
 Under the manifold part number, state the valves to be mounted in order from the 1st station as shown in the figure above. If the arrangement becomes complicated, specify on a manifold specification sheet.

\*: When mixing top ported configurations, select from page 319. In this case, use caution as there is also output on the A and B port on base side. Specify on a manifold specification sheet if plugs are required on the A and B port on base side. P. E port entry

U	U side (2 to 10 stations)
D	D side (2 to 10 stations)
В	Both sides (2 to 16 stations)

### 6 SUP/EXH block assembly

Nil	Internal pilot
S	Internal pilot, Built-in silencer
R	External pilot

- 3/5(E) port is plugged for the built-in silencer type.
- When the built-in silencer type is used, keep the exhaust port from coming in direct contact with water or other liquids.

For details about the EX126 Integrated-type (For Output) Serial Transmission System, refer to pages 781 to 783 and the Operation Manual. For details about part numbers of SI Units to be mounted, refer to page 364 in this catalog. Please download the Operation Manual via SMC website, http://www.smcworld.com



## Plug-in Connector Connecting Base SY3000/5000/7000 Series

SJ

SY

SY

S0700 S0700

A, B port size (Metric/One-touch fitting)

Symbol	A, B port		Type	10/Side	ported	Type 11/Bo	ittom ported											
Sylliuui		A, B port		SY3000	SY5000	SY7000	SY5000	SY7000										
C2			ø2	•	_	_	_	_										
СЗ			ø3.2	•	_	_	_	_										
C4	_		ø4	•	•	_	•	_										
C6	igh		ø6	•	•	•	•	•										
C8	Straight		ø8	_	•	•	•	•	2 4 10									
C10	•,		ø10	_	_	•	_	•	SEE SEE									
C12			ø12	_	-	•	-	•	~									
CM*1		Straig	ht port, mixed sizes	•	•	•	•	•										
L4			ø4	•	•	_	I	_										
L6		5	ø6	•	•	•	_	_										
L8		Upward	ø8	_	•	•	_	_										
L10		5	ø10	_		•		_										
L12	2		ø12	_	_	•	_	_	O Jalle									
B4	Elbow*2		ø4	•	•	_	_	_										
B6	Elbo	Downward	ø6	•	•	•	_	_										
B8	_	_	Š	Ş	Ş	Ì	Ì	Ì	Ì	Ş	- ₹	ø8	_	•	•	_	_	
B10		8	ø10	_	_	•	_	_										
B12			ø12	_		•		_										
LM*1		Elbow port, mixed sizes (Including upward and downward piping)		•	•	•	-	_										
	P, E port size (One-touch fittings)		ø8	ø10	ø12	ø10	ø12											

<u> </u>	<u> </u>	<i>7</i> 11	SIZE (IIIC	, III/ OIIIe	-touci	1 11111111	<u>9)                                    </u>		
0		A, B port		Type 1	10/Side	ported	Type 11/Bo	ttom ported	
Symbol				SY3000	SY5000	SY7000	SY5000	SY7000	
N1			ø1/8"	•	_	_	_	_	
N3	١		ø5/32"	•	•	_	•	_	
N7	g	Г	ø1/4"	•	•	•	•	•	
N9	Straight		ø5/16"	_	•	•	•	•	
N11	0		ø3/8"	_	_	•	_	•	
CM*1		Straig	ght port, mixed sizes	•	•	•	•	•	
LN3			ø5/32"	•	_	_	_	_	
LN7		ard	ø1/4"	•	•	_	_	_	
LN9		Jpward	ø5/16"	_	•	_	_	_	
LN11	١	.   ~	ø3/8"	_	_	•	_	_	
BN3	*	ē	ø5/32"	•	_	_	_	_	
BN7	유	Elbow*	ø1/4"	•	•	_	_	_	
BN9			ø5/16"	_	•	_	_	_	
BN11	ŏ	ø3/8"	_	_	•	_	_		
LM*1		(Incl	w port, mixed sizes uding upward and ownward piping)	•	•	•	_	_	
			rt size h fittings)	ø5/16"	ø3/8"	ø1/2"	ø3/8"	ø1/2"	

A R nort size (Inch/One-touch fitting)

\*1: Indicate the sizes on the manifold specification sheet in the case of "CM", "LM".

The direction of P, E port fittings is the same as for A, B port. If selecting "LM", indicate it on the manifold specification sheet for the P, E port fitting direction.

#### 8 Mounting and Option

Symbol	Mounting	Option		
Symbol	Woulding	Name plate	Station number	
Nil	Diverse	_		
AA	Direct mounting	•	•	
BA	mounting	•	_	
D□	D.11	_		
A□	DIN rail mounting	•	•	
B□	mounting	•	_	

- \*: Enter the number of stations inside ☐ when it is larger than the number of valve stations. (Refer to "DIN Rail Option" below.)
- \*: Only direct mounting is available for Type 11 (Bottom ported).
- \*: Refer to page 394 for the fixation of DIN rail mounting type manifold.


#### DIN Rail Option

	· option				
Nil	Direct mounting				
0	Without DIN	DIN rail (with bracket)			
3	For 3 stations	Specify a longer rail			
:	:	than the total length			
16	For 16 stations	of specified stations.			

<sup>\*2:</sup> To avoid interference with the body or piping, select downward elbow port when mounting the optional spacer assembly (pages 373 to 375).

#### How to Order Valves (With mounting screw)

Refer to page 136 for valve specifications.

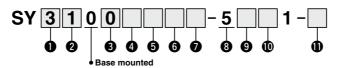

#### 1 Series

3	SY3000
5	SY5000
7	SY7000

#### 2 Type of actuation

1	2-position	Single
2	2-position	Double
3		Closed center
4	3-position	Exhaust center
5		Pressure center
<b>A</b> *1	4-position dual 3-port	N.C./N.C.
<b>B</b> ∗1		N.O./N.O.
C*1	duai 5-poit	N.C./N.O.

\*1: Only rubber seal type is available for the 4-position dual 3-port valve.

#### 3 Seal type

0	Rubber seal
1	Metal seal

#### 4 Pilot type

Nil	Internal pilot
R	External pilot

#### Back pressure check valve (Built-in valve type)

Nil	None
н	Built-in

- Only rubber seal type. Manifold installed type is available if the back pressure check valve is required for a valve with metal seal. Refer to page 379 for Ordering Example. However, it is not recommended to use the built-in valve type and the manifold installed type at the same time hecause it will reduce the flow
- \*: The built-in valve type back pressure check valve is not available for the 3-position type and the SY7000.

#### 6 Pilot valve option

Nil	Standard (0.7 MPa)
В	Quick response type (0.7 MPa)
<b>K</b> *1	High pressure type (1.0 MPa)

\*1: Only metal seal type is available for the high pressure type.

#### Coil type

Nil	Standard
Т	With power saving circuit (Continuous duty type

- \*: Be sure to select the power saving circuit type when the valve is continuously energized for long periods of time.
- \*: Be careful of the energizing time when the power saving circuit is selected. Refer to page 391 for details.

#### 8 Rated voltage


5	24 VDC

#### Light/surge voltage suppressor and common specification

Symbol	With light	Surge voltage suppressor	Common specification
R	I		Non-polar
U	•		14011-polai
S	1	•	Positive
Z	•		common

 Only "Z" type is available for with the power saving circuit.

#### Manual override

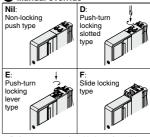

\*: Refer to page 154 for with the safety slide locking manual override.

#### Type of mounting screw

• '/	oo ooug oo.o
Nil	Round head combination screw
В	Hexagon socket head cap screw
	Round head combination screw (Falling-out-prevention type)
Н	Hexagon socket head cap screw (Falling-out-prevention type)

- \*: For "K" and "H", the valve body cover has a drop prevention construction to stop the mounting screws from falling out when the valve is removed for maintenance etc.
- \*: When ordering a valve individually, the base gasket is not included. Since the base gasket is attached to the manifold, please order the base gasket separately if it is needed for maintenance service.

Refer to page 367 for part numbers of base gasket and mounting screw.

\*: "B" and "H" cannot be selected for the

\*: "B" and "H" cannot be selected for the individual SUP/EXH spacer assembly, interface regulator or double check spacer assembly with residual pressure release valve.

## Plus-in Connector Connecting Base SY3000/5000/7000 Series

Dimensions: SY3000 Series

Plug-in
Connector Connecting Base

Type 10/Side Ported EX126


SJ


SY

S0700

S0700

SS5Y3-10S4V-<u>Stations</u>DU-C3, N1 (D) C6, N3 (D)

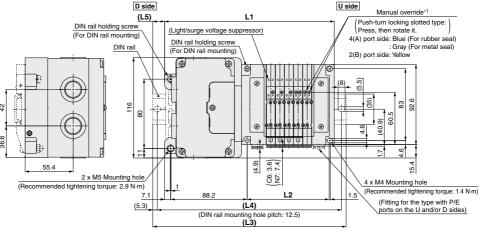

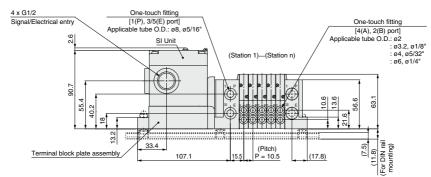

- \*1: Refer to page 328 for dimensions of external pilot, silencer, elbow fittings and slide locking manual override.
- \*: These figures show the "SS5Y3-10S4V-05D-C6".
- \*: Refer to page 333 for dimensions of A or B port top-ported type.

n: Stations	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
L1	164.3	174.8	185.3	195.8	206.3	216.8	227.3	237.8	248.3	258.8	269.3	279.8	290.3	300.8	311.3
L2	63	73.5	84	94.5	105	115.5	126	136.5	147	157.5	168	178.5	189	199.5	210
L3	198	198	210.5	223	235.5	248	260.5	273	273	285.5	298	310.5	323	335.5	335.5
L4	187.5	187.5	200	212.5	225	237.5	250	262.5	262.5	275	287.5	300	312.5	325	325
L5	17	11.5	12.5	13.5	14.5	15.5	16.5	17.5	12.5	13.5	14.5	15.5	16.5	17.5	12





Dimensions: SY5000 Series

Plug-in
Connector Connecting Base

Type 10/Side Ported EX126

 $SS5Y5\text{-}10S4V\text{-}\underline{Stations} \overset{U}{\underset{D}{\overset{C4, N3}{D-C6, N7}}} (D)$ 

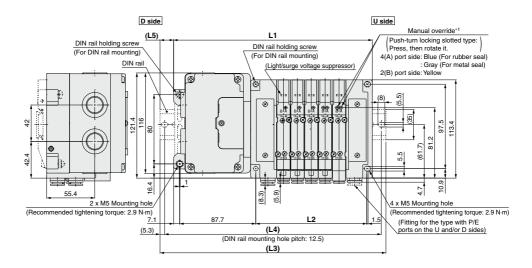

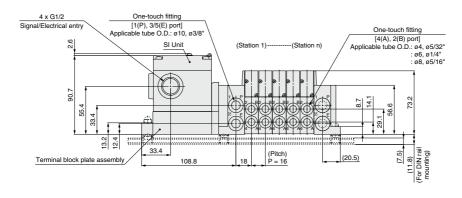

- \*1: Refer to page 329 for dimensions of external pilot, silencer, elbow fittings and slide locking manual override.
- \*: These figures show the "SS5Y5-10S4V-05D-C8".
- \*: Refer to page 334 for dimensions of A or B port top-ported type.

n: Stations	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
L1	181.3	197.3	213.3	229.3	245.3	261.3	277.3	293.3	309.3	325.3	341.3	357.3	373.3	389.3	405.3
L2	80	96	112	128	144	160	176	192	208	224	240	256	272	288	304
L3	210.5	223	248	260.5	273	285.5	310.5	323	335.5	360.5	373	385.5	398	423	435.5
L4	200	212.5	237.5	250	262.5	275	300	312.5	325	350	362.5	375	387.5	412.5	425
L5	14.5	13	17.5	15.5	14	12	16.5	15	13	17.5	16	14	12.5	17	15

## Plus-in Connector Connecting Base SY3000/5000/7000 Series

Dimensions: SY7000 Series

55.4

(Recommended tightening torque: 2.9 N·m)

5

(5.3)

2 x M5 Mounting hole

Plug-in
Connector Connecting Base

(A, B port: ø12)

L2

Type 10/Side Ported EX126

4 x M5 Mounting hole

(Recommended tightening torque: 2.9 N·m)

(Fitting for the type with P/E ports on the U and/or D sides)

SJ

SY

S0700


S0700

C6, N7 -C8, N9 -C10, N11 (D) C12 SS5Y7-10S4 - Stations B D side U side (L5)Manual override\*1 Push-turn locking slotted type: DIN rail holding screw DIN rail holding screw Press, then rotate it. (Light/surge voltage suppressor (For DIN rail mounting) 4(A) port side: Blue (For rubber seal) (For DIN rail mounting) : Gray (For metal seal) 2(B) port side: Yellow ⊗ (DIN rail) (%) ⊗ (32) 136.8 8 128.8 115 (5.5)96.7 ⊗ ⊗ 6 φ

(8.3)

(L4)
(DIN rail mounting hole pitch: 12.5)

87.9

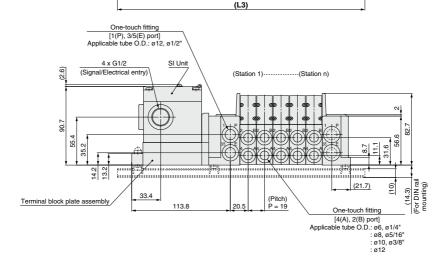

- \*1: Refer to page 330 for dimensions of external pilot, silencer, elbow fittings and slide locking manual override.
- \*: These figures show the "SS5Y7-10S4V-05D-C10".
- \*: Refer to page 335 for dimensions of A or B port top-ported type.

n: Stations	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
L1	195.5	214.5	233.5	252.5	271.5	290.5	309.5	328.5	347.5	366.5	385.5	404.5	423.5	442.5	461.5
L2	94	113	132	151	170	189	208	227	246	265	284	303	322	341	360
L3	223	248	260.5	285.5	298	323	335.5	360.5	373	398	410.5	435.5	448	473	485.5
L4	212.5	237.5	250	275	287.5	312.5	325	350	362.5	387.5	400	425	437.5	462.5	475
L5	14	17	13.5	16.5	13.5	16.5	13	16	13	16	12.5	15.5	12.5	15.5	12



**EX126** 


Type 12 Top Ported

# SY3000/5000/7000 Series

**( (** RoHS

#### **How to Order Manifold**

Refer to pages 333 to 335 for dimensions of Type 12/Top ported type.

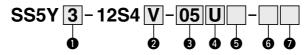

#### Series

3	SY3000
5	SY5000
7	SY7000

#### 2 SI Unit

•	O I I I
0	Without SI Unit
٧	CC-Link (Positive common NPN)

 Only a terminal block plate is mounted for the valve without SI Unit.

#### Valve stations

Symbol	Stations	Note			
02	2 stations				
i	:	Double wiring*1			
08	8 stations				
02	2 stations	0			
:	:	Specified layout*2 (Available up to 16 solenoids			
16	16 stations	(Available up to 16 soleriolds)			

- \*1: Double wiring: 2-position single, double, 3-position and 4-position valves can be used on all manifold stations. Use of a 2-position single solenoid will result in an unused control signal. If this is not desired, order with a specified layout.
- \*2: Specified layout: Indicate the wiring specifications on the manifold specification sheet. (Note that 2-position double, 3-position and 4-position valves cannot be used where single wiring has been specified.)
- This also includes the number of blanking plate assembly.

#### 4 P, E port entry

U*1	U side (2 to 10 stations)
<b>D</b> *1	D side (2 to 10 stations)
В	Both sides (2 to 16 stations)


\*1: For type "S", supply/exhaust block assembly with built-in silencer, choose U or D for P port entry.

#### 5 SUP/EXH block assembly

Nil	Internal pilot
S	Internal pilot, Built-in silencer
R	External pilot

- \*: For built-in silencer type, P and E ports are available on U and D sides. 3/5(E) port is plugged. The silencer exhaust port is located on the opposite side of P, E port entry. (Example: When the P, E port entry is D side, the silencer exhaust port is U side.)
- \*: When the built-in silencer type is used, keep the exhaust port from coming in direct contact with water or other liquids.

### **How to Order Manifold Assembly**

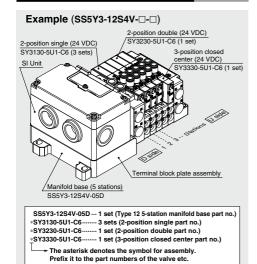

The valve arrangement is numbered as the 1st station from the D side.
Under the manifold part number, state the valves to be mounted in order from the 1st station as shown in the figure above. If the arrangement becomes complicated, specify on a manifold specification sheet.

6 P, E port size (One-touch fittings)

Symbol	SY3000	SY5000	SY7000	1
Nil	ø8	ø10	ø12	
N	ø5/16"	ø3/8"	ø1/2"	M

\*: For N. sizes are in inches.



N	lil	Direct mounting  DIN rail mounting (With DIN rail)  DIN rail mounting (Without DIN rail)		
	)			
D	0			
D	3	For 3 stations   Specify a longer		
		:	than the standard	
D	16	For 16 stations	length.	

 Refer to page 394 for the fixation of DIN rail mounting type manifold.

For details about the EX126 Integrated-type (For Output) Serial Transmission System, refer to pages 781 to 783 and the Operation Manual. For details about part numbers of SI Units to be mounted, refer to page 364. Please download the Operation Manual via SMC website, http://www.smcworld.com



## Plug-in Connector Connecting Base SY3000/5000/7000 Series

#### How to Order Valves (With mounting screw)


Refer to page 136 for valve specifications.

SJ

SY

S0700

S0700

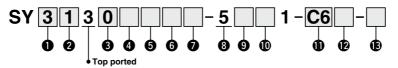

#### Series

3	SY3000
5	SY5000
7	SY7000

#### 2 Type of actuation

1	2-position	Single		
2		Double		
3		Closed center Exhaust center		
	3-position			
5		Pressure center		
A*1 B*1 C*1	4 position	N.C./N.C.		
	4-position dual 3-port	N.O./N.O.		
	duai 5-port	N.C./N.O.		

\*1: Only rubber seal type is available for the 4-position dual 3-port valve.

#### Seal type

	x. 1, p o
0	Rubber seal
1	Metal seal

#### Pilot type

н

Nil	Internal pilot	
R	External pilot	

## Back pressure check valve (Built-in valve type)

(Built-in valve type)					
Nil	None				

e: Only rubber seal type. Manifold installed type is available if the back pressure check valve is required for a valve with metal seal. Refer to page 379 for Ordering Example. However, it is not recommended to use the built-in valve type and the manifold installed type at the same time hecause it will reduce the flow

Built-in

\*: The built-in valve type back pressure check valve is not available for the 3-position type and the SY7000

#### 6 Pilot valve option

• : ::::: : : : : : : : : : : : : : : :		
Nil	Standard (0.7 MPa)	
В	Quick response type (0.7 MPa)	
<b>K</b> *1	High pressure type (1.0 MPa)	

\*1: Only metal seal type is available for the high pressure type.

#### Coil type

Nil Standard		Standard	
	Т	With power saving circuit (Continuous duty type	
*: Be sure to select the power saving circuit			
	type w	hen the valve is continuously	

- energized for long periods of time.Ee careful of the energizing time when the power saving circuit is selected. Refer to page 391 for details.
- 8 Rated voltage


U na	ieu voitage
5	24 VDC

#### Light/surge voltage suppressor and common specification

Symbol	With light	Surge voltage suppressor	Common specification		
R	ı	•	Non-polar		
U	•				
S	_		Positive		
Z	•		common		
0 1 //701 1 0 11 1 1 10 11					

\*: Only "Z" type is available for with the power saving circuit.

#### •

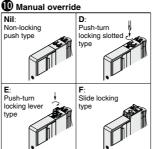

\*: Refer to page 154 for with the safety slide locking manual override.

#### A, B port size

#### Thread piping

	p-p3			
Symbol	Port size	Applicable series		
M5	M5 x 0.8	SY3000		
01	1/8	SY5000		
02	1/4	SY7000		

#### One-touch fitting (Metric)

One-touch nitting (wether)						
Symbol	A, B port	SY3000	SY5000	SY7000		
C2 C3	ø2	•	_	_		
C3	ø3.2	•	_	_		
C4	ø4	•	•	_		
C6	ø6	•	•	•		
C8	ø8	_	•	•		
C10	ø10		_	•		
C12	ø12	_	_	•		

#### One-touch fitting (Inch)

Symbol	A, B port	SY3000	SY5000	SY7000						
N1	ø1/8"	•	_	_						
N3	ø5/32"	•	•	_						
N7	ø1/4"	•	•	•						
N9	ø5/16"	_	•	•						
N11	ø3/8"	_	_	•						

#### 12 Thread type

Nil	Rc
F	G
N	NPT
Т	NPTF

\*: Only Nil is available for M5.

#### (B) Type of mounting screy

ועי ש	Je of illouriting screw				
Nil	Round head combination screw				
В	Hexagon socket head cap screw				
K	Round head combination screw (Falling-out-prevention type)				
н	Hexagon socket head can screw (Falling-out-prevention type)				

- \*: For "K" and "H", the valve body cover has a drop prevention construction to stop the mounting screws from falling out when the valve is removed for maintenance etc.
- When ordering a valve individually, the base gasket is not included. Since the base gasket is attached to the manifold, please order the base gasket separately if it is needed for maintenance service. Refer to page 367 for part numbers of base
- gasket and mounting screw.

  \*: "B" and "H" cannot be selected for the individual SUR/EYH appear accomply or

\*: "B" and "H" cannot be selected for the individual SUP/EXH spacer assembly or interface regulator.




EX120

# SY3000/5000/7000 Series

**( (** RoHS)

#### **How to Order Manifold**

Refer to pages 331 (SY5000) and 332 (SY7000) for dimensions of Type 11/Bottom ported type.

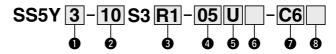

#### Series

3	SY3000
5	SY5000
7	SY7000

## **2** Туре

	, ,					
10	Side ported					
11	Bottom ported*1					
:1. The CVECCO manifold base is used for the						

1: The SY5000 manifold base is used for the bottom ported of the SY3000. When ordering, refer to "Plug-in Mixed Mounting Type Manifold" (from page 336).

#### SI Unit

0	Without SI Unit						
Q	DeviceNet™ (Positive common NPN)						
R1	OMRON CompoBus/S						
R2	(Positive common NPN)	8 outputs					
٧	CC-Link (Positiv	e common NPN)					
ZB*1	CompoNet™	Positive common NPN					
ZBN*1	Componer	Negative common PNP					


- \*1: The communication connector (for the opposite side) is not provided. Please order it separately.
- \*: Ensure a match with the common specification of the valve to be used.

#### 4 Valve stations

•		otationo					
Symbol	Stations	Note					
02	2 stations						
i	- :	Double wiring*1					
08	8 stations						
02	2 stations	0					
:	:	Specified layout*2 (Available up to 16 solenoids)					
16	16 stations	(Available up to 16 soleriolds)					
_							

- \*1: Double wiring: 2-position single, double, 3-position and 4-position valves can be used on all manifold stations. Use of a 2-position single solenoid will result in an unused control signal. If this is not desired, order with a specified layout.
- \*2: Specified layout: Indicate the wirring specifications on the manifold specification sheet. (Note that 2-position double, 3-position and 4-position valves cannot be used where single wirring has been specified.)
- This also includes the number of blanking plate assembly.
- \*: Since R2 type SI Unit has 8 outputs, note that up to 8 solenoids can be accommodated

## How to Order Manifold Assembly

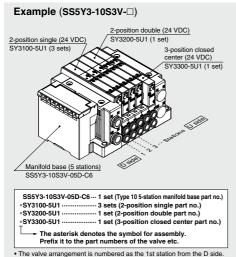

- Under the manifold part number, state the valves to be mounted in order from the 1st station as shown in the figure above. If the arrangement becomes complicated, specify on a manifold specification sheet.

  When mixing top ported configurations, select from page 327.
- In this case, use caution as there is also output on the A and B port on base side.

Specify on a manifold specification sheet if plugs are required on the A and B port on base side.

#### **5** P, E port entry

U	U side (2 to 10 stations)
D	D side (2 to 10 stations)
В	Both sides (2 to 16 stations)

#### 6 SUP/EXH block assembly

Nil	Internal pilot
S	Internal pilot, Built-in silencer
R	External pilot

 3/5(E) port is plugged for the built-in silencer type.

For details about the EX120 Integrated-type (For Output) Serial Transmission System, refer to pages 777 to 780 and the Operation Manual. For details about part numbers of SI Units to be mounted, refer to page 365. Please download the Operation Manual via SMC website. http://www.smcworld.com



## Plus-in Connector Connecting Base SY3000/5000/7000 Series

SJ

A, B port size (Inch/One-touch fitting)

\$0700

S0700 S0700

0	Α, Ι	Вр	ort size	(Metri	c/One	-touch	fitting	g)			
		A, B port		Type '	10/Side	ported	Type 11/Bo	ttom ported			
Symbol				SY3000	SY5000	SY7000	SY5000	SY7000			
C2			ø2	•	_	_	_	_			
СЗ			ø3.2	•	_	_	_	_			
C4			ø4	•	•	_	•	_			
C6	ight		ø6	•	•	•	•	•			
C8	Straight		ø8	_	•	•	•	•	201		
C10	(U)		ø10	_	_	•	_	•	O		
C12			ø12	_	_	•	_	•	4		
CM*1		Straig	pht port, mixed sizes	•	•	•	•	•	,		
L4			ø4	•	•	_	_	_			
L6		5	ø6	•	•	•	_	_			
L8		Upward	ø8	_	•	•	_	_			
L10		5	5	ø10	_	_	•	_	_		
L12	01		ø12	_	_	•	_	_	Jeister .		
B4	Elbow*2	ard	ard	Downward	ø4	•	•	_	_	_	
<b>B6</b>	ale				ø6	•	•	•	_	_	
B8	ш	Ę	ø8	_	•	•	_	_			
B10		ò	ø10	_	_	•	_	_			
B12		Ĺ	ø12	_	_	•	_	_			
LM*1		(Ind	w port, mixed sizes uding upward and wnward piping)	•	•	•	_	_			
P, E port size (One-touch fittings)				ø8	ø10	ø12	ø10	ø12			

0	A D		Type 1	10/Side	ported	Type 11/Bo	ttom ported		
Symbol		A, B port		SY3000	SY5000	SY7000	SY5000	SY7000	
N1			ø1/8"	•	_	_	_	_	
N3			ø5/32"	•	•		•		
N7	igh		ø1/4"	•	•	•	•	•	
N9	Straight		ø5/16"	_	•	•	•	•	
N11	0,		ø3/8"			•		•	al Sasser
CM*1		Straig	ht port, mixed sizes	•	•	•	•	•	
LN3			ø5/32"	•	_	_	_	_	
LN7		/ard	ø1/4"	•	•				
LN9		Upward	ø5/16"	_	•	_	_	_	
LN11			-	ø3/8"	_	_	•	_	_
BN3	,*W	5	ø5/32"	•	_	_	_	_	
BN7	-1 ш і	ĭ×	ø1/4"	•	•	_	_	_	
BN9		Downward	ø5/16"	_	•	_	_	_	
BN11		ă	ø3/8"	_	_	•	_	_	
LM*1	(Inc		v port, mixed sizes uding upward and wnward piping)	•	•	•	_	_	
	P, E port size (One-touch fittings)			ø5/16"	ø3/8"	ø1/2"	ø3/8"	ø1/2"	

#### 8 Mounting and Option

Symbol	Mounting	Option			
Symbol	Woulding	Name plate	Station number		
Nil	Direct	_	_		
AA	mounting	•	•		
BA	mounting	•	_		
D□	DIN rail	_	_		
A□	mounting	•	•		
B□	mounting	•	_		

- \*: Enter the number of stations inside ☐ when it is larger than the number of valve stations. (Refer to "DIN Rail Option" below.)
- Only direct mounting is available for Type 11 (Bottom ported).
- \*: Refer to page 394 for the fixation of DIN rail mounting type manifold.

#### **DIN Rail Option**

Nil	Direct mounting		
0	Without DIN rail (with bracket)		
3	For 3 stations	Specify a longer rail	
- :		than the total length	
16	For 16 stations	of specified stations.	

\*: When it is necessary to mount a DIN rail without an SI Unit, select D0 and order DIN rail length separately, referring to L3 in the dimensions. (Refer to page 372 for part numbers of DIN rail.)




<sup>\*1:</sup> Indicate the sizes on the manifold specification sheet in the case of "CM", "LM". The direction of P, E port fittings is the same as for A, B port. If selecting "LM", indicate it on the manifold specification sheet for the P, E port fitting direction.

<sup>\*2:</sup> To avoid interference with the body or piping, select downward elbow port when mounting the optional spacer assembly (pages 373 to 375).

#### How to Order Valves (With mounting screw)

Refer to page 136 for valve specifications.

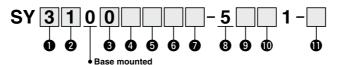

#### Series

3	SY3000
5	SY5000
7	SY7000

#### Type of actuation

1	2-position	Single	
2	Double		
3	3-position	Closed center	
4		Exhaust center	
5		Pressure center	
<b>A</b> *1	B*1 4-position	N.C./N.C.	
		N.O./N.O.	
C*1	duai 5-port	N.C./N.O.	

\*1: Only rubber seal type is available for the 4-position dual 3-port valve.

#### Seal type

0	Rubber seal	
1	Metal seal	

#### 4 Pilot type

• · · · · · · · · · · · · · · · · · · ·		
Nil	Internal pilot	
R	External pilot	

## Back pressure check valve (Built-in valve type)

Nil	None
Н	Built-in

- «: Only rubber seal type. Manifold installed type is available if the back pressure check valve is required for a valve with metal seal. Refer to page 379 for Ordering Example. However, it is not recommended to use the built-in valve type and the manifold installed type at the same time because it will reduce the flow.
- \*: The built-in valve type back pressure check valve is not available for the 3-position type and the SY7000.

#### 6 Pilot valve option

Filot valve option		
Nil	Standard (0.7 MPa)	
В	Quick response type (0.7 MPa)	
<b>K</b> *1	K*1 High pressure type (1.0 MPa)	

\*1: Only metal seal type is available for the high pressure type.

#### Coil type

Nil	Standard
Т	With power saving circuit (Continuous duty type)

- \*: Be sure to select the power saving circuit type when the valve is continuously energized for long periods of time.
- \*: Be careful of the energizing time when the power saving circuit is selected. Refer to page 391 for details.


#### 8 Rated voltage

#### 9 Light/surge voltage suppressor and common specification

Symbol	With light	Surge voltage suppressor	Common specification
R	_	•	Non-polar
U	•		
S	_		Positive
Z	•		common
NS	_		Negative
NZ	•		common

- \*: Select a valve from R, U, S or Z when the SI Unit specification is positive common. Select a valve from R, U, NS or NZ when the SI Unit specification is ZBN (negative common).
- Only "Z" and "NZ" types are available for with the power saving circuit.

#### Manual override

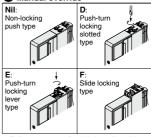

\*: Refer to page 154 for with the safety slide locking manual override.

#### Type of mounting screw

Nil	III Round head combination screw	
В	Hexagon socket head cap screw	
K	Round head combination screw (Falling-out-prevention type Hexagon socket head cap screw (Falling-out-prevention type	
Н		

- \*: For "K" and "H", the valve body cover has a drop prevention construction to stop the mounting screws from falling out when the valve is removed for maintenance etc.
- \*: When ordering a valve individually, the base gasket is not included. Since the base gasket is attached to the manifold, please order the base gasket separately if it is needed for maintenance service.

Refer to page 367 for part numbers of the base gasket and mounting screw.

\*: "B" and "H" cannot be selected for the individual SUP/EXH spacer assembly, interface regulator or double check spacer assembly with residual pressure release valve.



## Plus-in Connector Connecting Base SY3000/5000/7000 Series

Dimensions: SY3000 Series

Plug-in
Connector Connecting Base

Type 10/Side Ported EX120


SJ

SY

S0700

S0700

SS5Y3-10S3 - Stations D C3, N1 (D)

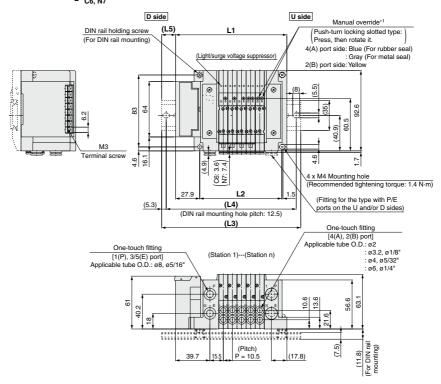

- \*1: Refer to page 328 for dimensions of external pilot, silencer, elbow fittings and slide locking manual override.
- \*: These figures show the "SS5Y3-10S3V-05D-C6".
- \*: Refer to page 333 for dimensions of A or B port top-ported type.

n: Stations	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
L1	96.9	107.4	117.9	128.4	138.9	149.4	159.9	170.4	180.9	191.4	201.9	212.4	222.9	233.4	243.9
L2	63	73.5	84	94.5	105	115.5	126	136.5	147	157.5	168	178.5	189	199.5	210
L3	123	135.5	148	160.5	173	173	185.5	198	210.5	223	235.5	235.5	248	260.5	273
L4	112.5	125	137.5	150	162.5	162.5	175	187.5	200	212.5	225	225	237.5	250	262.5
L5	13	14	15	16	17	12	13	14	15	16	17	11.5	12.5	13.5	14.5





Dimensions: SY5000 Series

Plug-in
Connector Connecting Base

Type 10/Side Ported EX120

SS5Y5-10S3 - Stations D - C6, N7 (D)

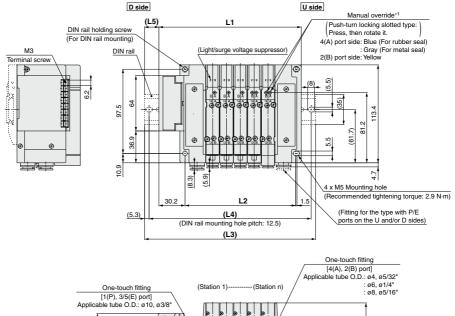

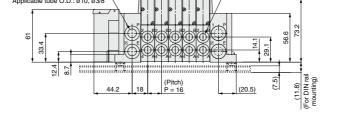

- \*1: Refer to page 329 for dimensions of external pilot, silencer, elbow fittings and slide locking manual override.
- \*: These figures show the "SS5Y5-10S3V-05D-C8".
- \*: Refer to page 334 for dimensions of A or B port top-ported type.

n: Stations	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
L1	116.7	132.7	148.7	164.7	180.7	196.7	212.7	228.7	244.7	260.7	276.7	292.7	308.7	324.7	340.7
L2	80	96	112	128	144	160	176	192	208	224	240	256	272	288	304
L3	148	160.5	173	198	210.5	223	248	260.5	273	285.5	310.5	323	335.5	348	373
L4	137.5	150	162.5	187.5	200	212.5	237.5	250	262.5	275	300	312.5	325	337.5	362.5
L5	15.5	14	12	16.5	15	13	17.5	16	14	12.5	17	15	13.5	11.5	16


## Plus-in Connector Connecting Base SY3000/5000/7000 Series


Dimensions: SY7000 Series

Plug-in
Connector Connecting Base

Type 10/Side Ported EX120

SS5Y7-10S3 - Stations D - C8, N7 D - C8, N9 D - C10, N11 (D)

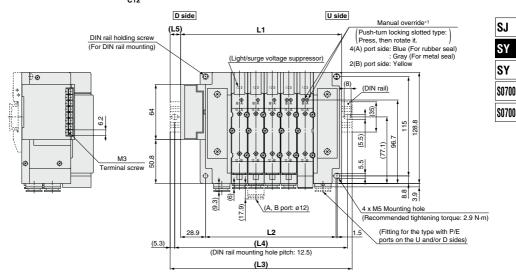

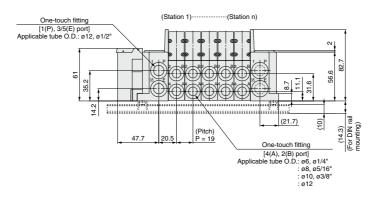

- \*1: Refer to page 330 for dimensions of external pilot, silencer, elbow fittings and slide locking manual override.
- \*: These figures show the "SS5Y7-10S3V-05D-C10".
- \*: Refer to page 335 for dimensions of A or B port top-ported type.

n: Stations	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
L1	129.4	148.4	167.4	186.4	205.4	224.4	243.4	262.4	281.4	300.4	319.4	338.4	357.4	376.4	395.4
L2	94	113	132	151	170	189	208	227	246	265	284	303	322	341	360
L3	160.5	173	198	210.5	235.5	248	273	285.5	310.5	335.5	348	373	385.5	410.5	423
L4	150	162.5	187.5	200	225	237.5	262.5	275	300	325	337.5	362.5	375	400	412.5
L5	15.5	12.5	15.5	12	15	12	15	11.5	14.5	17.5	14.5	17.5	14	17	14



# Plug-in Connector Connecting Base

EX120


Type 12 Top Ported

# SY3000/5000/7000 Series

**( (** RoHS

### **How to Order Manifold**

Refer to pages 333 to 335 for dimensions of Type 12/Top ported type.

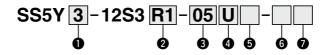

## 1 Series

SY3000
SY5000
SY7000

### 2 SI Unit

0	Without SI Unit						
Q	DeviceNet™ (Positive common NPN)						
R1	OMRON CompoBus/S	16 outputs					
R2	(Positive common NPN)	8 outputs					
V	CC-Link (Positive	e common NPN)					
ZB*1	CompoNet™	Positive common NPN					
ZBN*1	Componer	Negative common PNP					

- \*1: The communication connector (for the opposite side) is not provided. Please order it separately.
- Ensure a match with the common specification of the valve to be used.

### 3 Valve stations

Symbol	Stations	Note				
02	2 stations					
:	:	Double wiring*1				
08	8 stations					
02	2 stations	0				
:	:	Specified layout*2 (Available up to 16 solenoids)				
16	16 stations	(Available up to 16 soleriolus)				

- \*1: Double wiring: 2-position single, double, 3-position and 4-position valves can be used on all manifold stations. Use of a 2-position single solenoid will result in an unused control signal. If this is not desired, order with a specified layout.
- \*2: Specified layout: Indicate the wiring specifications on the manifold specification sheet. (Note that 2-position double, 3-position and 4-position valves cannot be used where single wiring has been specified.)
- \*: This also includes the number of blanking plate assembly.
- \*: Since R2 type SI Unit has 8 outputs, note that up to 8 solenoids can be accommodated.

### 4 P, E port entry

U*1	U side (2 to 10 stations)
<b>D</b> *1	D side (2 to 10 stations)
В	Both sides (2 to 16 stations)


\*1: For type "S", supply/exhaust block assembly with built-in silencer, choose U or D for P port entry.

### SUP/EXH block assembly

ı	Nil	Internal pilot
	S	Internal pilot, Built-in silencer
Γ	R	External pilot
_		

\*: For built-in silencer type, P and E ports are available on U and D sides. 3/5(E) port is plugged. The silencer exhaust port is located on the opposite side of P, E port entry. (Example: When the P, E port entry is D side, the silencer exhaust port is U side.)

### **How to Order Manifold Assembly**

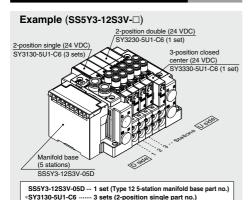

\*SY3230-5U1-C6 ······· 1 set (2-position double part no.)
\*SY3330-5U1-C6 ······· 1 set (3-position closed center part no.)

➤ The asterisk denotes the symbol for assembly. Prefix it to the part numbers of the valve etc.

 The valve arrangement is numbered as the 1st station from the D side.
 Under the manifold part number, state the valves to be mounted in order from the 1st station as shown in the figure above. If the arrangement becomes complicated, specify on a manifold specification sheet.

### 6 P, E port size (One-touch fittings)

Symbol	SY3000	SY5000	SY7000
Nil	ø8	ø10	ø12
N	ø5/16"	ø3/8"	ø1/2"



### **7** Mounting

<b>W</b> Mo	Mounting								
Nil	Direc	Direct mounting							
D	DIN rail mounting (With DIN rail)								
D0	DIN rail mounti	ng (Without DIN rail)							
D3	For 3 stations	Specify a longer rail							
:	: than the standard								
D16	For 16 stations	16 stations length.							

- \*: When mounted on the DIN rail without the SI Unit, please select D0 and refer to L3 of the dimensions for the DIN rail length, then order separately. (Refer to page 372 for the DIN rail part number.)
- \*: Refer to page 394 for the fixation of DIN rail mounting type manifold.

For details about the EX120 Integrated-type (For Output) Serial Transmission System, refer to pages 777 to 780 and the Operation Manual. For details about part numbers of SI Units to be mounted, refer to page 365. Please download the Operation Manual via SMC website, http://www.smcworld.com




## Plug-in Connector Connecting Base SY3000/5000/7000 Series

### How to Order Valves (With mounting screw)

SJ

S0700

S0700

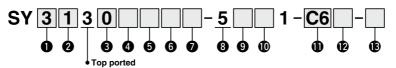

### Series

3	SY3000
5	SY5000
7	SY7000

### 2 Type of actuation

1	O position	Single				
2	2-position	Double				
3		Closed center				
4	3-position	Exhaust center				
5		Pressure center				
<b>A</b> *1	4	N.C./N.C.				
B*1	4-position dual 3-port	N.O./N.O.				
C*1	duai 5-port	N.C./N.O.				

\*1: Only rubber seal type is available for the 4-position dual 3-port valve.

## 3 Seal type

0	Rubber seal
1	Metal seal

### A Pilot type

Nil	Internal pilot
R	External pilot

### Back pressure check valve (Built-in valve type)

Nil	None
н	Built-in

- \*: Only rubber seal type. Manifold installed type is available if the back pressure check valve is required for a valve with metal seal. Refer to page 379 for Ordering Example. However, it is not recommended to use the built-in valve type and the manifold installed type at the same time because it will reduce the flow.
- \*: The built-in valve type back pressure check valve is not available for the 3-position type and the SY7000.

### 6 Pilot valve option

	or raire option
Nil	Standard (0.7 MPa)
В	Quick response type (0.7 MPa)
<b>K</b> *1	High pressure type (1.0 MPa)

\*1: Only metal seal type is available for the high pressure type.

### Coil type

Nil	Standard		
Т	With power saving circuit (Continuous duty type		

- \*: Be sure to select the power saving circuit type when the valve is continuously energized for long periods of time.
- \*: Be careful of the energizing time when the power saving circuit is selected. Refer to page 391 for details.


### Rated voltage

U III	ica voitage	
5		24 VDC

### Light/surge voltage suppressor and common specification

Symbol	With light	Surge voltage suppressor	Common specification	
R	1		Non-polar	
U	•	•	Non-polai	
S	_		Positive	
Z	•		common	
NS	_		Negative	
NZ	•		common	

- \*: Select a valve from R, U, S or Z when the SI Unit specification is positive common. Select a valve from R, U, NS or NZ when the SI Unit specification is ZBN (negative common).
- \*: Only "Z" and "NZ" types are available for with the power saving circuit.

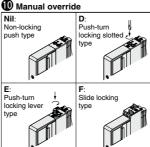

\*: Refer to page 154 for with the safety slide locking manual override.

### A, B port size

### Thread nining

····oud piping		
Symbol	Port size	Applicable series
M5	M5 x 0.8	SY3000
01	1/8	SY5000
02	1/4	SY7000

### One-touch fitting (Metric)

Symbol	A, B port	SY3000	SY5000	SY7000
C2 C3	ø2	•	_	_
C3	ø3.2	•	_	_
C4 C6	ø4	•	•	_
C6	ø6	•	•	•
C8	ø8	_	•	•
C10	ø10	_	_	•
C12	ø12	_	_	•

### e-touch fitting (Inch)

One-touch litting (inch)				
A, B port	SY3000	SY5000	SY7000	
ø1/8"	•	_	_	
ø5/32"	•	•	_	
ø1/4"	•	•	•	
ø5/16"	_	•	•	
ø3/8"	_	_	•	
	A, B port Ø1/8" Ø5/32" Ø1/4" Ø5/16"	A, B port SY3000  Ø1/8"  Ø5/32"  Ø1/4"  Ø5/16"  —	A, B port SY3000 SY5000	

### Thread type

• • • • • • • • • • • • • • • • • • • •	
Nil	Rc
F	G
N	NPT
Т	NPTF

\*: Only Nil is available for M5.

### Type of mounting screw

Nil	Round head combination screw
В	Hexagon socket head cap screw
K	Round head combination screw (Falling-out-prevention type)
Н	Hexagon socket head cap screw (Falling-out-prevention type)

- \*: For "K" and "H", the valve body cover has a drop prevention construction to stop the mounting screws from falling out when the valve is removed for maintenance etc
- \*: When ordering a valve individually, the base gasket is not included. Since the base gasket is attached to the manifold, please order the base gasket separately if it is needed for maintenance service.

Refer to page 367 for part numbers of the base gasket and mounting screw.

\*: "B" and "H" cannot be selected for the individual SUP/EXH spacer assembly or interface regulator.



327

## Type 10 **Type 11 Bottom Ported**

## Plug-in Connector Connecting Base

**EX180** 


# SY3000/5000/7000 Series

( E c RoHS



### How to Order Manifolds

Refer to pages 327-4 to 327-6 for the dimensions of Type 11/Bottom-ported type.

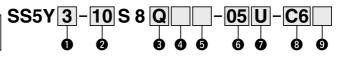

### A Series

<b>U</b> 00.	103
3	SY3000
5	SY5000
7	SY7000

## **A** Type

10	Side ported
11	Bottom ported*1
- 11	Bottom ported

\*1 The SY5000 manifold base is used for the bottom ported SY3000. When ordering, refer to the "Plug-in Mixed Mounting Type Manifold" (Refer to page 336).

### SI unit

0	Without SI unit					
Q	DeviceNet™					
V	CC-Link					

\* Only the connector block assembly is mounted for models without an SI unit.

### 4 SI unit output polarity. Number of outputs

	32 outputs	16 outputs
Without SI unit	N	il
Positive common (NPN)	2	3
Negative common (PNP)	4	5
* When "V" (CC-Link)	is selected	for the SI

- unit, only symbol "2" or "4" (32 outputs) can be selected.
- \* Ensure a match with the common specification of the valves to be used

### **5** Communication connector

Nil	T-branch type						
Α	Straight type						
The	assemulation assessed and name						

- The communication connector and power connector are shipped together with the manifold. The power connector is only available for the straight type.
- \* When not selecting an SI unit, the symbol will he "nil '

### 6 Valve stations In the case of the 32-output SI unit

### Symbol Stations Note 02 2 stations Double wiring\*1 16 16 stations


02 2 stations Specified layout\*2 (Up to 32 solenoids available) 24 Stations

### In the case of the 16-output SI unit

		or the 10 output of unit				
Symbol	Stations	Note				
02	2 stations					
:	:	Double wiring*1				
08	8 stations					
02	2 stations	0				
:	:	Specified layout*2				
16	16 stations	(Up to 16 solenoids available)				

- \*1 Double wiring: 2-position single, double, 3-position, and 4-position valves can be used on all manifold stations. Use of a 2-position single solenoid will result in an unused control signal. If this is not desired, order with a specified layout.
- \*2 Specified layout: Indicate the wiring specifications on the manifold specification sheet. (Note that 2-position double, 3-position. and 4-position valves cannot be used where single wiring has been specified.)
- \* This also includes the number of the blanking plate assembly.
- \* For the product without the SI unit (S80), note the maximum number of solenoids of the SI unit that will be mounted. If the layout is specified, indicate it on the manifold specification sheet.

## How to Order Manifold Assembly

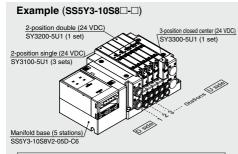

SS5Y3-10S8V2-05D-C6 ··· 1 set (Type 10 5-station manifold base pa	art no.)
*SY3100-5U1 3 sets (2-position single part no.)	

- \*SY3200-5U1 ...... 1 set (2-position double part no.) \*SY3300-5U1 ...... 1 set (3-position closed center part no.)
  - The asterisk denotes the symbol for the assembly. Prefix it to the part numbers of the valve, etc.
- . For the valve arrangement, the valve closest to the D side is considered the 1st station. . Under the manifold part number, state the valves to be mounted in order starting with the 1st station as shown in the figure above. If the arrangement becomes too complicated, specify the details on a manifold specification sheet.
- When mixing top-ported configurations, select from those listed on page 327-8. In such cases, use caution as there is also output on the A and B ports on the base side Specify on the manifold specification sheet if plugs are required for the A and B ports on the base side

### P, E port entry, SUP/EXH block assembly

P, E port entry	Internal pilot	Internal pilot, Built-in silencer	External pilot
U side (2 to 10 stations)	U	С	G
D side (2 to 10 stations)	D	E	Н
Both sides (2 to 24 stations)	В	F	J

- \* 3/5(E) port is plugged for the built-in silencer type.
- \* When the built-in silencer type is used, keep the exhaust port from coming in direct contact with water or other liquids.

For details on the EX180 Integrated Type (For Output) Serial Transmission System, refer to pages 190 to 194 and the Operation Manual. For the part numbers of the SI units to be mounted, refer to page 365-1. Please download the Operation Manual via the SMC website: https://www.smcworld.com



## Connector Connecting Base SY3000/5000/7000 Series

Downwar ø1/4"

P, E port size

(One-touch fittings)

ø5/16'

ø3/8'

Elbow port, mixed size (Including upward and downward piping)

BN9

BN11

SJ

S0700

S0700

8 A, B port size (Metric/One-touch fitting)

Symbol	A D mont		Type 1	10/Side	ported	Type 11/Bo	ttom ported									
Symbol		A, B port		SY3000	SY5000	SY7000	SY5000	SY7000								
C2			ø2	•	_	_	_	_								
СЗ			ø3.2	•	_	_	_	_								
C4	_		ø4	•	•	_	•	1								
C6	Straight		ø6	•	•	•	•	•								
C8	Stra		ø8	_	•	•	•	•	24.16							
C10			ø10	_	-	•	_	•	Surger Surger							
C12			ø12	_	_	•	_	•	•							
CM*1		Straig	ht port, mixed sizes	•	•	•	•	•								
L4			ø4	•	•	_	_	_								
L6		힏	ø6	•	•	•	_	_								
L8		Upward	ø8	_	•	•	_									
L10		5	ø10	_	_	•	-	1								
L12			ø12	_	_	•	_	_	Jalon Salan							
<b>B</b> 4	Elbow*2		ø4	•	•	_	_									
<b>B6</b>	<u></u>	Downward	vnward	vnward	ard	aro	aro	a la		ø6	•	•	•	_	_	
<b>B8</b>	] =				ø8	_	•	•	_	_						
B10			ø10	_	_	•	_	_								
B12			ø12	_	-	•	-	-								
LM*1		Elbow port, mixed sizes (Including upward and downward piping)		•	•	•										
	P, E port size (One-touch fittings)			ø8	ø10	ø12	ø10	ø12								

Syllibul		А,	D port	SY3000	SY5000	SY7000	SY5000	SY7000	
N1			ø1/8"	•	_	_	_	_	
N3	L		ø5/32"	•	•	_	•	_	
N7	ig		ø1/4"	•	•	•	•	•	
N9	Straight		ø5/16"	_	•	•	•	•	
N11	] "	ø3/8"		_	_	•	_	•	o long
CM*1		Straig	ht port, mixed sizes	•	•	•	•	•	
LN3			ø5/32"	•	l –	l –			
LN7		Upward	ø1/4"	•	•	_	_	_	
LN9		ఠ	ø5/16"	_	•	_	_	_	
LN11	_		ø3/8"	_	_	•	_	_	G G G G G G G G G G G G G G G G G G G
BN3	Elbow*2	5	ø5/32"	•	_	_	_	_	
BN7	욢	nward	ø1/4"	•	•	_	_	_	

•

ø5/16" ø3/8" ø1/2" ø3/8" ø1/2"

•

•

Type 10/Side ported Type 11/Bottom ported

A, B port size (Inch/One-touch fitting)

\*1 Indicate the sizes on the manifold specification sheet in the case of "CM" or "LM." The direction of P, E port fittings is the same as for the A, B port. If selecting "LM," indicate it on the manifold specification sheet for the P, E port fitting direction.

**ØSMC** 

\*2 To avoid interference with the body or piping, select a downward elbow port when mounting the optional spacer assembly (pages 373 to 375).


Mounting and Option

		Option Name plate Station number		١.	DIN Rail	Option	
Symbol	Mounting	Name plate	Station number		Nil	Standa	ard length
Nil					0		rail (with bracket)
AA	Direct mounting	•	•		3	For 3 stations	Specify a longer
BA		•	_		:		rail than the total length of specified
D□	5.0	_			24	For 24 stations	stations.
A□	DIN rail mounting	•	•				
B□	mounting	•	_				

- Enter the number of stations inside  $\square$  when it is larger than the number of valve stations. (Refer to "DIN Rail Option" above.)
- Only direct mounting is available for Type 11 (Bottom ported).
   Refer to page 394 for the fixation of DIN rail mounting type manifold.

### How to Order Valves (With mounting screw)

Refer to page 136 for valve specifications.

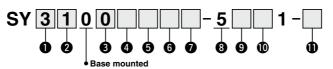

### 1 Series

3	SY3000
5	SY5000
7	SY7000

### 2 Type of actuation

1	2-position	Single					
2	2-position	Double					
3	3-position	Closed center					
4		Exhaust center					
5		Pressure center					
<b>A</b> *1	4-position dual 3-port	N.C./N.C.					
B*1		N.O./N.O.					
C*1	uuai 3-poit	N.C./N.O.					

\*1 Only the rubber seal type is available for the 4-position dual 3-port valve.

## 6 Pilot valve option

Nil	Standard (0.7 MPa)
В	Quick response type (0.7 MPa)
K*1	High-pressure type (1.0 MPa)


\*1 Only the metal seal type is available for the high-pressure type.

### Coil type

Nil	Standard
Т	With power-saving circuit (Continuous duty type

- Be sure to select the power-saving circuit type when the valve is to be continuously energized for long periods of time.
- Be careful of the energizing time when the power-saving circuit is selected. Refer to page 391 for details.

### Manual override

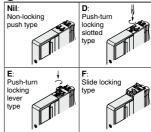

 Refer to page 154 for the safety slide locking manual override.

### 3 Seal type

0	Rubber seal
1	Metal seal

### Pilot type

NIII	Internal pilet	-
IIII	Internal pilot	
R	External pilot	

## Back pressure check valve (Built-in valve type)

Nil	None
Н	Built-in

- Only the rubber seal type is available. A manifold installed type is available if a back pressure check valve with a metal seal is required. Refer to page 379 for ordering examples. However, it is not recommended to use the built-in valve type and the manifold installed type at the same time because it will reduce the flow.
- The built-in valve type back pressure check valve is not available for the 3-position type or the SY7000.

### 8 Rated voltage

5	24 VDC

## 9 Light/surge voltage suppressor and common specification

Symbol	With light	Surge voltage suppressor	Common specification
R	ı		Non-polar
U	•		Non-polai
S	_	•	Positive
Z	•	_	common
NS	-		Negative
NZ	•		common

- \* Select "R," "U," "S," or "Z" for the valve when the SI unit output polarity is positive common. Select "R," "U," "NS," or "NZ" for the valve when the SI unit output polarity is negative common.
- Only "Z" and "NZ" are available with a power-saving circuit.

### Type of mounting screw

- ,,	<b>j</b>
Nil	Round head combination screw
В	Hexagon socket head cap screw
K	Round head combination screw (Drop prevention type)
Н	Hexagon socket head cap screw (Drop prevention type)

- \* For "K" and "H," the valve body cover has a drop prevention construction to stop the mounting screws from falling out when the valve is removed for maintenance, etc.
- When ordering a valve individually, the base gasket is not included. Since the base gasket is attached to the manifold, please order the base gasket separately if it is needed for maintenance. Refer to page 367 for base gasket and mounting screwn and numbers.
- mounting screw part numbers.
  \* "B" and "H" cannot be selected for the individual SUP/EXH spacer assembly, interface regulator, or double check spacer assembly with residual pressure release valve.

## Connector Connecting Base SY3000/5000/7000 Series

Dimensions: SY3000 Series

Plug-in Connector Connecting Base Type 10/Side Ported EX180


SJ


SY

S0700

S0700

SS5Y3-10S8 -- Stations D -C2, N1 (D) B C6, N7

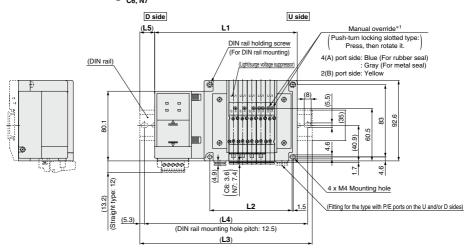

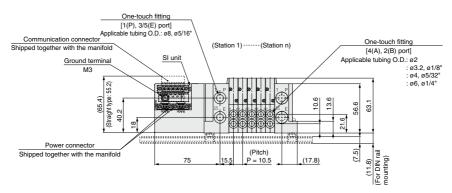


- \*1 Refer to page 328 for dimensions of the external pilot, silencer, elbow fittings, and slide locking manual override.
- \* These figures show the "SS5Y3-10S8V2-05D-C6."
- \* Refer to page 333 for dimensions of A or B port top-ported type.


n: Stations	2	3	4	5	6	7	8	9	10	11	12	13
L1	132.3	142.8	153.3	163.8	174.3	184.8	195.3	205.8	216.3	226.8	237.3	247.8
L2	63	73.5	84	94.5	105	115.5	126	136.5	147	157.5	168	178.5
L3	160.5	173	185.5	198	198	210.5	223	235.5	248	260.5	260.5	273
L4	150	162.5	175	187.5	187.5	200	212.5	225	237.5	250	250	262.5
L5	14	15	16	17	12	13	14	15	16	17	11.5	12.5
n: Stations	14	15	16	17	18	19	20	21	22	23	24	
L1	258.3	268.8	279.3	289.8	300.3	310.8	321.3	331.8	342.3	352.8	363.3	
L2	189	199.5	210	220.5	231	241.5	252	262.5	273	283.5	294	
L3	285.5	298	310.5	323	335.5	335.5	348	360.5	373	385.5	398	
L4	275	287.5	300	312.5	325	325	337.5	350	362.5	375	387.5	
L5	13.5	14.5	15.5	16.5	17.5	12.5	13.5	14.5	15.5	16.5	17.5	

Dimensions: SY5000 Series

Plug-in Connector Connecting Base Type 10/Side Ported EX180

 $SS5Y5-10S8 \square \square - \underbrace{Stations}_{D} \stackrel{U}{\underset{C6, N7}{C4, N3}} \stackrel{C4, N3}{\underset{C8, N9}{N7}} \textbf{(D)}$ 

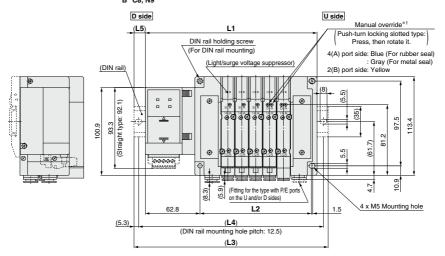

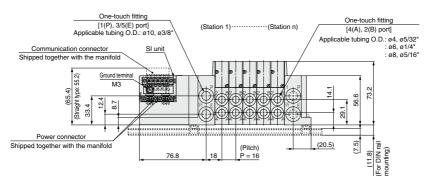

- \*1 Refer to page 328 for dimensions of the external pilot, silencer, elbow fittings, and slide locking manual override.
- \* These figures show the "SS5Y5-10S8V2-05D-C8."
- \* Refer to page 333 for dimensions of A or B port top-ported type.

n: Stations	2	3	4	5	6	7	8	9	10	11	12	13
L1	149.3	165.3	181.3	197.3	213.3	229.3	245.3	261.3	277.3	293.3	309.3	325.3
L2	80	96	112	128	144	160	176	192	208	224	240	256
L3	173	198	210.5	223	248	260.5	273	285.5	310.5	323	335.5	360.5
L4	162.5	187.5	200	212.5	237.5	250	262.5	275	300	312.5	325	350
L5	12	16.5	14.5	13	17.5	15.5	14	12	16.5	15	13	17.5
n: Stations	14	15	16	17	18	19	20	21	22	23	24	
n: Stations	<b>14</b> 341.3	<b>15</b> 357.3	<b>16</b> 373.3	<b>17</b> 389.3	<b>18</b> 405.3	<b>19</b> 421.3	<b>20</b> 437.3	<b>21</b> 453.3	<b>22</b> 469.3	<b>23</b> 485.3	<b>24</b> 501.3	
		_	_		_	-	_			_		
L1	341.3	357.3	373.3	389.3	405.3	421.3	437.3	453.3	469.3	485.3	501.3	
L1 L2	341.3 272	357.3 288	373.3 304	389.3 320	405.3 336	421.3 352	437.3 368	453.3 384	469.3 400	485.3 416	501.3 432	
L1 L2 L3	341.3 272 373	357.3 288 385.5	373.3 304 398	389.3 320 423	405.3 336 435.5	421.3 352 448	437.3 368 460.5	453.3 384 485.5	469.3 400 498	485.3 416 510.5	501.3 432 535.5	

## Connector Connecting Base SY3000/5000/7000 Series

Dimensions: SY7000 Series

Plug-in Connector Connecting Base Type 10/Side Ported EX180


SJ

SY

S0700

S0700

SS5Y7-10S8 -- Stations D C6, N7 C8, N9 C10, N11 (D)

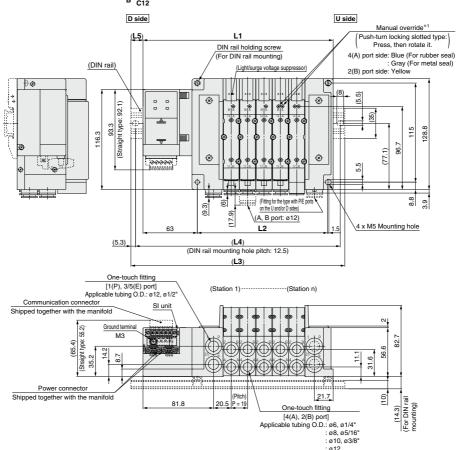

- \*1 Refer to page 328 for dimensions of the external pilot, silencer, elbow fittings, and slide locking manual override.
- \* These figures show the "SS5Y7-10S8V2-05D-C10."
- \* Refer to page 333 for dimensions of A or B port top-ported type.

n: Stations	2	3	4	5	6	7	8	9	10	11	12	13
L1	163.5	182.5	201.5	220.5	239.5	258.5	277.5	296.5	315.5	334.5	353.5	372.5
L2	94	113	132	151	170	189	208	227	246	265	284	303
L3	198	210.5	235.5	248	273	285.5	310.5	323	348	360.5	385.5	398
L4	187.5	200	225	237.5	262.5	275	300	312.5	337.5	350	375	387.5
L5	17.5	14	17	14	17	13.5	16.5	13.5	16.5	13	16	13
n: Stations	14	15	16	17	18	19	20	21	22	23	24	
L1	391.5	410.5	429.5	448.5	467.5	486.5	505.5	524.5	543.5	562.5	581.5	
L2	322	341	360	379	398	417	436	455	474	493	512	
			000	3/3	390	417	430	455	4/4	493	312	
L3	423	435.5	460.5	473	498	510.5	535.5	548	573	598	610.5	
	_	-									_	

## Plug-in Connector Connecting Base

**EX180** 

Type 12
Top Ported

# | **SY3000/5000/7000** Series

( ( c Rus RoHS

Valve stations
In the case of the 32-output SI unit

Symbol Stations

02 2 stations

**16** 16 stations

16 16 stations

### **How to Order Manifolds**



### 1 Series

	3	SY3000
	5	SY5000
	7	SY7000

## 3 SI unit output polarity, Number of outputs

	32 outputs	16 outputs
Without SI unit	Nil	
Positive common (NPN)	2	3
Negative common (PNP)	4	5

- \* When "V" (CC-Link) is selected for the SI unit, only symbol "2" or "4" (32 outputs) can be selected.
- Ensure a match with the common specification of the valves to be used.

### 2 SI unit

0	Without SI unit
Q	DeviceNet™
V	CC-Link

Only the connector block assembly is mounted for models without an SI unit.

### 4 Communication connector

	1411	1-branch type
	Α	Straight type
k	The co	mmunication connector and power connector

- are shipped together with the manifold. The power connector is only available for the straight type.
- \* When not selecting an SI unit, the symbol will be "nil."

## 02 2 stations Specified layout\*2 (Up to 32 solenoids available)

24	24 stations	(-,,			
In the case of the 16-output SI unit					
Symbol	Stations	Note			
02	2 stations				
:	1	Double wiring*1			
08	8 stations				
02	2 stations	0			
:	1	Specified layout*2 (Up to 16 solenoids available)			
10	40 -1-6	(Op to 10 solellolus available)			

Note

Double wiring\*1

- \*1 Double wiring: 2-position single, double, 3-position, and 4-position valves can be used on all manifold stations. Use of a 2-position single solenoid will result in an unused control signal. If this is not desired, order with a specified layout.
- \*2 Specified layout: Indicate the wiring specifications on the manifold specification sheet. (Note that 2-position double, 3-position, and 4-position valves cannot be used where single wiring has been specified.)
- This also includes the number of the blanking plate assembly.
- For the product without the SI unit (S80), note the maximum number of solenoids of the SI unit that will be mounted. If the layout is specified, indicate it on the manifold specification sheet.


### 6 P, E port entry, SUP/EXH block assembly

P, E port entry	Internal pilot	Internal pilot, Built-in silencer	External pilot
U side (2 to 10 stations)	U	C*1	G
D side (2 to 10 stations)	D	E*1	Н
Both sides (2 to 24 stations)	В	_	J

- \*1 For SUP/EXH block assembly specifications, built-in silencer types will have P port entry stipulated.

  \* For built-in silencer type, P and E ports are available on U and D sides. 3/5(E) port is plugged. The silencer ex
- When the built-in silencer type is used, keep the exhaust port from coming in direct contact with water or other liquids.

### **How to Order Manifold Assembly**

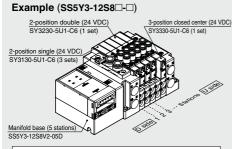

SS5Y3-12S8V2-05D .... 1 set (Type 10 5-station manifold base part no.)

\*SY3130-5U1-C6.......... 3 sets (2-position single part no.)

\*SY3230-5U1-C6......... 1 set (2-position double part no.)

For the valve arrangement, the valve closest to the D side is considered the 1st station.
 Under the manifold part number, state the valves to be mounted in order starting with the 1st station as shown in the figure above. If the arrangement becomes too complicated, specify the details on a manifold specification sheet.

### P F port size (One-touch fittings)

P, E port size (One-touch fittings)						
Symbol	SY3000	SY5000	SY7000			
Nil	ø8	ø10	ø12			
N	ø5/16"	ø3/8"	ø1/2"			

\* For N, sizes are in inches.

## 8 Mounting

Mounting			
Nil	Di	rect mounting	
D	DIN rail n	nounting (With DIN rail)	
D0	DIN rail m	ounting (Without DIN rail)	
D3	For 3 stations	Specify a longer	
:	- 1	rail than the	
D24	For 24 stations	standard length.	

 Refer to pages 190 to 194 for the fixation of DIN rail mounting type manifold.

For details on the EX180 Integrated Type (For Output) Serial Transmission System, refer to pages 190 to 194 and the Operation Manual. For the part numbers of the SI units to be mounted, refer to page 365-1. Please download the Operation Manual via the SMC website: https://www.smcworld.com

## Connector Connecting Base SY3000/5000/7000 Series


### How to Order Valves (With mounting screw)

Refer to page 136 for valve specifications.

SJ

S0700

S0700

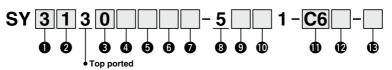

### A Series

2

3

4

5

A\*1

**B**\*1

C\*1

2 Type of actuation

2-position

3-position

4-position

dual 3-port

4-position dual 3-port valve.

3	SY3000
5	SY5000
7	SY7000

Single

Double Closed center

Exhaust center

Pressure center

N.C./N.C.

N.O./N.O.

N C /N O

## 6 Pilot valve option

Nil	Standard (0.7 MPa)
В	Quick response type (0.7 MPa)
K*1	High-pressure type (1.0 MPa)

\*1 Only the metal seal type is available for the high-pressure type.

## A, B port size

### Thread nining

Symbol	Port size	Applicable series		
M5	M5 x 0.8	SY3000		
01	1/8	SY5000		
02	1/4	SY7000		

One-touch fitting (Inch)

One-touch fitting (Metric)						
Symbol	A, B port	SY3000	SY5000	SY7000		
C2	ø2	•	_	_		
СЗ	ø3.2	•	_	_		
C4	ø4	•	•	_		
C6	ø6	•	•	•		
C8	ø8	_	•	•		
C10	ø10	_	_	•		
C12	ø12	_	_	•		

# Coil type

	T With power-saving circuit (Continuous duty ty		
*	Be sure to select the power-saving circuit		
	type when the valve is to be continuously		
	energized for long periods of time.		

Standard

Be careful of the energizing time when the power-saving circuit is selected. Refer to page 391 for details.

### Rated voltage

5	24 VDC

### Seal type

0	Rubber seal
1	Metal seal

\*1 Only the rubber seal type is available for the

1	Metal seal	

### A Pilot type

T not type		ot type
	Nil	Internal pilot
	R	External pilot

### Back pressure check valve (Built-in valve type)

NII	None	
Н	Built-in	
* Only t	Only the rubber seal type is available. A	


- manifold installed type is available if a back pressure check valve with a metal seal is required. Refer to page 379 for ordering examples. However, it is not recommended to use the built-in valve type and the manifold installed type at the same time because it will reduce the flow.
- The built-in valve type back pressure check valve is not available for the 3-position type or the SY7000.

### Light/surge voltage suppressor and common specification

Symbol	With light	Surge voltage suppressor	Common specification	
R			Non-polar	
U	•		Non-polai	
S	-		Positive	
Z	•	_	common	
NS	_		Negative	
NZ	•		common	

- \* Select "R," "U," "S," or "Z" for the valve when the SI unit output polarity is positive common. Select "R," "U," "NS," or "NZ" for the valve when the SI unit output polarity is negative common
- Only "Z" and "NZ" are available with a power-saving circuit.

### Manual override

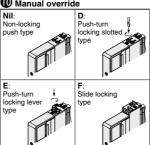

Refer to page 154 for the safety slide locking

A, B port	SY3000	SY5000	SY7000
ø1/8"	•	_	_
ø5/32"	•	•	_
ø1/4"	•	•	•
ø5/16"	_	•	•
ø3/8"	_	_	•
	ø1/8" ø5/32" ø1/4" ø5/16"	Ø1/8" ● Ø5/32" ● Ø1/4" ● Ø5/16" —	ø1/8"

### 12 Thread type

Nil	Rc
F	G
N	NPT
T	NPTF

\* Only Nil is available for M5.

### R Type of mounting screw

Type of mounting screw		
		Round head combination screw
		Hexagon socket head cap screw
	K	Round head combination screw (Drop prevention type)
	Н	Hexagon socket head cap screw (Drop prevention type)

- \* For "K" and "H," the valve body cover has a drop prevention construction to stop the mounting screws from falling out when the valve is removed for maintenance, etc.
- When ordering a valve individually, the base gasket is not included. Since the base gasket is attached to the manifold, please order the base gasket separately if it is needed for maintenance. Refer to page 367 for base gasket and
- mounting screw part numbers.
  "B" and "H" cannot be selected for the individual SUP/EXH spacer assembly or interface regulator.

Protective class class II (Mark: (ii))


## SY3000/5000/7000 Series **Common Dimensions**


SY3000 Series

Plug-in **Connector Connecting Base** 


Type 10/Side Ported External Pilot, Silencer, Elbow Fittings, Slide Locking Manual Override

SS5Y3-10□-Stations D(S, R)-L□

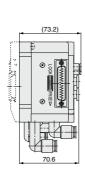

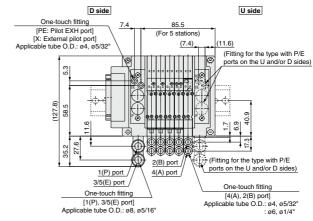

External pilot for straight piping P, E port entry: D 85.5 (For 5 stations) 37 78.6 One-touch fitting [PE: Pilot EXH port] 82.3 [X: External pilot port] Applicable tube O.D.: ø4, ø5/32"

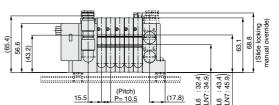



(17.8)

(Station 1)---(Station n)


P= 10.5 \*: These figures show the "SS5Y3-10F2-05DR-L6".

15.5

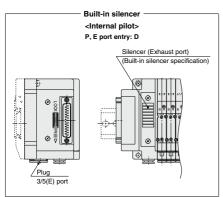

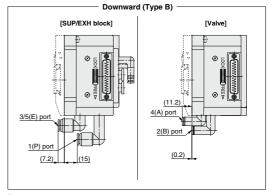

## Common Dimensions SY3000/5000/7000 Series

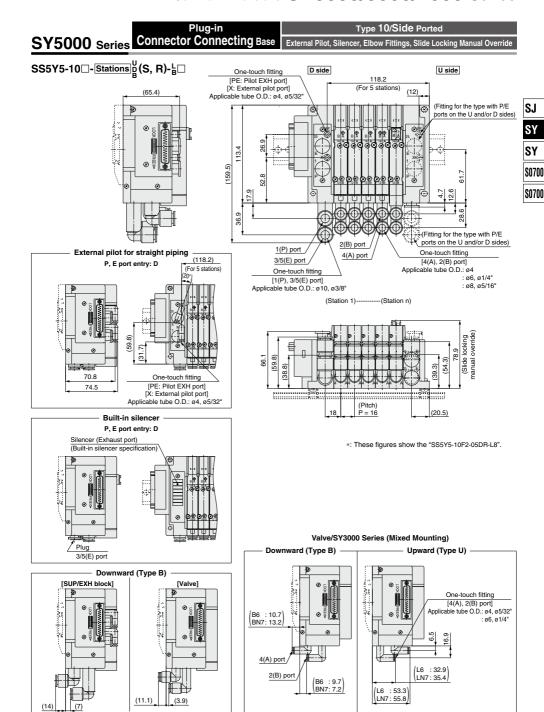


**SMC** 


Plug-in

Type 10/Side Ported


SY7000 Series Connector Connecting Base External Pilot, Silencer, Elbow Fittings, Slide Locking Manual Override

SS5Y7-10□-Stations U(S, R)-L□

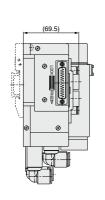


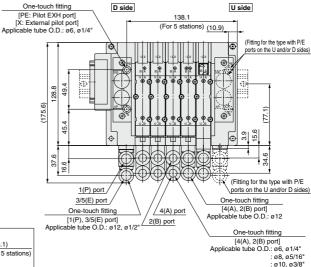


External pilot for straight piping P, E port entry: D (138.1) (For 5 stations) (74.2) (23.5) One-touch fitting 77.7 [PE: Pilot EXH port] [X: External pilot port] Applicable tube O.D.: ø6, ø1/4"

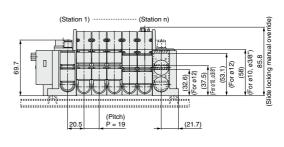


\*: These figures show the "SS5Y7-10F2-05DR-LM".

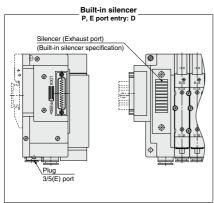

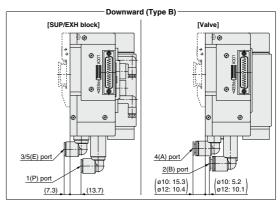


## Common Dimensions SY3000/5000/7000 Series

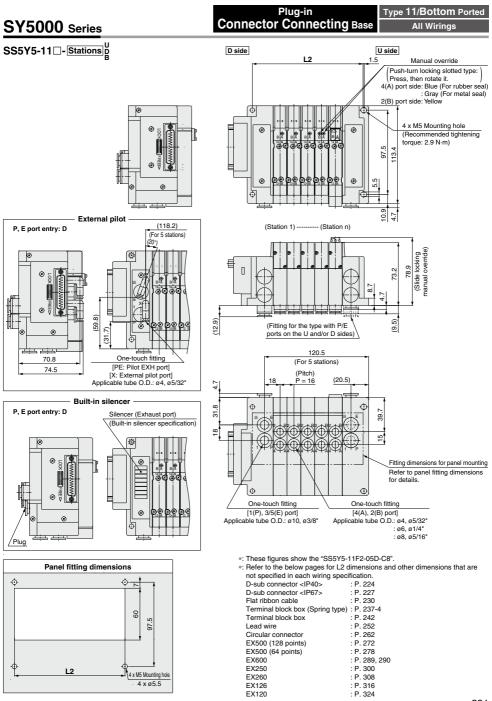

**SMC** 


S0700 S0700

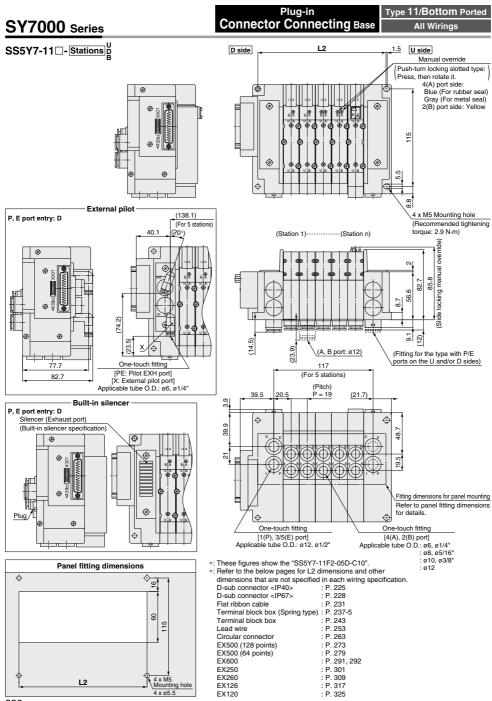


## Common Dimensions SY3000/5000/7000 Series

## SY3000 Series

Plug-in Connector Connecting Base Type 12/Top Ported **All Wirings** 

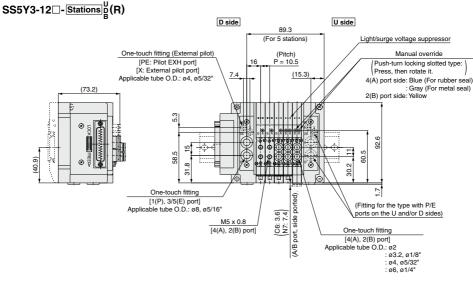

(Station 1)---(Station n)

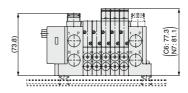

- \*: These figures show the "SS5Y3-12F2-05D".
- \*: For built-in silencer type, a silencer is mounted on the opposite side of U or D side with P or E port. Refer to page 328 for dimensions of silencer.
- \*: Refer to the below pages for dimensions that are not specified in each wiring specification.

D-sub connector <IP40> : P. 223 D-sub connector <IP67> : P. 226 Flat ribbon cable : P. 229 Terminal block box (Spring type): P. 237-3 Terminal block box : P. 241 Lead wire : P. 251 : P. 261 Circular connector EX500 (128 points) : P. 271 : P. 277 EX500 (64 points) EX600 : P. 287, 288 : P. 299 EX250 EX260 : P. 307 EX126 : P. 315 : P. 323 EX120

SJ

SY S0700







## SY5000 Series

Plug-in Connecting Base

Type 12/Top Ported
All Wirings

SS5Y5-12□-Stations D(R)

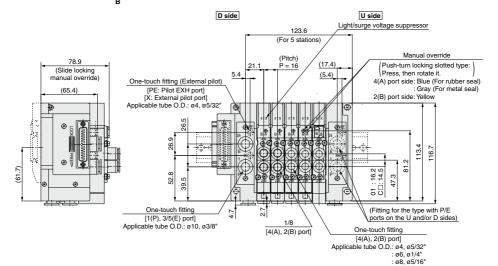

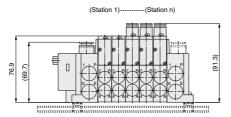

- \*: These figures show the "SS5Y5-12F2-05D"
- \*: For built-in silencer type, a silencer is mounted on the opposite side of U or D side with P or E port. Refer to page 329 for dimensions of silencer.
- \*: Refer to the below pages for dimensions that are not specified in each wiring specification.

  D-sub connector <IP40> : P. 224

D-sub connector <IP40> D-sub connector <IP67> : P. 227 Flat ribbon cable : P. 230 Terminal block box (Spring type): P. 237-4 Terminal block box : P. 242 : P. 252 Lead wire : P. 262 Circular connector EX500 (128 points) : P. 272 EX500 (64 points) : P. 278 : P. 289, 290 EX600 FX250 : P. 300 : P. 308 EX260 EX126 : P. 316 EX120 : P. 324




## Common Dimensions SY3000/5000/7000 Series

## SY7000 Series

Plug-in Connector Connecting Base Type 12/Top Ported **All Wirings** 

## SS5Y7-12□-Stations UR)

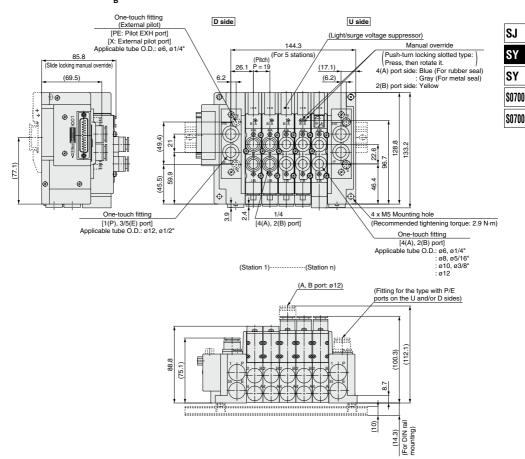

- \*: These figures show the "SS5Y7-12F2-05D".
- \*: For built-in silencer type, a silencer is mounted on the opposite side of U or D side with P or E port. Refer to page 330 for dimensions of silencer.

\*: Refer to the below pages for dimensions that are not specified in each wiring specification.

D-sub connector <IP40> : P. 225 D-sub connector <IP67> : P. 228

Flat ribbon cable : P. 231 Terminal block box (Spring type): P. 237-5 : P. 243 Terminal block box : P. 253 Lead wire Circular connector : P. 263 EX500 (128 points) : P. 273 EX500 (64 points) : P. 279 : P. 291, 292 EX600 : P. 301 EX250

EX260 : P. 309 EX126 : P. 317 FX120 : P. 325



Type 10

Type 11 **Bottom Ported** 

## Plug-in Connector Connecting Base: Plug-in Mixed Mounting Type Manifold

D-sub Connector (IP40/67) Flat Ribbon Cable YPC Wiring Terminal Block Box/Spring Type (IP67) Terminal Block Box (IP67) Lead Wire (IP67) Circular Connector (IP67) EX500 (IP67)

EX600 (IP67) X EX245 (IP65) X EX250 (IP67) X EX260 (IP67) X EX126 (IP67) X EX120 X EX180

# **SY3000/5000** Series

The SY3000 can be mounted onto the SY5000 size manifold.

11/Bottom ported type.

### **How to Order Manifold**

Refer to page 345 for dimensions of Type

**SS5Y5 - M** Mixed Mounting Type

It is possible to mount the SY3000 size valves on all stations. In this case, there is no need to fill in part (3) in the order code. However, the manifold block width should be 12.5 mm.

1 Type

<u>• , , , , , , , , , , , , , , , , , , ,</u>	<b>, , , , , , , , , , , , , , , , , , , </b>
10	Side ported
11	Bottom ported

Onnector type

Connector type					
Symbol	Туре		Page		
F	D-sub connector	IP40			
FW	(25 pins)	IP67			
Р		26 pins			
PG	Flat ribbon cable	20 pins	220		
PH		10 pins			
J	PC wiring	_			
G	(20 pins)	With power supply terminal			
TC	Terminal block box/Sp	ring type (IP67)	237-1		
Т	Terminal blo	ck box	238		
L1		34 cores			
L2	Lead wire	17 cores	248		
L3		9 cores			
M	Circular connector		258		
S□		EX500 Gateway Decentralized System 2 (128 Points)	268		
S□	Serial transmission	EX500 Gateway Decentralized System (64 Points)	274		
S6□	u ai isi i iissioi i	EX600	284		
SA□		EX245	295-1		
S□		EX250	296		
S□		EX260	304		
S4□*1		EX126	312		
S3□*1		EX120	320		
S8□		EX180	327-1		

- \*1: EX126, EX120 and EX245 are not yet **UL-compatible**
- \*: Refer to the pages shown in the table above for details.

### With Lead wire Lead wire length 1 0.6 m 2 1.5 m 3 3 m

• With D-sub connector (IP40/67), Flat ribbon cable and PC wiring

Connector entry direction	
1	Upward
2	I ateral

\*: It is not necessary to select the items above for the valve with terminal block box or with circular connector or the serial transmission type.

A P F port entry

F, L port entry	
U	U side (2 to 10 stations)
D	D side (2 to 10 stations)
В	Both sides (2 to 24 stations)

\*: Refer to page 284 for the EX600 and 7 on page 296 for the EX250.

### 6 SUP/EXH block assembly

Nil	Internal pilot	
s	Internal pilot, Built-in silencer	
R	External pilot	

- \*: 3/5(E) port is plugged for the built-in silencer
- \*: Refer to page 284 for the EX600 and 7 on page 296 for the EX250.

### Valve stations

Symbol	Stations	Note
02	2 stations	Some connectors have a limitation
:	:	on the number of stations. Refer to the pages shown in the table
24	24 stations	"Connector type" for details.

Fitting type: One-touch fitting

		4.5		
Symbo	OI	A, B port		
С		Stra	ight	
L	Metric size	Elbow	Upward*2	
В			Downward*2	
N		Straight		
LN	Inch size	Elbow	Upward*2	
BN		EIDOW	Downward*2	
CM*1	Mixed sizes	Stra	ight	
LM*1	IVIIXEU SIZES	Elbow (Including upward	and downward piping)*2	

\*1: Select CM or LM if mixed port sizes are to be used for each series. (For example, if mixed sizes, such as C6 and C8, are to be used for the SY5000 series) In such cases, indicate the sizes on the manifold specification sheet.

The direction of P, E port fittings is the same as for A, B port. If selecting "LM", indicate it on the manifold specification sheet for the P, E port fitting direction.

- \*2: To avoid interference with the body or piping, select downward elbow port when mounting the optional spacer assembly (pages 373 to 375). Elbow fittings are not available for Type 11 (Bottom ported).
- \*: Elbow fittings: ø2, ø3.2 and ø1.8" are not available for the SY3000 series. ø2, ø3.2, ø1.8" and ø5/32" are not available for the SY5000 series

## Euglin Connector Connecting Base SY3000/5000 Series

SJ

SY

\$0700

S0700

## 8 SY5000: A, B port size

(Metric/One-touch fitting) (Inch/One-touch fitting)

Symbol	Port size	Symbol	Port size
4	ø4	3	ø5/32"
6	ø6	7	ø1/4"
8	ø8	9	ø5/16"
Nil	For all stations of SY3000	Nil	For all stations of SY3000

<sup>\*:</sup> No symbol needs to be specified when fitting type "CM", "LM" is selected.

### 9 SY3000: A, B port size

(Metric/One-touch fitting

uch fitting)	(Inch/Or	ne-touch fitting)
Port size	Symbol	Port size
ø2	1	ø1/8"
ø3.2	3	ø5/32"
ø4	7	ø1/4"
ø6	9	ø5/16"*1
ø8*1	1	


- \*1: The valve pitch is the same as the SY5000.
- \*: No symbol needs to be specified when fitting type "CM", "LM" is selected.

### Mounting

Nil	Direct mounting			
D		DIN rail mounting (With DIN rail)		
D0	DIN rail mounting (Without DIN rail)			
D3	For 3 stations	: [The SY5000 valve is now at a mountable length		
:				
D24	For 24 stations			

- \*: Only direct mounting is available for Type 11 (Bottom ported).
- Refer to page 343 to determine the L3 using "Calculation formula" for the DIN rail length.
  Refer to page 394 for the fixation of DIN rail mounting type manifold.

### **How to Order Manifold Assembly**

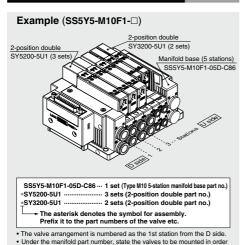

from the 1st station as shown in the figure above. If the arrangement becomes complicated, specify on a manifold specification sheet.

\*: When mixing top ported configurations, select from page 349. In this case, use caution as there is also output on the A and B port on base side.

Specify on a manifold specification sheet if plugs are required on the A and B port on base side.


**ØSMC** 



## SY3000/5000 Series

### How to Order Valves (With mounting screw)

Refer to page 136 for valve specifications.

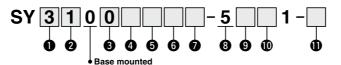

### Series

3	SY3000
5	SY5000

### Type of actuation

1	2-position	Single
2	z-position	Double
3		Closed center
4	3-position	Exhaust center
5		Pressure center
	4-position dual 3-port	N.C./N.C.
		N.O./N.O.
C*1		N.C./N.O.
A*1 B*1 C*1		N.O./N.O.

\*1: Only rubber seal type is available for the 4-position dual 3-port valve.

### 6 Pilot valve option

Nil	Standard (0.7 MPa)
В	Quick response type (0.7 MPa)
<b>K</b> *1	High pressure type (1.0 MPa)


\*1: Only metal seal type is available for the high pressure type.

### Coil type

Nil	Standard
Т	With power saving circuit (Continuous duty type)
*: Be sure to select the power saving circuit	

- \*: Be sure to select the power saving circuit type when the valve is continuously energized for long periods of time.
- Be careful of the energizing time when the power saving circuit is selected. Refer to page 391 for details.

### Manual override

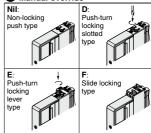

\*: Refer to page 154 for with the safety slide locking manual override.

### Seal type

	0	Rubber seal
	1	Metal seal

### 4 Pilot type

Nil	Internal pilot	
R	External pilot	

## Back pressure check valve (Built-in valve type)

	int in raire type,
Nil	None
н	Built-in

- «: Only rubber seal type. Manifold installed type is available if back pressure check valve is required for the valve with metal seal. Refer to page 379 for Ordering Example. However, it is not recommended to use the built-in valve type and the manifold installed type at the same time because it will reduce the flow
- \*: The built-in valve type back pressure check valve is not available for the 3-position type.

### 8 Rated voltage

5	24 VDC
6	12 VDC

\*: Only 24 VDC is available for the serial transmission type.

## 9 Light/surge voltage suppressor and common specification

Symbol	With light	Surge voltage suppressor	Common specification
Nil	ı	_	
R	_		Non-polar
U	•		
S	ı		Positive
Z	•		common
NS	-		Negative
NZ	•		common

- \*: "Nil" is not available for the SI Unit manifold. \*: Only "Z" and "NZ" types are available for with
- : Only 2 and Nz types are available for with the power saving circuit. Select a valve which is suited to the SI Unit output polarity or SI Unit specification when the SI Unit is selected.

EX180: P.327-3

Refer to the pages below for details. EX500: P.270, 276 EX600: P.286 EX245: P.295-6 EX250: P.298 EX260: P.306 EX126: P.314

EX120: P.322

Type of mounting screw

Nil	Nil Round head combination screw	
B Hexagon socket head cap so		
Round head combination screw (Falling-out-prevention     Hexagon socket head cap screw (Falling-out-prevention		
		•

- \*: For "K" and "H", the valve body cover has a drop prevention construction to stop the mounting screws from falling out when the valve is removed for maintenance etc.
- When ordering a valve individually, the base gasket is not included. Since the base gasket is attached to the manifold, please order the base gasket separately if it is needed for maintenance service.

Refer to page 367 for part numbers of the base gasket and mounting screw.

"B" and "H" cannot be selected for the individual SUP/EXH spacer assembly, interface regulator or double check spacer assembly with residual pressure release valve.

SJ

SY SY

S0700

S0700

Type 10

Type 11 **Bottom Ported** 

## Plug-in Connector Connecting Base: Plug-in Mixed Mounting Type Manifold

D-sub Connector (IP40/67) Flat Ribbon Cable PC Wiring Terminal Block Box/Spring Type (IP67)

EX600 (IP67) EX250 (IP67) EX260 (IP67) EX126 (IP67) EX120

Terminal Block Box (IP67) Lead Wire (IP67) Circular Connector (IP67) EX500 (IP67)

SY5000/7000 Series

The SY5000 can be mounted onto the SY7000 size manifold.

### **How to Order Manifold**

Refer to page 346 for dimensions of Type 11/Bottom ported type.

**SS5Y7 - M** Mixed Mounting Type

It is possible to mount the SY5000 size valves on all stations. In this case, there is no need to fill in part (3) in the order code. However, the manifold block width should be 19 mm.

O	Туре

10	Side ported
11	Bottom ported

Connector type

Symbol	Туре		Page
F	D-sub connector	IP40	
FW	(25 pins)	IP67	
P		26 pins	
PG	Flat ribbon cable	20 pins	220
PH		10 pins	
J	PC wiring	_	
G	(20 pins)	With power supply terminal	
TC	Terminal block box/Sp	ring type (IP67)	237-1
T	Terminal blo	ck box	238
L1		34 cores	
L2	Lead wire	17 cores	248
L3		9 cores	
M	Circular cor	nector	258
S□		EX500 Gateway Decentralized System 2 (128 Points)	268
S□	Serial transmission	EX500 Gateway Decentralized System (64 Points)	274
S6□		EX600	284
S□		EX250	296
S□		EX260	304
S4□*1		EX126	312
S3□*1		EX120	320

- \*1: EX126, EX120 are not yet UL-compatible.
- \*: Refer to the pages shown in the table above for details.

### Walve stations

Symbol	Stations	Note	
02	2 stations	Some connectors have a limitation	
:	:	on the number of stations. Refer to the pages shown in the table	
24	24 stations	"Connector type" for details.	

### 6 P, E port entry

U	U side (2 to 10 stations)	
D	D side (2 to 10 stations)	
B Both sides (2 to 24 stations)		
D-(+		

 Refer to page 284 for the EX600 and 7 or page 296 for the EX250.

### 6 SUP/EXH block assembly

• • • • • • • • • • • • • • • • • • • •		
Nil	Internal pilot	
s	S Internal pilot, Built-in silencer	
R	External pilot	

- \*: 3/5(E) port is plugged for the built-in silencer
- \*: Refer to page 284 for the EX600 and 7 on page 296 for the EX250.

### Fitting type: One-touch fitting

Symbol	A, B port		
С		Straight	
L	Metric size	Elbow	Upward*2
В			Downward*2
N		Straight	
LN	Inch size	Elbow	Upward*2
BN		EIDOW	Downward*2
CM*1	Mixed sizes	Straight	
LM*1	IVIIAEU SIZES	Elbow (Including upward	and downward piping)*2

\*1: Select CM or LM if mixed port sizes are to be used for each series. (For example, if mixed sizes, such as C6 and C8, are to be used for the SY5000 series) In such cases, indicate the sizes on the manifold specification sheet.

The direction of P, E port fittings is the same as for A, B port. If selecting "LM", indicate it on the manifold specification sheet for the P, E port fitting direction.

- \*2: To avoid interference with the body or piping, select downward elbow port when mounting the optional spacer assembly (pages 373 to 375). Elbow fittings are not available for Type 11 (Bottom ported).
- \*: Elbow fittings: ø1/4" and ø5/16" are not available.

### With Lead wire

Lead wire length	
1	0.6 m
2	1.5 m
2	2 m

. With D-sub connector (IP40/67), Flat ribbon cable and PC wiring

Connector entry direction	
1	Upward
2	Lateral

<sup>\*:</sup> It is not necessary to select the items above for the valve with terminal block box or with circular connector or the serial transmission type.

## Connector Connecting Base SY5000/7000 Series

SJ

S0700

S0700

8 SY7000: A, B port size

(Metric/One-touch fitting) (Inch/One-touch fitting)

Symbol	Port size	Sy
6	ø6	
8	ø8	
10	ø10	
12	ø12	
NIII	EII -4-4:4 0\/E000	_

	Symbol	Port size
	7	ø1/4"
	9	ø5/16"
	11	ø3/8"
	Nil	For all stations of SY5000
00		

\*: No symbol needs to be specified when fitting type "CM", "LM" is selected

### 9 SY5000: A, B port size

(Wetric/One-touch fitting)		(Inch/Or	ne-touch fitting)
Symbol	Port size	Symbol	Port size
6	ø6	7	ø1/4"
8	ø8	9	ø5/16"
10	ø10	11	ø3/8"
12	ø12		

- \*: The valve pitch is 19 mm, the same as the SY7000.
- \*: No symbol needs to be specified when fitting type "CM", "LM" is


### Mounting and Option

**DIN Rail Option** Option Symbol Mounting Nil Name plate | Station number 0 Nil Direct AA 3 nounting BA D DIN rail A□ mountina ВП •

- Direct mounting Without DIN rail (with bracket) For 3 stations | Specify a longer rail than the total length For 24 stations of specified stations
- \*: Enter the number of stations inside 

  when it is larger than the number of valve stations. (Refer to "DIN Rail Option" above.)
- \*: Only direct mounting is available for Type 11 (Bottom ported).
- \*: Refer to page 343 to determine the L3 using "Calculation formula" for the DIN rail length. (For the SY3000 and SY5000 mixed mounting type)
- \*: The manifold block width is 19 mm for both the SY5000 and SY7000 sizes
- \*: Refer to page 394 for the fixation of DIN rail mounting type manifold.

### **How to Order Manifold Assembly**

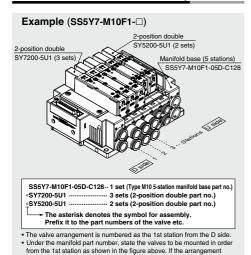

becomes complicated, specify on a manifold specification sheet. \*: When mixing top ported configurations, select from page 349. In this case, use caution as there is also output on the A and B port on base

Specify on a manifold specification sheet if plugs are required on the A and B port on base side


**ØSMC** 

341

## **SY5000/7000** Series

### How to Order Valves (With mounting screw)

Refer to page 136 for valve specifications.

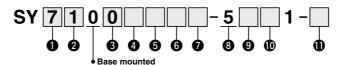

### Series

5	SY5000
7	SY7000

### Type of actuation

1	0	Single
2	2-position	Double
3		Closed center
4	3-position	Exhaust center
5		Pressure center
<b>A</b> *1	4-position	N.C./N.C.
<b>B</b> ∗¹	dual 3-port	N.O./N.O.
C*1 dual 3-pol	addi 5-port	N.C./N.O.

\*1: Only rubber seal type is available for the 4-position dual 3-port valve.

### 6 Pilot valve option

Nil	Standard (0.7 MPa)
В	Quick response type (0.7 MPa)
<b>K</b> *1	High pressure type (1.0 MPa)


\*1: Only metal seal type is available for the high pressure type.

### Coil type

ı	Nil	Standard
I	Т	With power saving circuit (Continuous duty type)
	*: Be su	re to select the power saving circuit

- \*: Be sure to select the power saving circuit type when the valve is continuously energized for long periods of time.
- Be careful of the energizing time when the power saving circuit is selected. Refer to page 391 for details.

### Manual override

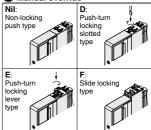

\*: Refer to page 154 for with the safety slide locking manual override.

### Seal type

0	Rubber seal
1	Metal seal

## 4 Pilot type

Nil	Internal pilot
R	External pilot

## Back pressure check valve (Built-in valve type)

	ant-in valve type)
Nil	None
Н	Built-in

- \*: Only rubber seal type. Manifold installed type is available if back pressure check valve is required for the valve with metal seal. Refer to page 379 for Ordering Example. However, it is not recommended to use the built-in valve type and the manifold installed type at the same time because it will reduce the flow.
- \*: The built-in valve type back pressure check valve is not available for the 3-position type and the SY7000

### 8 Rated voltage

5	24 VDC
6	12 VDC

\*: Only 24 VDC is available for the serial transmission type.

## 9 Light/surge voltage suppressor and common specification

Symbol	With light	Surge voltage suppressor	Common specification	
Nil	ı	_		
R	_		Non-polar	
U	•			
S	-	•	Positive	
Z	•	•	common	
NS	-		Negative	
NZ	•		common	

- \*: "Nil" is not available for the SI Unit manifold. \*: Only "Z" and "NZ" types are available for with
- : Only 2 and Nz types are available for with the power saving circuit. Select a valve which is suited to the SI Unit output polarity or SI Unit specification when the SI Unit is selected.

Refer to the pages below for details. EX500: P.270, 276 EX600: P.286 EX250: P.298 EX260: P.306 EX126: P.314 EX120: P.322 Type of mounting screw

	Nil	Round head combination screw	
	В	Hexagon socket head cap screw	
Г	K	Round head combination screw (Falling-out-prevention type	
Г	Н	Hexagon socket head cap screw (Falling-out-prevention type)	

- \*: For "K" and "H", the valve body cover has a drop prevention construction to stop the mounting screws from falling out when the valve is removed for maintenance etc.
- When ordering a valve individually, the base gasket is not included. Since the base gasket is attached to the manifold, please order the base gasket separately if it is needed for maintenance service.


Refer to page 367 for part numbers of the base gasket and mounting screw.

\*: "B" and "H" cannot be selected for the individual SUP/EXH spacer assembly, interface regulator or double check spacer assembly with residual pressure release valve.

## Connector Connecting Base SY3000/5000/7000 Series

Dimensions: SY3000/5000 Series

Plug-in Connector Connecting Base Type 10/Side Ported Mixed Mounting Type

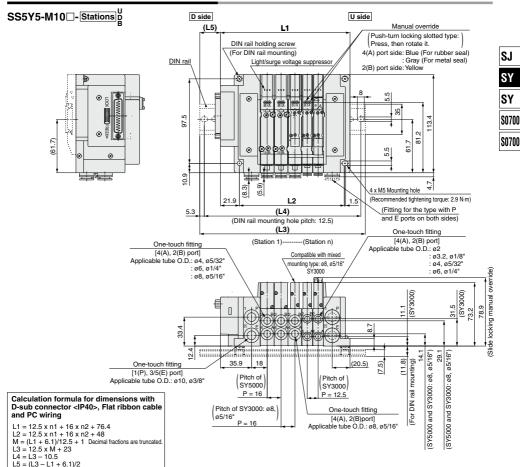

\*: Refer to pages 328 and 329 for dimensions of external pilot, built-in silencer and elbow fittings.

(Including the stations of the SY3000: ø8, ø5/16") Calculation formula for dimensions with D-sub connector <IP67>, Terminal block box (Spring type), Terminal block box, Lead wire, Circular connector,

n1: Number of valve stations of the SY3000 n2: Number of valve stations of the SY5000

EX500/600/250/260/126/120 serial transmission  $L1 = 12.5 \times n1 + 16 \times n2 + a + b \times n3$ L2 = 12.5 x n1 + 16 x n2 x 48 M = L1/12.5 + 1 Decimal fractions are truncated.  $L3 = 12.5 \times M + 23$ 

L4 = L3 - 10.5

L5 = (L3 - L1)/2

 $L6 = b \times n3 + c$ 

n1: Number of valve stations of the SY3000 n2: Number of valve stations of the SY5000 (Including the stations of the SY3000: ø8, ø5/16")

n3: Number of I/O Units or input block stations \*: Refer to pages 289 and 290 for dimensions of the EX600 serial transmission with I/O Unit and page

300 for the EX250 serial transmission with input block when L6, b and c are used for the calculation formula.

Coefficient	а	b	С
D-sub connector <ip67></ip67>	90.5	_	_
Terminal block box (Spring type)	128	_	_
Terminal block box or Serial transmission: EX126	149.3	_	_
Lead wire or Circular connector	97	_	_
EX500 Gateway Decentralized System 2 (128 Points)	88.7	_	_
EX500 Gateway Decentralized System (64 Points)	88.5	_	_
Serial transmission: EX600 (M12 connector)	141.5	47	81.5
Serial transmission: EX600 (7/8 inch connector)	158	47	81.5
Serial transmission: EX250	141.5	21	81.5
Serial transmission: EX260	88.7	_	_
Serial transmission: EX120	84.7	_	_




Dimensions: SY5000/7000 Series

Plug-in Connector Connecting Base Mixed Mounting Type

Type 10/Side Ported

SS5Y7-M10 - Stations

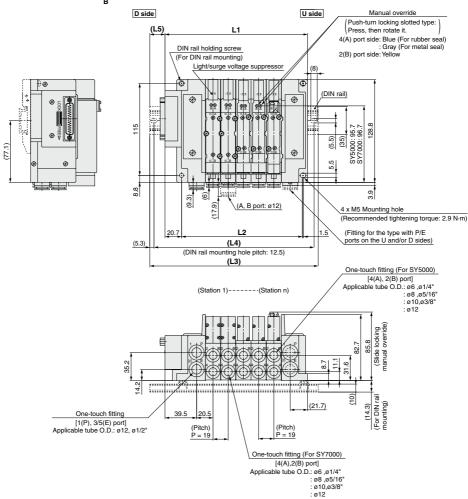

\*: Refer to page 330 for dimensions of external pilots and built-in silencers.

\*: Refer to the below pages for L1, L2, L3, L4 dimensions and other dimensions that are not specified in each wiring specification.

D-sub connector <IP40> : P. 225 D-sub connector <IP67> : P. 228 : P. 231 Flat ribbon cable Terminal block box (Spring type): P. 237-4, 5 Terminal block box : P. 243 Lead wire : P. 253 : P. 263 Circular connector : P. 273 EX500 (128 points) EX500 (64 points) : P. 279 EX600 : P. 291, 292 EX250 : P. 301 EX260 : P. 309 : P. 317 FX126 EX120 : P. 325

## Plus-in Connector Connecting Base SY3000/5000/7000 Series




Plug-in **Connector Connecting Base**  Type 11/Bottom Ported Mixed Mounting Type


SJ

S0700

S0700


SS5Y5-M11 - Stations D

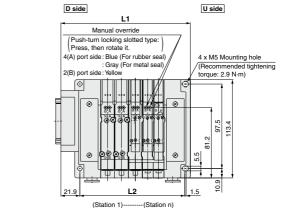

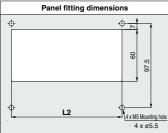

## Calculation formula for dimensions $L1 = 12.5 \times n1 + 16 \times n2 + a + b \times n3$ L2 = 12.5 x n1 + 16 x n2 + 48 $L6 = b \times n3 + c$

- n1: Number of valve stations of the SY3000 n2: Number of valve stations of the SY5000 (Including the stations of the SY3000: ø8. ø5/16")
- n3: Number of I/O Units or input block stations
- \*: Refer to pages 289 and 290 for dimensions of the EX600 serial transmission with I/O Unit and page 300 for the EX250 serial transmission with input block when L6, b and c are used for the calculation formula

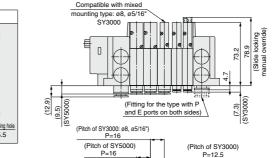

3 Fitting dimensions for panel mounti Refer to panel fitting dimensions for details One-touch fitting [1(P), 3/5(E) port Applicable tube O.D.: ø10, ø3/8 One-touch fitting [4(A), 2(B) port] Applicable tube O.D.: ø4, ø5/32' : ø6, ø1/4'

œ

: ø8, ø5/16<sup>t</sup>

35.9 18

⊙

One-touch fitting [4(A), 2(B) port] Applicable tube O.D.: ø2 : ø3.2, ø1/8" : ø4, ø5/32" One-touch fitting : ø6, ø1/4"

[4(A), 2(B) port]

Applicable tube O.D.: ø8, ø5/16

(20.5)and

39

5

3Y5000

SY5000 and SY3000: ø8, ø5/16"

08, 05/16" SY3000)

49.6

(SY3000)

Œ

Coefficient а b С D-sub connector <IP40>, Flat ribbon cable or PC wiring 76.4 D-sub connector <IP67> 90.5 Terminal block box (Spring type) 128 Terminal block box or Serial transmission: EX126 1493 Lead wire or Circular connector 97 EX500 Gateway Decentralized System 2 (128 Points) 88.7 EX500 Gateway Decentralized System (64 Points) 88.5 81.5 Serial transmission: EX600 (M12 connector) 141.5 47 Serial transmission: EX600 (7/8 inch connector) 158 47 81.5 Serial transmission: EX250 141.5 21 81.5 Serial transmission: EX260 88.7 Serial transmission: EX120 84.7

\*: Refer to page 331 for dimensions of external pilots and built-in silencers

## Dimensions: SY5000/7000 Series


Plug-in Connector Connecting Base


Type 11/Bottom Ported


Mixed Mounting Type

SS5Y7-M11 - Stations D



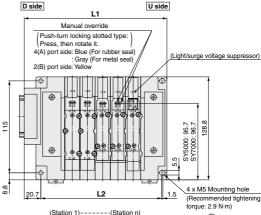

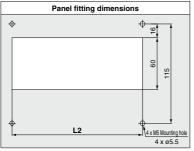

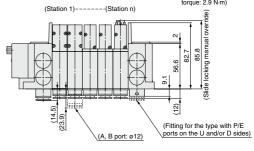


[4(A), 2(B) port]

Applicable tube O.D.: ø6 ,ø1/4"

: ø8 ,ø5/16" : ø10,ø3/8"

: ø12

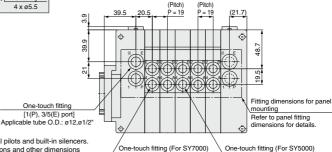

[4(A), 2(B) port]

: ø8 .ø5/16"

: ø10,ø3/8" : ø12

Applicable tube O.D.: ø6 ,ø1/4"

- \*: Refer to page 332 for dimensions of external pilots and built-in silencers.
- \*: Refer to the below pages for L1, L2 dimensions and other dimensions that are not specified in each wiring specification.

Dimensions of Type 11/Bottom po	rted: P. 332
D-sub connector <ip40></ip40>	: P. 225
D-sub connector <ip67></ip67>	: P. 228
Flat ribbon cable	: P. 231
Terminal block box (Spring type)	: P. 237-4, 5
Terminal block box	: P. 243
Lead wire	: P. 253
Circular connector	: P. 263
EX500 (128 points)	: P. 273
EX500 (64 points)	: P. 279

EX600 : P. 291, 292 EX250 : P. 301 EX260 : P. 307 EX126 : P. 317 EX120 : P. 325

SJ

SY SY

S0700

S0700

## Plug-in Connector Connecting Base: Plug-in Mixed Mounting Type Manifold

D-sub Connector (IP40/67) Flat Ribbon Cable YPC Wiring Terminal Block Box/Spring Type (IP67)

Terminal Block Box (IP67) Lead Wire (IP67) Circular Connector (IP67) EX500 (IP67)

EX600 (IP67) X EX245 (IP65) X EX250 (IP67) X EX260 (IP67) X EX126 (IP67) X EX120 X EX180

## Type 12 Top Ported


000/5000/7000 Series ← €

For the SY5000 series, the SY5000 and the SY3000 can be mounted on the same manifold.

For the SY7000 series, the SY7000 and the SY5000 can be mounted on the same manifold.

### **How to Order Manifold**

Refer to pages 334 and 335 for dimensions of Type 12/Top ported type.

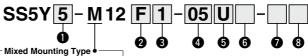

For the SY5000 series, it is possible to mount the SY3000 size valves on all stations. However, the SY3000 manifold block width should be 12.5 mm. (16 mm for ø8 or ø5/16" One-touch fitting)

Also, for the SY7000 series, it is possible to mount the SY5000 size valves on all stations. However, the SY3000 cannot be mounted onto the SY7000 series

1 Serie	es
---------	----

5	SY5000
7	SY7000

### With Lead wire

## Lead wire length

1	0.6 m
2	1.5 m
3	3 m

### · With D-sub connector (IP40/67), Flat ribbon cable and PC wiring

Connector entry direction	
1	Upward
2	Lateral

\*: It is not necessary to select the items above for the valve with terminal block box or with circular connector or the serial transmission type.

### Valve stations

	Symbol	Stations	Note	
	02	2 stations	Some connectors have a limitation	
	:	:	on the number of stations. Refer to the pages shown in the table "Connector type" for details.	
	24	24 stations		

### P, E port size (One-touch fittings)

Symbol	SY5000	SY7000	Note	
Nil	ø10	ø12	Metric size	
N	ø3/8"	ø1/2"	Inch size	

### Connector type

Symbol	Туре		Page
F	D-sub connector	IP40	
FW	(25 pins)	IP67	
P		26 pins	
PG	Flat ribbon cable	20 pins	232
PH		10 pins	
J	PC wiring	_	
G	(20 pins)	With power supply terminal	
TC	Terminal block box/Sp	ring type (IP67)	237-1
T	Terminal blo	ck box	244
L1		34 cores	
L2	Lead wire	17 cores	254
L3		9 cores	
M	Circular cor	nector	264
S□		EX500 Gateway Decentralized System 2 (128 Points)	280
S□	Serial transmission	EX500 Gateway Decentralized System (64 Points)	282
S6□	transmission	EX600	294
SA□		EX245	295-5
S□		EX250	302
S□		EX260	310
<b>S4</b> □*1		EX126	318
S3□*1		EX120	326
S8□		EX180	327-1

- \*1: EX126, EX120 are not yet UL-compatible.
- \*: Refer to the pages shown in the table above for detaile

P, E port entry		
U*1	U side (2 to 10 stations)	
<b>D</b> *1	D side (2 to 10 stations)	
В	Both sides (2 to 24 stations)	

- \*1: For type "S", supply/exhaust block assembly with built-in silencer, choose U or D for P port entry.
- \*: Refer to page 294 for the EX600 and 6 on page 302 for the EX250.

### 6 SUP/EXH block assembly

Nil	Internal pilot	
S	Internal pilot, Built-in silencer	
R	R External pilot	


- \*: For built-in silencer type, P and E ports are available on U and D sides. 3/5(E) port is plugged. The silencer exhaust port is located on the opposite side of P, E port entry. (Example: When the P, E port entry is D side, the silencer exhaust port is U side.)
- \*: Refer to page 294 for the EX600 and 6 on page 302 for the EX250.

### 8 Mounting

Nil		Direct mounting
D	DIN	rail mounting (With DIN rail)
D0	DIN ra	il mounting (Without DIN rail)
D3	stations/standard length.	Specify a longer rail than the standard length.
:	:	[For the SS5Y5-M12, the SY5000 valve is now at a mountable
D24	For 24 stations	length (manifold block length of 16 mm).]
	D D0 D3	D DIN ra D0 DIN ra D3 For 3 stations : :

- \*: Refer to page 350 to determine the L3 using "Calculation formula" for the DIN rail length. (For the SY3000 and SY5000 mixed mounting type)
- \*: Refer to page 394 for the fixation of DIN rail mounting type manifold.

### How to Order Manifold Assembly

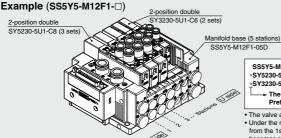

SS5Y5-M12F1-05D ··· 1 set (Type M12 5-station manifold base part no.)

\*SY5230-5U1-C8 ...... 3 sets (2-position double part no.) \*SY3230-5U1-C6 ······· 2 sets (2-position double part no.)

The asterisk denotes the symbol for assembly. Prefix it to the part numbers of the valve etc.

- . The valve arrangement is numbered as the 1st station from the D side.
- Under the manifold part number, state the valves to be mounted in order. from the 1st station as shown in the figure above. If the arrangement becomes complicated, specify on a manifold specification sheet.

## Plug-in Connector Connecting Base SY3000/5000/7000 Series


### How to Order Valves (With mounting screw)

Refer to page 136 for valve specifications.

SJ

SY S0700

S0700

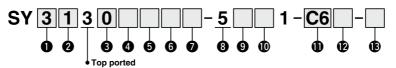

### Series

3	SY3000
5	SY5000
7	SY7000

2 Type of actuation

1	2-position	Single
2		Double
3	3-position	Closed center
4		Exhaust center
5		Pressure center
<b>A</b> *1	4-position dual 3-port	N.C./N.C.
B*1		N.O./N.O.
C*1		N.C./N.O.

\*1: Only rubber seal type is available for the 4-position dual 3-port valve.

### Seal type

0	Rubber seal	
1	Metal seal	

### 4 Pilot type

Nil	Internal pilot
R	External pilot

### Back pressure check valve (Built-in valve type)

Nil	None
Н	Built-in

- \*: Only rubber seal type. Manifold installed type is available if the back pressure check valve is required for a valve with metal seal. Refer to page 379 for Ordering Example. However, it is not recommended to use the built-in valve type and the manifold installed type at the same time because it will reduce the flow.
- \*: The built-in valve type back pressure check valve is not available for the 3-position type and the SY7000.

### Pilot valve option

O I not varie option		
Nil	Standard (0.7 MPa)	
В	B Quick response type (0.7 MPa)	
K*1	High pressure type (1.0 MPa)	

\*1: Only metal seal type is available for the high pressure type.

## Coil type

• •• • • • • • • • • • • • • • • • • • •				
Nil Standard				
Т	With power saving circuit (Continuous duty type)			

- \*: Be sure to select the power saving circuit type when a valve is continuously energized for long periods of time.
- \*: Be careful of the energizing time when the power saving circuit is selected. Refer to page 391 for details.

### 8 Rated voltage

	5	24 VDC
	6	12 VDC
*: Only 24 VDC is available for the social		

transmission type.


### 9 Light/surge voltage suppressor and common specification

Symbol	With light	Surge voltage suppressor	Common specification	
Nil	_	_		
R	1	•	Non-polar	
U	•			
S	_		Positive	
Z	•		common	
NS	_		Negative	
NZ	•		common	
*: "Nil" is not available for the SI Unit manifold.				

\*: Only "Z" and "NZ" types are available for with the power saving circuit. Select a valve which is suited to the SI Unit output polarity or SI Unit specification when the SI Unit is selected.

Refer to the pages below for details. EX500: P.281, 283 EX600: P.295 EX245: P.295-6 EX250: P.303 EX260: P.311 EX126: P.319 EX120: P.327 EX180: P.327-3

### Manual override

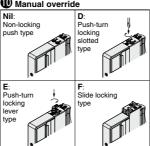

\*: Refer to page 154 for with the safety slide locking manual override.

**ØSMC** 

### A, B port size

i ilieau pipilig					
Symbol	mbol Port size Applicable series				
М5	M5 x 0.8	SY3000			
01	1/8	SY5000			
02	1/4	SY7000			

### One-touch fitting (Metric)

One-toden nitting (wetric)					
Symbol	A, B port	SY3000	SY5000	SY7000	
C2	ø2	•	_	_	
C3	ø3.2	•	_	_	
C4	ø4	•	•		
C6	ø6	•	•	•	
C8	ø8	_	•	•	
C10	ø10	_	_	•	
C12	ø12	_	_	•	

### One-touch fitting (Inch)

One-touch litting (inch)						
Symbol	A, B port	SY3000	SY5000	SY7000		
N1	ø1/8"	•	_	_		
N3	ø5/32"	•	•	_		
N7	ø1/4"	•	•	•		
N9	ø5/16"	_	•	•		
N11	ø3/8"		_	•		

### Thread type

Nil	Rc
F	G
N	NPT
Т	NPTF

\* Only Nil is available for M5

## Type of mounting screw

	Nil	Nil Round head combination screw		
	В	Hexagon socket head cap screw		
	<ul> <li>Round head combination screw (Falling-out-prevention</li> </ul>			
<ul> <li>H Hexagon socket head cap screw (Falling-out-pr</li> </ul>		Hexagon socket head cap screw (Falling-out-prevention type)		

- \*: For "K" and "H", the valve body cover has a drop prevention construction to stop the mounting screws from falling out when the valve is removed for maintenance etc.
- \*: When ordering a valve individually, the base gasket is not included. Since the base gasket is attached to the manifold, please order the base gasket separately if it is needed for maintenance service.


Refer to page 367 for part numbers of the base gasket and mounting screw.


\*: "B" and "H" cannot be selected for the individual SUP/EXH spacer assembly or interface regulator.

## Dimensions: SY5000 Series

### Plug-in Connector Connecting Base Mixed Mounting Type

Type 12/Top Ported

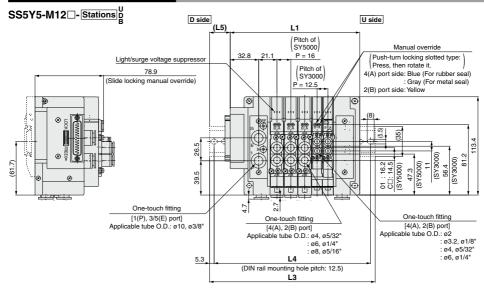

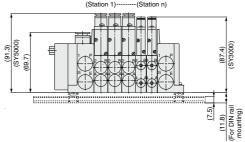

\*: Refer to page 329 for dimensions of external pilot and elbow fittings.

### Calculation formula for dimensions with D-sub connector <IP40>, Flat ribbon cable and PC wiring

L1 = 12.5 x n1 + 16 x n2 + 76.4 L2 = 12.5 x n1 + 16 x n2 + 48

M = (L1 + 6.1)/12.5 + 1 Decimal fractions are truncated.

L3 = 12.5 x M + 23

L4 = L3 - 10.5

L5 = (L3 - L1 + 6.1)/2

n1: Number of valve stations of the SY3000

n2: Number of valve stations of the SY5000

### Calculation formula for dimensions with D-sub connector <IP67>, Terminal block box (Spring type), Terminal block box, Lead wire, Circular connector. EX500/600/250/260/126/120 serial transmission

 $L1 = 12.5 \times n1 + 16 \times n2 + a + b \times n3$ 

L2 = 12.5 x n1 + 16 x n2 x 48

M = L1/12.5 + 1 Decimal fractions are truncated.

 $L3 = 12.5 \times M + 23$ 

L4 = L3 - 10.5

L5 = (L3 - L1)/2

 $L6 = b \times n3 + c$ 

n1: Number of valve stations of the SY3000

n2: Number of valve stations of the SY5000

n3: Number of I/O Units or input block stations

\*: Refer to pages 289 and 290 for dimensions of the EX600 serial transmission with I/O Unit and page 300 for the EX250 serial transmission with input block when L6, b and c are used for the calculation formula.

Coefficient	a	b	С
D-sub connector <ip67></ip67>	90.5	_	_
Terminal block box (Spring type)	128	_	_
Terminal block box or Serial transmission: EX126	149.3	_	_
Lead wire or Circular connector	97	_	_
EX500 Gateway Decentralized System 2 (128 Points)	88.7	_	_
EX500 Gateway Decentralized System (64 Points)	88.5	_	_
Serial transmission: EX600 (M12 connector)	141.5	47	81.5
Serial transmission: EX600 (7/8 inch connector)	158	47	81.5
Serial transmission: EX250	141.5	21	81.5
Serial transmission: EX260	88.7	_	_
Serial transmission: EX120	84.7	_	_




## Program Connector Connecting Base SY3000/5000/7000 Series

Dimensions: SY7000 Series

Plug-in Connector Connecting Base Mixed Mounting Type

Type 12/Top Ported


SS5Y7-M12 - Stations

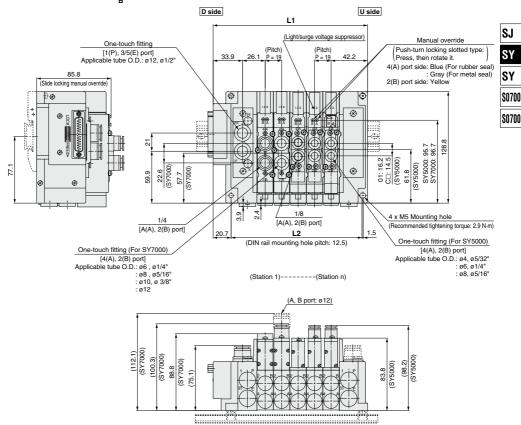


- \*: Refer to page 330 for dimensions of external pilot and elbow fittings.
- \*: Refer to the below pages for L1, L2, L3, L4 dimensions and other dimensions that are not specified in each wiring specification.

Dimensions of Type 12/Top ported: P. 335 : P. 225 : P. 228 D-sub connector <IP40> D-sub connector <IP67> Flat ribbon cable : P. 231 Terminal block box (Spring type) : P. 237-5 Terminal block box : P. 243 : P. 253 Lead wire Circular connector : P. 263 EX500 (128 points) : P. 273 EX500 (64 points) : P. 279 EX600 : P. 291, 292 : P. 301 FX250 : P. 309 EX260 EX126 : P. 317 : P. 325 EX120


# SY3000/5000/7000 Series Type 10, 11, 12 Connector Connecting Base Manifold Exploded View

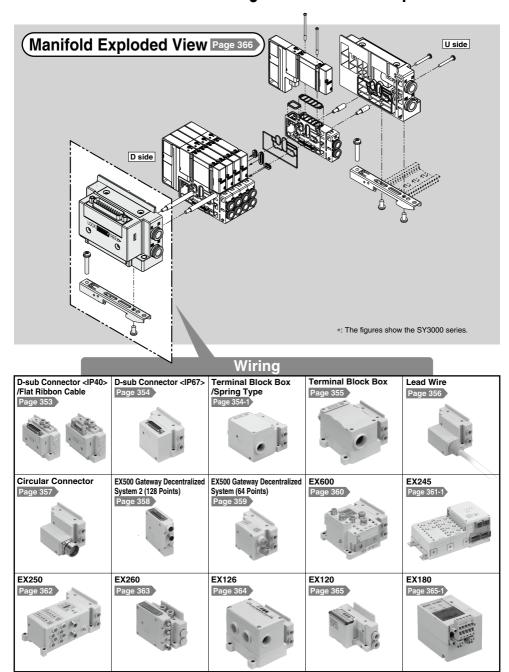



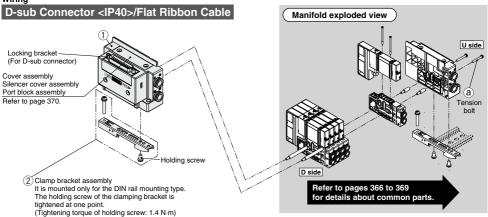

#### Manifold Parts No.

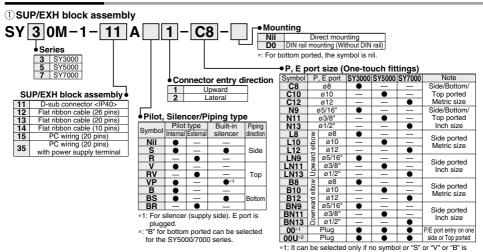

selected for the pilot and the piping.

has an inch size locking bracket.

\*2: "00U" is available only for the D-sub connector type and it

#### SUP/EXH block assembly (D side)

accessories and the number of accessories		
Accessories	SY3000	SY5000 SY7000
a Tension bolt	None*1	3 pcs.

\*1: Since the nuts are embedded in the SUP/EXH block.

#### ② Clamp bracket assembly

Series	Part no.
SY3000	SY30M-15-1A
SY5000/7000	SY50M-15-1A


<sup>\*:</sup> Part number is for one assembly

SY SY


SJ

S0700

S0700

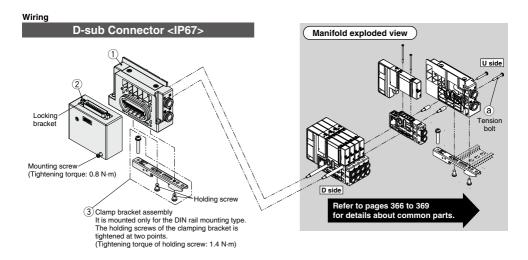

#### Manifold Parts No.

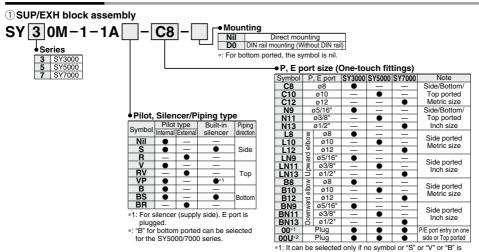

#### SUP/EXH block assembly (D side)

accessories and the number of accessories

accessories and the number of accessories		
Accessories	SY3000	SY5000 SY7000
a Tension bolt	None*1	3 pcs.

<sup>\*1:</sup> Since the nuts are embedded in the SUP/EXH block.

#### 2 D-sub connector block assembly <IP67>

Part no.	Connector direction	Locking bracket	
SY30M-14-9A1	Тор	Matria sima	
SY30M-14-9A2	Side	Metric size	
SY30M-14-9A1U	Тор	Inch size	
SY30M-14-9A2U	Side	inch size	

#### 3 Clamp bracket assembly


Series	Part no.
SY3000	SY30M-15-1A
SY5000/7000	SY50M-15-1A

selected for the pilot and the piping.

\*2: "00U" has an inch size locking bracket.


<sup>\*:</sup> Part number is for one assembly.



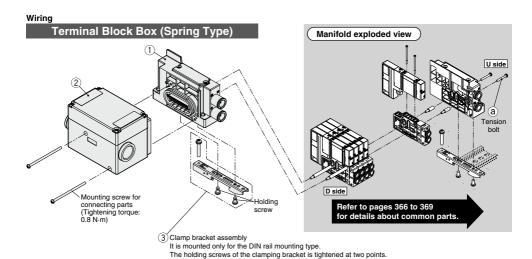

(Tightening torque of holding screw: 1.4 N·m)

#### Manifold Parts No.

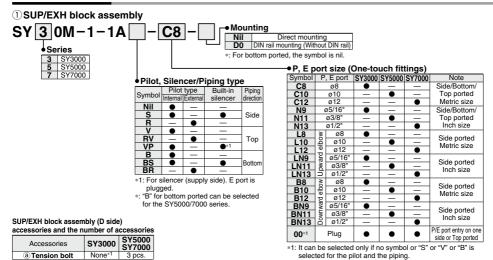

<sup>\*1:</sup> Since the nuts are embedded in the SUP/EXH block.

3 pcs.

### 2 Terminal block assembly


### SY30M-130-1A

#### (3) Clamp bracket assembly


Series	Part no.
SY3000	SY30M-15-1A
SY5000/7000	SY50M-15-1A

<sup>\*:</sup> Part number is for one assembly.

selected for the pilot and the piping.

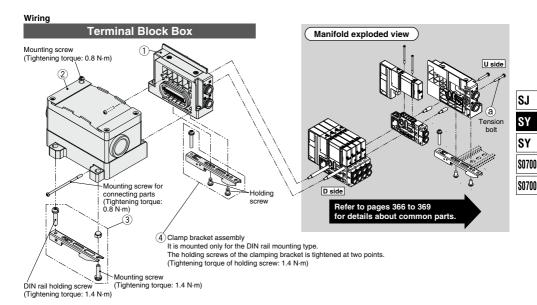

#### Manifold Parts No.

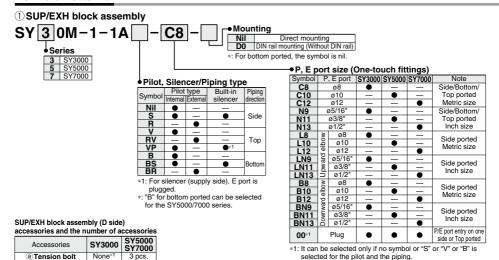

<sup>3</sup> pcs. \*1: Since the nuts are embedded in the SUP/EXH block.

#### VVQC1000-T0-1

3 Clamp bracket assembly for terminal block box

#### SY30M-15-4A

\*: Part number is for one assembly


#### 4 Clamp bracket assembly

Series	Part no.
SY3000	SY30M-15-1A
SY5000/7000	SY50M-15-1A


<sup>\*:</sup> Part number is for one assembly.



<sup>2</sup> Terminal block box housing assembly

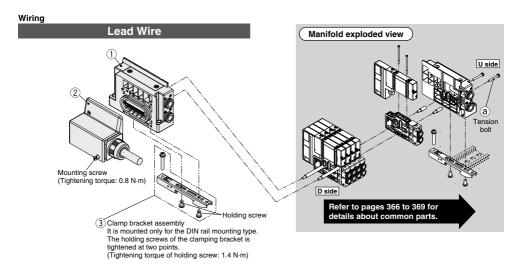


#### Manifold Parts No.

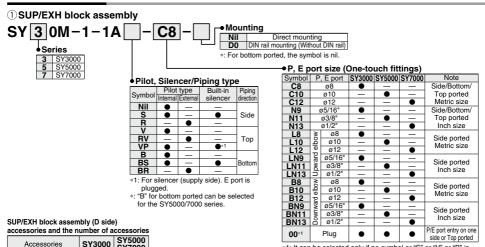

<sup>\*1:</sup> It can be selected only if no symbol or "S" or "V" or "B" is SY7000 None\*1 3 pcs. a Tension bolt selected for the pilot and the piping. \*1: Since the nuts are embedded in the SUP/EXH block.


## 2 Lead wire connector block assembly

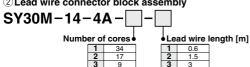


#### (3) Clamp bracket assembly

-	
Series	Part no.
SY3000	SY30M-15-1A
SY5000/7000	SY50M-15-1A

<sup>\*:</sup> Part number is for one assembly.

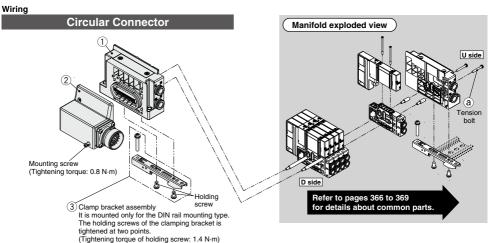

#### Manifold Parts No.

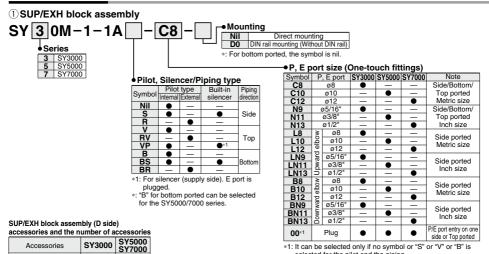

selected for the pilot and the piping.

## SY30M-14-5A

\*: 26 pins

#### ③ Clamp bracket assembly

Series	Part no.
SY3000	SY30M-15-1A
SY5000/7000	SY50M-15-1A

<sup>\*:</sup> Part number is for one assembly.


SJ SY

SY S0700


S0700

None\*1 a Tension bolt

<sup>\*1:</sup> Since the nuts are embedded in the SUP/EXH block. 2 Circular connector block assembly

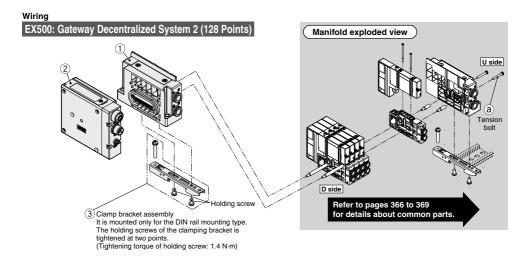

#### Manifold Parts No.

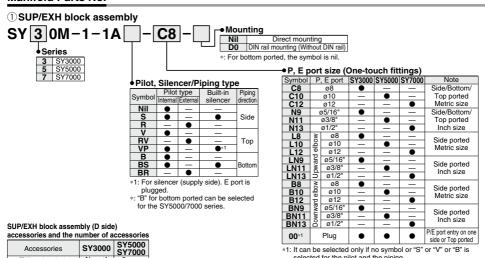

selected for the pilot and the piping.

#### ②EX500 SI Unit

a Tension bolt


#### EX500-S103

(3) Clamp bracket assembly


Series	Part no.
SY3000	SY30M-15-1A
SY5000/7000	SY50M-15-1A

<sup>\*:</sup> Part number is for one assembly.

None\*1 \*1: Since the nuts are embedded in the SUP/EXH block.

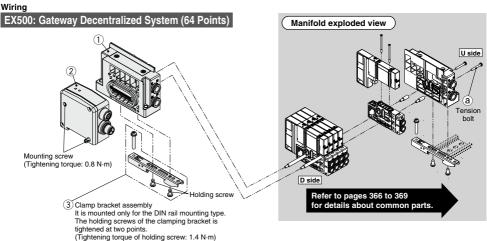

#### Manifold Parts No.

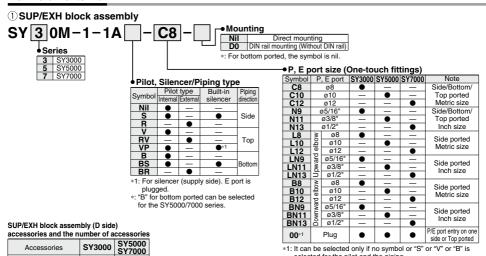

selected for the pilot and the piping.

2 EX500 SI Unit

a Tension bolt

EX500-Q 0 01

Output specifications

NPN (Positive common) PNP (Negative common)

#### ③ Clamp bracket assembly

Series	Part no.
SY3000	SY30M-15-1A
SY5000/7000	SY50M-15-1A

<sup>\*:</sup> Part number is for one assembly


SJ SY


SY

S0700

S0700

None\*1 \*1: Since the nuts are embedded in the SUP/EXH block.

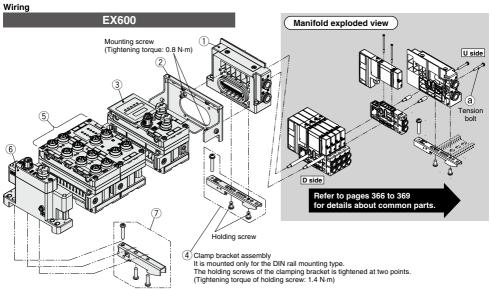

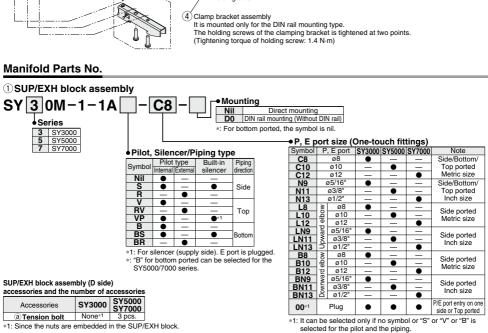

# Type 10, 11, 12 Connector Connecting Base Manifold Exploded View SY3000/5000/7000 Series

#### Manifold Parts No.

2 Valve plate

#### EX600-ZMV2

\*: With mounting screws (2 pcs. of M4 x 6 and 2 pcs. of M3 x 8)

#### ③ EX600 SI Unit

## EX600-S PR

	Protocol •
Symbol	Description
PR	PROFIBUS DP
DN	DeviceNet™
MJ	CC-Link
EN	EtherNet/IP™*1
EC	EtherCAT*1
PN	PROFINET*1

\*1: Cannot be communicated with the EX600-HT1-□.


• Versi	• Version		
Symbol	Description		
Nil	When MJ, EN, EC or		
1411	PN is selected		
Α	When PR or DN is selected		

Output type

	- carpar type			
Symbol	Description	Condition		
1	PNP (Negative common)	Can be selected by all protocols.		
2	NPN (Positive common)	Can be selected by all protocols.		
3	PNP (Negative common)	Can be selected in		
3	EtherNet/IP (2 ports)	the case of EN.		
4	NPN (Positive common)	Can be selected in		
-	EtherNet/IP (2 ports)	the case of EN.		



#### ③ EX600 SI Unit (Wireless compatible)

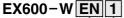

Output type

Symbol	Description
1	PNP (Negative common)
2	NPN (Positive common)

#### Protocol

Symbol	SI Unit type	Description
EN	Wireless base module	EtherNet/IP™*2
PN		ROFINET*2
SV	Wireless remote module	*1, 2

- \*1: Cannot be communicated with the EX600-HT1- ...
- \*2: The wireless system is suitable for use only in a country where it is in accordance with the Radio Act and regulations of that country.

#### 4 Clamp bracket assembly

Series	Part no.
SY3000	SY30M-15-1A
SY5000/7000	SY50M-15-1A

<sup>\*:</sup> Part number is for one assembly

SJ

S0700

S0700



#### Manifold Parts No.

#### **5 EX600 Digital Input Unit**

## EX600-DX P B

Input type

Number of inputs, open circuit detection, and connector

Symbol	Number of inputs	Open circuit detection	Connector
В	8	No	M12 connector (5 pins) 4 pcs.
С	8	No	M8 connector (3 pins) 8 pcs.
C1	8	Yes	M8 connector (3 pins) 8 pcs.
D	16	No	M12 connector (5 pins) 8 pcs.
E	16	No	D-sub connector (25 pins)*1*2
F	16	No	Spring type terminal block (32 pins)*1*2



SJ

SY S0700

S0700

#### 5 EX600 Digital Output Unit

## EX600-DY P

Output type Symbol Description


NPN

Number of outputs and connector

Symbol	Number of outputs	Connector
В	8	M12 connector (5 pins) 4 pcs.
E	16	D-sub connector (25 pins)*1*2
F	16	Spring type terminal block (32 pins)*1*2



#### 5 EX600 Digital Input/Output Unit

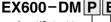

Input/Output type

					and	connector
[	Symbol	Number of inpu	ts Number of out	puts		Connector

Symbol	Description
Р	PNP
N	NPN

E         8         D-sub connector (25 pins)*1*2           F         8         Spring type terminal block (32 pins)*1*2	Symbol	Number of inputs	Number of outputs	Connector
F 8 Spring type terminal block (32 pins)*1*2	E	8	8	
	F	8	8	Spring type terminal block (32 pins)*1*2



#### 5 EX600 Analog Input/Output Unit

## EX600-AX

A	nalog input/output 🌢		
	Symbol	Description	
	AX	Analog input	
	AY	Analog output	

#### Number of input channels and connector

Symbol	Number of input channels				
Α	2 channels	M12 connector (5 pins) 2 pcs.*3			

<sup>\*3:</sup> Refer to \*1 and \*2 below for AY



#### **5 EX600 Analog Input/Output Unit**

#### EX600-AMB

Analog input/output

Trainber of inputoutput charmers and connector									
Symbol	Number of input channels	Number of output channels	Connector						
В	2 channels	2 channels	M12 connector (5 pins) 4 pcs.*1*2						




#### 6 EX600 end plate



	Power connector		
Symbol Connector			
2	M12 power supply connector, B-coded		
3	7/8 inch power supply connector		
4	M12 power supply connector IN/OUT,		
	A-coded, Pin arrangement 1		
5	M12 power supply connector IN/OUT,		
_ 5	A-coded, Pin arrangement 2		

#### Mounting

Symbol	Description
Nil	Without DIN rail mounting bracket
3	With DIN rail mounting bracket

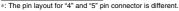



## EX600-ZMA3

#### **Enclosed parts**

Round head screw with washer (M4 x 20) 1 pc. P-tight screw (4 x 14) 2 pcs.




- \*1: Cannot be communicated with the EX600-HT1- (Old version of the Handheld Terminal).
- \*2: Cannot be connected with the EX600-SPR1, EX600-SPR2, EX600-SDN1, or EX600-SDN2.



Wiring

## **EX245** M3 hexagon socket head cap screw Tightening torque: (0.75 to 0.85) N·m Joint assembly (3) (4) Manifold exploded view Joint assembly U side 10 bolt M4 hexagon socket head cap screw Tightening torque: (1.2 to 1.4) N·m D side Modular adapter assembly Refer to pages 366 to 369 for details about common parts.

#### Manifold Parts No.

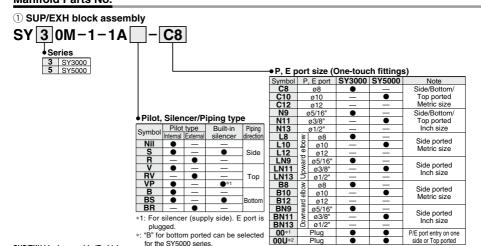

SUP/EXH block assembly (D side)

accessories and the number of accessories					
Accessories	SY3000	SY5000			
a Tension bolt	None*1	3 pcs.			

<sup>\*1:</sup> Since the nuts are embedded in the SUP/EXH block.

\*1: It can be selected only if no symbol or "S" or "V" or "B" is

selected for the pilot and the piping.

\*2: "00U" has an inch size locking bracket.

#### Manifold Parts No.

2 EX245 SI Unit

## EX245 - S PN 1A

**PROFINET** 

Connector type

Symbol	Communication connector	Power supply connector			
1A	Push Pull connector (SCRJ): 2 pcs.	Push Pull connector (24 V): 2 pcs.			
2A	Push Pull connector (RJ45): 2 pcs.	Push Pull connector (24 V): 2 pcs.  7/8 inch connector (5-pin, Plug): 1 pc.  7/8 inch connector (5-pin, Socket): 1 pc.			
3 <b>A</b>	M12 connector (4-pin, Socket, D-coded): 2 pcs.				

3 EX245 Digital Input Module





**③ EX245 Digital Output Module** 






(4) EX245 End Plate




SJ

SY S0700

S0700

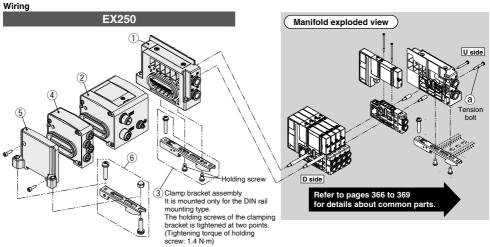

#### Manifold Parts No.

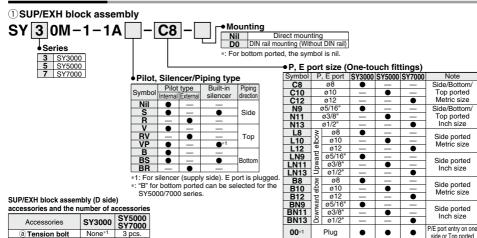

<sup>\*1:</sup> Since the nuts are embedded in the SUP/EXH block.

#### ② EX250 SI Unit

## EX250-S DN1

• Com	munication protocol						
DN1	DeviceNet™ (Negative common)						
PR1	PROFIBUS DP (Negative common)						
AS3	AS-Interface (8 in/8 out, 31 slave modes, 2 isolated common type) (Negative common)						
AS5	AS-Interface (4 in/4 out, 31 slave modes, 2 isolated common type) (Negative common)						
AS7	AS-Interface (8 in/8 out, 31 slave modes, 1 common type) (Negative common)						
AS9	AS9 AS-Interface (4 in/4 out, 31 slave modes, 1 common type) (Negative common						
CA1A	CA1A CANopen (Negative common)						
EN1	EtherNet/IP™ (Negative common)						

#### (3) Clamp bracket assembly

Part no.
SY30M-15-1A
SY50M-15-1A

<sup>\*:</sup> Part number is for one assembly.

selected for the pilot and the piping.

4 Input block

EX250-IE 1 Block type

1	M12 connector, 2 inputs					
2	M12 connector, 4 inputs					
3	M8 connector, 4 inputs					

\*1: It can be selected only if no symbol or "S" or "V" or "B" is

side or Top ported

5 EX250 end plate assembly

#### EX250-EA1

\*: With mounting screws (2 pcs. of M3 x 10)


#### 6 Clamp bracket assembly for EX250 SI Unit

#### SY30M-15-3A


\*: Part number is for one assembly.



# Type 10, 11, 12 Connector Connecting Base Manifold Exploded View SY3000/5000/7000 Series

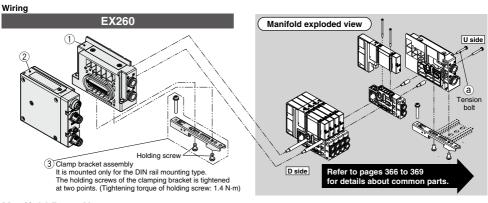

#### Manifold Parts No.

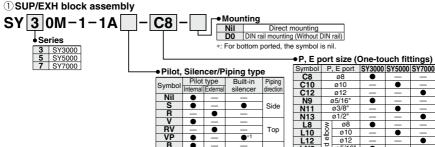

## SUP/EXH block assembly (D side)

accessories and the n		
Accessories	SY3000	SY5000 SY7000
a Tension bolt	None*1	3 pcs.

\*1: Since the nuts are embedded in the SUP/EXH block.

BR • \*1: For silencer (supply side). E port is plugged.

Bottom

RΩ

\*: "B" for bottom ported can be selected for the SY5000/7000 series.

4	C12		ø12	_	_	•	Metric size
	N9	ç	ø5/16"	•	_	_	Side/Bottom/
l	N11		ø3/8"	_	•	_	Top ported
1	N13		ø1/2"	_	_	•	Inch size
l	L8	≥	ø8	•	_	_	Cide newted
l	L10	elbow	ø10	_	•	_	Side ported Metric size
1	L12		ø12	_	_	•	IVIELLIC SIZE
l	LN9	ard	ø5/16"	•	_	_	Cide newted
1	LN11	§	ø3/8"	_	•	_	Side ported Inch size
J	LN13	5	ø1/2"	_	_	•	IIICII SIZE
	B8	×	ø8	•	_	_	Cide newted
	B10	elbow	ø10	_	•	_	Side ported Metric size
	B12		ø12	_	_	•	IVIELLIC SIZE
	BN9	Downward	ø5/16"	•	_	_	Cide newted
	BN11	Ž	ø3/8"	_	•	_	Side ported Inch size
	BN13	8	ø1/2"	_	_	•	IIICII SIZE
	00*1	Plug		•	•	•	P/E port entry on one side or Top ported
	+1. It con	ho	colootod	amber if a		-1 "C"	a # "\ /" a # "D" ia

\*1: It can be selected only if no symbol or "S" or "V" or "B" is selected for the pilot and the piping.

#### ② EX260 SI Unit

## EX260-S PR1

#### Communication protocol

	- Communication protects										
Symbol	Protocol	Number of outputs	SI Unit output polarity	Communication	Manifold symbol	Symbol	Protocol	Number of outputs	SI Unit output polarity	Communication	Manifold symbol
DN1	Davida - Ni-ATM	32	Source/PNP (Negative common)		QAN	EC1	C2		Source/PNP (Negative common)		DAN
DN2		32	Sink/NPN (Positive common)	M12	QA	EC2			Sink/NPN (Positive common)	M12	DA
DN3	DeviceNet™	16	Source/PNP (Negative common)	IVIIZ	QBN	EC3	EllierCAT	16	Source/PNP (Negative common)	IVI IZ	DBN
DN4		16	Sink/NPN (Positive common)		QB	EC4		16	Sink/NPN (Positive common)	1 1	DB
PR1		32	Source/PNP (Negative common)		NAN	PN1	PROFINET	32	Source/PNP (Negative common)	M12	FAN
PR2		32	Sink/NPN (Positive common)		NA	PN2		32	Sink/NPN (Positive common)		FA
PR3		16	Source/PNP (Negative common)	M12	NBN	PN3		16	Source/PNP (Negative common)		FBN
PR4	PROFIBUS DP	16	Sink/NPN (Positive common)		NB	PN4			Sink/NPN (Positive common)		FB
PR5	PHOLIDO2 DA	00	Source/PNP (Negative common)		NCN	EN1		32	Source/PNP (Negative common)		EAN
PR6		32	Sink/NPN (Positive common)	D	Daubit NC   EN2   EtharNot/IDIM   5   Sini	Sink/NPN (Positive common)	1440	EA			
PR7		16	Source/PNP (Negative common)	ion) NDN EN3	NDN	EN3	Ethernet/IP		Source/PNP (Negative common)	M12	EBN
PR8			Sink/NPN (Positive common)			16	Sink/NPN (Positive common)	1 /	EB		
MJ1		32 Source/PNP (Negative common) Sink/NPN (Positive common)		VAN	PL1	Ethernet	32	Source/PNP (Negative common)	M12	GAN	
MJ2	CC-Link		Sink/NPN (Positive common)	M12	VA	PL3	POWERLINK	16	Source/FINF (Negative continion)	IVI IZ	GBN
MJ3		10	Source/PNP (Negative common)	IVIIZ	VBN	IL1	IO-Link	32	Source/PNP (Negative common)	M12	KAN
MJ4		16	Sink/NPN (Positive common)		VB						

\*1: Enclosure is IP40 when the communication connector is D-sub.

#### ③ Clamp bracket assembly

Series	Part no.
SY3000	SY30M-15-1A
SY5000/7000	SY50M-15-1A

<sup>\*:</sup> Part number is for one assembly

SJ


SY S0700

S0700


Note

Side/Bottom/

Top ported

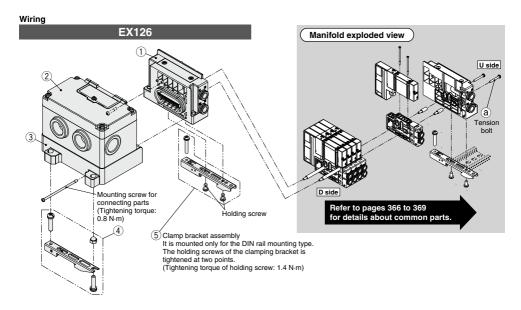

#### Manifold Parts No.

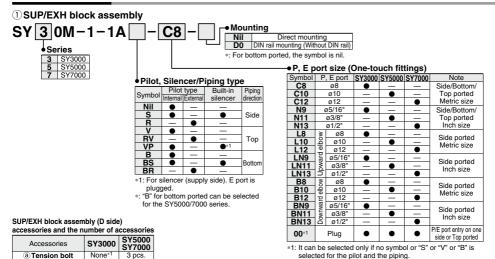

<sup>\*1:</sup> Since the nuts are embedded in the SUP/EXH block.

②EX126 SI Unit

#### EX126D-SMJ1

\*: CC-Link (Positive common)

③ Terminal block plate assembly

VVQC1000-74A-2

## 4 Clamp bracket assembly for EX126 SI Unit

#### SY30M-15-4A

\*: Part number is for one assembly.


#### 5 Clamp bracket assembly

Series	Part no.
SY3000	SY30M-15-1A
SY5000/7000	SY50M-15-1A
	•


<sup>\*:</sup> Part number is for one assembly.



selected for the pilot and the piping.

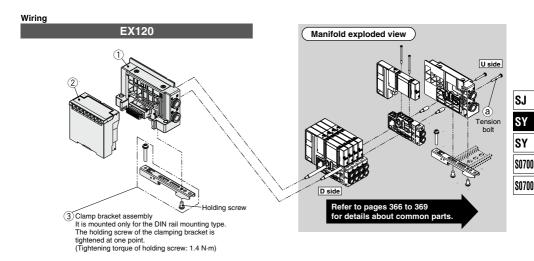

#### Manifold Parts No.

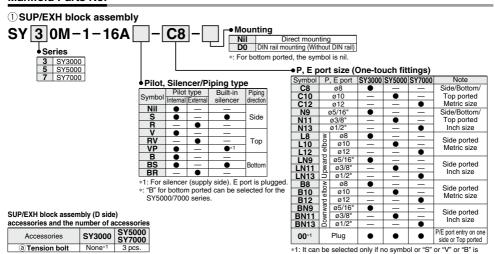

<sup>\*1:</sup> Since the nuts are embedded in the SUP/EXH block

## ② EX120 SI Unit

## EX120-S DN1

Communication protocol


DN1	DeviceNet™ (Positive common)
CS2	OMRON Corp.: CompoBus/S (8 outputs) (Positive common)
MJ1	CC-Link (Positive common)
CM1	CompoNet™ NPN (Positive common)
СМЗ	CompoNet™ PNP (Negative common)

#### 3 Clamp bracket assembly

Series	Part no.
SY3000	SY30M-15-1A
SY5000/7000	SY50M-15-1A

<sup>\*:</sup> Part number is for one assembly.


365

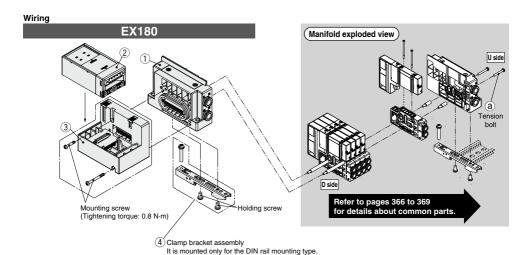


The holding screws of the clamping bracket is tightened at two points.

(Tightening torque of holding screw: 1.4 N·m)

#### Manifold Parts No.

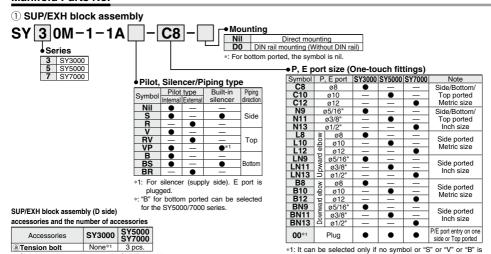

<sup>2</sup> EX180 Series SI Unit

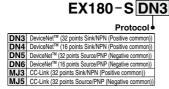

\*1 Since the nuts are embedded in the SUP/EXH block.

#### Made to Order


(Refer to page the Web Catalog.)

	(· · · · · · · · · · · · · · · · · · ·
	Protocol
	EtherCAT®
Г	AnyWireASLINK

#### Communication connector type

Nil	T-branch type
Α	Straight type

<sup>\*:</sup> Communication and power supply connectors are included

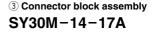

#### (4) Clamp bracket assembly

Series	Part no.
SY3000	SY30M-15-1A
SY5000/7000	SY50M-15-1A


\*: Part number is for one assembly.

selected for the pilot and the piping.






## Manifold Exploded View (Common Parts)

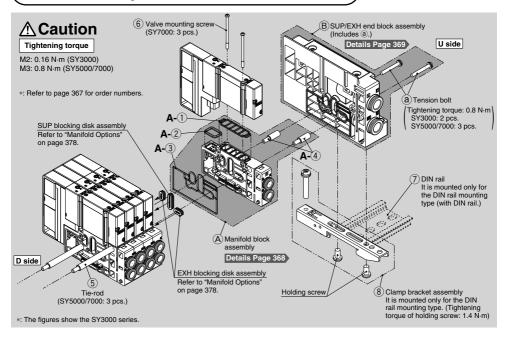

## Type 10, 11, 12: How to Increase Connector Type Manifold

Loosen the U-side tension bolt ⓐ, and remove the ® SUP/EXH end block assembly.

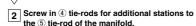

Screw them in until there is no gap between the tie-rods.

3 Connect the (A) manifold block assembly and (B) SUP/EXH end block assembly to be added, and tighten the tension bolt (a).


Tightening torque for tension bolt @ (M3): 0.8 N·m

#### 

Be sure to shut off the power and air supplies before disassembly.

Furthermore, since air may remain inside the actuator, piping and manifold, confirm that the air is completely exhausted before performing any work.

When disassembly and assembly are performed, air leakage may result if the tightening of the tension bolt is inadequate.

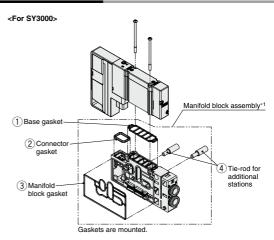

\*1: Manifold block assembly

No.	Description	Quantity	Note
123	Gasket	3	For base, connector and manifold block
4	Tie-rod for additional stations	SY3000 2 pcs. SY5000 3 pcs. SY7000 3 pcs.	

Refer to page 367 for ordering single unit.



# Type 10, 11, 12 Connector Connecting Base Manifold Exploded View SY3000/5000/7000 Series

#### For SS5Y3-10/11/12, SS5Y5-(M)10/11/12, SS5Y7-(M)10/11/12

No.			Description		SY3000	SY5000	SY7000	Note	
<b>A</b> -①	embly	Base g	asket nnector connect	ing base)	SY30M-9-1A	SY50M-9-1A	SY70M-9-1A	Part numbers shown on the left are for 10 valves. (10 pcs.)	
<b>A-</b> ②	를	Conne	ctor gasket		SX3000-146-2			Supplied individually.	
<b>A-</b> 3	assi	Manifold block gasket			SY30M-9-2	SY50M-9-2	SY70M-9-2	Supplied individually.	
	block		SY3000/5000/7000  For mixed mounting of SY3000/5000: SY3000 A, B port size ø8, ø5/16"		<b>SY30M-49-2-A</b> (10.5 mm pitch)	SV2000-55-2A-A (16 mm pitch)	<b>SY70M-49-2-A</b> *2 (19 mm pitch)	2 pcs. supplied (SY3000), 3 pcs. supplied (SY5000/7000)	
<b>A</b> -4	I ≅					SV2000-55-2A-A (16 mm pitch)		3 pcs. supplied.	
	Ma	ag 등 등	For mixed mounting of SY3000/5000: SY3000 except A, B port size Ø8, Ø5/16"*4		<b>SY50M-49-2-A</b> (12.5 mm pitch)		_	3 pcs. supplied.	
			SY3000/5000/7000		VVQC1000-TR-□ (10.5 mm pitch)	SV2000-55-1-□-A (16 mm pitch)	SY70M-49-1-□-A (19 mm pitch)	☐: Manifold stations (2 stations to 24 stations) 2 pcs. supplied (SY3000), 3 pcs. supplied (SY5000/7000)	
(5)	Tie-rod				<b>SY50M-49-1-</b> □- <b>A</b> *3*4 (12.5 mm pitch)		_		
			Mixed mounting type manifold	SS5Y5-M**	<b>SV2000-55-1-</b> □- <b>A</b> *5 (16 mm pitch)		_	: Manifold stations (2 stations to 24 stations) 3 pcs. supplied.	
				SS5Y7-M**	_		<b>9-1-</b> □- <b>A</b> *2 n pitch)		
( <del>6</del> )	Val	lve ounting	Round head combination screw Hexagon socket head cap screw		SY3000-23-24A (M2 x 32)	SY5000-221-1A (M3 x 32.5)	SY7000-221-1A (M3 x 36.5)	Part numbers shown on the left are as follows. SY3000/5000: for 10 valves (20 pcs. included)	
		rew			SY3000-222-1A (M2 x 32)	SY5000-222-1A (M3 x 32.5)	SY7000-222-1A (M3 x 36.5)	SY7000: for 10 valves (30 pcs. included)	
7	DIN	N rail			VZ1000	VZ1000-11-1-□ VZ		Refer to page 372.	
8	Clar	mp bracket	assembly (for connec	tor connecting base)	SY30M-15-1A	SY50N	I-15-1A	Supplied individually.	
(a)	Tension bolt (for connector connecting base)*6				olt (for connector connecting base)*6 AC00530 SX3000-145-21				

<sup>\*1:</sup> The manifold of the SY3000 (SSSY3-10/11/12) can be assembled by connecting the tie-rods for additional stations for the number of manifold stations. However, the manifold of the SY5000 or SY7000 (SS5Y5/7-10/11/12 including mixed mounting) cannot be assembled by connecting the tie-rods for additional stations for the number of manifold stations.

SJ

S0700 S0700

<sup>\*2:</sup> When mounting with the SY5000.


<sup>\*3:</sup> When mounting only the SY3000 (12.5 mm pitch except A, B port size Ø8, Ø5/16").

<sup>\*4:</sup> The port sizes except A, B port size ø8, ø5/16" are the following: ø2, ø3.2, ø4, ø6, ø1/8", ø5/32", ø1/4". \*5: When mounting only the SY3000 (16 mm pitch A, B port size ø8, ø5/16").

<sup>\*6:</sup> For the SY3000 SUP/EXH end block or the SY5000 and SY7000 SUP/EXH (end) block

#### Manifold Parts No.



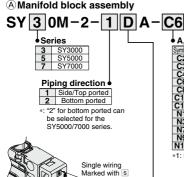

•	A, E	3 port siz				
ı	Symbol	A, B port	SY3000	SY5000	SY7000	N
	C2	ø2	•	_	_	
	СЗ	ø3.2	•	_	_	Si
	C4	ø4	•	•	_	Bo

• A, B port size (One-touch intings)												
Symbol	A, B port	SY3000	SY5000	SY7000	Note	Symbol	1	A, B port	SY3000	SY5000	SY7000	Note
C2	ø2	•	_	_		L4		ø4	•	•	_	0:4-
СЗ	ø3.2	•	_	_	Side/	L6	]_	ø6	•	•	•	Side
C4	ø4	•	•	_	Bottom	L8	₫	ø8	*1	•	•	Metric
C6	ø6	•	•	•	ported	L10	읢	ø10	_		•	size
C8	ø8	*1	•	•	Metric	L12	9	ø12	_		•	3126
C10	ø10	_	_	•	size	LN3		ø5/32"	•	_	_	Side
C12	ø12	_	_	•	1	LN7	횬	ø1/4"	•	•	_	ported
N1	ø1/8"	•	_	_	Side/	LN9	רו	ø5/16"	*1	•	_	Inch
N3	ø5/32"	•	•	_	Bottom	LN11	1	ø3/8"	_		•	size
N7	ø1/4"	•	•	•	ported	B4		ø4	•	•	_	0
N9	ø5/16"	*1	•	•	Inch	B6	]≥	ø6	•	•	•	Side
N11	ø3/8"	_	_	•	size		8	ø8	*1	•	•	ported Metric
*1: Re	fer to mixe	d mounti	na type	for ø8. ø	5/16".		e	ø10	_	_	•	size
	*1: Refer to mixed mounting type for ø8, ø5/16".					D10	1.2	40			_	size.

	L6	>	ø6	•	•	•	Side
ı	L8	š	ø8	*1	•	•	Metric
	L10	ê	ø10	_	_	•	size
	L12	ē	ø12	_	_	•	3126
	LN3	pward	ø5/32"	•	_	_	Side
	LN7	ğ	ø1/4"	•	•	_	ported
٦	LN9	۲	ø5/16"	*1	•	_	Inch
ı	LN11		ø3/8"	_	_	•	size
	B4	П	ø4	•	•	_	a
	B6	wod	ø6	•	•	•	Side
	B8	ಶ	ø8	*1	•	•	ported
_	B10	Ф	ø10	_	_	•	Metric size
	B12		ø12	_	_	•	size
	BN3	⋛	ø5/32"	•	_	_	Side
	BN7		ø1/4"	•	•	_	ported
	BN9	اظا	ø5/16"	_*1	•	_	Inch
	BN11		ø3/8"	_	_	•	size
	00	Г	Plug	•	•	•	Top ported
							•

A Manifold (All parts inside ———are included.)

(A) Mixed mounting of the SY3000/5000 Manifold block assembly for mounting the SY3000

Wiring type Single wiring D Double wiring

SY50M-2-3 DA-C6



Wiring type Single wiring D Double wiring A. B port size (One-touch fittings)

Symbol	A, B port	Note	Symbol	A	A, B port	Note	
C2	ø2	Side/Bottom	L4	///	ø4	Side ported	
C3	ø3.2	ported Metric size		L6	gje j	ø6	Metric size
C4	ø4		LN3	//arc	ø5/32"	Side ported	
C6	ø6	WELLIC SIZE	LN7	ďΩ	ø1/4"	Inch size	
N1	ø1/8"	Side/Bottom	B4	DOW	ø4	Side ported	
N3	ø5/32"	ported	B6	μ	ø6	Metric size	
N7	ø1/4"	Inch size	BN3	nwa	ø5/32"	Side ported	
			BN7	ò	ø1/4"	Inch size	
			00		Plug	Top ported	

block assembly 1 Base gasket (2) Connector 4 Tie-rod for gasket additional stations Gaskets are mounted. (3) Manifold block gasket

A Mixed mounting of the SY3000/5000 Manifold block assembly for mounting the SY3000 for Ø8, Ø5/16" (A manifold block assembly for mounting the SY3000 valves on the SY5000 manifolds at A, B port size: Ø8, Ø5/16")

SY50M-2-5 D



S Single wiring
D Double wiring

A, B poi	rt size	(One-to	ouch fit	tings)

Symbol	Α,	B port	Note					
C8		ø8	Side/Bottom ported Metric size					
N9	Ø	5/16"	Side/Bottom ported Inch size					
L8	Upward	ø8	Side ported Metric size					
LN9	elbow	ø5/16"	Side ported Inch size					
B8	Downward	ø8	Side ported Metric size					
BN9	elbow	ø5/16"	Side ported Inch size					

Manifold block assembly accessories and

the number of accessor	ies	
Accessories	SY3000	SY5000 SY7000*1
Base gasket	1	pc.
2 Connector gasket		pc.
3 Manifold block gasket		pc.
4 Tie-rod assembly for additional stations	2 pcs.	3 pcs.

\*1: Including mixed mounting type

A Mixed mounting of the SY5000/7000 Manifold block assembly for mounting the SY5000

SY70M-2-3 DA-C10

Piping direction Side/Top ported Bottom ported

> Wiring type S Single wiring
>
> D Double wiring


▲ A B port size (One-touch fittings)

• ~,	D POIL 9	126 (0116	-touci	ı ıntınıy	ə <i>)</i>				
Symbol	A, B port	Note	Symbol	A, B port	Note	Symbol	A	A, B port	Note
C6	ø6	Side/Bottom	L6 ≥	ø6		B6	٧	ø6	
C8	ø8	ported	L8 8	ø8	Side ported	B8	qe	ø8	Side ported
C10	ø10	Metric size	L10 0	ø10	Metric size	<b>B10</b>		ø10	Metric size
C12	ø12	INICUIC SIZE	L12 ह	ø12	1	<b>B12</b>	wa	ø12	1
N7	ø1/4"	Side/Bottom	LN11	ø3/8"	Side ported	BN11	š	ø3/8"	Side ported
N9	ø5/16"	ported	LINITIS	03/0	Inch size	DINI	ŏ	Ø3/0	Inch size
N11	ø3/8"	Inch size				00		Plua	Top ported

\*: For bottom ported, the symbol is nil.

# Type 10, 11, 12 Connector Connecting Base Manifold Exploded View SY3000/5000/7000 Series

#### Manifold Parts No.

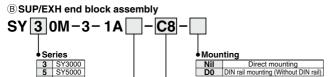

Pilot, Silencer/Piping type


Ψrπoι,			ing type	
Cumbal	Pilot	type	Built-in	Piping
Syllibol	Internal	type External	silencer	direction
Nil	•	_	_	
S	•	_	•	Side
R	_	•	_	
٧	•	_	_	
RV	_	•	_	Top
VP	•	_	<b>●</b> *1	
В	•	_	_	
BS	•	_	•	Bottom
BR	_	•	_	

\*1: For silencer (supply side). E port is plugged. \*: "B" for bottom ported can be selected for the SY5000/7000 series.

P, E port size (One-touch fittings)

Symbol	Р	, E port	SY3000	SY5000	SY7000	Note
C8		ø8	•	_	_	Cide/Detters/Ten nested
C10		ø10	_	•	_	Side/Bottom/Top ported Metric size
C12		ø12	I	-	•	Wethe Size
N9	Q	ø5/16"	•	-	_	Side/Bottom/Top ported
N11		ø3/8"	I	•	_	Inch size
N13		ø1/2"	I	-	•	IIICII SIZE
L8	elbow	ø8	•	-	_	Side ported
L10	ğ	ø10	I	•	_	Metric size
L12		ø12	I	-	•	Wethe Size
LN9	pward	ø5/16"	•	-	_	Side ported
LN11	š	ø3/8"	I	•	_	Inch size
LN13		ø1/2"	I	-	•	IIICII SIZE
B8	elbow	ø8	•	-	_	Side ported
B10	qq	ø10	I	•	_	Metric size
B12		ø12	_	_	•	WICH IO SIZE
BN9	Downward	ø5/16"	•	_	_	Side ported
BN11	×	ø3/8"		•	_	Inch size
BN13	2	ø1/2"	I	-	•	IIICII SIZE
00*1		Plug	•	•	•	P/E port entry on one side or Top ported

\*1: It can be selected only if no symbol or "S" or "V" or "B" is selected for the pilot and the piping.

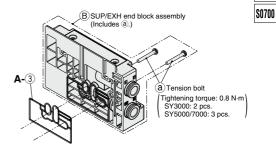

SUP/EXH end block assembly accessories and the number of accessories

Accessories	SY3000	SY5000/7000
a Tension bolt	2 pcs.	3 pcs.
A-3 Manifold block gasket	1	oc.


Gasket is mounted.

SJ

SY S0700

#### Manifold Parts No.

■ Cover assembly/Silencer cover assembly/Port block assembly for SUP/EXH (end) block assembly

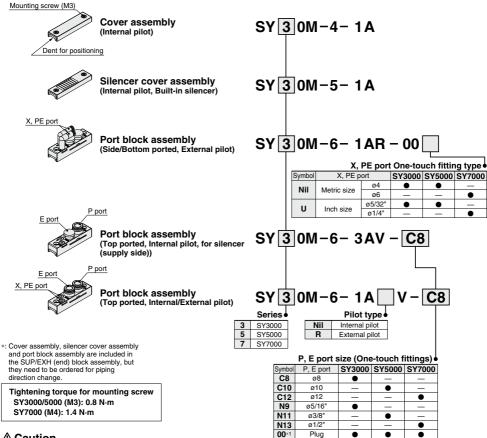

#### **⚠** Caution

- Be sure to shut off the power and air supplies before disassembly.
  - Furthermore, since air may remain inside the actuator, piping and manifold, confirm that the air is completely exhausted before performing any work.
- When disassembly and assembly are performed, air leakage may result if the tightening of the cover and port block assemblies are inadequate.

<sup>\*1:</sup> Cannot be selected for the SY□0M-6- (1, 3) AV-00.

# SY3000/5000/7000 Series One-touch Fittings and Plug Assembly/Part No.

Refer to "Changing One-touch Fittings" on page 395 for replacement method.

#### ■ One-touch fittings

		Port size	е	SY3000	SY5000	SY7000
		ø2		VVQ1000-50A-C2	_	_
		ø3.2	]	VVQ1000-50A-C3	_	_
		ø4		VVQ1000-50A-C4	VVQ1000-51A-C4	_
		ø6	Straight type	VVQ1000-50A-C6	VVQ1000-51A-C6	VVQ2000-51A-C6
		ø8	1 , ,		VVQ1000-51A-C8	VVQ2000-51A-C8
		ø10		_	_	VVQ2000-51A-C10
		ø12			_	KQ2H12-17-X224
	ize	ø4		SZ3000-73-1A-L4	SZ3000-74-1A-L4	_
	Metric size	ø6	1	SZ3000-73-1A-L6	SZ3000-74-1A-L6	SZ3000-83-1A-L6
	etr	ø8	Elbow type		SZ3000-74-1A-L8	SZ3000-83-1A-L8
	Σ	ø10			——————————————————————————————————————	SZ3000-83-1A-L10
		ø12	†		_	KQ2L12-17N-X224
		ø4		SZ3000-73-2A-L4	SZ3000-74-2A-L4	NQZETZ-T/N-XZZ4
_		ø6	1	SZ3000-73-2A-L4	SZ3000-74-2A-L4	SZ3000-83-2A-L6
ort		ø8	Long elbow type	323000-73-2A-L6	SZ3000-74-2A-L8	SZ3000-83-2A-L8
B port⁴¹			Long elbow type	_	323000-74-2A-L8	
A, E		ø10	-		_	SZ3000-83-2A-L10
4		ø12		—	_	KQ2W12-17N-X224
		ø1/8"	-	VVQ1000-50A-N1		<u> </u>
		ø5/32"		VVQ1000-50A-N3	VVQ1000-51A-N3	
		ø1/4"	Straight type	VVQ1000-50A-N7	VVQ1000-51A-N7	VVQ2000-51A-N7
		ø5/16"			VVQ1000-51A-N9	VVQ2000-51A-N9
		ø3/8"		<u> </u>	_	VVQ2000-51A-N11
	Inch size	ø5/32"		KJL03-95-X224	_	_
	Ę	ø1/4"	Elbow type	KJL07-95-X224	KQ2L07-14-X224	_
	_ <u>≅</u> ∣	ø5/16"	Libow type	<u> </u>	KQ2L09-14-X224	_
		ø3/8"			_	KQ2L11-14-X224
		ø5/32"		KJL03-95-X225	_	_
		ø1/4"	Long elbow type	KJL07-95-X225	KQ2L07-14-X225	_
		ø5/16"	Long elbow type	<del>_</del>	KQ2L09-14-X225	_
		ø3/8"		_	_	KQ2L11-14-X225
		ø8		VVQ1000-51A-C8	_	_
		ø10	Straight type	<u>—</u>	VVQ2000-51A-C10	
		ø12	1 , ,	_	_	VVQ4000-50B-C12
	ize	ø8		SZ3000-74-1A-L8	_	_
	Metric size	ø10	Elbow type	_	SZ3000-83-1A-L10	_
	letr	ø12	1	_		KQ2L12-19N-X224
	≥	ø8		SZ3000-74-2A-L8	_	_
		ø10	Long elbow type		SZ3000-83-2A-L10	_
E port		ø12		_	_	KQ2W12-19N-X224
Ш		ø5/16"		VVQ1000-51A-N9	_	
٥,		ø3/8"	Straight type	—	VVQ2000-51A-N11	_
		ø3/6 ø1/2"	Straight type		- VQ2000-31A-N11	VVQ4000-50B-N13
	9	ø5/16"		KQ2L09-14-X224	_	- VVQ+000-30B-N13
	nch size	ø3/16 ø3/8"	Elbow type	1192203-14-7224	KQ2L11-14-X224	_
	둳	ø3/8 ø1/2"	- inow type	<del>_</del>	NQZL11-14-AZZ4	KQ2L13-19N-X224
	=	ø5/16"		KQ2L09-14-X225	<del>-</del>	NQ2L10-19IN-A224
			Long olbow turns	NQZLU9-14-AZZ5		_
		ø3/8"	Long elbow type		KQ2L11-14-X225	
		ø1/2"		<del></del>	me as those of the SY5000.	KQ2W13-19N-X224

<sup>\*1:</sup> A and B ports (ø8 and ø5/16") of the SY3000 and 5000 mixed mounting type are the same as those of the SY5000.

#### ■ Plug assembly

	SY3000	SY5000	SY7000
A, B port	VVQ0000-58A	VVQ1000-58A	VVQ2000-58A
P, E port	VVQ1000-58A	VVQ2000-58A	SY9000-62-1A

<sup>\*:</sup> Purchasing order is available in units of 10 pieces.



SJ

S0700 S0700


<sup>\*:</sup> Purchasing order is available in units of 10 pieces. Additionally, when performing the piping in the same orientation using the elbow type, please order "elbow type" or "long elbow type" appropriately.

# SY3000/5000/7000 Series Manifold Options

■ DIN rail dimensions/weight for the SY3000 Plug-in metal base and the SY3000/5000 Plug-in connector connecting base

#### VZ1000-11-1-□

\*: After confirming the L3 dimension in the dimensions table of each series, refer to the DIN rail dimensions table below and specify the number in the box □.

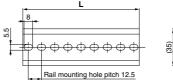


No.	0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18
L dimension	98	110.5	123	135.5	148	160.5	173	185.5	198	210.5	223	235.5	248	260.5	273	285.5	298	310.5	323
Weight [g]	17.6	19.9	22.1	24.4	26.6	28.9	31.1	33.4	35.6	37.9	40.1	42.4	44.6	46.9	49.1	51.4	53.6	55.9	58.1
No.	19	20	21	22	23	24	25	26	27	28	29	30	31	32	33	34	35	36	37
L dimension	335.5	348	360.5	373	385.5	398	410.5	423	435.5	448	460.5	473	485.5	498	510.5	523	535.5	548	560.5
Weight [g]	60.4	62.5	64.9	67.1	69.4	71.6	73.9	76.1	78.4	80.6	82.9	85.1	87.4	89.6	91.9	94.1	96.4	98.6	100.9
No.	38	39	40	41	42	43	44	45	46	47	48	49	50	51	52	53	54	55	56
L dimension	573	585.5	598	610.5	623	635.5	648	660.5	673	685.5	698	710.5	723	735.5	748	760.5	773	785.5	798
Weight [g]	103.1	105.4	107.6	109.9	112.1	114.4	116.6	118.9	121.1	123.4	125.6	127.9	130.1	132.4	134.6	136.9	139.1	141.4	143.6
No.	57	58	59	60	61	62	63	64	65	66	67	68	69	70	71				
L dimension	810.5	823	835.5	848	860.5	873	885.5	898	910.5	923	935.5	948	960.5	973	985.5				
Weight [g]	145.9	148.1	150.4	152.6	154.9	157.1	159.4	161.6	163.9	166.1	168.4	170.6	172.9	175.1	177.4				

## ■ DIN rail dimensions/weight for the SY5000/7000 Pugin metal base and the SY7000 Pugin connector connecting base

#### VZ1000-11-4-□

\*: After confirming the L3 dimension in the dimensions table of each series, refer to the DIN rail dimensions table below and specify the number in the box □.

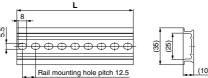

NI-			_	_		-	_		_	_	- 4.0		- 4.0	40		4.5	4.0	4-	4.0
No.	0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18
L dimension	98	110.5	123	135.5	148	160.5	173	185.5	198	210.5	223	235.5	248	260.5	273	285.5	298	310.5	323
Weight [g]	24.8	28	31.1	34.3	37.4	40.6	43.8	46.9	50.1	53.3	56.4	59.6	62.7	65.9	69.1	72.2	75.4	78.6	81.7
No.	19	20	21	22	23	24	25	26	27	28	29	30	31	32	33	34	35	36	37
L dimension	335.5	348	360.5	373	385.5	398	410.5	423	435.5	448	460.5	473	485.5	498	510.5	523	535.5	548	560.5
Weight [g]	84.9	88	91.2	94.4	97.5	100.7	103.9	107	110.2	113.3	116.5	119.7	122.8	126	129.2	132.3	135.5	138.6	141.8
No.	38	39	40	41	42	43	44	45	46	47	48	49	50	51	52	53	54	55	56
No. L dimension	38 573	39 585.5	40 598	41 610.5	42 623	43 635.5	44 648	45 660.5	46 673	47 685.5	48 698	49 710.5	50 723	51 735.5	52 748	53 760.5	54 773	55 785.5	56 798
_	573					-		_	_					_	_		-		
L dimension	573	585.5	598	610.5	623	635.5	648	660.5	673	685.5	698	710.5	723	735.5	748	760.5	773	785.5	798
L dimension Weight [g]	573 145 57	585.5 148.1	598 151.3	610.5 154.5	623 157.6	635.5 160.8	648 163.9	660.5 167.1	673 170.3	685.5 173.4	698 176.6	710.5 179.8	723 182.9	735.5 186.1	748 189.2	760.5	773	785.5	798

## Manifold Options SY3000/5000/7000 Series

#### **∕** Caution

Tightening torque for mounting screv M2: 0.16 N·m (SY3000) M3: 0.8 N·m (SY5000/7000)

#### **Manifold Options**


\*: Refer to pages 383, 385, 387 for dimensions.


#### ■ Blanking plate assembly

[With two mounting screws (3 pcs. for the SY7000)]

Used when valve additions are expected or for maintenance. A structure is in place on the blanking plate to prevent the mounting Mounting screws from sliding.



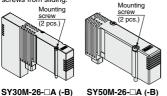

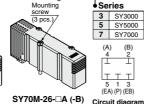

SY|3|0M-26-|1|A Series 3 SY3000 5 SY5000 7 SY7000 (B)

Т 5 1 3 (EA) (P) (EB)

1 For plug-in connector connecting base

For plug-in metal base

How to Order Blanking Plate Assembly

Option for mounting With mounting screw Nil (Round head combination screw) With mounting screw

(Hexagon socket head cap screw) Base type

S0700

S0700

SY


SJ

#### ■ Individual SUP spacer assembly

[With a connector gasket, a base gasket, and two mounting screws (3 pcs. for the SY7000)]

When the same manifold is used for different pressures, an individual SUP spacer assembly is used as a supply port for different pressures.

\*: When selecting a One-touch fitting elbow type for a spacer assembly, use it faced upward, since it interferes with A and B port piping in Type 50 and Type 10 manifolds.

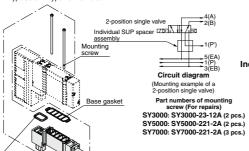


#### ■ Individual EXH spacer assembly

Connector gasket

[With a connector gasket, a base gasket, and two mounting screws (3 pcs. for the SY7000)]


When valve exhaust affects other stations due to the circuit configuration, this spacer assembly is used for individual valve exhaust.

\*: When selecting a One-touch fitting elbow type for a spacer assembly, use it faced upward, since it interferes with A and B port piping in Type 50 and Type 10 manifolds.

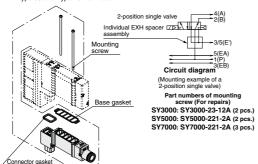

#### How to Order Individual SUP/EXH Spacer Assembly

2

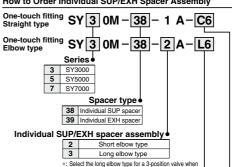

using Type 11 and Type 12 downward, However, Type 11 of the SY3000 series for the mixed mounting of connector connecting bases cannot be used downward.

#### Port size (Metric/One-touch fittings)

Symbol	P, E port	SY3000	SY5000	SY7000
L4	ø4	•	•	_
L6	ø6	•	•	•
L8	ø8	_	•	•
L10	ø10	_	_	•
L12	ø12			•

Port size (Inch/One-touch fittings)

Symbol	P, E port	SY3000	SY5000	SY7000
LN3	ø5/32"	•	_	_
LN7	ø1/4"	•	•	_
LN9	ø5/16"	_	•	_
LN11	ø3/8"	_	_	•

Port size (Metric/One-touch fitting

i ort size (metric/one-toderi rittings)							
Symbol	P, E port	SY3000	SY5000	SY7000			
C2	ø2	•	_	_			
C3	ø3	•	_	_			
C4 C6	ø4	•	•	_			
C6	ø6	•	•	•			
C8	ø8	_	•	•			
C10	ø10	_	_	•			
C12	ø12	_	-	•			

Port size (Inch/One-touch fittings)

	1 011 0120	(	ic todoii	munge,
Symbol	P, E port	SY3000	SY5000	SY7000
N1	ø1/8"	•	_	_
N3	ø5/32"	•	•	_
N7	ø1/4"	•	•	•
N9	ø5/16"	_	•	•
N11	ø3/8"	_	_	•

\*: When using in combination with the SY<sup>5</sup>730<sup>0</sup>1□-□1-E (With residual pressure release valve), the length of the required mounting screws will differ. Please contact SMC for details

#### ↑ Caution

Tightening torque for mounting screv M2: 0.16 N·m (SY3000) M3: 0.8 N·m (SY5000/7000)

#### **Manifold Options**


\*: Refer to pages 383 to 388 for dimensions.

#### ■ SUP stop valve spacer assembly with residual pressure release valve [With a connector gasket, a base gasket, and two mounting

screws (3 pcs. for the SY7000)]

It is used to shut off the supply air to valves individually.

\*: Cannot be selected when the elbows are facing upward in A and B ports in Type 10 manifolds, since they will interfere with

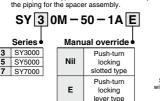



Circuit diagram (Mounting example of a 2-position single valve)

[How to mount SUP stop valve spacer assembly with residual pressure release valve] Insert the SUP stop valve mounting screw from the side of the spacer assembly, and mount it to the manifold.

Tighten the SUP stop valve mounting screw to the specified tightening torque Mount the valve and tighten the valve mounting screws to the specified tightening torque after mounting the SUP stop valve spacer assembly with residual pressure exhaust valve


- \*: Install the plate type nut to the spacer assembly as shown in the figure if it comes off. The SUP stop valve mounting screws can be tightened with a hexagon wrench without removing the plate type nut.
- \*: When the elbows are facing upward in A and B ports in Type 10 manifolds, they will interfere with the piping for the spacer assembly. Therefore, combine the A and B ports with straight types or elbows facing downward.
- \*: This product is only for internal pilot specifications, as the external pilot air cannot be shut off.
- \*: If the product is equipped with a 3-position closed center, residual pressure cannot be released, so use in combination with a 3-port valve, which can be connected to the A, B piping port.

\*: For lever type When locking the lever type manual override, push the lever down in the PUSH position with your fingers until it stops, then turn the lever 90° clockwise. (PUSH → LOCK) Turning the lever without pushing it down until it stops can cause damage to the manual override and other problems such as air leakages. To unlock the manual override, Base gasket turn the lever counterclockwise. Mounting screw (LOCK → PUSH) Connector ga Part numbers of mounting screw (For repairs) SY3000: SY30M-56-1A (2 pcs.) SY5000: SY50M-56-1A (2 pcs.) SY7000: SY70M-56-1A (3 pcs.) Valve mounting screw (See page 367.) Tightening torque: SY3000 series: 0.16 N·m SY5000/7000 series: 0.8 N·m For Hexagon socket head cap screws Nominal wrench size: SY3000 series: 1.5 SY5000/7000 series: 2.5 SUP stop valve spacer assembly with residual pressure Plate type nut SY30M-57-1A (10 pcs. included) exagon wrench SY5000/7000 series: Nominal wrench size: SY50M-57-1A (10 pcs. included) SY3000 series: 1.3 SY5000/7000 series: 2 SUP stop valve mounting scre Tightening torque SY3000 series: 0.16 N·m

#### <Example>


SY5000/7000 series: 0.8 N·m

#### Double check spacer assembly with residual pressure release valve

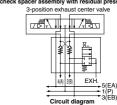

(Intermediate stop: When 3-position exhaust center valve is mounted)

### Double check spacer assembly with residual pressure release valve

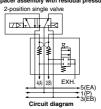

(Drop prevention: When 2-position single valve is mounted)

Specifications					
Max. operating p	1.0 MPa				
Min. operating p	0.1 MPa				
Ambient and fluid ter	Ambient and fluid temperatures				
Flow rate	SY3000	0.3 dm3/(s-bar)			
characteristics C	SY5000	0.7 dm3/(s-bar)			
characteristics: C	SY7000	1.1 dm3/(s-bar)			
Max. operating frequency		3 Hz			

## ■ Double check spacer assembly with residual pressure release valve (Side/Bottom ported)

[With a connector gasket, a base gasket, and two mounting screws (3 pcs. for the SY7000)] It is used to hold the intermediate position of the cylinder for a long period of time. Use a 3-position exhaust center valve when the double check spacer assembly with residual exhaust valve is used.

It can also be used for drop prevention at the cylinder stroke end when supply residual pressure is released by using a 2-position single/double valve. Operating pressure range: 0.1 to 1.0 MPa

Part no.

Series

\*: When the elbows are facing upward in A and B ports in Type 10 manifolds, they will interfere with the piping for the spacer assembly. Therefore, combine the A and B ports with straight types or elbows facing downward.

L	513000	SY30M-60-1A		A C b l b
	SY5000	SY50M-60-1A		Applicable val
	SY7000	SY70M-60-1A	ľ	
	Ministra American		cre	Part in SY3 SY5 SY7
_	Connector gas	ket Ket	>	) <b>?</b> ]

	Intermediate stop	Drop prevention
pplicable valve	SY 5 40 1	SY <sup>3</sup> <sub>7</sub> 1 0 0

3000: SY3000-23-27A (2 pcs.) 5000: SY5000-221-4A (2 pcs.) 7000: SY7000-221-4A (3 pcs.)

#### **⚠** Caution

- · Air leakage from the pipe between the valve and cylinder or from the fittings will prevent the cylinder from stopping for a long period of time. Check the leakage using neutral household detergent, such as dish washing soap. Also, check the cylinder's tube gasket, piston packing and rod packing for air leakage.
- · Combining with 3-position closed center or pressure center valve will not work
- If the exhaust of the double check spacer is restricted too much, the cylinder may not operate properly and may not stop intermediately.
- · Set the cylinder load so that the cylinder pressure will be within two times that of the supply pressure.
- If using a double check spacer that is built in to the sub-plate, refer to page 158.

## Manifold Options **SY3000/5000/7000** Series

#### **∕** Caution

Tightening torque for mounting screv M2: 0.16 N·m (SY3000) M3: 0.8 N·m (SY5000/7000)

SJ

SY

S0700

S0700


#### **Manifold Options**

\*: Refer to pages 384, 386, 388 for dimensions.

#### ■ Interface regulator

[With a connector gasket, a base gasket, and two mounting screws (3 pcs. for the SY7000)] Used when the supply pressure for each valve on the same manifold must be individually set (reduced pressure).

#### How to Order

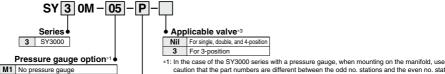

- caution that the part numbers are different between the odd no. stations and the even no. stations to prevent the pressure gauges from interfering with each other. If using a connector connecting base M10/11/12 (mixed mounting type) or laminating two or more types of spacer type manifold options for the neighboring stations, you can use only the model
- without a pressure gauge (M1). \*2: As per the new Measurement Law, gauges with a psi display will only be sold to overseas customers.
- \*3: In the case of the SY3000 series, use caution that the part numbers will differ depending on the one for single/double and 4- and 3-position due to the different length of solenoid valves. Also, if you have selected a model with a pressure gauge, and if at least the one for 3-position is included in the same manifold, use all the ones for 3-position to prevent the pressure gauges from interfering with each other

### Pressure gauge option

SY 5 0M - 00 - P

Pressure gauge with MPa display (For odd number station)

06 Pressure gauge with MPa display (For even number station)

N5 Pressure gauge with psi display (For odd number station)\*2

N6 Pressure gauge with psi display (For even number station) 12

Series


SY5000 5 SY7000

M1	No pressure gauge
00	Pressure gauge with MPa display
N0	Pressure gauge with psi display*2

Regulating port

P 1(P) port 4(A) port (P controlled type, A port regulation A1 B1 2(B) port (P controlled type, B port regulation) Part numbers of mounting screw (For repairs) SY3000: SY3000-23-12A (2 pcs.)

SY5000: SY5000-221-6A (2 pcs.) SY7000: SY7000-221-6A (3 pcs.)

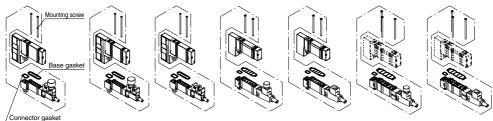

SY30M-05/N5-(With pressure gauge/ For odd number station) For even number station)

SY30M-06/N6-(With pressure gauge/

SY30M-M1-SY50M-00/N0-(Without pressure gauge) (With pressure gauge) (Without pressure gauge)

SY50M-M1-


SY70M-00/N0-

SY70M-M1-(With pressure gauge) (Without pressure gauge)

#### Specifications

Interface regulator model		SY30M-□-□-□	SY30M-□-□-□ SY50M-□-□				
Applicable val	Applicable valve model*1		SY5□30(R)	SY7□30(R)			
Regulating por	rt		1(P), 4(A), 2(B)				
Set pressure r	ange	0.1 to 0.7 MPa					
Maximum oper	Maximum operating pressure		1.0 MPa				
Fluid	Fluid		Air				
Ambient and fluid temperature		-10 to 50°C (No freezing)					
Weight [g]*2	With pressure gauge	33(35)*3	75	93			
weight [g] -	Without pressure gauge	27(29)*3	69	87			

- \*1: 3-position closed center and pressure center, and 4-position dual 3-port valves are only available for 1(P) port pressure regulation.
- 2: Gasket and mounting screws are included in the weight.
- \*3: ( ): Denotes the values of SY30M-□-□-3.
- \*: Always apply pressure from 1(P) port in the base for interface regulator.
- When using in combination with the SY<sub>7</sub><sup>5</sup>30<sub>1</sub><sup>0</sup>□-□1-E (With residual pressure release valve), the length of the required mounting screws will differ. Please contact SMC for details.

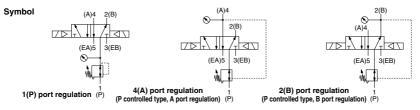

#### Caution

Tightening torque for mounting screw M2: 0.16 N·m (SY3000) M3: 0.8 N·m (SY5000/7000)

### **Spacer Combinations and Screw List** ①

Cor	mbination			000 (M2)	② SY5000 (M3)		③ SY7000 (M3)	
			Round head combination screw	Hexagon socket head cap screw	Round head combination screw	Hexagon socket head cap screw	Round head combination screw	Hexagon socket head cap screw
	Round head combination screws <ul> <li>SY3000-23-24A</li> <li>SY5000-221-1A</li> <li>SY7000-221-1A</li> </ul>	Valve	<b>SY3000-</b> <b>23-24A</b> [for 10 valves (20 pcs.)]	SY3000- 222-1A [for 10 valves (20 pcs.)]	SY5000- 221-1A [for 10 valves (20 pcs.)]	SY5000- 222-1A [for 10 valves (20 pcs.)]	<b>SY7000-</b> <b>221-1A</b> [for 10 valves (30 pcs.)]	<b>SY7000-</b> <b>222-1A</b> [for 10 valves (30 pcs.)]
A	Heragon societ head cap screip  ①: SY3000-222-1A  ②: SY5000-222-1A  ③: SY7000-221-1A  ①: SY30M-56-2A  ②: SY50M-56-2A  ②: SY70M-56-2A	SUP stop valve spacer assembly with residual pressure release valve Individual SUP (EXH) spacer assembly		1-56-2A ocs.)		I-56-2A		I-56-2A cs.)
		Double check spacer assembly with residual pressure release valve  Individual SUP (EXH) spacer assembly	SY3000- 23-33A (2 pcs.)	_	SY5000- 221-5A (2 pcs.)	_	SY7000- 221-5A (3 pcs.)	_
	A A CRound head combination screw> ①: SY3000-23-32A ②: SY5000-221-3A ③: SY7000-221-3A B	Valve  Individual SUP (EXH) spacer assembly  Individual EXH (SUP) spacer assembly	SY3000- 23-32A (2 pcs.)	_	SY5000- 221-3A (2 pcs.)	_	SY7000- 221-3A (3 pcs.)	_
	' <round combination="" head="" screw=""> ①: SY3000-23-24A</round>	Valve	<b>SY3000-</b> <b>23-24A</b> [for 10 valves (20 pcs.)]	<b>SY3000- 222-1A</b> [for 10 valves (20 pcs.)]	<b>SY5000-</b> <b>221-1A</b> [for 10 valves (20 pcs.)]	<b>SY5000- 222-1A</b> [for 10 valves (20 pcs.)]	<b>SY7000- 221-1A</b> [for 10 valves (30 pcs.)]	<b>SY7000- 222-1A</b> [for 10 valves (30 pcs.)]
	②: SY5000-221-1A ③: SY7000-221-1A Heagon solder head rap soreno- ①: SY3000-222-1A ②: SY5000-222-1A ③: SY7000-222-1A ①: SY30M-56-4A ②: SY50M-56-4A	SUP stop valve spacer assembly with residual pressure release valve Individual SUP (EXH) spacer assembly Individual EXH (SUP)		<b>1-56-4A</b> ccs.)		<b>I-56-4A</b> pcs.)	<b>SY70M</b> (3 p	I-56-4A ccs.)
		EXH (SUP) spacer assembly						

<sup>\*:</sup> Mounting onto a manifold follows the order explained above.

\*: The fitting for individual SUP/EXH spacers comes in a straight type only, since an elbow type would interfere with each spacer assembly when laminated.

## Manifold Options **SY3000/5000/7000 Series**

#### Caution

Tightening torque for mounting screw
M2: 0.16 N·m (SY3000)
M3: 0.8 N·m (SY5000/7000)

SJ

S0700 S0700

## **Spacer Combinations and Screw List** ②

Combination		① SY30	000 (M2)	② SY50	000 (M3)	3 SY70	00 (M3)
Combination	_	Round head combination screw	Hexagon socket head cap screw	Round head combination screw	Hexagon socket head cap screw	Round head combination screw	Hexagon socket head cap screw
(Round head combination screw) (1): SY3000-23-24A (2): SY5000-221-1A (3): SY7000-221-1A	A Valve	<b>SY3000-</b> <b>23-24A</b> [for 10 valves (20 pcs.)]	SY3000- 222-1A [for 10 valves (20 pcs.)]	<b>SY5000-</b> <b>221-1A</b> [for 10 valves (20 pcs.)]	SY5000- 222-1A [for 10 valves (20 pcs.)]	SY7000- 221-1A [for 10 valves (30 pcs.)]	<b>SY7000- 222-1A</b> [for 10 valves (30 pcs.)]
deagon soder head on soreno- (): SY3000-222-1A (): SY7000-222-1A (): SY7000-222-1A (): SY30M-56-3A (2: SY50M-56-3A (3: SY70M-56-3A	SUP stop valve spacer assembly with residual pressure release valve  Double check spacer assembly with residual pressure release valve		<b>1-56-3A</b> ocs.)		I-56-3A locs.)	<b>SY70M</b> (3 p	
(-Round head combination soreu- (1): SY3000-23-24A (2): SY5000-221-1A	A Valve	<b>SY3000-</b> <b>23-24A</b> [for 10 valves (20 pcs.)]	SY3000- 222-1A [for 10 valves (20 pcs.)]	<b>SY5000- 221-1A</b> [for 10 valves (20 pcs.)]	SY5000- 222-1A [for 10 valves (20 pcs.)]	<b>SY7000- 221-1A</b> [for 10 valves (30 pcs.)]	<b>SY7000- 222-1A</b> [for 10 valves (30 pcs.)]
3: SY7000-221-1A driesagon societ head cap surerio ): SY7000-222-1A 2: SY5000-222-1A (3: SY7000-222-1A	SUP stop valve spacer assembly with residual pressure release valve						
①: SY30M-56-5A ②: SY50M-56-5A ③: SY70M-56-5A	Double check spacer assembly with residual pressure release valve	<b>SY30M-56-5A</b> (2 pcs.)		<b>SY50M-56-5A</b> (2 pcs.)		<b>SY70M-56-5A</b> (3 pcs.)	
<u>1881</u>	Individual EXH (SUP) spacer assembly						
Round head combination screw-	A Valve						
2: SY5000-221-7A 3: SY7000-221-7A	Interface regulator	SY3000- 23-32A (2 pcs.)	_	SY5000- 221-7A (2 pcs.)	_	SY7000- 221-7A (3 pcs.)	_
<b>CH-</b>	Individual SUP (EXH) spacer assembly						

<sup>\*:</sup> Mounting onto a manifold follows the order explained above.



<sup>\*:</sup> The fitting for individual SUP/EXH spacers comes in a straight type only, since an elbow type would interfere with each spacer assembly when laminated.

<sup>\*:</sup> When laminating an interface regulator with other options, only the combinations in the table above are possible.

#### **↑** Caution

Tightening torque for mounting scree M2: 0.16 N·m (SY3000) M3: 0.8 N·m (SY5000/7000)

#### Manifold Options

\*: Refer to pages 384, 386, 388 for dimensions.

Series •

#### ■ Individual SUP block assembly

On the circuit of the plug-in connector connection base, an individual SUP block assembly can be used to supply air to a series of valves if a separate air supply is required, or if addition air is required for additional air flow.

Individual SUP block assembly occupies 1 station.

Blocking disks also supplied (2 pieces). Can be used to block both sides of the number of stations being isolated for individual air supply (as shown in example)

- \*: Specify the mounting position of the block as well as the position where the SUP passage is to be blocked on the manifold specification sheet. Blocking is required for 1 or 2 positions for 1 set. (2 SUP blocking disks to block SUP is attached to individual SUP block.)
- \*: Electrical wiring is connected to a number of stations in the individual SLIP block manifold
- \*: When used in M10/11/12 (mixed mounting type), select the SY50M type for SS5Y5 and the SY70M type for SS5Y7.
- \*: A structure to prevent screws falling out is in place on the individual SUP block, making it much harder for the mounting screws to fall out.

#### ■ Individual EXH block assembly

On the circuit of the plug-in connector connection base, individual EXH block assembly can be used to individually exhaust series of valves when the exhaust from the valves would affect a number of other stations


Individual EXH block assembly occupies 1 station.

Blocking disks also supplied (4 pieces). Can be used to block both sides of the number of stations being isolated for individual exhaust. (as shown in example).


- \*: Specify the mounting position of the block as well as the position where the EXH passage is to be blocked on the manifold specification sheet. Blocking is required for 1 or 2 positions for 1 set. (2 sets of EXH blocking disks (4 pcs.) to block EXH is attached to individual EXH block.)
- \*: Electrical wiring is connected to a number of stations in the individual EXH block manifold
- \*: When used in M10/11/12 (mixed mounting type), select the SY50M type for SS5Y5 and the SY70M type for SS5Y7.
- \*: A structure to prevent screws falling out is in place on the individual EXH block, making it much harder for the mounting screws to fall out.

# Mounting screen SUP blocking disk assembly



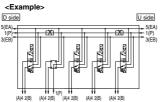

#### How to Order Individual SUP/EXH Block Assembly

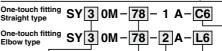

SY3000 SY5000 Block type SY7000 78 Individual SUP block 79 Individual EXH block

#### Individual SUP/EXH block assembly Short elbow type (Type 12) 3 Long elbow type (Type 11)

\*: Long elbow type is for the SY5000/7000 only.

Port size (Metric/One-touch fittings)

Symbol	P, E port	SY3000	SY5000	SY7000
L4	ø4	•	•	_
L6	ø6	•	•	•
L8	ø8	_	•	•
L10	ø10	_	_	•
L12	ø12	_	_	•

#### Port size (Inch/One-touch fittings)

Symbol	P, E port	SY3000	SY5000	SY7000
LN3	ø5/32"	•	_	_
LN7	ø1/4"	•	•	_
LN9	ø5/16"	_	•	_
LN11	ø3/8"	_	_	•


Port size (Metric/One-touch fittings


Fort Size (Wethic/One-touch littings)						
Symbol	P, E port	SY3000	SY5000	SY7000		
C2	ø2	•	_	_		
C3	ø3	•	_	_		
C4	ø4	•	•	_		
C6	ø6	•	•	•		
C8	ø8	_	•	•		
C10	ø10	_	_	•		
C12	ø12	_	_	•		

Port size (Inch/One-touch fittings						
Symbol	P, E port	SY3000	SY5000	SY7000		
N1	ø1/8"	•	_	_		
N3	ø5/32"	•	•	_		
N7	ø1/4"	•	•	•		
NIO	-/		_	_		

N11

ø3/8

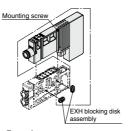

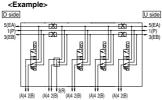

# Manifold Options SY3000/5000/7000 Series

### **Manifold Options**

# ■ SUP/EXH blocking disk assembly (for connector type manifold, Type 10, 11, 12) [SUP blocking disk]

By inserting the SUP blocking disk in the pressure supply passage of the manifold valve, can provide two different high and low pressure in one manifold.

### [EXH blocking disk]

By inserting the EXH blocking disk in the exhaust passage of the manifold valve, can separate the exhaust from the valve so it does not affect the other valves. It can also be used for the manifold for the positive pressure and vacuum mixed manifold. (2 pcs. are required to block FA/EB both sides of the EXH.)



Series	SUP blocking disk assembly	EXH blocking disk assembly
SY3000	SY30M-40-1A	SY30M-40-2A
SY5000	SY50M-40-1A	SY50M-40-1A
SY7000	SY70M-40-1A	SY70M-40-1A

SJ

SY

S0700 S0700

### ■ Label for blocking disk

Label to indicate and confirm on the manifold where the SUP/EXH blocking disk assemblies were inserted. (3 sheets each)

SUP/EXH blocking disk label




•	disk	label	
7	71	11	h
/	3/	15	
=			

SUP blocking





If the blocking disk assembly is ordered using the manifold specification sheet and ordered at the same time as the manifold, the position where the blocking disk assembly is inserted will be labeled and shipped out.

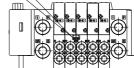

Series	Part no.
SY3000	
SY5000	SJ3000-155-1A
SY7000	

### ■ Back pressure check valve assembly (Retrofit or pre-installed type)

It prevents cylinder malfunction caused by other valve exhaust entry. Insert it into EA/EB port (valve mounting side) on the manifold side of a valve which is affected. It is effective when a single-acting cylinder is used.

- \*: When ordering assemblies incorporated with a manifold, refer to the Ordering Example below (when installed in all stations.)
- When a check valve for back pressure prevention is desired and is to be installed only in certain manifold stations, clearly indicate the part number and specify the mounting position on the manifold specification sheet.

### <Pre><Pre>cautions>

- 1. The manifold installed type back pressure check valve assembly is assembly parts with a check valve structure. However, since slight air leakage against the back pressure is allowed due to its structure, adverse effects of the back pressure due to increase in exhaust resistance cannot be prevented if the manifold exhaust port and other exhaust ports are put together for piping or if the piping diameter is narrowed. As a result, this may cause the actuator and air operated equipment to malfunction. So, be careful not to restrict the exhaust air. If the exhaust resistance becomes large, select a built-in valve type with rubber seal.
- When the back pressure check valve assembly is mounted, please contact SMC for valve flow rate characteristics.


### Ordering Example

SS5Y3-10F1-05B-C6....-1 set (Type 10 5-station manifold base part no.)

\*SY3201-5U1......5 sets (2-position double part no.)

\*SY30M-24-1A.....5 sets (Back pressure check valve assembly part no.)

The asterisk denotes the symbol for assembly.

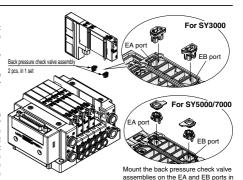

e order snown in the ligure above.				
	Series	Part no.		
	SY3000	SY30M-24-1A		
	SY5000	SY50M-24-1A		
	SY7000	SY70M-24-1A		




### **Manifold Options**

### ■ Dual flow fitting (for connector connecting base, Type 10, side ported)

This is a fitting for cylinder ports which enables simultaneous actuation and increase in flow rate of valves for 2 stations.

\*: When ordering assemblies incorporated into a manifold, refer to the Ordering Example below and specify on the manifold specification sheet.

### How to Order Dual Flow Fitting

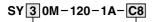

### Series SY3000 SY5000

5

A, B port size (One-touch fittings)

Symbol	A, B p	ort	SY3000	SY5000
C8	Metric size	ø8	•	_
C10	WIEUTC SIZE	ø10	_	•
N9	Inch size	ø5/16"	•	_
N11	IIICII SIZE	ø3/8"	_	•


Ordering Example SS5Y3-10F1-08B-CM \*SY3100-5U1


\*SY30M-120-1A-C8

The asterisk denotes the symbol for assembly.





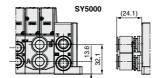

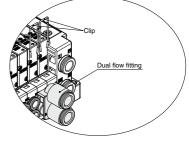

- \*: Specifically for side porting for a connector connecting base. Cannot be attached to bottom or top ported, or mixed mounting types that are metal or connector connecting bases.
- \*: When adding or changing clips, push them into the very end of the manifold for each station. Also, make sure to use the clip that was packed together, as the clip and the fitting for one station differ among products that can be used with the SY5000.
- \*: Not available for the SY7000 series.
- \*: SY3000

Not available when the following options are selected


- · SUP stop valve spacer assembly with residual pressure release valve
- · Double check spacer assembly with residual pressure release valve
- Interface regulator

### ■ Silencer

# (One-touch fitting connection type)

This silencer can be mounted to the 3/5 (E: EXH) port of the manifold in one step.


\*: Shipped together with the product.

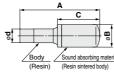

Series	Model	Effective area	Α	В	С
For SY3000 (ø8)	AN15-C08	20 mm <sup>2</sup>	45	13	20
For SY5000 (ø10)	AN20-C10	30 mm <sup>2</sup>	57.5	16.5	30.5
For SY7000 (ø12)	AN30-C12	41 mm <sup>2</sup>	71.5	20	43.5

### ■ Plug

These are inserted in unused cylinder ports and P, E ports.

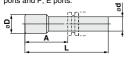

\*: Shipped together with the product.

### Dimensions

Applicable fitting size ød (Metric size)	Model	A	L	ø <b>D</b>
2	KJP-02	8.2	17	3
3.2	KQ2P-23	16	31.5	5
4	KQ2P-04	16	32	6
6	KQ2P-06	18	35	8
8	KQ2P-08	20.5	39	10
10	KQ2P-10	22	43	12
12	KQ2P-12	24	45.5	14

Applicable fitting size ød (Inch size)	Model	Α	L	øD
1/8"	KQ2P-01	16	31.5	5
5/32"	KQ2P-03	16	32	6
1/4"	KQ2P-07	18	35	8.5
5/16"	KQ2P-09	20.5	39	10
3/8"	KQ2P-11	22	43	11.5
1/2"	KQ2P-13	24	46	15

# Manifold Options **SY3000/5000/7000 Series**

### **Manifold Options**

A transparent plastic plate to put a label with the name of the function of the solenoid valve.

### ■ Name plate (For connector connecting base)

SY3000: For SS5Y3-10 (Side ported)

SY5000: For SS5Y5-10/11 (Side/Bottom ported) SY7000: For SS5Y7-(M)10/11 (Side/Bottom ported)

Name plate bracket assembly and name plate mounting instructions Insert it into the groove on the name plate bracket onto which a SUP/EXH (end) block is mounted, as shown in Figure 2.

\*: When ordering assemblies incorporated with a manifold, refer to the Ordering Example below.

SS5Y3-10	
SS5Y5-10	
SS5Y7-(M)10	
! !	


Mounting and Option	d
---------------------	---


			Mountin	g option		
Symbol	Prin	iting		DIN rail		Direct
	Yes	No	With	Without	Specified length	mounting
AA	•	_	_	_	-	•
Α	•	_	•	_	_	_
A0	•	_	_	•	_	
A3	•	_	_	_	For 3 stations	_
:	- :					_
A24	•	_	_	_	For 24 stations	
BA	_	•	_	_	_	•
В	_	•	•	_	_	_
B0	_	•	_	•	_	
В3	_	•	_	_	For 3 stations	_
- :	:	:		:	:	_
B24	_	•	_	_	For 24 stations	_


┌ Ordering Example ───
SS5Y3-10F1-05UR-C6AA1 set
*SY3200R-5U15 sets
The asterisk denotes the symbol for assembly

- \*: Name plates cannot be mounted onto Type 12 (Top ported) and Type 10 (Side ported) mixed mounting types with top ported valves, nor onto manifolds with optional laminated spacers.
- \*: No name plate settings are available for the SY3000/SY5000 mixed mounting types. However, they are available for the SY5000/SY7000 mixed mounting types.

<SY5000/7000>

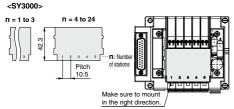

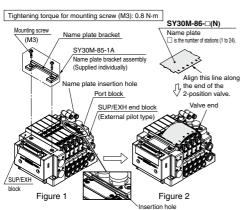

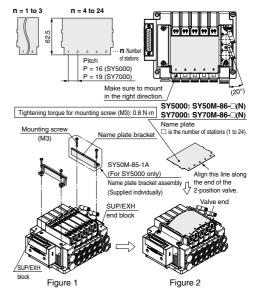

SJ

SY

S0700

S0700

### **Manifold Options**

A transparent plastic plate to put a label with the name of the function of the solenoid valve.

### ■ If adding a name plate

If adding a name plate to a manifold in use, order a name plate bracket assembly, in addition to ordering a name plate. Refer to the table below for the part number and the amount.

### Name plate part number

NA.	adal .	CCEVO 10	CCEVE 10/11	CCEV7 (M)10/11	Moto
Model		SS5Y3-10	35313-10/11	SS5Y7-(M)10/11	Note
Name	Printed	SY30M-86-□N	SY50M-86-□N	SY70M-86-□N	□:Number of stations
plate	No printing	SY30M-86-□	SY50M-86-□	SY70M-86-□	(1 to 24)

Name plate bracket assembly part number and number of items ordered

·				
Mode		SS5Y3-10	SS5Y5-10/11	
Name plate assemb	ly part number	SY30M-85-1A	SY50M-85-1A	
Manifold SUP/EXH	Internal pilot U/D piping	2 pcs.	- 2 pcs.	
block assembly	Internal pilot double sided piping	2 pcs.		
Pilot type and	External pilot U/D piping	1 pc.*1		
P, E port entry	External pilot double sided piping	Not required*1		

<sup>\*1:</sup> If the manifold is an external pilot, an insertion slot for name plates is on the port block of the SUP/EXH block assembly. Thus, a bracket assembly is no longer required on the port piping side.

### 

- Be sure to shut off the power and air supplies before mounting the name plate bracket assembly. Furthermore, since air may remain inside the actuator, piping and manifold, confirm that the air is completely exhausted before performing any work.
- When disassembly and assembly are performed, air leakage may result if the tightening of the bracket mounting screws is inadequate.



<sup>\*:</sup> Name plate bracket assembly is not required for the SY7000.

# Manifold Options SY3000/5000/7000 Series

### **Dimensions: Manifold Options/SY3000 Series**

### ■ Blanking plate assembly











<Type 50, 51, 52>

<Type 10, 12>

# ■Individual SUP/EXH spacer assembly (Top/Bottom ported)

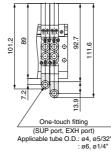

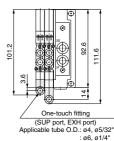


SJ


SY


**SY** S0700 S0700




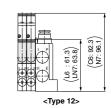


# ■Individual SUP/EXH spacer assembly (Side ported)

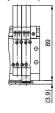


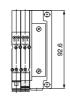


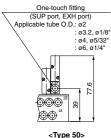

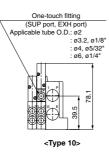

■SUP stop valve spacer assembly with residual pressure release valve

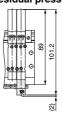

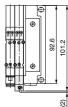






<Type 50, 51, 52>

<Type 10, 12>

<sup>\*:</sup> The dimensions within ( ) applies to the SY30-50-1AE.

### **Dimensions: Manifold Options/SY3000 Series**

■ Double check spacer assembly with residual pressure release valve

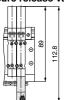








<Type 50, 51>

<Type 10>


### ■ Individual SUP/EXH block assembly (Top ported)

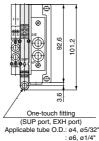



<Type 12>


### ■ Interface regulator

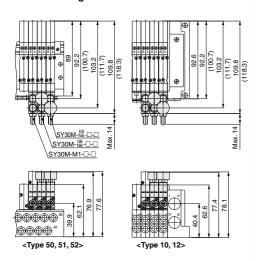

\*: The dimensions within ( ) applies to the SY30M-\(\subseteq -\subseteq -3.

### ■ Individual SUP/EXH block assembly (Side ported)



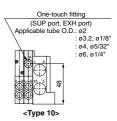


# Manifold Options SY3000/5000/7000 Series

### **Dimensions: Manifold Options/SY5000 Series**

### ■ Blanking plate assembly



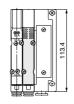







<Type 50, 51, 52>

<Type 10, 11, 12>


# ■Individual SUP/EXH spacer assembly (Top/Bottom ported)

: ø6, ø1/4"

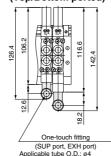

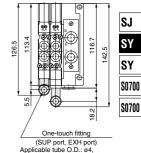



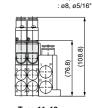



.. ø6. ø1/4"


<Type 51, 52>


<Type 11, 12>

# ■Individual SUP/EXH spacer assembly (Side ported)

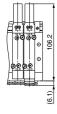

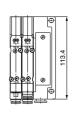


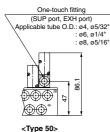


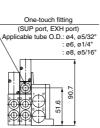

<Type 10>

■SUP stop valve spacer assembly with residual pressure release valve

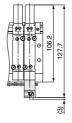

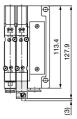






<Type 50, 51, 52>


<Type 10, 11, 12>

<sup>\*:</sup> The dimensions within ( ) applies to the SY50-50-1AE.

### **Dimensions: Manifold Options/SY5000 Series**

# ■ Double check spacer assembly with residual pressure release valve

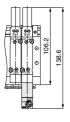


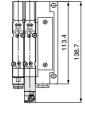





7 to 17 to 1<l

# ■ Individual SUP/EXH block assembly (Top ported)

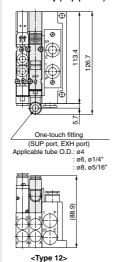



■ Individual SUP/EXH block assembly (Side ported)

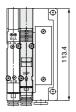


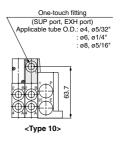


### ■Interface regulator

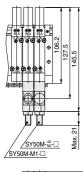

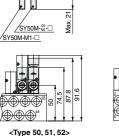


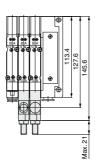


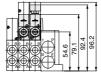

<Type 10, 11, 12>

# ■Individual SUP/EXH block assembly (Bottom ported)

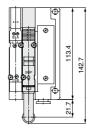


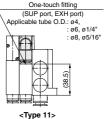


# Manifold Options **SY3000/5000/7000 Series**

### **Dimensions: Manifold Options/SY7000 Series**

### ■Blanking plate assembly

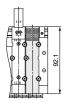

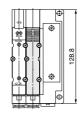








<Type 50, 51, 52>

<Type 10, 11, 12>


### ■Individual SUP/EXH spacer assembly (Side ported)

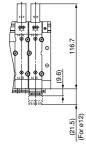


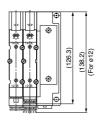


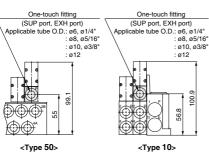

### ■ Individual SUP/EXH spacer assembly (Top/Bottom ported)

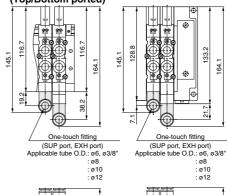

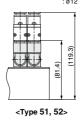

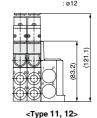



SJ

SY S0700

S0700

■ SUP stop valve spacer assembly with residual pressure release valve

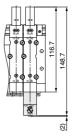

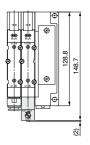






<Type 50, 51, 52>


<Type 10, 11, 12>


<sup>\*:</sup> The dimensions within ( ) applies to the SY70-50-1AE.

### **Dimensions: Manifold Options/SY7000 Series**

### ■ Double check spacer assembly with residual pressure release valve

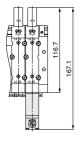

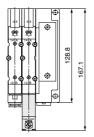


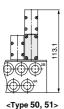




<Type 10, 11>

### ■ Individual SUP/EXH block assembly (Top ported)

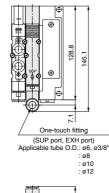

<Type 12>

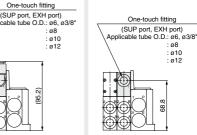

■ Individual SUP/EXH block


assembly (Side ported)


◈


<Type 10>


(138.2) (For ø12)

### ■Interface regulator

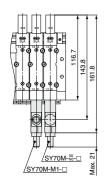


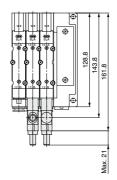


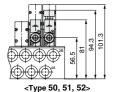

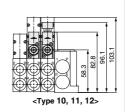

### ■ Individual SUP/EXH block assembly (Bottom ported)

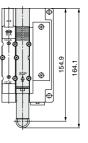

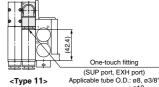

: ø10 : ø12



Be sure to read this before handling the products. Refer to back page 50 for Safety Instructions and pages 3 to 9 for 3/4/5 Port Solenoid Valve Precautions.

#### **Environment**

# **⚠** Warning

- Do not use valves in atmospheres of corrosive gases, chemicals, sea water, water, water vapor, or where there is direct contact with any of these.
- Products compliant with IP67 enclosures (based on IEC60529) are protected against dust and water, however, these products cannot be used in water. If using in an environment that is exposed to water and dust splashes, take measures such as using a protective cover.
- When using built-in silencer type manifold with an IP67 enclosure, keep the exhaust port of the silencer from coming in direct contact with water or other liquids.
- The metal seal valve is provided with a hole to discharge the pilot EXH. When using in atmospheres containing water and dust, mount it horizontally.

### **Valve Mounting**

# **⚠** Caution

Mount it so that there is no slippage or deformation in gaskets, and tighten with the tightening torque as shown below.

Series	Thread size	Tightening torque
SY3000	M2	0.16 N·m
SY5000/7000	M3	0.8 N·m
	•	

### **Manual Override**

# **⚠** Warning

Regardless of an electric signal for the valve, the manual override is used for switching the main valve. Connected actuator is started by manual operation. Use the manual override after confirming that there is no danger.

### ■ Non-locking push type

Push down on the manual override button until it stops.



### ■ Push-turn locking slotted type [Type D]

Push down on the manual override with a small flat head screwdriver until it stops, and then turn it 90° clockwise. The manual override is then locked. To release it, turn it counterclockwise.

If it is not turned, it can be operated the same way as the non-locking type.




SMC

#### Manual Override

# **⚠** Warning

### ■ Push-turn locking lever type [Type E]

Push down on the manual override by finger until it stops, and then turn it 60° clockwise. The manual override is then locked. To release it, turn it counterclockwise. If it is not turned, it can be operated the same way as the non-locking type.

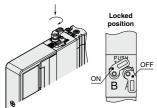

Carefully check the manual override projection amount.
Max. (at OFF): 3.7 mm


### **.**↑ Caution

Do not apply excessive torque when turning the manual override.  $[0.1\ N\cdot m]$ 

When looking the manual override, be sure to push it down before turning. Turning without first pushing it down can cause damage to the manual override and other trouble such as air leakage etc.

### ■ Slide locking type (Manual)

It is locked by sliding the manual override all the way in the direction indicated by the arrow (ON side) with a small flat head screwdriver or with your fingers. Slide it in the direction indicated by the arrow (OFF side) to release it.

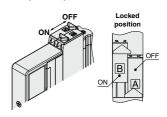

\$0700

S0700



Be sure to read this before handling the products. Refer to back page 50 for Safety Instructions and pages 3 to 9 for 3/4/5 Port Solenoid Valve Precautions.

#### **Back Pressure Check Valve**

### **⚠** Caution

- •There are two types of back pressure check valves; the one which is built into a valve (with rubber seal type only) and the one which is built in on the manifold side with connector connection. Both of them have a check valve built-in to prevent back pressure. For this reason, use caution that the valves with external pilot specification cannot be pressurized from exhaust port [3/5(E)]. As compared with the types which do not integrate the back pressure check valve, C value of the flow rate characteristics goes down. Please contact SMC for details.
- The manifold installed type back pressure check valve assembly is assembly parts with a check valve structure. However, since slight air leakage against the back pressure is allowed due to its structure, adverse effects of the back pressure due to increase in exhaust resistance cannot be prevented if the manifold exhaust port and other exhaust ports are put together for piping or if the piping diameter is narrowed. As a result, this may cause the actuator and air operated equipment to malfunction. So, be careful not to restrict the exhaust air. If the exhaust resistance becomes large, select a built-in valve type with rubber seal.
- Do not switch valves when A or B port is open to the atmosphere, or while the actuators and air operated equipment are in operation. For built-in valve type with rubber seal, the back pressure prevention seal may be peeled off, which may cause air leakage or malfunctions. Use caution especially when performing a trial operation or maintenance work.

#### **Exhaust Throttle**

### 

The SY series pilot valve and main valve share a common exhaust inside the valve. Therefore, do not block the exhaust port when arranging the piping.

### Used as a 3-Port Valve

### **⚠** Caution

### ■ In case of using a 5-port valve as a 3-port valve

The SY3000/5000/7000 series can be used as normally closed (N.C.) or normally open (N.O.) 3-port port valves by closing one of the cylinder ports 4(A) or 2(B) with a plug. However, they should be used with the exhaust ports kept open. They are convenient at times when a double solenoid type 3-port valve is required.

Plu	Plug position B port Type of actuation N.C.		A port
Type of actuation		N.C.	N.O.
solenoids	Single (A)4 2(B)  (EA)5 1 3(EB)  (EA)5 1 3(EB)		(A)4 2(B) (EA)5 1 3(EB)
Number of	Double	(A)4 2(B) (EA)5 1 3(EB) (P)	(A)4 2(B) (EA)5 1 3(EB)

### **Valve and Manifold Combination**

The SY series plug-in valve has the common configuration of the valve mounting surface between base mounted type  $(SY^{\frac{3}{5}} \square \square \square)$  and top ported type  $(SY^{\frac{3}{5}} \square \square \square)$  therefore, it can be mounted to all manifolds of the side ported type (Type 50 and Type 10), the bottom ported type (Type 51 and Type 11) and the top ported type (Type 52 and Type 12). For example, air output can be obtained from both sides of the A and B ports of the manifold and the valve by mounting a top ported valve to a side ported or bottom ported manifold, and a pressure switch can be connected to the output port on one side. However, when selecting valves and manifolds, note that when a base mounted valve is mounted to a top ported manifold, there will be no output from the A and B port.



Be sure to read this before handling the products. Refer to back page 50 for Safety Instructions and pages 3 to 9 for 3/4/5 Port Solenoid Valve Precautions.

### Light/Surge Voltage Suppressor

# **⚠** Caution


### ■ Polar type

### Positive common

# Single solenoid

Light/surge voltage suppressor (□Z) Polarity protection diode COM

Surge voltage suppressor (□S)

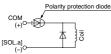

#### Positive common

### Double solenoid. 3-position, 4-position


Light/surge voltage suppressor (□Z) [SOL.b] LEC COM

Polarity protection diode Surge voltage suppressor (□S)



### Negative common Single solenoid

Light/surge voltage suppressor (□NZ) Polarity protection diode

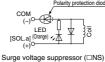



### Negative common

### Double solenoid. 3-position, 4-position

Light/surge voltage suppressor (□NZ)



Surge voltage suppressor (□NS) [SOL.b] 38 COM S

Polarity protection diode

### ■ Non-polar type

### With surge voltage suppressor (□R)

### Single solenoid



### Double solenoid



#### With light/surge voltage suppressor (□U)

### Single solenoid



### Double solenoid



### ■ With power saving circuit


Power consumption is decreased to approx. 1/3 compared with the standard product by reducing the wattage required to hold the valve in an energized state. (Effective energizing time is over 67 ms at 24 VDC.)

SJ

S0700


S0700

\*: Be careful of the energizing time, as quick response and high pressure types will become operational when the energizing time is over 40 ms.

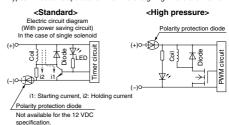

The above circuit reduces the power consumption for holding in order to save energy. Refer to the electrical power waveform as shown below

### <Electrical power waveform with power saving circuit>

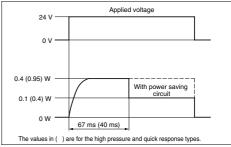

- The 12 VDC specification with power saving circuit (standard specification) does not have the polarity protection diode. Do not make a mistake with the polarity.
- · Since the voltage will drop by approx. 0.5 V due to the transistor, pay attention to the allowable voltage fluctuation. (For details, refer to the solenoid specifications of each type of valve.)

#### Residual voltage of the surge voltage suppressor

\*: If a varistor or diode surge voltage suppressor is used, there is some residual voltage to the protection element and rated voltage. Therefore, refer to the below table and pay attention to the surge voltage protection on the controller side. Also, since the response time does change, refer to the valve specifications on page 137.

### Residual Voltage

Surge voltage	DC					
suppressor	24 V 12 V					
S, Z	Approx. 1 V					
R, U	Approx. 47 V	Approx. 32 V				



Be sure to read this before handling the products. Refer to back page 50 for Safety Instructions and pages 3 to 9 for 3/4/5 Port Solenoid Valve Precautions.

### **Continuous Duty**

### **∕** Caution

If a valve is energized continuously for a long period of time, the rise in temperature due to heat-up of the coil assembly may cause a decline in solenoid valve performance, reduce service life, or have adverse effects on peripheral equipment. If the valve is energized continuously for a long period of time, be sure to use a valve with power saving circuit. In particular, if three or more adjacent stations on the manifold are energized simultaneously for extended periods of time or if the valves on A side and B side are energized simultaneously for a long period of time, take special care as the temperature rise will be greater.

### **UL** approved product

### **∧** Caution

When conformity to UL is required, the SI unit should be used with a UL1310 Class 2 power supply.

The SI unit is a UL approved product only if they have a cmark on the body.

### Countermeasure for Surge Voltage Intrusion

### ■ Sneak-in of surge voltage

With non-polar type valves, at times of sudden interruption of the loading power supply, such as emergency shutdown, surge voltage intrusion may be generated from loading equipment with a large capacity (power consumption), and the valve in a de-energized state may switch over (see Figure 1). When installing a breaker circuit for the loading power supply, consider using a valve with polarity (with polarity protection diode), or install a surge absorption diode between the loading equipment COM line and the output equipment COM line (see Figure 2).

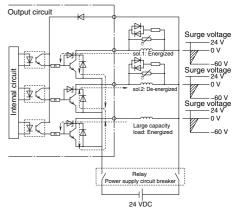


Figure 1. Surge intrusion circuit example (NPN outlet example) (24 VDC)

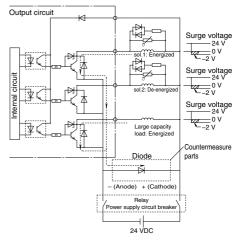


Figure 2. Surge intrusion circuit example (NPN outlet example) (24 VDC)






Be sure to read this before handling the products. Refer to back page 50 for Safety Instructions and pages 3 to 9 for 3/4/5 Port Solenoid Valve Precautions.

### **Light Indication**

When equipped with indicator light and surge voltage suppressor, the light window turns orange when solenoid a is energized, and it turns green when solenoid b is energized.

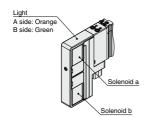


Type 5 (Metal Base) Type 1 (Connector Connecting Base) Changing Connector Entry Direction


### **⚠** Caution

Connector direction for electrical entry of D-sub connector <|P40>, flat ribbon cable and PC wiring can be changed. If the directional change is required, slide the lever on the side of the connector block to the FREE position, and then change the direction as shown in the figure. Also, before connecting the connector, be sure to return the lever to the LOCK position. (If the lever is difficult to slide, move the connector a little bit to make it easier to slide the lever.)

If an excessive force is applied on the connector in the LOCK position, the connector block may be damaged. Also, using in such a way that the connector floats in the FREE position, it may cause the lead wire etc., to break. Thus, refrain from using in these ways.

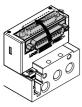

Type 5□ (Metal base)

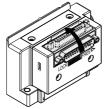


Type 1□ (Connector connecting base)

### How to Order Manifold

### **⚠** Caution

The letter "S\" is indicated on manifold blocks for the SY series Type 1□ (connector connecting base) as shown below. This indication refers to the type of substrate assembly (single wiring) inside the manifold blocks. When there is no symbol, double wiring is used.

When the manifold specification sheet does not include a wiring specification, all stations will be double wiring specification. In this case, single and double solenoid valves can be mounted in any position, but when a single valve is used, there will be an unused control signal. To avoid this, indicate positions of manifold blocks for single wiring specification and double wiring specification on a manifold specification sheet. (Note that double, 3-or 4-position valves cannot be used for manifolds blocks with single wiring specification [S].)

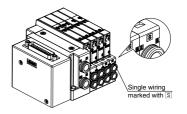

SJ

SY

S0700

S0700



Be sure to read this before handling the products. Refer to back page 50 for Safety Instructions and pages 3 to 9 for 3/4/5 Port Solenoid Valve Precautions.

#### Substrate Assemblies inside Manifolds

### 

Substrate assemblies inside of manifolds cannot be taken apart. Attempting to do so may damage parts.

### Fixation of DIN Rail Mounting Type Manifold

### **.** Caution

- 1. When the manifold is fixed with bolts on a mounting surface etc., it can be operated just by fixing on both ends of the DIN rail if the bottom surface of the DIN rail is entirely in contact with the mounting surface when mounted horizontally. However, if it is used with other mounting or with side or reverse mounting, fix the DIN rail with bolts at regular intervals. As a guide, insert bolts in 2 locations for 2-5 stations, 3 locations for 6-10 stations, 4 locations for 21-24 stations, 5 locations for 16-20 stations and 6 locations for 21-24 stations.
- 2. When using the manifold with DIN rail in an environment where any vibration or impact is applied to it, the DIN rail itself may be broken. In particular, if the installation surface vibrates when mounting the manifold on the wall or if a load is directly applied to the manifold, the DIN rail may be broken, causing the manifold to drop. When any vibration, impact, or load is applied to the manifold, be sure to use the direct mounting manifold.

Port Block Assembly and How to Change Piping Types between Top and Side

### **⚠** Caution


For top ported type, the port size of A and B ports can be changed by switching the port block assemblies which are mounted on the body. The piping method can also be changed by switching the top ported type port block assembly with the side ported type cover assembly. Also, it may cause air leakage if the mounting screws are not tightened securely enough when they are switched. Take care to tighten to the correct tightening torque.

Refer to page 144 for part numbers of port block assembly and body cover assembly for A, B port and page 370 for part numbers of port block assembly and body cover assembly for P, E port.

When switching them while valves are mounted on a manifold, remove the clip with a flat head screwdriver before switching the port plugs and the One-touch fittings. It may cause air leakage if the mounting screws are not tightened or the clip is not inserted securely enough when they are switched. Take care to tighten to the correct tightening torque.

### Tightening torque Mounting screw M2: 0.16 N·m (SY3000) M3: 0.8 N·m (SY5000/7000) Port block assembly Thread piping Refer to page 144 Mounting scre Port block assembly One-touch fitting Refer to page 144. Body cover assemble Part number is not shown on Refer to page 145 the body cover assembly.

### ■ How to change while mounted on a manifold

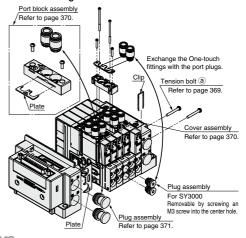



Be sure to read this before handling the products. Refer to back page 50 for Safety Instructions and pages 3 to 9 for 3/4/5 Port Solenoid Valve Precautions.


### **Changing One-touch Fittings**

### ∕**.**∖ Caution

By replacing One-touch fittings of valve or manifold base, it is possible to change the connection diameter of the 4(A), 2(B), 1(P), 3/5(E) ports.

When replacing the One-touch fittings, remove the clip or the plate and the plate mounting screws with a screwdriver before pulling the One-touch fittings off. Mount the One-touch fittings by following the removal procedure in reverse.

It may cause air leakage if the mounting screws are not tightened or the clip and the clip plate are not inserted securely enough when they are switched. Take care to tighten to the correct tightening torque. Refer to page 371 for part numbers of One-touch fittings for valve or manifold.

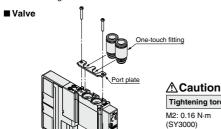


Tightening torque

(SY3000) M3: 0.8 N·m (SY5000/7000)

### ■ Plug-in metal base

•Side ported (Type 50)




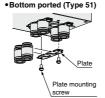

### Clip part no. (10 pcs. included)

Series	Part no.
SY3000	SY30M-19-2A
SY5000	SY50M-19-2A
SY7000	SY70M-19-2A

### ■ Plug-in connector connecting base Side ported (Type 10)

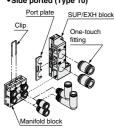

# Plate assembly part no.

(10 pcs. ilicidued)								
Series	Part no.							
SY3000	SY30M-10-3A							
SY5000	SY50M-10-6A							
SY7000	SY70M-10-7A							

\*: Including mounting screw

### Clip part no. (10 pcs. included)

Series	A, B port size	Part no.				
SY3000	_	SY30M-19-1A				
SY5000	_	SY50M-19-6A				
SY7000	_	SV3000-70-1A				
SY3000/5000 Mixed mounting type (For mounting	02, 03, 04 06, 01/8" 05/32", 01/4"	SY50M-19-1A				
the SY3000)*1	ø8, ø5/16'	SY50M-19-6A				


- \*1: The part number for mounting the SY5000 is SY50M-19-6A
- \*: The part number for the SY5000/7000 mixed mounting type is SV3000-70-1A.
- \*: If the port plate for the SUP/EXH block is required, please contact SMC.

### **Changing One-touch Fittings**

### **∕** Caution

### • Bottom ported (Type 11)

Secure enough space between the manifold blocks when the plate is detached and attached.

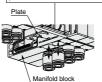

#### Plate part no. (10 pcs. included)

SJ

SY

S0700

S0700

Series	A, B port size	Part no.							
SY5000	_	SY50M-10-4A							
SY7000	_	SY70M-10-4A							
SY3000/5000 dixed mounting type For mounting	02, 03, 04 06, 01/8" 05/32", 01/4"	SY50M-10-5A							
he SY3000)*1	ø8, ø5/16"	SY50M-10-4A							
4. The most assessment of a second in a the									

- \*1: The part number for mounting the SY5000 is SY50M-10-4A
- \*: The part number for the SY5000/7000 mixed mounting type is SY70M-10-4A.

#### Other Tube Brands

### **⚠** Caution

1. When using other than SMC brand tube, confirm that the following specifications are satisfied with respect to the tube outside diameter tolerance.

1) Nylon tube within ±0.1 mm 2) Soft nylon tube within ±0.1 mm 3) Polyurethane tube within +0.15 mm

Do not use tube which do not meet these outside diameter tolerances. It may not be possible to connect them, or they may cause other trouble, such as air leakage or the tube pulling out after connection.

-0.2 mm

### **One-touch Fittings**

### ■ Tube attachment/detachment for One-touch fittings 1) Tube attachment

- 1. Take a tube having no flaws on its periphery and cut it off at a right angle. When cutting the tube, use tube cutters TK-1, 2 or 3. Do not use pinchers, nippers or scissors, etc. If cutting is done with tools other than tube cutters. the tube may be cut diagonally or become flattened, etc., making a secure installation impossible, and causing problems such as the tube pulling out after installation or
- air leakage. Allow some extra length in the tube. 2. Grasp the tube and push it in slowly, inserting it securely all the way into the fitting.
- 3. After inserting the tube, pull on it lightly to confirm that it will not come out. If it is not installed securely all the way into the fitting, this can cause problems such as air leakage or the tube pulling out.

### 2) Tube detachment

- 1. Push in the release button sufficiently, pushing its collar equally around the circumference.
- 2. Pull out the tube while holding down the release button so that it does not come out. If the release button is not pressed down sufficiently, there will be increased bite on the tube and it will become more difficult to pull it out.
- 3. When the removed tube is to be used again, cut off the portion which has been chewed before reusing it. If the chewed portion of the tube is used as is, this can cause trouble such as air leakage or difficulty in removing the tuhe





Be sure to read this before handling the products. Refer to back page 50 for Safety Instructions and pages 3 to 9 for 3/4/5 Port Solenoid Valve Precautions.

### **One-touch Fittings**

# **.**⚠Caution

When fittings are used, they may interfere with one another depending on their types and sizes. Therefore, the dimensions of the fittings to be used should first be confirmed in their respective catalogs.

Fittings whose compliance with the SY series is already confirmed are stated below. If the fitting within the applicable range is selected, there will not be any interference.

### Applicable Fittings: KQ2H, KQ2S Series

Series	Model	Dining port	Port	Piping port Port		ort Port Applicable tube O.E		e O.D.			
Series	iviodei	Piping port	size	rillings	ø <b>2</b>	ø <b>3.2</b>	ø4	ø <b>6</b>	ø <b>8</b>	ø <b>10</b>	ø <b>12</b>
	CV2D20 DD ME	44 OB	N 4 5	KQ2H							
	SY3□30-□□-M5	4A, 2B	M5	KQ2S							
		1P, 5EA, 3EB	1/8	KQ2H							
		IP, SEA, SEB	1/8	KQ2S							
SY3000		X, PE	M5	KQ2H							
313000	SS5Y3-50/51/52 (R)			KQ2S							
	Manifold base		1/8	KQ2H							
		4A, 2B		KQ2S							
		4A, 2B	M5	KQ2H							
			CIVI	KQ2S							

Series	Model	Piping port	Port	Fittings			Applic	able tub	e O.D.		
Series	iviodei	Fibility poin	size	Fittings	ø <b>2</b>	ø <b>3.2</b>	ø4	ø6	ø <b>8</b>	ø <b>10</b>	ø <b>12</b>
	SY5□30-□□-01	4A, 2B	1/8	KQ2H							
	313030-00		1/0	KQ2S							
		1P, 5EA, 3EB	1/4	KQ2H							
		IP, SEA, SEB	1/4	KQ2S							
SY5000		X, PE	M5	KQ2H							
	SS5Y5-50/51/52 (R)			KQ2S							
	Manifold base			KQ2H							
		4A, 2B	1/4	KQ2S							
		4A, 2D	1/8	KQ2H							
			1/0	KQ2S							

Series	Model	Dining port	Piping port Port		Port Fittings		Applicable tube O.D.					
Series	iviodei	i ipilig port	size	i ittiiigs	ø2	ø <b>3.2</b>	ø4	ø6	ø <b>8</b>	ø <b>10</b>	ø12	
	SY7□30-□□-02	4A, 2B		KQ2H								
			1/4	KQ2S								
		1P, 5EA, 3EB	3/8	KQ2H								
SY7000				KQ2S								
317000	SS5Y7-50/51/52 (R)	X, PE	M5	KQ2H								
	Manifold base			KQ2S								
		4A, 2B	1/4	KQ2H								
			1/4	KQ2S								

#### ■ Trademark

DeviceNet™ is a trademark of ODVA. EtherNet/IP™ is a trademark of ODVA.

CompoNet™ is a trademark of ODVA.

EtherCAT® is registered trademark and patented technology, licensed by Beckhoff Automation GmbH, Germany.









# Plug-in For SY3000 Blanking Plate with Output




■ The blanking plate extracts the individual signal of the manifold valve.

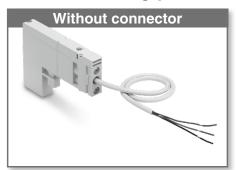




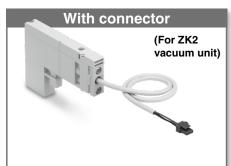


For the control of separately mounted valves

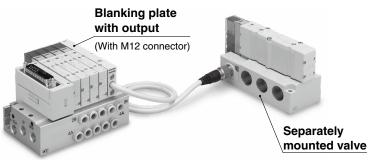

For the control of vacuum ejectors by means of Fieldbus unit signals

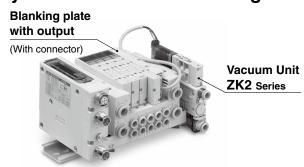

How to Order (With mounting screw)

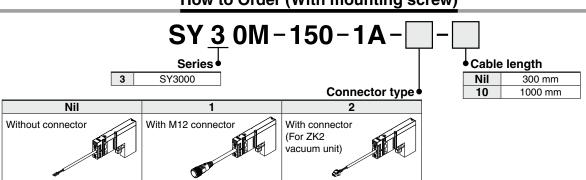

<sup>\*</sup> Refer to the specifications for output polarity.

# **Specifications**

Number of outputs	2 outputs			
Load voltage	12 VDC, 24 VDC			
Load voltage	(Dependent on the rated voltage of the built-in manifold)			
Load current	42 mA/point (Max.)			
Enclosure	Dust proof (M12 connector: IP67)			

<sup>\*</sup> For serial transmission-capable manifolds, only the 24 VDC is applicable.




Tightening torque for mounting screw M2: 0.16 N·m

# **Output Polarity**

Manifold common specifications	Α	В	COM.
Positive common	_	_	+
Negative common	+	+	_

<sup>\*</sup> Specifications are the same as the manifold common specifications.

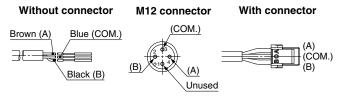





# 5-Port Solenoid Valve

Plug-in Type

# The EX180 has been newly added to the SY series.


**Compatible Protocols** 

DeviceNet CC-Link

Number of outputs: Max. 32 outputs



■ Wiring and piping can be arranged in the same direction.\*1

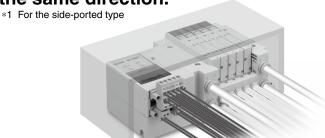

- The T-branch type communication connector allows for daisy-chain wiring communication connection.
- With connector fixing screws to prevent the connector from coming off

**Trademark** 


DeviceNet<sup>™</sup> is a trademark of ODVA.

EtherNet/IP<sup>™</sup> is a trademark of ODVA.

CompoNet<sup>™</sup> is a trademark of ODVA.

EtherCAT<sup>®</sup> is registered trademark and patented technology, licensed by Beckhoff Automation GmbH, Germany.

### **Serial Transmission Series Variations**

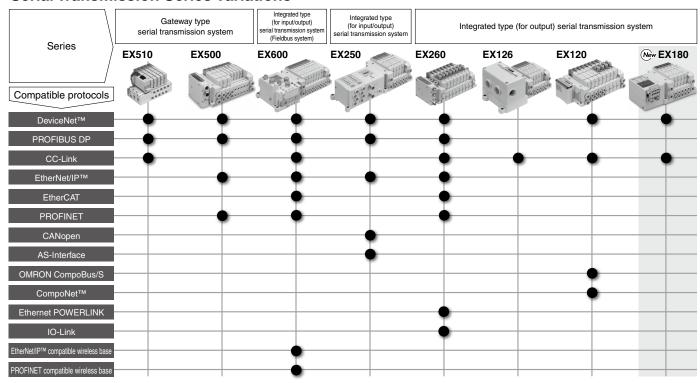

SY3000/5000/7000 Series



Type 10 Side Ported Type 11 **Bottom Ported** 

# Plug-in Connector Connecting Base

**EX180** 


# SY3000/5000/7000 Series

C C C ROHS



### How to Order Manifolds

Refer to the Web Catalog for the dimensions of Type 11/Bottom-ported type.

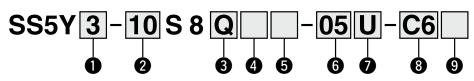

# Series

3	<b>3</b> SY3000				
5	SY5000				
7	SY7000				

# **1** Type

	<b>30</b>
10	Side ported
11	Bottom ported*1

\*1 The SY5000 manifold base is used for the bottom ported SY3000. When ordering, refer to the "Plug-in Mixed Mounting Type Manifold" (Web Catalog).

# 3 SI unit

0	Without SI unit				
Q	DeviceNet™				
V CC-Link					

\* Only the connector block assembly is mounted for models without an SI unit.

# 4 SI unit output polarity, Number of outputs

	32 outputs	16 outputs	
Without SI unit	Nil		
Positive common (NPN)	2	3	
Negative common (PNP)	4	5	

- When "V" (CC-Link) is selected for the SI unit, only symbol "2" or "4" (32 outputs) can be selected.
- Ensure a match with the common specification of the valves to be used.

# **5** Communication connector

Nil	T-branch type
Α	Straight type

- \* The communication connector and power connector are shipped together with the manifold. The power connector is only available for the straight type.
- When not selecting an SI unit, the symbol will

# 6 Valve stations


in the case of the sz-output of unit						
Symbol	Stations	Note				
02	2 stations					
:	÷	Double wiring*1				
16	16 stations					
02	2 stations	Connectional laws with 2				
:	:	Specified layout*2 (Up to 32 solenoids available)				
24	24 stations	(Op to 32 soleriolds available)				

### In the case of the 16-output SI unit

Symbol	Stations	Note				
02	2 stations					
•	÷	Double wiring*1				
08	8 stations					
02	2 stations	Considered laws which				
i :	:	Specified layout*2 (Up to 16 solenoids available)				
16	16 stations	(Op to 16 soleriolds available)				

- \*1 Double wiring: 2-position single, double, 3-position, and 4-position valves can be used on all manifold stations. Use of a 2-position single solenoid will result in an unused control signal. If this is not desired, order with a specified layout.
- \*2 Specified layout: Indicate the wiring specifications on the manifold specification sheet. (Note that 2-position double, 3-position, and 4-position valves cannot be used where single wiring has been specified.)
- This also includes the number of the blanking plate assembly.
- For the product without the SI unit (S80), note the maximum number of solenoids of the SI unit that will be mounted. If the layout is specified, indicate it on the manifold specification sheet.

# **How to Order Manifold Assembly**

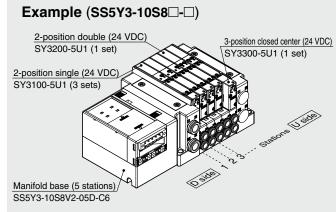

SS5Y3-10S8V2-05D-C6 ··· 1 set (Type 10 5-station manifold base part no.)
*SY3100-5U1 3 sets (2-position single part no.)
*SY3200-5U1 1 set (2-position double part no.)
*SY3300-5U1 1 set (3-position closed center part no.)
→ The asterisk denotes the symbol for the assembly.  Prefix it to the part numbers of the valve, etc.

- For the valve arrangement, the valve closest to the D side is considered the 1st station.
- Under the manifold part number, state the valves to be mounted in order starting with the 1st station as shown in the figure above. If the arrangement becomes too complicated, specify the details on a manifold specification sheet.
- When mixing top-ported configurations, select from those listed on page 7. In such cases, use caution as there is also output on the A and B ports on the base side. Specify on the manifold specification sheet if plugs are required for the A and B ports on the base side.

P, E port entry, SUP/EXH block assembly

<u> </u>	,			
P, E port entry	Internal pilot	Internal pilot, Built-in silencer	External pilot	
U side (2 to 10 stations)	U	С	G	
D side (2 to 10 stations)	D	E	Н	
Both sides (2 to 24 stations)	В	F	J	

- 3/5(E) port is plugged for the built-in silencer type.
- When the built-in silencer type is used, keep the exhaust port from coming in direct contact with water or other liquids.

For details on the EX180 Integrated Type (For Output) Serial Transmission System, refer to the Web Catalog and the Operation Manual. For the part numbers of the SI units to be mounted, refer to the Web Catalog. Please download the Operation Manual via the SMC website:

https://www.smcworld.com



# Purgain Connector Connecting Base SY3000/5000/7000 Series

A. B port size (Metric/One-touch fitting)

<u> </u>	А,	<u> </u>	ort Size	(wetri	c/One	-toucn	muni	3)	
0		A, B port		Type 1	0/Side	ported	Type 11/Bo	ttom ported	
Symbol				SY3000	SY5000	SY7000	SY5000	SY7000	
C2			ø2	•	_	_	_	_	
СЗ			ø3.2	•	_	_	_	_	08
C4	l		ø4	•	•	_	•	_	
C6	ig		ø6	•	•	•	•	•	
C8	Straight		ø8	_	•	•	•	•	2010
C10	0,		ø10	_	_	•	_	•	08 3
C12			ø12	<u> </u>	_	•	_	•	
CM*1		Straig	ht port, mixed sizes	•	•	•	•	•	
L4			ø4	•	•	_	_	_	
L6		5	ø6	•	•	•	_	_	
L8		Upward	ø8	_	•	•	_	_	
L10		J	ø10	_	_	•	_	_	
L12			ø12	_	_	•	_	_	Jei San
B4	Elbow*2		ø4	•	•	_	_	_	
B6	oq	Downward	ø6	•	•	•	_	_	
B8	۳	NU.	ø8	_	•	•	_	_	
B10		Dov	ø10	_	_	•	_	_	
B12			ø12	_	_	•	_	_	Toll to the second seco
LM*1		Elbow port, mixed sizes (Including upward and downward piping)		•	•	•	_	_	
	P, E port size (One-touch fittings)		ø8	ø10	ø12	ø10	ø12		

<del>, -</del>	<u> </u>		3126 (1116		100.0.		<u> </u>		
Cumbal	A, B port		Type 1	0/Side	ported	Type 11/Bo	ttom ported		
Symbol A,		B port	SY3000	SY5000	SY7000	SY5000	SY7000		
N1			ø1/8"	•	_	_	_	_	
N3	_		ø5/32"	•	•	_	•	_	
N7	Straight		ø1/4"	•	•	•	•	•	
N9	Stra		ø5/16"	_	•	•	•	•	
N11	0,		ø3/8"	_	_	•	_	•	O DESTRUCTION OF THE PROPERTY
CM*1		Straig	ht port, mixed sizes	•	•	•	•	•	
LN3			ø5/32"	•	_	_	_	_	
LN7		Jpward	ø1/4"	•	•	_	_	_	
LN9		췹	ø5/16"	_	•	_	_	_	
LN11	01		ø3/8"	_	_	•	_	_	0 00000
BN3	Elbow*2	5	ø5/32"	•	_	_	_	_	
BN7	Elbo	Downward	ø1/4"	•	•	_	_	_	
BN9	ш	N C	ø5/16"	_	•	_		_	
BN11		△	ø3/8"	_	_	•	_	_	The last of the la
LM*1		(Incl	v port, mixed sizes uding upward and wnward piping)	•	•	•	_	_	
			rt size h fittings)	ø5/16"	ø3/8"	ø1/2"	ø3/8"	ø1/2"	

- \*1 Indicate the sizes on the manifold specification sheet in the case of "CM" or "LM." The direction of P, E port fittings is the same as for the P, E port. If selecting "LM," indicate it on the manifold specification sheet for the P, E port fitting
- \*2 To avoid interference with the body or piping, select a downward elbow port when mounting the optional spacer assembly (Web Catalog).

9 Mounting and Option

Cumbal	Mounting	Option		
Symbol		Name plate	Station number	
Nil	Direct	_	_	
AA	Direct mounting	•	•	
BA	illouring	•	_	
D□	DIN rail mounting	_	_	
A□		•	•	
В□		•	_	

**DIN Rail Option** 


Nil	Standard length	
0		rail (with bracket)
3	For 3 stations	Specify a longer rail than the total
:	:	rail than the total length of specified
24	For 24 stations	stations.

- \* Enter the number of stations inside □ when it is larger than the number of valve stations. (Refer to "DIN Rail Option" above.)
   \* Only direct mounting is available for Type 11 (Bottom ported).
- \* Refer to the Web Catalog for the fixation of DIN rail mounting type manifold.



# How to Order Valves (With mounting screw)

Refer to the **Web Catalog** for valve specifications.

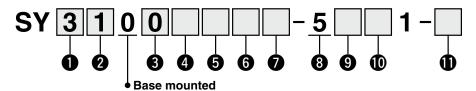

# Series

<u> </u>	100
3	SY3000
5	SY5000
7	SY7000

Type of actuation

Type of actuation				
1	2-position	Single		
2	2-008111011	Double		
3		Closed center		
4	3-position	Exhaust center		
5		Pressure center		
<b>A</b> *1	4	N.C./N.C.		
B*1	4-position dual 3-port	N.O./N.O.		
C*1		N.C./N.O.		

\*1 Only the rubber seal type is available for the 4-position dual 3-port valve.

Seal type

0	Rubber seal
1	Metal seal

4 Pilot type

Nil	Internal pilot
R	External pilot

# Back pressure check valve (Built-in valve type)

Nil	None
Н	Built-in

- \* Only the rubber seal type is available. A manifold installed type is available if a back pressure check valve with a metal seal is required. Refer to the **Web Catalog** for ordering examples. However, it is not recommended to use the built-in valve type and the manifold installed type at the same time because it will reduce the flow.
- \* The built-in valve type back pressure check valve is not available for the 3-position type or the SY7000.

# 6 Pilot valve option

Nil	Standard (0.7 MPa)
В	Quick response type (0.7 MPa)
<b>K</b> *1	High-pressure type (1.0 MPa)

\*1 Only the metal seal type is available for the high-pressure type.

Coil type

Oon type			
Nil	Standard		
Т	With power-saving circuit (Continuous duty type)		

- Be sure to select the power-saving circuit type when the valve is to be continuously energized for long periods of time.
- Be careful of the energizing time when the power-saving circuit is selected. Refer to the Web Catalog for details.

# 8 Rated voltage


5	24 VDC
---	--------

# Light/surge voltage suppressor and common specification

Symbol	With light	Surge voltage suppressor	Common specification
R	_		Non-polar
U	•		Non-polar
S	_		Positive
Z	•	_	common
NS	_		Negative
NZ	•		common

- \* Select "R," "U," "S," or "Z" for the valve when the SI unit output polarity is positive common. Select "R," "U," "NS," or "NZ" for the valve when the SI unit output polarity is negative common.
- Only "Z" and "NZ" are available with a power-saving circuit.

# Manual override

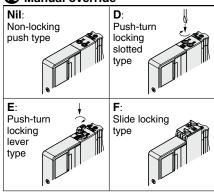

 Refer to the Web Catalog for the safety slide locking manual override.

# Type of mounting screw

Nil	Round head combination screw
В	Hexagon socket head cap screw
K	Round head combination screw (Drop prevention type)
Н	Hexagon socket head cap screw (Drop prevention type)

- \* For "K" and "H," the valve body cover has a drop prevention construction to stop the mounting screws from falling out when the valve is removed for maintenance, etc.
- When ordering a valve individually, the base gasket is not included.
  Since the base gasket is attached to the manifold, please order the base gasket separately if it is needed for maintenance.
  Refer to the Web Catalog for base gasket and mounting screw part numbers.
- \* "B" and "H" cannot be selected for the individual SUP/EXH spacer assembly, interface regulator, or double check spacer assembly with residual pressure release valve.

3


# Puge Connector Connecting Base SY3000/5000/7000 Series


Plug-in Connector Connecting Base Type 10/Side Ported

EX180

Dimensions: SY3000 Series

SS5Y3-10S8 - Stations D-C2, N1 (D)

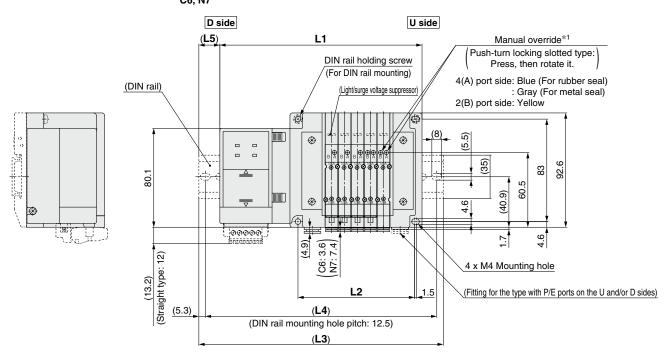

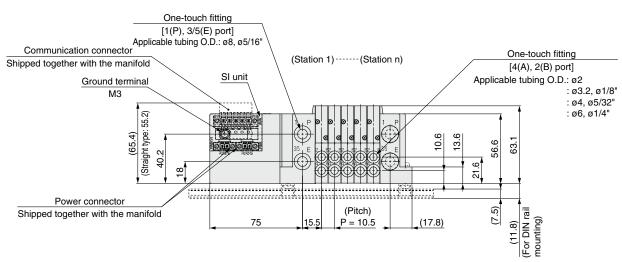

- \*1 Refer to the Web Catalog for dimensions of the external pilot, silencer, elbow fittings, and slide locking manual override.
- \* These figures show the "SS5Y3-10S8V2-05D-C6."
- \* Refer to the Web Catalog for dimensions of A or B port top-ported type.

n: Stations	2	3	4	5	6	7	8	9	10	11	12	13
L1	132.3	142.8	153.3	163.8	174.3	184.8	195.3	205.8	216.3	226.8	237.3	247.8
L2	63	73.5	84	94.5	105	115.5	126	136.5	147	157.5	168	178.5
L3	160.5	173	185.5	198	198	210.5	223	235.5	248	260.5	260.5	273
L4	150	162.5	175	187.5	187.5	200	212.5	225	237.5	250	250	262.5
L5	14	15	16	17	12	13	14	15	16	17	11.5	12.5
n. Ctations	4.4	45	16	17	10	10	20	01	20	00	0.4	
n: Stations	14	15	16	17	18	19	20	21	22	23	24	
n: Stations	<b>14</b> 258.3	<b>15</b> 268.8	<b>16</b> 279.3	<b>17</b> 289.8	<b>18</b> 300.3	<b>19</b> 310.8	<b>20</b> 321.3	<b>21</b> 331.8	<b>22</b> 342.3	<b>23</b> 352.8	<b>24</b> 363.3	
		-	-		-	_	_			-		
L1	258.3	268.8	279.3	289.8	300.3	310.8	321.3	331.8	342.3	352.8	363.3	
L1 L2	258.3 189	268.8 199.5	279.3 210	289.8 220.5	300.3 231	310.8 241.5	321.3 252	331.8 262.5	342.3 273	352.8 283.5	363.3 294	




Plug-in
Connector Connecting Base


Type 10/Side Ported

EX180

Dimensions: SY5000 Series

# SS5Y5-10S8 - Stations D - C6, N7 (D)

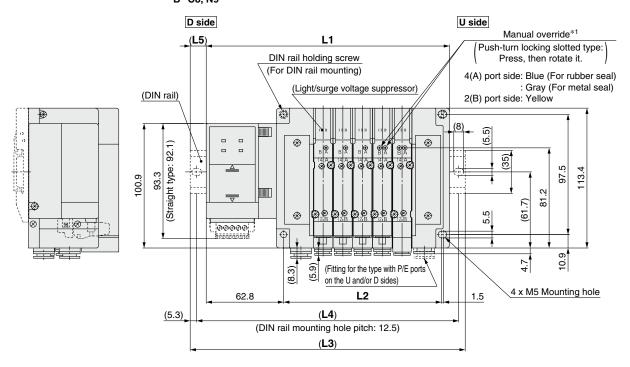

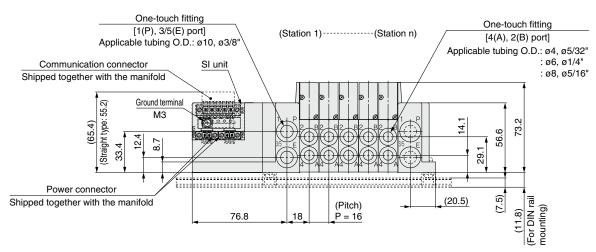

- \*1 Refer to the Web Catalog for dimensions of the external pilot, silencer, elbow fittings, and slide locking manual override.
- \* These figures show the "SS5Y5-10S8V2-05D-C8."
- \* Refer to the Web Catalog for dimensions of A or B port top-ported type.

n: Stations	2	3	4	5	6	7	8	9	10	11	12	13
L1	149.3	165.3	181.3	197.3	213.3	229.3	245.3	261.3	277.3	293.3	309.3	325.3
L2	80	96	112	128	144	160	176	192	208	224	240	256
L3	173	198	210.5	223	248	260.5	273	285.5	310.5	323	335.5	360.5
L4	162.5	187.5	200	212.5	237.5	250	262.5	275	300	312.5	325	350
L5	12	16.5	14.5	13	17.5	15.5	14	12	16.5	15	13	17.5
n: Stations	14	15	16	17	18	19	20	21	22	23	24	
n: Stations	<b>14</b> 341.3	<b>15</b> 357.3	<b>16</b> 373.3	<b>17</b> 389.3	<b>18</b> 405.3	<b>19</b> 421.3	<b>20</b> 437.3	<b>21</b> 453.3	<b>22</b> 469.3	<b>23</b> 485.3	<b>24</b> 501.3	
		-	_		_	_	_			_		
L1	341.3	357.3	373.3	389.3	405.3	421.3	437.3	453.3	469.3	485.3	501.3	
L1 L2	341.3 272	357.3 288	373.3 304	389.3 320	405.3 336	421.3 352	437.3 368	453.3 384	469.3 400	485.3 416	501.3 432	

# Pure Connector Connecting Base SY3000/5000/7000 Series


Plug-in Connector Connecting Base

Type 10/Side Ported

EX180

Dimensions: SY7000 Series

SS5Y7-10S8 \_ \_ \_ - Stations D C6, N7 C8, N9 C10, N11 (D)

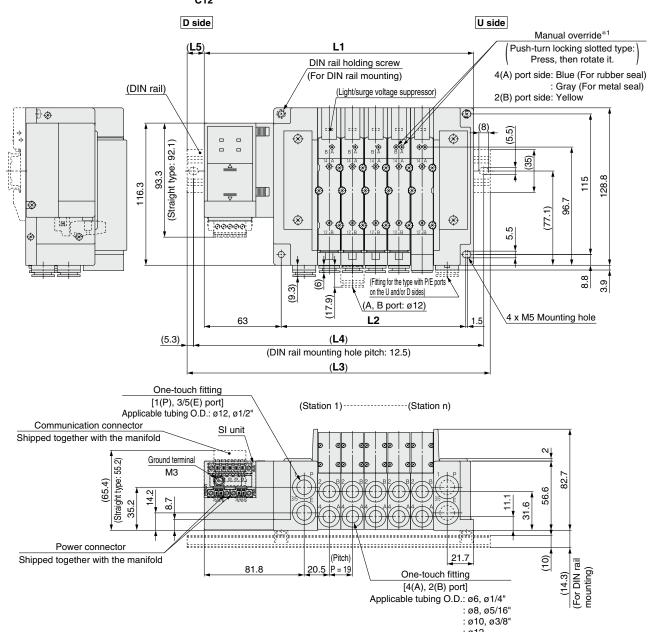

- \*1 Refer to the **Web Catalog** for dimensions of the external pilot, silencer, elbow fittings, and slide locking manual override.
- \* These figures show the "SS5Y7-10S8V2-05D-C10."
- \* Refer to the Web Catalog for dimensions of A or B port top-ported type.

n: Stations	2	3	4	5	6	7	8	9	10	11	12	13
L1	163.5	182.5	201.5	220.5	239.5	258.5	277.5	296.5	315.5	334.5	353.5	372.5
L2	94	113	132	151	170	189	208	227	246	265	284	303
L3	198	210.5	235.5	248	273	285.5	310.5	323	348	360.5	385.5	398
L4	187.5	200	225	237.5	262.5	275	300	312.5	337.5	350	375	387.5
L5	17.5	14	17	14	17	13.5	16.5	13.5	16.5	13	16	13
04-4												
n: Stations	14	15	16	17	18	19	20	21	22	23	24	
n: Stations	<b>14</b> 391.5	<b>15</b> 410.5	<b>16</b> 429.5	<b>17</b> 448.5	<b>18</b> 467.5	<b>19</b> 486.5	<b>20</b> 505.5	<b>21</b> 524.5	<b>22</b> 543.5	<b>23</b> 562.5	<b>24</b> 581.5	
		-	_		-	_	_			_		
L1	391.5	410.5	429.5	448.5	467.5	486.5	505.5	524.5	543.5	562.5	581.5	
L1 L2	391.5 322	410.5 341	429.5 360	448.5 379	467.5 398	486.5 417	505.5 436	524.5 455	543.5 474	562.5 493	581.5 512	



# Plug-in Connector Connecting Base

**EX180** 

Type 12
Top Ported

# SY3000/5000/7000 Series

CE CRUS ROHS



### How to Order Manifolds



# Series

3	SY3000
5	SY5000
7	SY7000

# 3 SI unit output polarity, Number of outputs

	32 outputs	16 outputs
Without SI unit	N	iil
Positive common (NPN)	2	3
Negative common (PNP)	4	5

- \* When "V" (CC-Link) is selected for the SI unit, only symbol "2" or "4" (32 outputs) can be selected.
- Ensure a match with the common specification of the valves to be used.

### 2 SI unit

<u> </u>	W1114
0	Without SI unit
Q	DeviceNet™
٧	CC-Link

Only the connector block assembly is mounted for models without an SI unit.

### Communication connector

Nil	T-branch type
Α	Straight type

- \* The communication connector and power connector are shipped together with the manifold. The power connector is only available for the straight type.
- When not selecting an SI unit, the symbol will be "nil."

# Valve stations

### In the case of the 32-output SI unit

		0. 1 02 04.pat 0. 4
Symbol	Stations	Note
02	2 stations	
i	÷	Double wiring*1
16	16 stations	
02	2 stations	Considered lavours*2
i	:	Specified layout*2 (Up to 32 solenoids available)
24	24 stations	(Op to 32 soleriolds available)

#### In the case of the 16-output SI unit

Symbol	Stations	Note
02	2 stations	
:	:	Double wiring*1
08	8 stations	
02	2 stations	0
•	:	Specified layout*2 (Up to 16 solenoids available)
16	16 stations	(Op to 16 soleriolds available)


- \*1 Double wiring: 2-position single, double, 3-position, and 4-position valves can be used on all manifold stations. Use of a 2-position single solenoid will result in an unused control signal. If this is not desired, order with a specified layout.
- \*2 Specified layout: Indicate the wiring specifications on the manifold specification sheet. (Note that 2-position double, 3-position, and 4-position valves cannot be used where single wiring has been specified.)
- \* This also includes the number of the blanking plate assembly.
- \* For the product without the SI unit (S80), note the maximum number of solenoids of the SI unit that will be mounted. If the layout is specified, indicate it on the manifold specification sheet.

# P, E port entry, SUP/EXH block assembly

P, E port entry	Internal pilot	Internal pilot, Built-in silencer	External pilot
U side (2 to 10 stations)	U	C*1	G
D side (2 to 10 stations)	D	E*1	Н
Both sides (2 to 24 stations)	В	_	J

- \*1 For SUP/EXH block assembly specifications, built-in silencer types will have P port entry stipulated.
- \* For built-in silencer type, P and E ports are available on U and D sides. 3/5(E) port is plugged. The silencer exhaust port is located on the opposite side of P, E port entry. (Example: When the P, E port entry is D side, the silencer exhaust port is U side.)
- When the built-in silencer type is used, keep the exhaust port from coming in direct contact with

# **How to Order Manifold Assembly**

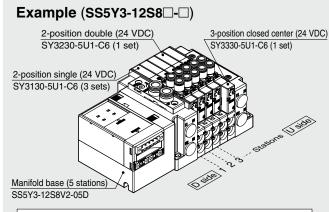

SS5Y3-12S8V2-05D ···· 1 set (Type 10 5-station manifold base part no.) \*SY3130-5U1-C6...... 3 sets (2-position single part no.)

\*SY3230-5U1-C6------ 1 set (2-position double part no.) \*SY3330-5U1-C6------ 1 set (3-position closed center part no.)

The asterisk denotes the symbol for the assembly. Prefix it to the part numbers of the valve, etc.

- For the valve arrangement, the valve closest to the D side is considered the 1st station.
- Under the manifold part number, state the valves to be mounted in order starting with the 1st station as shown in the figure above. If the arrangement becomes too complicated, specify the details on a manifold specification sheet.

# P. E port size (One-touch fittings)

<u>• . , .</u>	T, E port 3120 (One todon nithings)			
Symbol	SY3000	SY5000	SY7000	
Nil	ø8	ø10	ø12	
N	ø5/16"	ø3/8"	ø1/2"	

For N, sizes are in inches.


Woulding			
Nil	Direct mounting		
D	DIN rail mounting (With DIN rail)		
D0	DIN rail mounting (Without DIN rail)		
D3	For 3 stations Specify a longer		
:	: rail than the standard length		
D24			

\* Refer to the Web Catalog for the fixation of DIN rail mounting type manifold.

For details on the EX180 Integrated Type (For Output) Serial Transmission System, refer to the Web Catalog and the Operation Manual. For the part numbers of the SI units to be mounted, refer to the Web Catalog. Please download the Operation Manual via the SMC website: https://www.smcworld.com

# How to Order Valves (With mounting screw)

Refer to the **Web Catalog** for valve specifications.

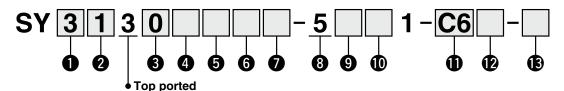

# Series

3	SY3000
5	SY5000
7	SY7000

2 Type of actuation

Type of actuation			
1	0   11	Single	
2-position		Double	
3	3-position	Closed center	
4		Exhaust center	
5		Pressure center	
<b>A</b> *1	B*1 4-position dual 3-port	N.C./N.C.	
		N.O./N.O.	
C*1		N.C./N.O.	

\*1 Only the rubber seal type is available for the 4-position dual 3-port valve.

3 Seal type

0	Rubber seal
1	Metal seal

A Pilot type

<u> </u>		
	Nil	Internal pilot
	R	External pilot

# Back pressure check valve (Built-in valve type)

Nil None		
Н	Built-in	
* Only the rubber seed type is available. A		

- \* Only the rubber seal type is available. A manifold installed type is available if a back pressure check valve with a metal seal is required. Refer to the **Web Catalog** for ordering examples. However, it is not recommended to use the built-in valve type and the manifold installed type at the same time because it will reduce the flow.
- \* The built-in valve type back pressure check valve is not available for the 3-position type or the SY7000.

# 6 Pilot valve option

Nil	Standard (0.7 MPa)
В	Quick response type (0.7 MPa)
<b>K</b> *1	High-pressure type (1.0 MPa)

\*1 Only the metal seal type is available for the high-pressure type.

Coil type

	Con type		
Nil Stand		Standard	
	Т	With power-saving circuit (Continuous duty type)	

- \* Be sure to select the power-saving circuit type when the valve is to be continuously energized for long periods of time.
- Be careful of the energizing time when the power-saving circuit is selected. Refer to the Web Catalog for details.

8 Rated voltage


5	24 VDC

### Light/surge voltage suppressor and common specification

Symbol	With light	Surge voltage suppressor	Common specification
R	_		Non-polar
U	•		Non-polai
S	_	•	Positive
Z	•		common
NS	_		Negative
NZ	•		common

- \* Select "R," "U," "S," or "Z" for the valve when the SI unit output polarity is positive common. Select "R," "U," "NS," or "NZ" for the valve when the SI unit output polarity is negative common.
- Only "Z" and "NZ" are available with a power-saving circuit.

# Manual override

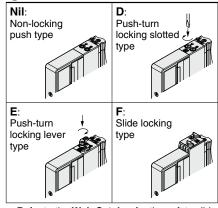

 Refer to the **Web Catalog** for the safety slide locking manual override.

# A, B port size

### Thread piping

	Symbol	Port size	Applicable series
	М5	M5 x 0.8	SY3000
01		1/8	SY5000
	02	1/4	SY7000

One-touch fitting (Metric)

One-toden nitting (Metric)					
Symbol	A, B port	SY3000	SY5000	SY7000	
C2	ø2	•	_	_	
СЗ	ø3.2	•	_	_	
C4 C6	ø4	•	•	_	
	ø6	•	•	•	
C8	ø8	_	•	•	
C10	ø10	_	_	•	
C12	ø12	_	_	•	

### One-touch fitting (Inch)

3( )				
Symbol	A, B port	SY3000	SY5000	SY7000
N1	ø1/8"	•	_	_
N3	ø5/32"	•	•	_
N7	ø1/4"	•	•	•
N9	ø5/16"	_	•	•
N11	ø3/8"	_	_	•

Thread type

Nil	Rc
F	G
N	NPT
Т	NPTF

\* Only Nil is available for M5.

# Type of mounting screw

Nil	Round head combination screw	
В	Hexagon socket head cap screw	
K	Round head combination screw (Drop prevention type)	
Н	Hexagon socket head cap screw (Drop prevention type)	

- \* For "K" and "H," the valve body cover has a drop prevention construction to stop the mounting screws from falling out when the valve is removed for maintenance, etc.
- When ordering a valve individually, the base gasket is not included.
  Since the base gasket is attached to the manifold, please order the base gasket separately if it is needed for maintenance.
  Refer to the Web Catalog for base gasket and mounting screw part numbers.
- \* "B" and "H" cannot be selected for the individual SUP/EXH spacer assembly or interface regulator.

