

Before Use

Fieldbus system

EX500-GEN2



Thank you for purchasing an SMC EX500 series Fieldbus system. Please read this manual carefully before operating the product and make sure you understand its capabilities and limitations. Please keep this manual handy for future reference.

To obtain the operation manual about this product and control unit, please refer to the SMC website (URL <http://www.smcworld.com>) or contact SMC directly.

Safety Instructions

These safety instructions are intended to prevent hazardous situations and/or equipment damage. These instructions indicate the level of potential hazard with the labels of "Caution", "Warning" or "Danger". They are all important notes for safety and must be followed in addition to International standards (ISO/IEC) and other safety regulations.

- Caution:** CAUTION indicates a hazard with a low level of risk which, if not avoided, could result in minor or moderate injury.
- Warning:** WARNING indicates a hazard with a medium level of risk which, if not avoided, could result in death or serious injury.
- Danger:** DANGER indicates a hazard with a high level of risk which, if not avoided, will result in death or serious injury.

Operator

- The operation manual is intended for those who have knowledge of machinery using pneumatic equipment, and have sufficient knowledge of assembly, operation and maintenance of such equipment. Only those persons are allowed to perform assembly, operation and maintenance.
- Read and understand the operation manual carefully before assembling, operating or providing maintenance to the product.

Safety Instructions

Warning

- Do not disassemble, modify (including changing the printed circuit board) or repair.** An injury or failure can result.
- Do not operate the product outside of the specifications.** Do not use for flammable or harmful fluids. Fire, malfunction, or damage to the product can result. Verify the specifications before use.
- Do not operate in an atmosphere containing flammable or explosive gases.** Fire or an explosion can result. This product is not designed to be explosion proof.
- If using the product in an interlocking circuit:**
 - Provide a double interlocking system, for example a mechanical system.
 - Check the product regularly for proper operation. Otherwise malfunction can result, causing an accident.
- The following instructions must be followed during maintenance:**
 - Turn off the power supply.
 - Stop the air supply, exhaust the residual pressure and verify that the air is released before performing maintenance. Otherwise an injury can result.
- When handling the unit or assembling/replacing units:**
 - Do not touch the sharp metal parts of the connector or plug for connecting units.
 - Take care not to hit your hand when disassembling the unit.
 - The connecting portions of the unit are firmly joined with seals.
 - When joining units, take care not to get fingers caught between units. An injury can result.
- After maintenance is complete, perform appropriate functional inspections.** Stop operation if the equipment does not function properly. Safety cannot be assured in the case of unexpected malfunction.
- Provide grounding to assure the safety and noise resistance of the Serial System.** Individual grounding should be provided close to the product with a short cable.

NOTE

- The direct current power supply to combine should be UL1310 Class 2 power supply when conformity to UL is necessary.


Maintenance

- Maintenance should be performed according to the Safety Instructions.
- Perform regular maintenance and inspections. There is a risk of unexpected malfunction.
- Do not use solvents such as benzene, thinner etc. to clean each unit. They could damage the surface of the body and erase the markings on the body. Use a soft cloth to remove stains.
- For heavy stains, use a cloth soaked with diluted neutral detergent and fully squeezed, then wipe up the stains again with a dry cloth.

Refer to the SMC website (URL <http://www.smcworld.com>) to obtain more detailed information about maintenance.


Product Summary

System configuration

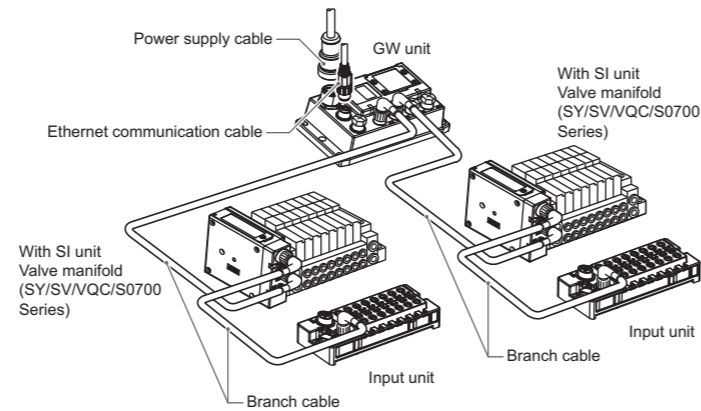

The EX500 range of units can be connected to open fieldbus (EtherNet/IP™) to realize the reduction of input or output device wiring and the distributed control system. One branch of manifold valves/input unit can be connected to 32 outputs/32 inputs. Up to 4 branches can be connected (total 128 outputs/128 inputs).

Summary of Product parts

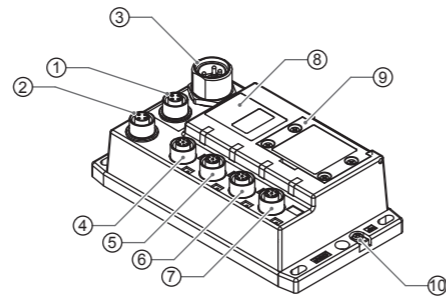


| No. | Description | Application |
|-----|-------------------------------------|--|
| 1 | Communication connector (Port1/IN) | Connect EtherNet/IP™ line. |
| 2 | Communication connector (Port2/OUT) | |
| 3 | Power supply connector | Connector to supply power to the output devices such as solenoid valves and input and control equipment such as sensors. |
| 4 | Branch port A (COM A) | Connect the SI unit (with manifold valves) or input unit using a branch cable. |
| 5 | Branch port B (COM B) | |
| 6 | Branch port C (COM A) | |
| 7 | Branch port D (COM D) | |
| 8 | Display window | Displays the status of the power supply and the communication with the PLC. |
| 9 | Switch protective cover | Set up the IP address using the internal switches. |
| 10 | Grounding terminal (FE) | Used for functional grounding. (It is recommended to ground with resistance of 100 ohms or less) |

*: Seal cap is provided.

Setting

Switch setting



| Setting | | | Description |
|---------|-----|----|--|
| x100 | x10 | x1 | |
| 0 | 0 | 0 | Remote control (DHCP) |
| 0 | 0 | 1 | Manual setting of IP address: 192.168.Y.X (X: 1-254) |
| 0 | 0 | 2 | |
| . | . | . | DHCP |
| 2 | 5 | 4 | |
| 2 | 5 | 5 | Reserved |
| 2 | 5 | 6 | |
| . | . | . | Reserved |
| 9 | 9 | 9 | |

The factory default setting are all 0.

DIP switches


| No. | Description |
|-----|---|
| 1 | Reserved (Fixed to OFF) |
| 2 | HOLD/CLEAR setting ON: Hold output at EtherNet/IP™ communication error. OFF: Set the output state at EtherNet/IP™ communication error via network. It is CLEAR, if none is set (at shipment). |
| 3 | Mode setting ON: Gateway distributed system (64 points) OFF: Gateway distributed system 2 (128 points) |
| 4 | Manual setting of IP address: 192.168.Y.X (Y: OFF_0, ON_1) |

The factory default setting are all OFF.
* Configuration
Use a compatible EDS file when establishing the network.
Please refer to the SMC website (URL <http://www.smcworld.com>) for the configuration and compatible EDS file for the product.

Mounting and Installation

Installation

- Direct mounting**
Install the product using 4 M5 screws x 15 mm or longer with a head ø5.2 minimum.


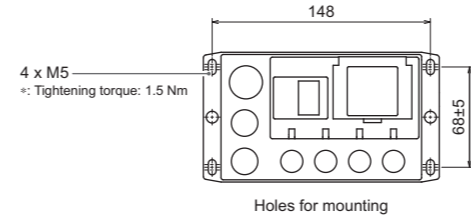


Wiring

1. Communication wiring

Connect the Ethernet communication cable to the communication connector.



Communication connector pin layout (Port1/Port2)
M12, 4 pin, socket, D code

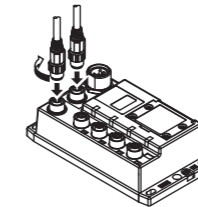

2. Power supply wiring



Connect a power supply cable to the power supply connector on the GW unit.

Power supply connector pin layout
7/8 inch, 4 pin, plug

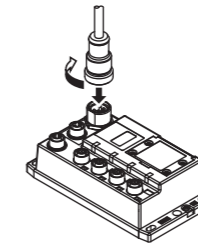

3. Branch wiring


Connect the manifold valves with SI unit or an input unit to a branch port (COM A to D) using a branch cable (cable with M12 connector). One branch port can be connected with up to 32 inputs and 32 outputs (max. 4 units).

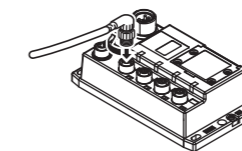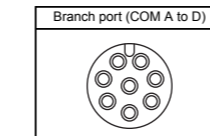

Select the specified branch cable below.


How to order: EX500-AC [030] -SSPS

| Cable length (L) | Connector |
|------------------|--|
| 003 0.3 [m] | SSPS Socket side: Straight Plug side: Straight |
| 005 0.5 [m] | |
| 010 1 [m] | SAPA Socket side: Angled Plug side: Angled |
| 030 3 [m] | |
| 050 5 [m] | |
| 100 10 [m] | |

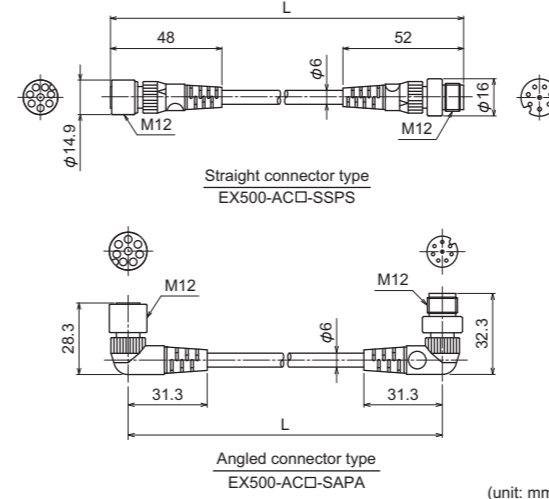

Minimum acceptable cable bending radius: 40 mm (fixed)

LED Display

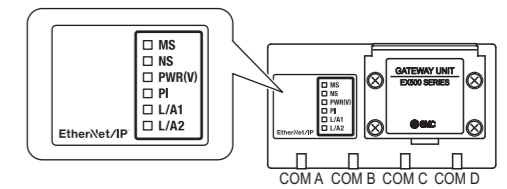

| Display | Description |
|------------|--|
| MS | <input type="checkbox"/> LED is OFF: The power supply for input and control is OFF |
| | <input type="checkbox"/> Green LED is ON: Operating normally |
| | <input checked="" type="checkbox"/> Red LED is flashing: Abnormality detected |
| | <input checked="" type="checkbox"/> Red LED is ON: Unrecoverable error |
| NS | <input type="checkbox"/> LED is OFF: IP address is not set |
| | <input type="checkbox"/> Green LED is ON: EtherNet/IP™ communication established |
| | <input checked="" type="checkbox"/> Green LED is flashing: EtherNet/IP™ communication not established |
| PWR(V) | <input type="checkbox"/> LED is OFF: Solenoid valve power supply OFF |
| | <input type="checkbox"/> Green LED is ON: Solenoid valve power supply ON |
| | <input checked="" type="checkbox"/> Orange LED is flashing: Ethernet UCMP Echo request (Ping command) received |
| PI | <input checked="" type="checkbox"/> Orange LED is ON: Forced output mode is ON |
| | <input type="checkbox"/> LED is OFF: No Link, No Activity (Port1) |
| L/A1 | <input type="checkbox"/> Green LED is ON: Link, No Activity (Port1, 100 Mbps) |
| | <input checked="" type="checkbox"/> Green LED is flashing: Link, Activity (Port1, 100 Mbps) |
| | <input type="checkbox"/> Orange LED is ON: Link, No Activity (Port1, 10 Mbps) |
| | <input checked="" type="checkbox"/> Orange LED is flashing: Link, Activity (Port1, 10 Mbps) |
| L/A2 | <input type="checkbox"/> LED is OFF: No Link, No Activity (Port2) |
| | <input type="checkbox"/> Green LED is ON: Link, No Activity (Port2, 100 Mbps) |
| | <input checked="" type="checkbox"/> Green LED is flashing: Link, Activity (Port2, 100 Mbps) |
| | <input type="checkbox"/> Orange LED is ON: Link, No Activity (Port2, 10 Mbps) |
| COM A to D | <input type="checkbox"/> LED is OFF: Not connected |
| | <input type="checkbox"/> Green LED is ON: Operating normally |
| | <input checked="" type="checkbox"/> Green LED is flashing: Abnormality detected |

Troubleshooting

Refer to the LED Display. Refer to the SMC website (URL <http://www.smcworld.com>) to obtain more detailed information about troubleshooting.

Specification

Gateway distributed system 2 (128 points) specifications

| Item | Specification |
|-------------------------|---|
| Number of points | 128 inputs/128 outputs |
| Number of branches | 4 (Input: Max. 32 points/Output: Max. 32 points per branch) |
| Slave connection number | Max. 16 devices (Input unit: Max. 2 devices/Output unit: Max. 2 devices per branch) |
| Branch cable length | 20 m or less total extension per branch |

When you use this system together with another product compatible with the gateway distributed system (64 points), please refer to the SMC website (URL <http://www.smcworld.com>) to obtain more detailed information about product.

GW unit specifications

| Item | Specification |
|------------------------------|---|
| Power supply voltage range | Power supply for input and control: 24 VDC ±10% Power supply for solenoid valves: 24 VDC +10%/−5% |
| Rated current | Power supply for input and control: 6.2 A (GW unit internal current consumption: 200 mA or less) Power supply for solenoid valves: 4 A |
| Number of inputs and outputs | Input: Max. 128 points/Output: Max. 128 points |
| Enclosure rating | IP65 |
| Ambient temperature range | Operation: −10 to 50 °C, Storage: −20 to 60 °C (No condensation or freezing) |
| Operating humidity range | Operation, Storage: 35 to 85%RH (No condensation) |
| Operating atmosphere | No corrosive gas |
| Weight | 550 g |
| Accessory | Seal cap (for M12 connector socket): 5 pcs. |

Refer to the product catalog or SMC website (URL <http://www.smcworld.com>) to obtain more detailed information about product specifications.

Outline with Dimensions

Refer to the product catalog or SMC website (URL <http://www.smcworld.com>) to obtain more detailed information about outline dimensions.

SMC Corporation URL <http://www.smcworld.com>

Akihabara UDX 15F, 4-14-1, Sotokanda, Chiyoda-ku, Tokyo 101-0021, JAPAN
Phone: +81 3-5207-8249 Fax: +81 3-5298-5362

Note: Specifications are subject to change without prior notice and any obligation on the part of the manufacturer. EtherNet/IP™ is a trademark of ODAVA.
© 2015 SMC Corporation All Rights Reserved EX#-0-0MS016