# Fieldbus System





(For Input/Output)

# Supports digital inputs/outputs, analog inputs/outputs, and IO-Link units



<Compatible Protocols>

DeviceNet CC-Link IO-Link



EtherNet/IP EtherCAT









Please contact SMC for details on compatible products.

### **IO**-Link unit

- 2 models (port class A and port class B)
- Diagnosis is possible from the upper level communication.
- The data can be accessed from via PC (setting tool).
- Device parameter setting function, Automatic saving/writing
- \* For the integrated SI unit, only PROFINET or EtherNet/IP™ can be selected.
- PROFINET: Up to 9 IO-Link unit modules can be connected.
- EtherNet/IP™: Up to 4 IO-Link unit modules can be connected. (Made to order)

### **Self-diagnosis function**

Equipped with an input/output open/shortcircuit detection function and an input/output signal ON/OFF counter function

### Web server function\*1

Status checks and forced output are possible



Various connectors available

The following connectors are selectable for the input/output devices: M12 connectors, M8 connectors, D-sub connectors, and spring type terminal blocks.


### Up to 9 units\*1 can be connected.


Up to 9 units can be connected in any order.

\*1 Excludes SI units



### Can be connected with digital, analog, and IO-Link units

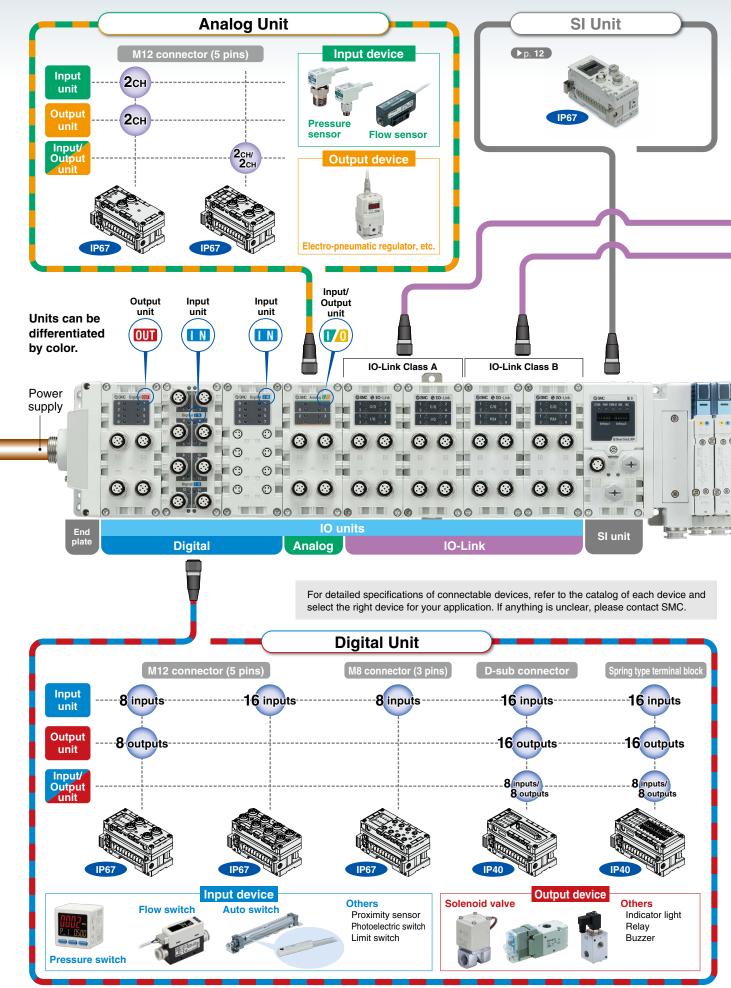

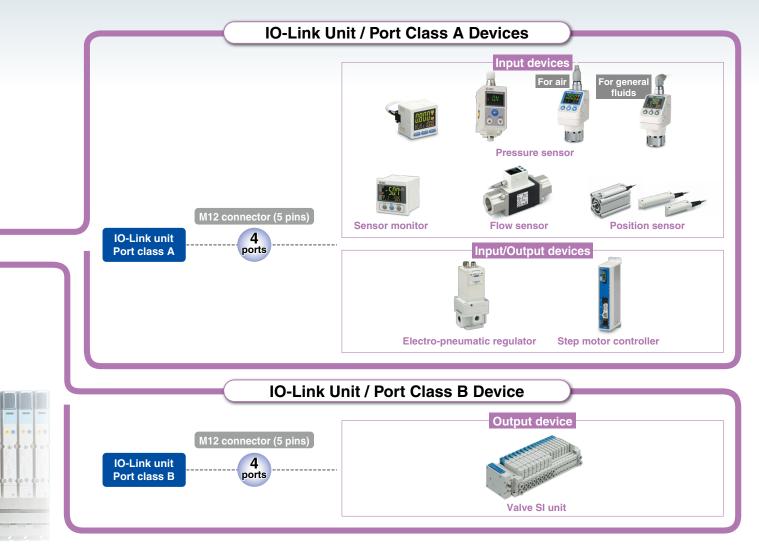

### ■ Connectable Solenoid Valve/Vacuum Unit

Flow rate characteristics (4/2 → 5/3) Max. number Power consumption Applicable						
Applicable valve	C [dm³/(s·bar)]	b	of solenoids	[W]	cylinder size	
IP67 *1	SY3000	1.6	0.19		0.05 (0)	ø50
	SY5000	3.6	0.17	32	0.35 (Standard) 0.1 (With power-saving circuit)	ø63
c <b>71</b> us	SY7000	5.9	0.20			ø80
IP67 *1, *3	JSY1000	0.91	0.48		0.2 (With power-saving circuit)	ø40
	JSY3000	2.77	0.27	32	0.4 (Standard)	ø50
	JSY5000	6.59	0.22		0.1 (With power-saving circuit)	ø80
IP40 CE	S0700*2	0.37	0.39	32	0.35	ø25
IP67 *1	SV1000*2	1.1	0.35	32	0.6	ø40
a and the	SV2000*2	2.4	0.18			ø63
c <b>Au</b> us	SV3000*2	4.3	0.21			ø80
IP67 *1	VQC1000	1.0	0.30	24	0.4 (Standard)	ø40
CE	VQC2000	3.2	0.30			ø63
	VQC4000	7.3	0.38		0.95 (Standard)	ø160
and the second	VQC5000	17	0.31		0.4 (Low-wattage type)	ø180
Applicable vacuum unit		Nozzle diamo [mm]	eter	Max. number of solenoids	Power consumption [W]	Max. vacuum pressure [kPa]
IP40		0.7			0.4	
	ZK2□A	1.0		16		01
		1.2		16		<b>–91</b>
		1.5				

<sup>\*1</sup> Units with a D-sub communication connector are IP40.



<sup>\*2</sup> There is no manifold part number setting for the EX600-SPN3/4. (Order it separately.)

<sup>\*3</sup> The JSY1000 is IP40.

# **IO**-Link

IO-Link is a communication technology for sensors and actuators that is an international standard, IEC 61131-9.

This technology is used to send/receive device information such as manufacturer, product part number, parameters, and diagnostic data, as well as the control data including ON/OFF signals and measured values of the sensor, by connecting the IO-Link master and device in a 1:1 configuration.

IO-Link enables condition monitoring and error detection of the sensor and equipment, and it can contribute to the reduction of startup labor and recovery time and the realization of preventive and predictive maintenance.

# Reduced design and startup labor


- Batch setting of device parameters from the upper level
- Remote check of device information
- Detection and remote unified check of device misconnection/non-connection

# Minimum recovery time due to error detection


- Early detection of location where problem is occurring via communication
- Early obtaining of information on problem phenomenon via communication
- Early recovery during product replacement (automatic setting of device parameters)

# Preventive and predictive maintenance through condition monitoring

- Monitors changes in measured values of a sensor during signal ON/OFF
- Monitors the number of device operations and automatically notifies when the set number of operations has been exceeded
- Remote monitoring of device and equipment conditions via communication

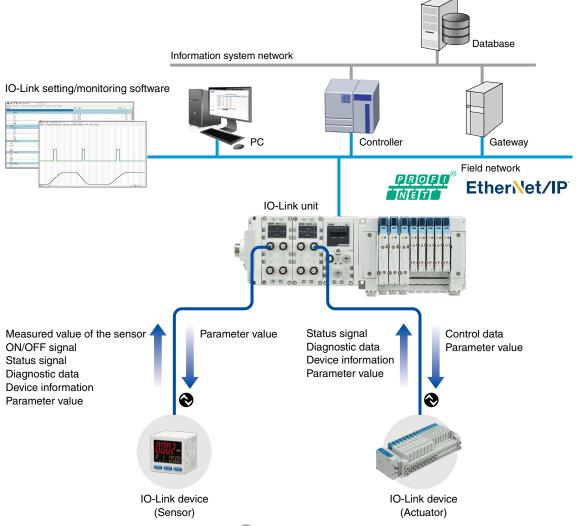

### **IO-Link System Configuration**

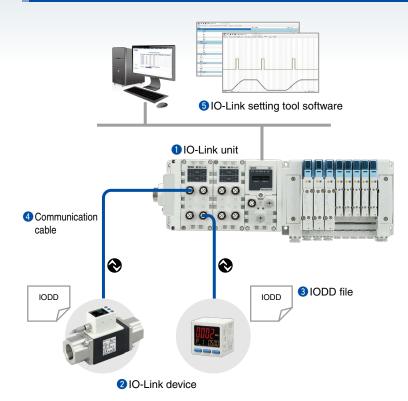

#### 10-Link unit

 Acts as a gateway between the IO-Link communication and the upper level communication

#### 2 IO-Link device

 A sensor/actuator connecting to each port of the IO-Link unit in a 1:1 configuration

#### **3** IODD file

- A file in which device properties and parameters are described
- Registered to the setting tool
- Provided by the device manufacturer

#### 4 Communication cable


- A 4-wire or 5-wire general-purpose cable that is the same as the existing sensor cable (Unshielded cable)
- Max. cable length: 20 m

#### **5** IO-Link setting tool software

- Software for the setting and monitoring of an IO-Link unit/device
- \*1 A setting tool compatible with the IO-Link units of every manufacturer is used for the SMC EX600 series IO-Link unit. (IO-Link Device Tool V5 manufactured by TMG Technologie und Engineering, Germany)


### **IO-Link Interface**

The connecting part between the IO-Link unit and the device is called a "port." Each port can be switched between "IO-Link mode" for digital communication and "standard I/O mode" for conventional contact input/output.

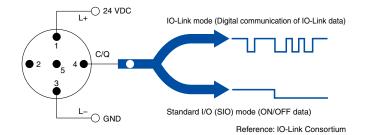


### 2 types of interfaces

There are two methods for power supply: one is for sensors, and the other is for actuators.

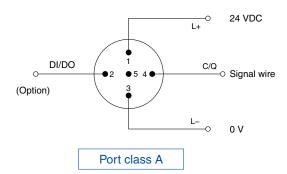

The control power supply wire and signal wire can be connected with one cable. (Mainly for sensors)

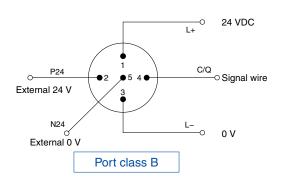

The control power supply wire, external power supply wire, and signal wire can be connected with one cable. (Mainly for actuators)




### **IO-Link Unit**

### ■ Can be connected with digital, analog, and IO-Link unit units


PROFINET: Up to 9 IO-Link units can be connected. (Total of 36 ports)

EtherNet/IP™: Up to 4 IO-Link units can be connected. (Total of 16 ports)

Digital units, analog units, and IO-Link units can be mixed, and up to 9 units can be connected in any order.

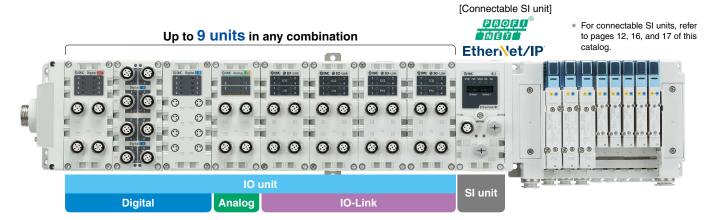


### ■ Supports both port class A and port class B

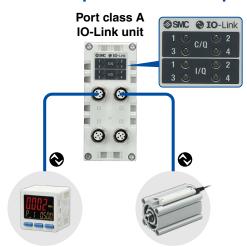


### For connecting IO-Link sensors

Pressure sensors, flow sensors, actuator position sensors, electro-pneumatic regulators, etc.

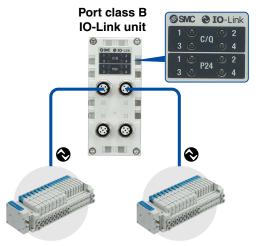

For connecting IO-Link compatible SI units (for valve driving)

### ■ The data can be accessed from via PC (setting tool).

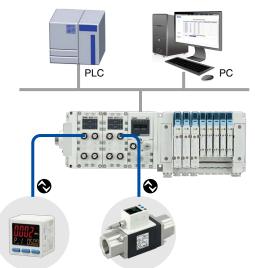

# 

The setting and monitoring of the IO-Link unit and device are possible via PC, without using the PLC.


- Process data
- Device parameters, IO-Link unit parameters
- IO-Link unit information, Device information
- Port diagnosis, Device diagnosis
- \* The PC setting tool is an IO-Link device tool manufactured by Technologie Management Gruppe (hereinafter referred to as TMG). It can be downloaded for free from the TMG website, however, for usage beyond 30 days, a license key is required.



### Diagnosis function

### Diagnosis is possible from the upper level communication.

IO-Link unit (port) diagnostic information can be obtained via PLC program or PC (web browser). Device diagnostic information can be obtained via PC (setting tool).

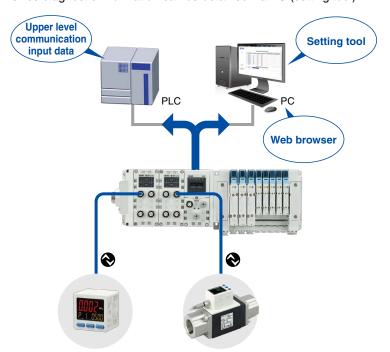

Items of IO-Link unit (port) diagnosis	
Detection of port short-circuit	

Detection of non-connected device

Detection of misconnected device (check error)

Notification of port misconfiguration (excessively large input/output data)

Conditions of diagnostic event (port, device)

Items of device diagnosis


Diagnostic results (problem phenomenon) received from devices are shown in event codes.

### **■** Device parameter setting function, Automatic saving/writing

The parameter setting of devices is possible from the upper level communication.

Parameter setting is possible via PC (setting tool).


It is also possible to use output data or message data via PLC program.

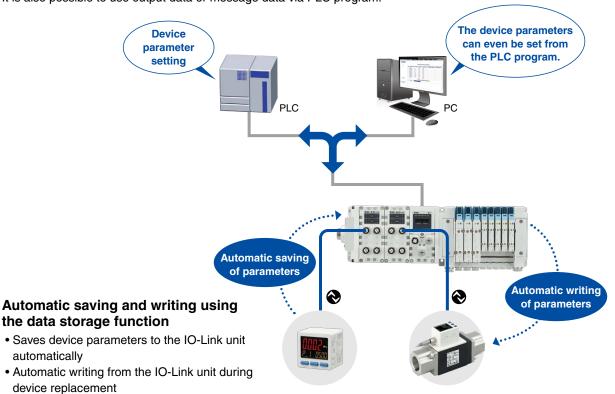

### **EtherNet Fieldbus Functions**


PROFINET (EX600-SPN3/4) and EtherNet/IP™ (EX600-SEN3/4) support the following functions.

### **■** Compatible topologies (Connection configuration)

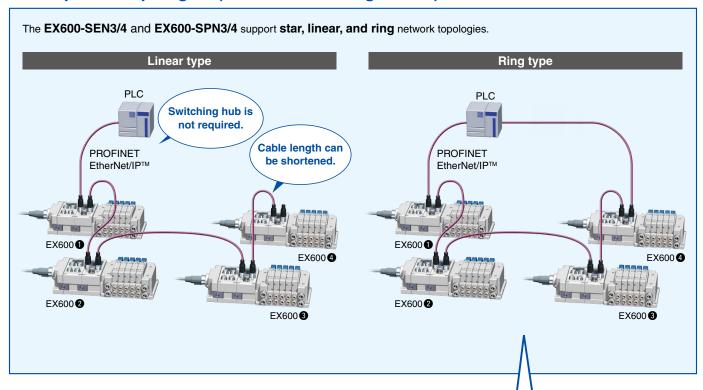

For ring networks, communication can be continued even if one of the communication cables in the network is disconnected or damaged. As the EX600-SEN3/4 supports Device Level Ring (DLR), and the EX600-SPN3/4 supports Media Redundancy Protocol (MRP), the disconnected point can be identified.

\* In order to use DLR or MRP, the PLC must be able to support it.

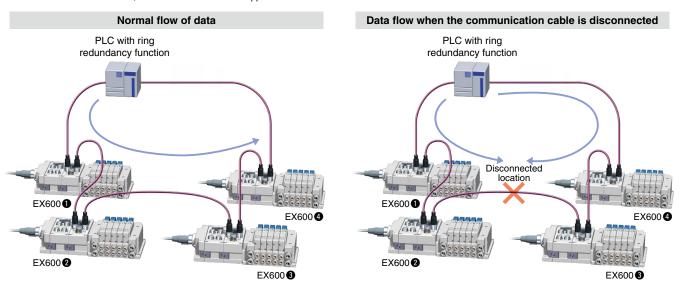


### ■ Supports the QuickConnect<sup>™</sup> function and the Fast Start Up function



In the case of a tool changer, it takes about 10 seconds for communication to be connected in some products after the power to the device installed on the tool is turned ON.

As the EX600-SEN3/4 supports the QuickConnect™ function, and the EX600-SPN3/4 supports the Fast Start Up function, communication connection in only approx. 0.5 s is possible.


\* In order to use the QuickConnect™ function or the Fast Start Up function, the PLC must be able to support it.

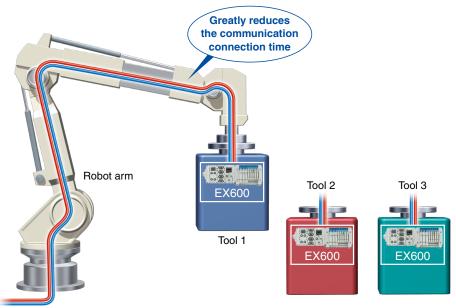

### **■** Built-in web server function

The EX600-SEN3/4 and EX600-SPN3/4 have a built-in web server function, which enables status checks, parameter settings (EX600-SEN3/4 only), and forced output of the EX600 using general-purpose web browsers, such as Microsoft Edge.

Start-up of the system and maintenance can be performed efficiently.

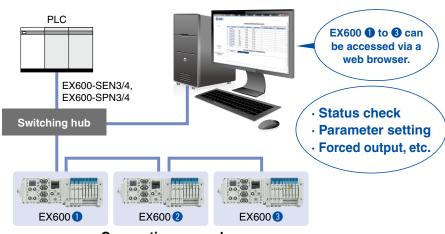


**Connection example** 

### **Latest PROFINET Technology**

### ■ System Redundancy S2

As the EX600-SPN3/4 supports System Redundancy S2, it can continue communication using the backup controller when the primary controller malfunctions. This allows for the prevention of problems caused by unexpected communication interruption.

\* In order to use System Redundancy S2, the PLC must be able to support this function.

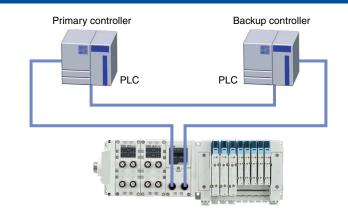



### Fieldbus System EX600

#### D-sub connector

These units are capable of connection using a D-sub connector. There are three types of units: for digital input, output, and input/output. The digital output unit can be connected with an SMC manifold solenoid valve F kit (D-sub connector).


#### Manifold solenoid valves/Vacuum unit can be connected using a cable with a D-sub connector.

SY series ZK2□A series

SV series


- S0700 series VQC series
- SJ series VQ series
- SQ series JSY series
- Please limit the number of valve connections to 16 stations for single and 8 stations for double. Refer to the catalog of each product for pin assignment details.

VVZS3000-21A-□-X192 (Non-waterproof cable example)

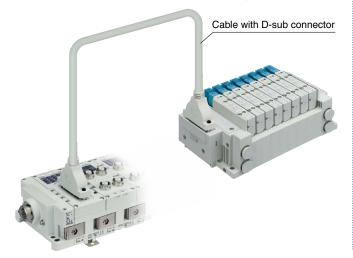

### Spring type terminal block


These terminal block units are compatible with individual wiring configurations. There are three types of units: for digital input, output, and input/output. Wiring connection to a sensor connector box, etc., can be carried out easily using only a flat head screwdriver.

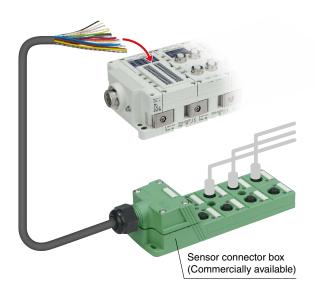

### ■ Digital input unit

**IP67** 


This unit is for inputting a digital signal (ON/OFF signal). The signal of a 2-wire/3-wire auto switch attached to the actuator can be acquired to feedback a signal to the PLC. The control signal of an entire system can be managed by a Fieldbus system.

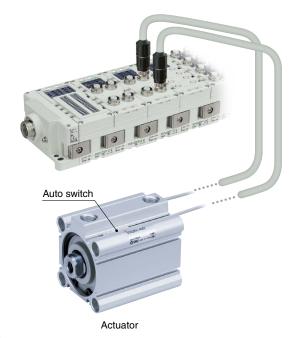

### Analog input/output unit

IP67

These units are for inputting or outputting an analog signal (voltage/current). A single unit performs both input and output, allowing feedback control where analog signals are received from a pressure sensor and sent to a pressure controller. Installation space is minimized as well.

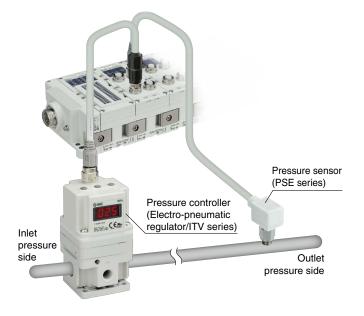

### **Self-diagnosis function**

The following shows examples of the self-diagnosis function.

#### **Short/Open-circuit detection**

It is possible to detect short or open circuits of input devices such as electronic 2-wire switches and 3-wire switches and output devices such as solenoid valves. The location of the error can be identified by the indicator light and the network.





Green ON Normal



#### **Counter function**


It is possible to ascertain the maintenance period and identify the parts that require maintenance by an input and output signal ON/OFF counter function. When the counter function is enabled and a certain number of contact operations is reached, the display of the counter will flash in red.

\* The counter function is not provided with analog units.

### ■ Individual units can be connected and removed one by one.

A unique clamping method is adopted to prevent screws from falling out. Units can be separated easily by loosening the joint bracket.

Up to 9 units can be connected in any order.

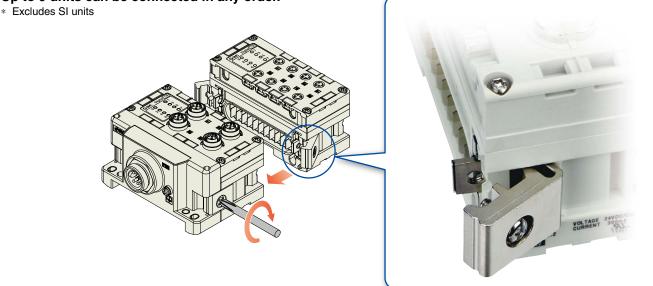




# CONTENTS

### Type 3 Integrated input-output type

# Fieldbus System (For Input/Output) **EX600** Series



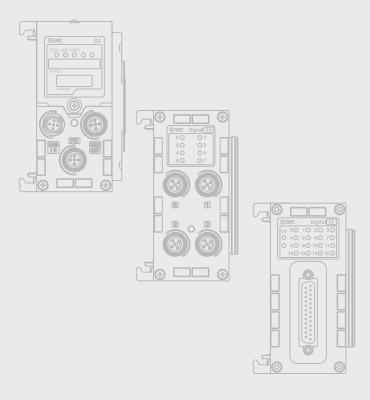

Parts Structure ·····	····· p.	12
How to Order		
SI Unit ·····		
Digital Input Unit ·····		
Digital Output Unit ······	····· p.	13
Digital Input/Output Unit ·····	р.	13
Analog Input Unit ······	····· p.	13
Analog Output Unit ······	·····p.	13
Analog Input/Output Unit ·····	p.	14
IO-Link Unit ······		
End Plate (D side) ·····		
Handheld Terminal ······		
Specifications	•	
All Units Common ······	p.	15
SI Unit ·····	p.	15
Digital Input Unit ·····		
Digital Output Unit ·····		
Digital Input/Output Unit ······		
Analog Input Unit ······		
Analog Output Unit ······		
Analog Input/Output Unit ······		
IO-Link Unit ······		
End Plate ······		
Handheld Terminal ······		
Dimensions		
Parts Description ······		
LED Indicator ······		
LED Indicator ······		
LED Indicator ····································	p.	29
Accessories  1 End Plate Bracket ······	p.	29 33
Accessories  1 End Plate Bracket  2 Valve Plate	p.	29 33
Accessories  1 End Plate Bracket  2 Valve Plate  3 End Plate (U side)	p.	33 33
Accessories  1 End Plate Bracket	ppp.	33 33 34 34
Accessories  1 End Plate Bracket  2 Valve Plate 3 End Plate (U side) 4 Reinforcing Brace 5 Seal Cap (10 pcs.)	pppppppppppp.	33 33 34 34
Accessories  1 End Plate Bracket  2 Valve Plate  3 End Plate (U side)  4 Reinforcing Brace  5 Seal Cap (10 pcs.)  6 Marker (1 sheet, 88 pcs.)	pp	33 33 34 34 34
Accessories  1 End Plate Bracket  2 Valve Plate  3 End Plate (U side)  4 Reinforcing Brace  5 Seal Cap (10 pcs.)  6 Marker (1 sheet, 88 pcs.)  7 Power Supply Cable (7/8 inch connector)	pp	33 33 34 34 34
Accessories  1 End Plate Bracket  2 Valve Plate  3 End Plate (U side)  4 Reinforcing Brace  5 Seal Cap (10 pcs.)  6 Marker (1 sheet, 88 pcs.)  7 Power Supply Cable (7/8 inch connector)  8 Power Supply Field-wireable	p p p p p p.	33 33 34 34 34 35
Accessories  1 End Plate Bracket  2 Valve Plate  3 End Plate (U side)  4 Reinforcing Brace  5 Seal Cap (10 pcs.)  6 Marker (1 sheet, 88 pcs.)  7 Power Supply Cable (7/8 inch connector)  8 Power Supply Field-wireable Connector (7/8 inch)	p p p p p p.	33 33 34 34 34 35
Accessories  1 End Plate Bracket  2 Valve Plate  3 End Plate (U side)  4 Reinforcing Brace  5 Seal Cap (10 pcs.)  6 Marker (1 sheet, 88 pcs.)  7 Power Supply Cable (7/8 inch connector)  8 Power Supply Field-wireable  Connector (7/8 inch)  9 Power Supply Cable	p p p p p p p.	33 34 34 34 35 35
Accessories  1 End Plate Bracket  2 Valve Plate  3 End Plate (U side)  4 Reinforcing Brace  5 Seal Cap (10 pcs.)  6 Marker (1 sheet, 88 pcs.)  7 Power Supply Cable (7/8 inch connector)  8 Power Supply Field-wireable Connector (7/8 inch)  9 Power Supply Cable (M12 connector, For EX600-ED2)	p p p p p p p.	33 34 34 34 35 35
Accessories  1 End Plate Bracket  2 Valve Plate  3 End Plate (U side)  4 Reinforcing Brace  5 Seal Cap (10 pcs.)  6 Marker (1 sheet, 88 pcs.)  7 Power Supply Cable (7/8 inch connector)  8 Power Supply Field-wireable Connector (7/8 inch)  9 Power Supply Cable (M12 connector, For EX600-ED2)	p p p p p p p p.	33 33 34 34 35 35
Accessories  1 End Plate Bracket 2 Valve Plate 3 End Plate (U side) 4 Reinforcing Brace 5 Seal Cap (10 pcs.) 6 Marker (1 sheet, 88 pcs.) 7 Power Supply Cable (7/8 inch connector) 8 Power Supply Field-wireable Connector (7/8 inch) 9 Power Supply Cable (M12 connector, For EX600-ED2) 10 Power Supply Cable (M12 connector, For EX600-ED4/5)	p p p p p p p p.	33 33 34 34 34 35 35 35
Accessories  1 End Plate Bracket 2 Valve Plate 3 End Plate (U side) 4 Reinforcing Brace 5 Seal Cap (10 pcs.) 6 Marker (1 sheet, 88 pcs.) 7 Power Supply Cable (7/8 inch connector) 8 Power Supply Field-wireable Connector (7/8 inch) 9 Power Supply Cable (M12 connector, For EX600-ED2) 10 Power Supply Cable (M12 connector, For EX600-ED4/5) 11 Communication Cable	p p p p p p p p p.	33 34 34 34 35 35 35 36 37
Accessories  1 End Plate Bracket 2 Valve Plate 3 End Plate (U side) 4 Reinforcing Brace 5 Seal Cap (10 pcs.) 6 Marker (1 sheet, 88 pcs.) 7 Power Supply Cable (7/8 inch connector) 8 Power Supply Field-wireable Connector (7/8 inch) 9 Power Supply Cable (M12 connector, For EX600-ED2) 10 Power Supply Cable (M12 connector, For EX600-ED4/5) 11 Communication Cable 12 Field-wireable Communication Connector	p p p p p p p p p.	33 34 34 34 35 35 35 36 37 42
Accessories  1 End Plate Bracket 2 Valve Plate 3 End Plate (U side) 4 Reinforcing Brace 5 Seal Cap (10 pcs.) 6 Marker (1 sheet, 88 pcs.) 7 Power Supply Cable (7/8 inch connector) 8 Power Supply Field-wireable Connector (7/8 inch) 9 Power Supply Cable (M12 connector, For EX600-ED2) 10 Power Supply Cable (M12 connector, For EX600-ED4/5) 11 Communication Cable	p p p p p p p p p.	33 34 34 34 35 35 35 36 37 42
Accessories  1 End Plate Bracket 2 Valve Plate 3 End Plate (U side) 4 Reinforcing Brace 5 Seal Cap (10 pcs.) 6 Marker (1 sheet, 88 pcs.) 7 Power Supply Cable (7/8 inch connector) 8 Power Supply Field-wireable Connector (7/8 inch) 9 Power Supply Cable (M12 connector, For EX600-ED2) 10 Power Supply Cable (M12 connector, For EX600-ED4/5) 11 Communication Cable 2 Field-wireable Communication Connector 13 I/O Cable with Connector, I/O Connector	p p p p p p p p p.	33 34 34 34 35 35 35 36 37 42
Accessories  1 End Plate Bracket 2 Valve Plate 3 End Plate (U side) 4 Reinforcing Brace 5 Seal Cap (10 pcs.) 6 Marker (1 sheet, 88 pcs.) 7 Power Supply Cable (7/8 inch connector) 8 Power Supply Field-wireable Connector (7/8 inch) 9 Power Supply Cable (M12 connector, For EX600-ED2) 10 Power Supply Cable (M12 connector, For EX600-ED4/5) 11 Communication Cable 2 Field-wireable Communication Connector 10 I/O Cable with Connector, I/O Connector	p p p p p p p p p p.	33 34 34 34 35 35 35 36 37 42 43
Accessories  1 End Plate Bracket 2 Valve Plate 3 End Plate (U side) 4 Reinforcing Brace 5 Seal Cap (10 pcs.) 6 Marker (1 sheet, 88 pcs.) 7 Power Supply Cable (7/8 inch connector) 8 Power Supply Field-wireable Connector (7/8 inch) 9 Power Supply Cable (M12 connector, For EX600-ED2) 10 Power Supply Cable (M12 connector, For EX600-ED4/5) 11 Communication Cable 12 Field-wireable Communication Connector 13 I/O Cable with Connector, I/O Connector 14 I/O Cable with Connector, I/O Connector	p p p p p p p p p p.	33 34 34 34 35 35 35 36 37 42 43
Accessories  1 End Plate Bracket 2 Valve Plate 3 End Plate (U side) 4 Reinforcing Brace 5 Seal Cap (10 pcs.) 6 Marker (1 sheet, 88 pcs.) 7 Power Supply Cable (7/8 inch connector) 8 Power Supply Field-wireable Connector (7/8 inch) 9 Power Supply Cable (M12 connector, For EX600-ED2) 10 Power Supply Cable (M12 connector, For EX600-ED4/5) 11 Communication Cable 12 Field-wireable Communication Connector 13 I/O Cable with Connector, I/O Connector 14 Sthernet POWERLINK compatible 2 Modbus/TCP compatible	ppp	33 33 34 34 34 35 35 35 37 42 43
Accessories  1 End Plate Bracket 2 Valve Plate 3 End Plate (U side) 4 Reinforcing Brace 5 Seal Cap (10 pcs.) 6 Marker (1 sheet, 88 pcs.) 7 Power Supply Cable (7/8 inch connector) 8 Power Supply Field-wireable Connector (7/8 inch) 9 Power Supply Cable (M12 connector, For EX600-ED2) 10 Power Supply Cable (M12 connector, For EX600-ED4/5) 11 Communication Cable 12 Field-wireable Communication Connector 13 I/O Cable with Connector, I/O Connector 14 I/O Cable with Connector, I/O Connector	p p p p p p p p p p p p p p p.	33 33 34 34 34 35 35 35 35 42 44 44 44

Specific Product Precautions .....p. 46


# Fieldbus System For Input/Output





# EX600 Series


### **Parts Structure**

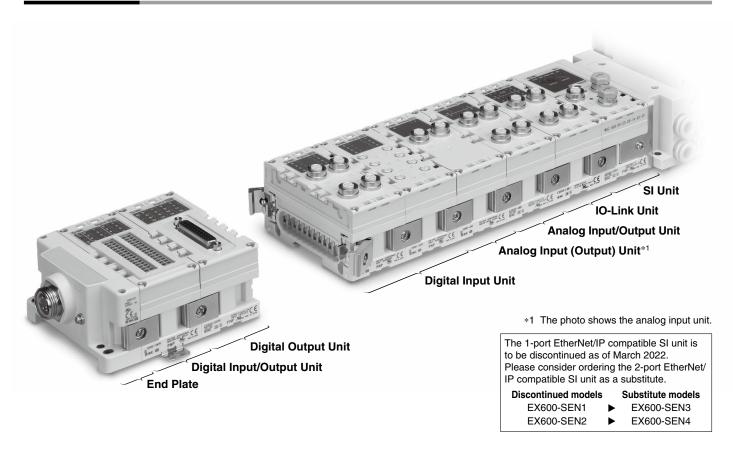

### **How to Order**

SI Unit

EX600-SPR1A-

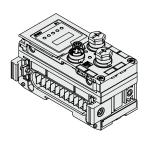

			Specifications
Symbol	Protocol	Output type	Note
PR1A	PROFIBUS DP	PNP (Negative common)	_
PR2A	FROFIBUS DF	NPN (Positive common)	_
DN1A	DeviceNet®	PNP (Negative common)	_
DN2A	Devicemen	NPN (Positive common)	_
MJ1	CC-Link	PNP (Negative common)	_
MJ2	CC-LINK	NPN (Positive common)	_
CF1-X60	CC-Link IE Field	PNP (Negative common)	(Made to order)
EN1		PNP (Negative common)	1 port
EN2		NPN (Positive common)	1 port
EN3	EtherNet/IP™	PNP (Negative common)	2 ports
EN4	Ethernet/IF	NPN(Positive common)	2 ports
EN3-X80		PNP (Negative common)	IO-Link unit
EN3-YOU			(Made to order)
EC1	EtherCAT	PNP (Negative common)	_
EC2	LuielCAI	NPN (Positive common)	_
PN1		PNP (Negative common)	<u> </u>
PN2	PROFINET	NPN (Positive common)	_
PN3	INOFINE	PNP (Negative common)	IO-Link unit
PN4		NPN (Positive common)	IO-Link unit

### Made to order (Refer to page 44.)

Ethernet POWERLINK	
Modbus TCP	
CC-Link IE Field	
NPN (Positive common)	




### **How to Order**

### **Digital Input Unit**



Ν

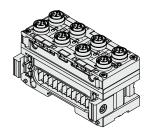


#### Description PNP NPN

#### Number of inputs, open-circuit detection, and connector

Symbol	Number of inputs	Open-circuit detection	Connector
В	8 inputs	No	M12 connector (5 pins) 4 pcs.
С	8 inputs	No	M8 connector (3 pins) 8 pcs.
C1	8 inputs	Yes	M8 connector (3 pins) 8 pcs.
D	16 inputs	No	M12 connector (5 pins) 8 pcs.
E	16 inputs	No	D-sub connector (25 pins)
F	16 inputs	No	Spring type terminal block (32 pins)

### **Digital Output Unit**

## EX600-DYPB

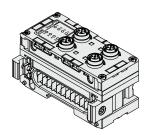


Symbol	Description
Р	PNP
N	NPN

### Number of outputs and connector

Symbol	Number of outputs	Connector
В	8 outputs	M12 connector (5 pins) 4 pcs.
Е	16 outputs	D-sub connector (25 pins)
F	16 outputs	Spring type terminal block (32 pins)

### Digital Input/Output Unit **EX600-DMPF**



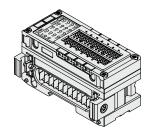

#### Input/Output type

Syn	nbol	Description	
F	•	PNP	
I	1	NPN	

### Number of inputs/outputs and connector

Symbol	Number of inputs	Number of outputs	Connector
Е	8 inputs	8 outputs	D-sub connector (25 pins)
F	8 inputs	8 outputs	Spring type terminal block (32 pins)

### **Analog Input Unit**


### **EX600-AXA**



• Number of input chainless and connector			
Symbol	Number of input channels	Connector	
Δ	2 channels	M12 connector (5 pins) 2 pcs.	

### **Analog Output Unit**


### EX600-AYA

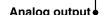

### Number of output channels and connector

Symbol	Number of output channels	Connector
Α	2 channels	M12 connector (5 pins) 2 pcs.



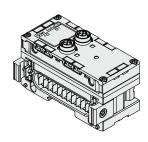



### **How to Order**

### Analog Input/Output Unit EX600 – AM B


Analog input/output

### Number of input/output channels and connector

Symbol	Number of input channels	Number of output channels	Connector	
В	2 channels	2 channels	M12 connector (5 pins) 4 pcs.	

### **IO-Link Unit**

## **EX600-LAB1**

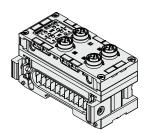

Port specification •			• Number of ports and co			
mbol	Description		Symbol	Number of ports		
Α	Port class A		J	4	М	

Description	Symbol	Number of ports	Connector	
Port class A	D	4 ports	M12 connector	
Port class B	В	4 ports	(5 pins) 4 pcs.	

### 


The only available SI unit part numbers are "EX600-SEN3-X80" (EtherNet/IP™ compatible) and "EX600-SPN3/4" (PROFINET compatible). Refer to page 12.

### End Plate (D side)

For M12

EX600-ED 2

EX600-ED4/5 are not yet UL-compliant.

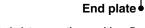

В

End plate mounting position: D side

### Power supply connector

Symbol	Power supply connector	Specifications		
2	2 M12 (5 pins) B-coded			
3	7/8 inch (5 pins)	IN		
4	IN/OUT			
5	M12 (4/5 pins) A-coded*1	IN/OUT		

\*1 The pin layout for the "4" and "5" pin connectors is different.

Refer to the dimensions on page 24.

#### **♦** Mounting method

Symbol	Description	Note		
Nil	Without DIN rail mounting bracket	_		
2	With DIN rail mounting bracket	For SV, S0700, and VQC series		
3	With DIN rail mounting bracket	For SY, JSY, and ZK2□A series		

\* When the end plate (U side) is used, the symbol for the mounting method must be the same as the D side.

### **Handheld Terminal**

For 7/8 inch


EX600-HT1A

Handheld terminals are not yet UL-compliant.



#### Cable length

	Symbol	Description
	Nil	No cable
	1	1 m
	3	3 m

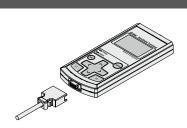


### **Specifications**

### **All Units Common Specifications**

ent	Operating temperature range	range Operating: -10 to 50°C, Stored: -20 to 60°C		
ᆿ	Sto 85% RH (No condensation)			
.≗	Withstand voltage*1 500 VAC for 1 minute between external terminals and FE			
	Insulation resistance*1	500 VDC, 10 M $\Omega$ or more between external terminals and FE		

<sup>\*1</sup> Except handheld terminals

#### SI Unit (EX600-SPR□A)

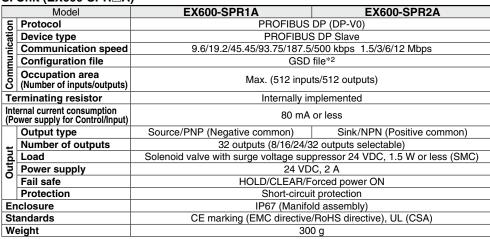

<sup>\*2</sup> The configuration file can be downloaded from the SMC website: https://www.smcworld.com

#### SI Unit (EX600-SDN□A)

٠.	OIIII (EXCOO ODIII-A	<i>1</i>				
	Model	EX600-SDN1A	EX600-SDN2A			
	Protocol	DeviceNet®: Volume 1 (Editio	n 2.1), Volume 3 (Edition 1.1)			
ءِ	Device type	Group 2 O	nly Server			
엹	Communication speed	125/250/	500 kbps			
<u>8</u>	Configuration file	EDS file*3				
Communication	Occupation area (Number of inputs/outputs)	Max. (512 inpu	ts/512 outputs)			
Con	Applicable messages	Duplicate MAC ID Check Message, Group 2 Only Unconnected Explicit Messag Explicit Message (Group 2), Poll I/O Message (Predefined M/S Connection set				
	Applicable function	QuickConnect™				
De	viceNet® power supply	11 to 25 VDC (Current consumption 50 mA or less)				
	ernal current consumption ower supply for Control/Input)	55 mA or less				
	Output type	Source/PNP (Negative common)	Sink/NPN (Positive common)			
_	Number of outputs	32 outputs (8/16/24/32 outputs selectable)				
Output	Load	Solenoid valve with surge voltage suppressor 24 VDC, 1.5 W or less (SMC)				
₹	Power supply	24 VDC, 2 A				
0	Fail safe	HOLD/CLEAR/F	orced power ON			
	Protection	Short-circui	t protection			
En	closure	IP67 (Manifold assembly)				
St	andards	CE marking (EMC directive/RoHS directive), UL (CSA)				
W	eight	300 g				

<sup>\*3</sup> The configuration file can be downloaded from the SMC website: https://www.smcworld.com

### SI Unit (EX600-SMJ

<u> </u>	OTHE (EXCOO ONIO )			
	Model	EX600-SMJ1	EX600-SMJ2	
'n	Protocol	CC-Link (Ver.	1.10, Ver. 2.00)	
ati	Station type	Remote De	vice Station	
這	Communication speed	156/625 kbps 2.5/5/10 Mbps		
<b>E</b>	Configuration file	CSP+	- file*4	
Communication	Occupation area (Number of inputs/outputs)	Max. (512 inputs/512 outputs) 1/2/3/4 stations occupied		
Internal current consumption (Power supply for Control/Input)		75 mA or less		
	Output type	Source/PNP (Negative common)	Sink/NPN (Positive common)	
<b>-</b>	Number of outputs	32 outputs (8/16/24/32 outputs selectable)		
Output	Load	Solenoid valve with surge voltage suppressor 24 VDC, 1.5 W or less (SMC)		
₹	Power supply	24 VDC, 2 A		
0	Fail safe	HOLD/CLEAR/F	orced power ON	
	Protection	Short-circu	it protection	
Enclosure		IP67 (Manifold assembly)		
St	andards	CE marking (EMC directive	/RoHS directive), UL (CSA)	
Weight		30	0 g	

<sup>\*4</sup> The configuration file can be downloaded from the SMC website: https://www.smcworld.com







### **Specifications**



### SI Unit (EX600-SCF1-X60)

Model		EX600-SCF1-X60*1
	Protocol	CC-Link IE Field
	Station type	Intelligent Device Station
_	Communication speed	1 Gbps
ţi	Allowable station number setting	1 to 120
ica	Allowable network number setting	1 to 239
n	Transmission method	Cyclic transmission
Communication	Configuration file	CSP+ file*2
ò	Occupied input size	RX: 32 to 176 bits
0	Occupied iliput size	RWr: 32 to 608 words
	Occupied output size	RY: 32 to 176 bits
	Occupied output size	RWw: 32 to 608 words
Internal current consumption (Power supply for Control/Input)		140 mA or less
	Output type	Source/PNP (Negative common)
	Number of outputs	32 outputs
Ħ	Load	Solenoid valve with surge voltage suppressor
Output	Loau	24 VDC, 1.0 W or less (SMC)
ō	Power supply	24 VDC, 2 A
	Fail safe	HOLD/CLEAR/Forced power ON
	Protection	Short-circuit protection
Er	nclosure	IP67 (Manifold assembly)
St	andards	CE marking (EMC directive/RoHS directive)
W	eight	300 g

- \*1 For details on this product, refer to the SMC website.
- \*2 The configuration file can be downloaded from the SMC website: https://www.smcworld.com

The 1-port EtherNet/IP compatible SI unit is to be discontinued as of March 2022. Please consider ordering the 2-port EtherNet/IP compatible SI unit as a substitute.

Discontinued models		Substitute models
EX600-SEN1	$\blacktriangleright$	EX600-SEN3

EX600-SEN4

EX600-SEN2

### SI Unit (FX600-SEN□)

ЭI	Unit (EX600-SENL)						
	Model	EX600-SEN1	EX600-SEN2	EX600-SEN3	EX600-SEN4	EX600-SEN3-X80	
	Number of communication ports	1 p	ort		2 ports		
	Protocol	EtherN	let/IP™		EtherNet/IP™		
	Protocol	(Conformance ver	(Conformance version: Composite 6) (Conforma		nce version: Cor	mposite 11)	
	Communication speed			10/100 Mbps			
	Communication method		Full duplex/Half duplex				
l o	Configuration file			EDS file*3			
Communication	Occupation area (Number of inputs/outputs)		Max. (512 inputs/512 outputs)				
mmu	IP address setting range			settings: 192.168 ICP server: Optic			
ပိ		Vendor ID: 7 (SI	MC Corporation)	Vendor	ID: 7 (SMC Corp	oration)	
	Device information	Device type: 12 (Communication Adapter) Device t			vice type: 12 (Communication Adapter)		
		Product code: 126		Product code: 203			
	QuickConnect	_			<b>D</b>	•	
	DLR	<del>-</del>				•	
	Web server function	_	_			•	
10	-Link unit	-	<del>_</del>	_	<del>_</del>	•	
	ernal current consumption ower supply for Control/Input)	120 mA or less					
	Output type	Source/PNP	Sink/NPN	Source/PNP	Sink/NPN	Source/PNP	
	Output type	(Negative common)	(Positive common)	(Negative common)	(Positive common)	(Negative common)	
_	Number of outputs	32 outputs (8/16/24/3	32 outputs selectable)	32 outputs			
Output	Load		rge voltage suppressor I or less (SMC)	Solenoid valve with surge voltage suppressor 24 VDC, 1.0 W or less (SMC)			
0	Power supply			24 VDC, 2 A			
	Fail safe		HOLD/C	LEAR/Forced po	ower ON		
	Protection		Sh	ort-circuit protect	tion		
Er	nclosure		IP67	' (Manifold asser	nbly)		
St	andards	CE	marking (EMC	directive/RoHS of	directive), UL (CS	SA)	
Weight		300 q					

<sup>\*3</sup> The configuration file can be downloaded from the SMC website: https://www.smcworld.com



EX600-SEN1/2



EX600-SEN3/4(-X80)




### **Specifications**




### SI Unit (EX600-SEC□)

	Model	EX600-SEC1	EX600-SEC2		
5 Protocol		EtherCAT (Conformance Test Record V.1.2)			
g	Communication speed	100 ľ	Mbps		
Ē	Configuration file	XML	file*1		
Frotocol Communication speed Configuration file Occupation area (Number of inputs/outputs)		Max. (512 inpu	its/512 outputs)		
	ernal current consumption ower supply for Control/Input)	100 mA or less			
	Output type	Source/PNP (Negative common)	Sink/NPN (Positive common)		
1	Number of outputs	32 outputs (8/16/24/32 outputs selectable)			
Output	Load	Solenoid valve with surge voltage sup	pressor 24 VDC, 1.5 W or less (SMC)		
ΙĦ	Power supply	24 VD	C, 2 A		
	Fail safe	HOLD/CLEAR/F	orced power ON		
	Protection	Short-circuit protection			
En	nclosure	IP67 (Manifold assembly)			
St	andards	CE marking (EMC directive/RoHS directive), UL (CSA)			
W	eight	30	0 g		

<sup>\*1</sup> The configuration file can be downloaded from the SMC website: https://www.smcworld.com

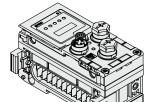

EX600-SPN1/2

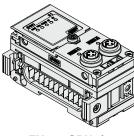

EX600-SPN3/4


#### SI Unit (EX600-SPN□)

<u> </u>	Onit (EXOUG-SFND)					
	Model	EX600-SPN1	EX600-SPN2	EX600-SPN3	EX600-SPN4	
	Ductocal	PROFINET IO		PROFINET IO		
_	Protocol	(Conforman	ce Class B)	(Conforman	ce Class C)	
ē	Communication speed		100	Mbps		
ca	Configuration file		GSDM	L file*2		
Ē	Fast Start Up					
틸	(Communication connection time)	(Appro	ox. 2 s)	(Approx.	500 ms)	
Communication	MRP	_	_			
0	System Redundancy S2	_				
	Web server	_		•		
10	-Link unit	_		•		
Cı	irrent consumption	120 mA or less				
	Outment torns	Source/PNP	Sink/NPN	Source/PNP	Sink/NPN	
4	Output type	(Negative common)	(Positive common)	(Negative common)	(Positive common)	
Output	Number of outputs		32 oı	utputs		
Ĭ	Load	Solenoid valve with surge voltage suppressor 24 VDC, 1.0 W or less (SMC)				
	Fail safe	HOLD/CLEAR/Forced power ON				
	Protection	Short-circuit protection				
Er	closure	IP67 (Manifold assembly)				
St	andards	CE marking (EMC directive/RoHS directive), UL (CSA)				
W	eight	300 g				


<sup>\*2</sup> The configuration file can be downloaded from the SMC website: https://www.smcworld.com




### **Specifications**

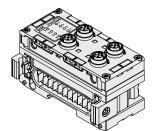


EX600-DX□B

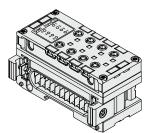

EX600-DX□C□

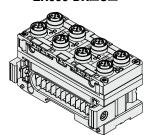

EX600-DX□D

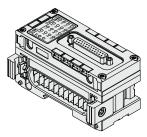

EX600-DX□E




**Digital Input Unit** 

_	Signal input offic							
Model		EX600-DXPB	EX600-DXNB	EX600-DXPC□	EX600-DXNC□	EX600-DXPD	EX600-DXND	
	Input type		PNP	NPN	PNP	NPN	PNP	NPN
	Input connector		M12 (5-pir	ı) socket*1	M8 (3-pin	) socket*3	M12 (5-pir	n) socket*1
	Number of inpu	uts	8 inputs (2 inp	uts/Connector)	8 inputs (1 inp	out/Connector)	16 inputs (2 inp	uts/Connector)
	Supplied voltage	ge			24 \	/DC		
	Max. supplied current			onnector Unit		onnector Unit		onnector Unit
Input	Protection			Short-circuit protection				
드	Input current (at	24 VDC)	9 mA or less					
	ON voltage		17 V or more (At NPN input, between the pin for input terminal and supplied voltage of +24 V) (At PNP input, between the pin for input terminal and supplied voltage of 0 V)					
	OFF voltage		5 V or less (At NPN input, between the pin for input terminal and supplied voltage of +24 V) (At PNP input, between the pin for input terminal and supplied voltage of 0 V)					
	Open circuit	2 wires	_	_	0.5 mA	/Input*2	_	_
	detection current	3 wires	_	_	0.5 mA/Cd	onnector*2	_	_
Cu	Current consumption		50 mA	or less	55 mA	or less	70 mA	or less
En	closure	IP67 (Manifold assembly)						
Sta	andards		CE marking (EMC directive/RoHS directive), UL (CSA)					
We	eight		30	0 g	27	5 g	34	0 g


- \*1 M12 (4-pin) connector can be connected.
  \*2 Function only applies to the EX600-DX□C1.
  \*3 When connecting the M8 plug connector, the tightening torque must be 0.2 N·m ±10%. If tightened with an excessive tightening torque, this may cause the connector thread of the unit to break.

	Model	EX600-DXPE	EX600-DXNE	EX600-DXPF	EX600-DXNF	
	Input type	PNP	NPN	PNP	NPN	
	Input connector		et (25 pins) No.4-40 UNC	Spring type terminal block (32 pins)		
	Number of inputs	16 ir	puts	16 inputs (2 inp	outs x 8 blocks)	
	Supplied voltage		24 \	/DC		
Input	Max. supplied current	2 A/	2 A/Unit		/Block /Unit	
-	Protection		Short-circuit protection			
	Input current (at 24 VDC)		5 mA or less			
	ON voltage	,	17 V or more (At NPN input, between the pin for input terminal and supplied voltage of +24 V) (At PNP input, between the pin for input terminal and supplied voltage of 0 V)			
	OFF voltage	5 V or less (At NPN input, between the pin for input terminal and supplied voltage of +24 V) (At PNP input, between the pin for input terminal and supplied voltage of 0 V)				
Αį	plicable wire	_	_	0.08 to 1.5 mm <sup>2</sup> (AWG16 to 28)		
Cı	irrent consumption	50 mA	or less	55 mA	or less	
Er	nclosure	IP40 (Manifold assembly)				
St	andards	CE marking (EMC directive/RoHS directive), UL (CSA)				
W	eight	300 g				


### **Specifications**

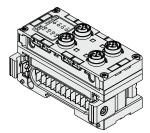

EX600-DY□B

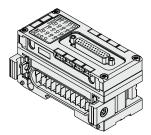

EX600-DY□E EX600-DM□E

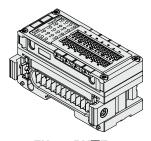

EX600-DY□F EX600-DM□F

### **Digital Output Unit**


	Signar Output Onit						
		EX600-DYPB	EX600-DYNB	EX600-DYPE	EX600-DYNE	EX600-DYPF	EX600-DYNF
	Output type	PNP	PNP NPN		NPN	PNP	NPN
	Output connector	M12 (5-pir	M12 (5-pin) socket*1		et (25 pins) No.4-40 UNC	Spring type terminal block (32 pins)	
l d	Number of outputs	8 outputs (2 out	puts/Connector)	16 ou	ıtputs	16 outputs (2 ou	tputs x 8 blocks)
Output	Supplied voltage			24 \	/DC		
	Max. load current			0.5 A/Output 2 A/Unit			
	Protection			Short-circu	t protection		
Ap	pplicable wire				1.5 mm² 6 to 28)		
Cı	irrent consumption	50 mA or less					
En	closure	IP67 IP40 (Manifold assembly) (Manifold assembly)					
Sta	andards	CE marking (EMC directive/RoHS directive), UL (CSA)					
W	eight	300 g					

<sup>\*1</sup> M12 (4-pin) connector can be connected.

### **Digital Input/Output Unit**

	Model	EX600-DMPE	EX600-DMNE	EX600-DMPF	EX600-DMNF	
Input/Output type		PNP	NPN	PNP	NPN	
Co	onnector	D-sub sock Lock screw: I	\ I /	Spring type terming	nal block (32 pins)	
	Number of inputs	8 in	outs	8 inputs (2 inp	uts x 4 blocks)	
	Supplied voltage		24 \	/DC		
	Max. supplied current	2 A/	Unit		/Block /Unit	
Input	Protection		Short-circu	it protection		
Ξ	Input current (at 24 VDC)		5 mA	or less		
	ON voltage	17 V or more (At NPN input, between the pin for input terminal and supplied voltage of +24 V) (At PNP input, between the pin for input terminal and supplied voltage of 0 V)				
	OFF voltage	5 V or less (At NPN input, between the pin for input terminal and supplied voltage of +2 (At PNP input, between the pin for input terminal and supplied voltage of 0 V)				
	Number of outputs	8 out	tputs	8 outputs (2 outputs x 4 blocks)		
Ħ	Supplied voltage	24 VDC				
Output	Max. load current	0.5 A/Output 2 A/Unit				
	Protection		Short-circui	it protection		
Αŗ	pplicable wire	_	_	0.08 to 1.5 mm <sup>2</sup>	2 (AWG16 to 28)	
Cı	urrent consumption	50 mA	or less	60 mA	or less	
Er	nclosure	IP40 (Manifold assembly)				
St	andards	CE marking (EMC directive/RoHS directive), UL (CSA)				
W	eight	300 g				

### **Specifications**

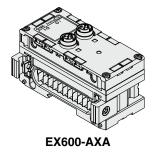

### **Analog Input Unit**

	Model		EX600	)-AXA		
	Input type		Voltage input	Current input		
	Input conn	ector	M12 (5-pin) socket*1			
	Input channel		2 channels (1 cha	annel/Connector)		
	Supplied v	oltage	24 \	/DC		
	Max. suppl	ied current	0.5 A/Co	onnector		
=	Protection		Short-circui	it protection		
Ιdυ	Input	12 bit resolution	0 to 10 V, 1 to 5 V, 0 to 5 V	0 to 20 mA, 4 to 20 mA		
-	signal range	16 bit resolution	–10 to 10 V, –5 to 5 V	–20 to 20 mA		
	Max. rated	input signal	±15 V	±22 mA*2		
	Input impe	dance	100 kΩ	50 Ω		
	Linearity (2	!5°C)	±0.05% F.S.			
	Repeatabil	ity (25°C)	±0.15°	% F.S.		
	Absolute acc	curacy (25°C)	±0.5% F.S.	±0.6% F.S.		
Cı	Current consumption		70 mA	or less		
En	Enclosure		IP67 (Manifold assembly)			
St	Standards		CE marking (EMC directive/RoHS directive), UL (CSA)			
W	Weight		29	0 g		

- \*1 M12 (4-pin) connector can be connected.
  \*2 When input signal exceeds 22 mA, the protection function activates and the input signal is interrupted.




### **Analog Output Unit**

	Model		EX600	)-AYA		
	Output type	•	Voltage output	Current output		
	Output con	nector	M12 (5-pir	n) socket*3		
	Output cha	nnel	2 channels (1 cha	annel/Connector)		
	Supplied vo	oltage	24 \	/DC		
	Max. load o	urrent	0.5 A/Co	onnector		
Output	Protection		Short-circuit protection			
Out	Output signal range	12 bit resolution	0 to 10 V, 1 to 5 V, 0 to 5 V	0 to 20 mA, 4 to 20 mA		
	Load impedance		1 k $\Omega$ or more	600 Ω or less		
	Linearity (2	5°C)	±0.05% F.S.			
	Repeatabili	ty (25°C)	±0.15% F.S.			
	Absolute acc	curacy (25°C)	±0.5% F.S.	±0.6% F.S.		
Сι	Current consumption		70 mA or less			
En	Enclosure		IP67 (Manifold assembly)			
Sta	andards		CE marking (EMC directive/RoHS directive), UL (CSA)			
W	Weight		29	0 g		

<sup>\*3</sup> M12 (4-pin) connector can be connected.



### **Specifications**

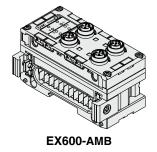


**Analog Input/Output Unit** 

Model		el	EX600	-AMB			
	Input type		Voltage input	Current input			
	Input conn	ector	M12 (5-pin) socket*1				
	Input chan	nel	2 channels (1 channel/Connector)				
	Supplied v	oltage	24 VDC				
	Max. suppl	ied current	0.5 A/Co	onnector			
<u>_</u>	Protection		Short-circui	t protection			
Input	Input signal range	12 bit resolution	0 to 10 V, 1 to 5 V, 0 to 5 V	0 to 20 mA, 4 to 20 mA			
	Max. rated	input signal	15 V	22 mA*2			
	Input impe	dance	100 kΩ	250 Ω			
	Linearity (25°C)		±0.05% F.S.				
	Repeatability (25°C)		±0.15% F.S.				
	Absolute accuracy (25°C)		±0.5% F.S.	±0.6% F.S.			
	Output type		Voltage output	Current output			
	Output connector		M12 (5-pin) socket*1				
	Output cha	innel	2 channels (1 channel/Connector)				
	Supplied voltage		24 VDC				
_	Max. load o	current	0.5 A/Connector				
Output	Protection		Short-circui	t protection			
ō	Output signal range	12 bit resolution	0 to 10 V, 1 to 5 V, 0 to 5 V	0 to 20 mA, 4 to 20 mA			
	Load impe	dance	1 k $\Omega$ or more	600 $\Omega$ or less			
	Linearity (2	25°C)	±0.059	% F.S.			
	Repeatabil	ity (25°C)	±0.159	% F.S.			
Absolute accuracy (25°C)		curacy (25°C)	±0.5% F.S.	±0.6% F.S.			
Current consumption		umption	100 mA	or less			
Eı	nclosure		IP67 (Manifo	3,			
St	andards		CE marking (EMC directive	/RoHS directive), UL (CSA)			
Weight			300	O g			


<sup>\*1</sup> M12 (4-pin) connector can be connected. \*2 When input signal exceeds 22 mA, the protection function activates and the input signal is interrupted.

### **Specifications**

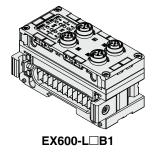

### **IO-Link Unit**

Model		EX600	-LAB1	EX600-LBB1
IO-Link version			Version	on 1.1
IO	-Link port class	Clas	ss A	Class B
C	ommunication speed	COM1 (4.8 kBaud) COM2 (38.4 kBaud) COM3 (230.4 kBaud) * Changes automatically according to the connected device		
N	umber of IO-Link ports		4	1
	ompatible SI unit rotocol)		EX600-SPN3/4 EX600-SEN3-X8	
Max. supply current	Device power supply (L+)		onnector Unit)	0.5 A/Connector (1 A/Unit)
Max. supp	External power supply (P24)	_	_	1.6 A/Connector (3 A/Unit)
	Pin no.	2	4	4
	Input type		PN	NP .
Input	Protection	Short-circuit protection		
Ξ	Rated input current	Approx. 2.5 mA		Approx. 5.8 mA
	ON voltage		13 V o	r more
	OFF voltage		8 V o	r less
	Pin no.			1
Ħ	Output type	PNP		
Output	Max. load current (C/Q line)	0.25 A/Output (Supplied from the power supply for control/input)		
	Protection		Short-circui	t protection
Cı	urrent consumption		50 mA	or less
Er	nclosure	IP67 (Manifold assembly)		
St	andards	CE marking (EMC directive/RoHS directive), UL (CSA)		
W	eight		32	0 g

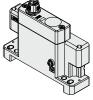



EX600-ED2-□

EX600-ED4/5-□




EX600-ED3-□

#### **End Plate**

Model		Model	EX600-ED2-□	EX600-ED3-□	EX600-ED4/5-		
ns	Power supply	PWR IN	M12 (5-pin) plug	7/8 inch (5-pin) plug	M12 (4-pin) plug		
specifications	connector	PWR OUT	_	_	M12 (5-pin) socket		
cific	Rated	Power supply for control/input		24 VDC ±10%			
	voltage	Power supply for output	24 VDC +10/-5%				
Power	Rated	Power supply for control/input	Max 2 A	Max. 8 A	Max. 4 A		
P.	current	Power supply for output	Max. 2 A	IVIAX. O A	IVIAX. 4 A		
En	nclosure		IP67 (Manifold assembly)				
Standards*1		CE marking (EMC directive/RoHS directive), UL (CSA)					
We	eight		170 g	175 g	170 g		

<sup>\*1</sup> The EX600-ED4/5- $\square$  is not compliant with UL (CSA) standards.

#### **Handheld Terminal**

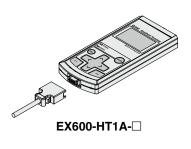


Model	EX600-HT1A-□		
Power supply	Power supplied from SI unit connector (24 VDC)		
Current consumption	50 mA or less		
Display	LCD with backlight		
Connection cable	Handheld terminal cable (1 m ··· EX600-AC010-1, 3 m ··· EX600-AC030-1)		
Enclosure	IP20		
Standards*1	CE marking (EMC directive/RoHS directive)		
Weight 160 g			


- \*1 The handheld terminal is not compliant with UL (CSA) standards.
- \* Cannot be used with the EX600-SPN3/4 and EX600-LAB1/LBB1




### **Dimensions**


### SI Unit

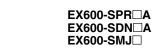


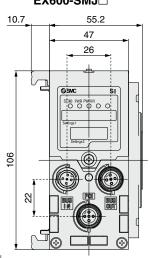


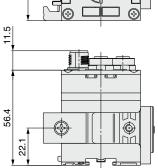


### EX600-SEN□(-X80) EX600-SEC□ EX600-SPN1/2

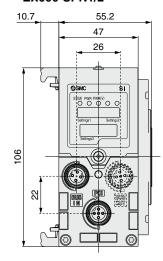


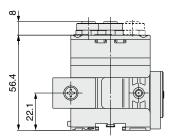


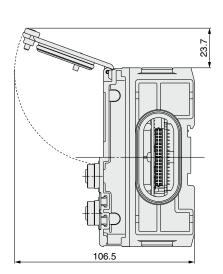

### EX600-SPN3/4

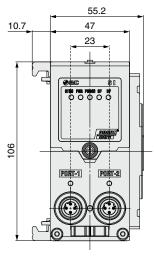


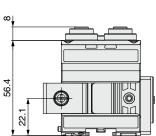


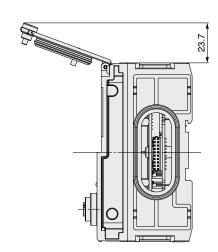


### **Dimensions**


### End Plate (D side) EX600-ED2

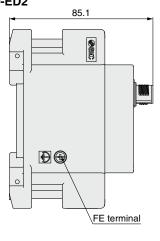


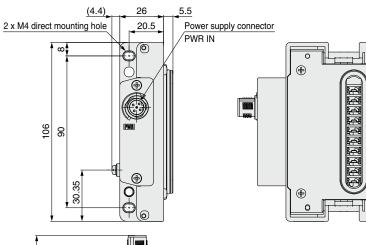


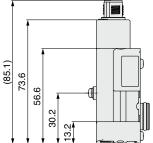

#### EX600-ED4/ED5

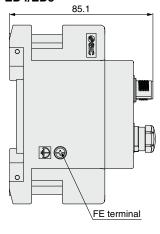

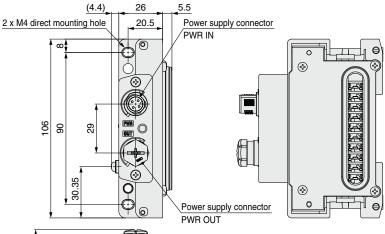

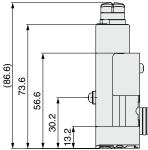

## Power supply connector PWR IN: M12 5-pin plug, B-coded

<u>   </u>			
Configuration	EX600-ED2		
Configuration	Pin no.	Description	
	1	24 V (for output)	
2 1	2	0 V (for output)	
5(00)	3	24 V (for control/input)	
3 4	4	0 V (for control/input)	
	5	FE	

# Power supply connector PWR IN: M12 4-pin plug, A-coded


Configuration	EX600-ED4 (Pin arrangement 1)		EX600-ED5 (Pin arrangement 2)	
Corniguration	Pin no.	Description	Pin no.	Description
3 _ 2	1	24 V (for control/input)	1	24 V (for output)
		24 V (for output)	2	0 V (for output)
		0 V (for control/input)	3	24 V (for control/input)
4 1	4	0 V (for output)	4	0 V (for control/input)


## Power supply connector PWR OUT: M12 5-pin socket, A-coded

Configuration	EX600-ED4 (Pin arrangement 1)		EX600-ED5 (Pin arrangement 2)	
Corniguration	Pin no.	in no. Description		Description
1 2	1	24 V (for control/input)	1	24 V (for output)
1'60°	2	24 V (for output)	2	0 V (for output)
(%)	3	0 V (for control/input)	3	24 V (for control/input)
4 5 3	4	0 V (for output)	4	0 V (for control/input)
. 5	5	Unused	5	Unused



### **Dimensions**

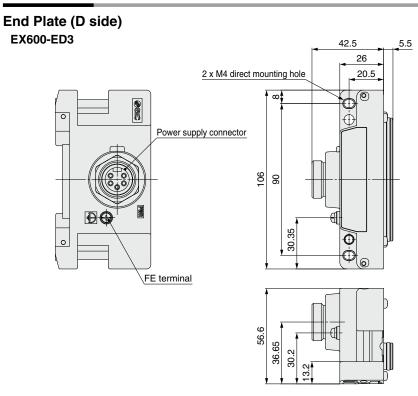

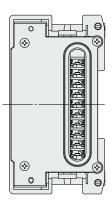

Power supply connector PWR: 7/8 inch 5-pin plug


· · · · · · · · · · · · · · · · · · ·		
Configuration	Pin no.	Description
	1	0 V (for output)
	2	0 V (for control/input)
2 4	3	FE
	4	24 V (for control/input)
<u></u>	5	24 V (for output)




### **Dimensions**


### **Digital Unit**


EX600-DX□B EX600-DY□B

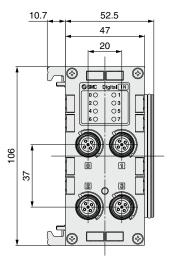

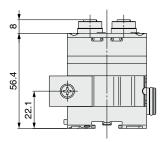



EX600-DX□E EX600-DY□E EX600-DM□E

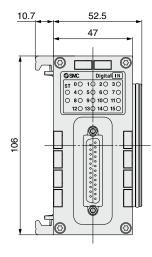

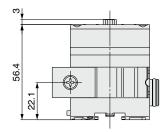



EX600-DX□C□

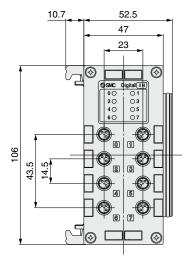

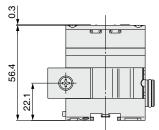



#### EX600-DX□D

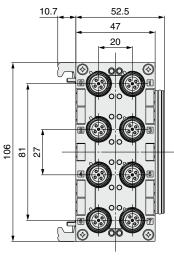


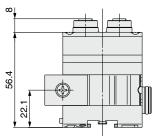

EX600-DX□F EX600-DY□F EX600-DM□F

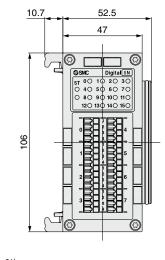

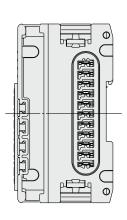


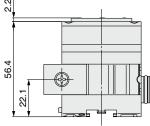


### **Dimensions**


### **Analog Unit**


# EX600-AXA EX600-AYA

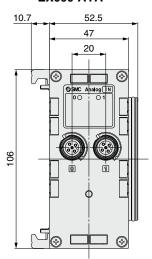


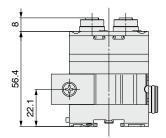

### EX600-AMB

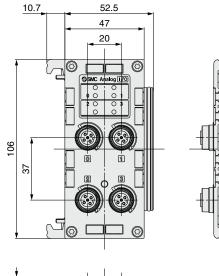


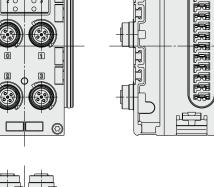


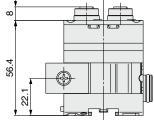



### **IO-Link Unit**

# EX600-LAB1 EX600-LBB1

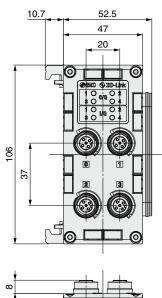

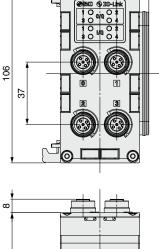


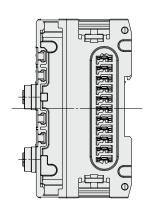

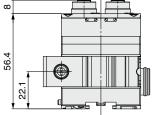

### **Parts Description**

### SI Unit

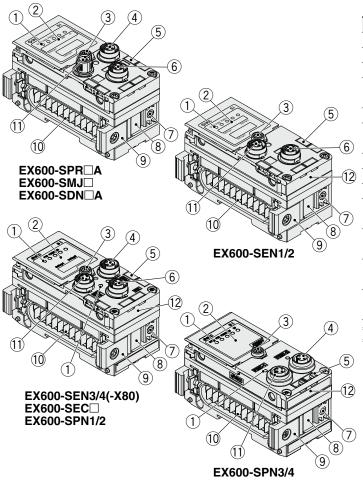


No.	Name	Use
1	Status indication LED	Displays unit status
2	Indication cover	Open for setting the switch.
3	Indication cover set screw	Loosen for opening the indication cover.
4	Connector (BUS OUT)	Connects to the fieldbus output cable (SPEEDCON)*1
5	Marker groove	Can be used to mount a marker
6	Connector (PCI)	Connects to the handheld terminal cable (SPEEDCON)
7	Valve plate mounting holes	Fixes a valve plate in place
8	Valve plate mounting groove	Inserts a valve plate
9	Joint bracket	Links units to one another
10	Connector for unit (Plug)	Transmits signals to the neighboring unit and supplies power
11	Connector (BUS IN)	Connects to the cable for fieldbus input (SPEEDCON)*1
12	MAC address name plate*2	Displays a unique 12-digit MAC address for each SI unit
13	Seal cap	Mounted on the connectors (BUS OUT and PCI) at the time of shipment


- \*1 The EX600-SPN3/4 is not SPEEDCON compatible.
- \*2 MAC address name plate is not provided on the EX600-SEC□.





### **Digital Unit**

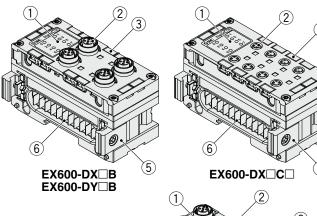

No.	Name	Use	
1	Status indication LED	Displays unit status	
2	Connector	Connects with input or output devices (Only the EX600-D□□B and EX600-DX□D are SPEEDCON compatible.)	
3	Marker groove	Can be used to mount a marker	
4	Lock screw	Secures the D-sub connector in place (No.4-40 UNC)	
5	Joint bracket	Links units to one another	
6	Connector for unit (Plug)	Transmits signals to the neighboring unit and supplies power	

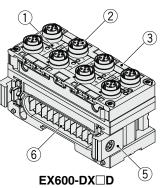

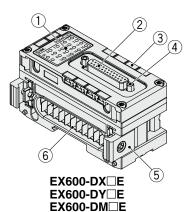


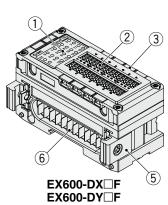

EX600-DM□F


### **Parts Description**

### **Analog Unit**

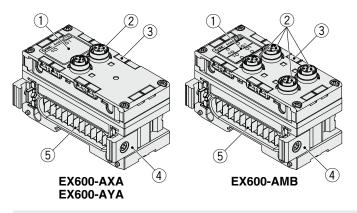


No.	Name	Use
1	Status indication LED	Displays unit status
2	Connector	Connects with input or output devices (SPEEDCON)
3	Marker groove	Can be used to mount a marker
4	Joint bracket	Links units to one another
5	Connector for unit (Plug)	Transmits signals to the neighboring unit and supplies power

### **IO-Link Unit**

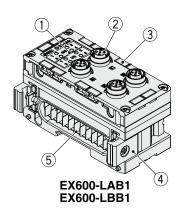


No.	Name	Use
1	Status indication LED	Displays unit status
2	Connector	Connects with IO-Link, input, or output devices (SPEEDCON)
3	Marker groove	Can be used to mount a marker
4	Joint bracket	Links units to one another
5	Connector for unit (Plug)	Transmits signals to the neighboring unit and supplies power

### **End Plate**

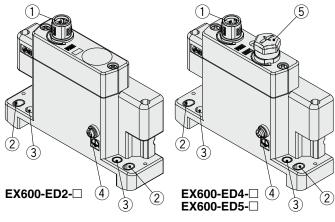


No.	Name	Use
1	Power connector (PWR IN)	Supplies power to the unit and/or input/ output device (Only the EX600-ED2/ED4/ ED5-□ is SPEEDCON compatible.)
2	Fixing hole for direct mounting	Connects directly to equipment
3	Fixing hole for DIN rail	Converts to manifold or for DIN rail mounting
4	FE terminal	Used for grounding Ground this terminal securely to improve noise immunity.
5	Connector (Unused) Power connector (PWR OUT)	Supplies power to the device on the downstream side

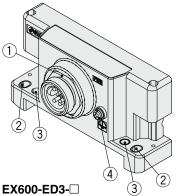


### **LED Indicator**


#### EX600-SPR□A

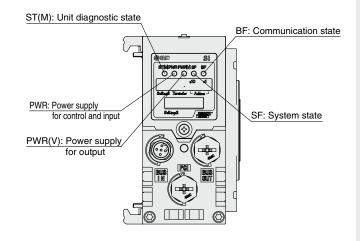


#### EX600-SDN□A

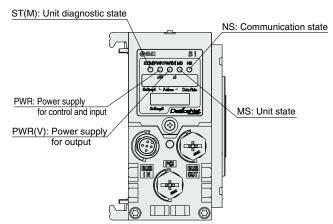


#### EX600-SEN1/SEN2

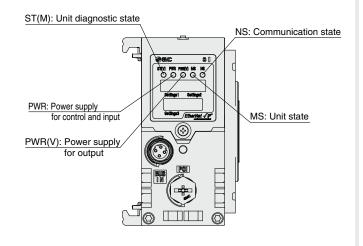


### EX600-SEN3/SEN4(-X80)

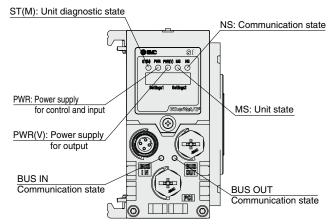

#### EX600-SEC□

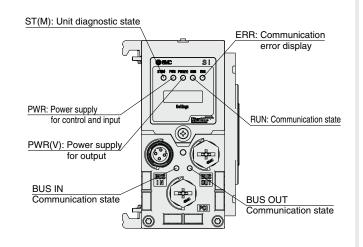


### EX600-SPN1/SPN2

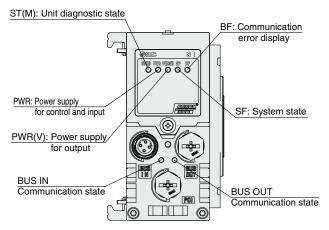


### **LED Indicator**


#### EX600-SPN3/SPN4

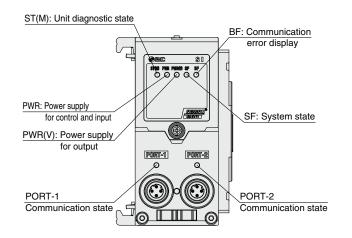


#### EX600-SMJ□

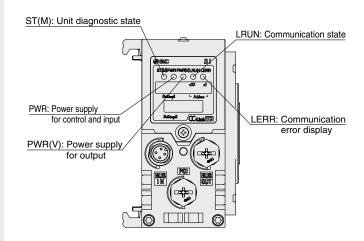


### EX600-DX□B

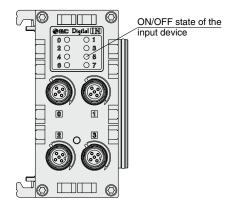


### EX600-DX□C□

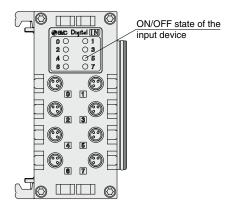

### EX600-DX□D

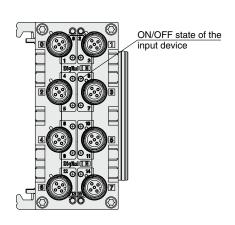


### EX600-DX□E

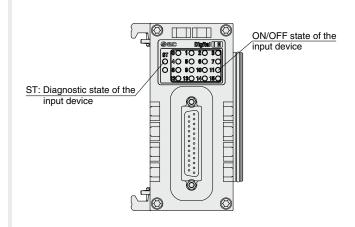




### **LED Indicator**


#### EX600-DX□F

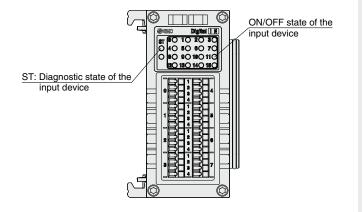


#### EX600-DY□B

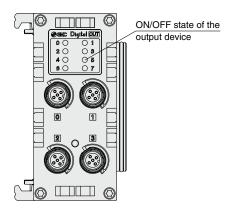


### EX600-DY□E

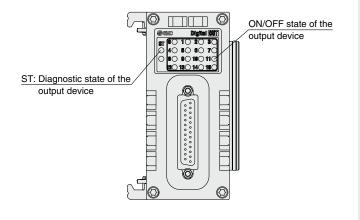


### EX600-DY□F

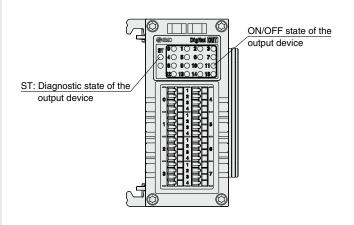

### EX600-DM□E

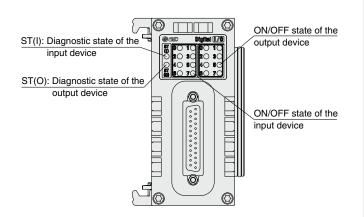


### EX600-DM□F

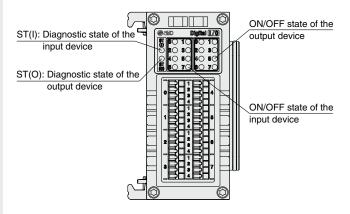


### **LED Indicator**


### EX600-AXA

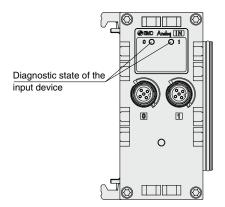


### EX600-AYA

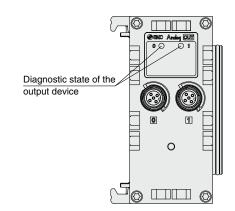


### EX600-AMB

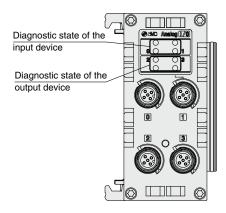

### **EX600-LAB1**

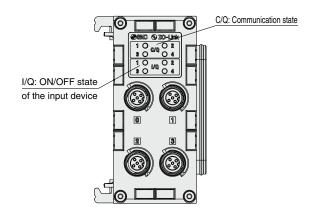


### **EX600-LBB1**

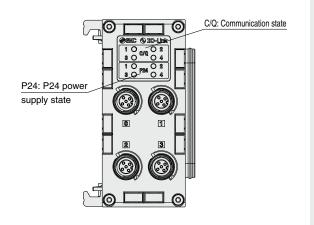



# EX600 Series Accessories

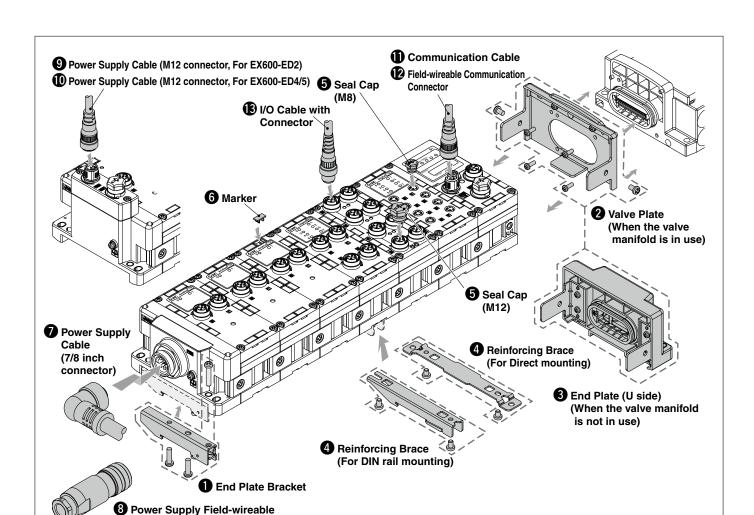

### • End Plate Bracket

This bracket is used for the end plate of DIN rail mounting.

Connector (7/8 inch)



#### **EX600-ZMA2**

### **Enclosed parts**

Round head screw (M4 x 20) 1 pc. P-tight screw (4 x 14) 2 pcs.


#### EX600-ZMA3

(Specialized for SY series)

#### **Enclosed parts**

Round head screw with washer (M4 x 20)  $\,$  1 pc. P-tight screw (4 x 14)  $\,$  2 pcs

### 2 Valve Plate

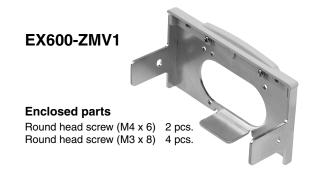

### **EX600-ZMV2**

(Specialized for SY series)


#### **Enclosed parts**


Round head screw (M4 x 6) 2 pcs. Round head screw (M3 x 8) 2 pcs.



# Send Plate (U side)

The end plate is for use when the manifold valve is not connected.

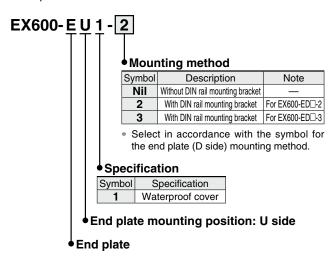

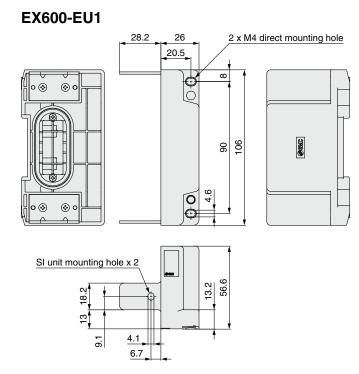


#### **Enclosed parts**

Round head screw (M4 x 5) 2 pcs.

# Reinforcing Brace

This bracket is used on the bottom of the unit at the intermediate position for connecting 6 units or more.

\* Be sure to attach this bracket to prevent connection failure between the units caused by deflection.

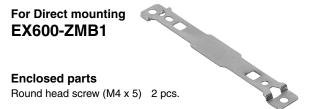

#### For DIN rail mounting **EX600-ZMB2**



# Seal Cap (10 pcs.)


Be sure to mount a seal cap on any unused I/O connectors. Otherwise, the specified enclosure cannot be maintained.





# 6 Marker (1 sheet, 88 pcs.)

The signal name of I/O device and each unit address can be entered and mounted on each unit.

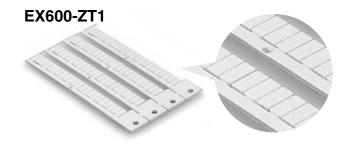

# Power Supply Cable (7/8 inch connector)


 PCA-1558810
 Straight 2 m


 PCA-1558823
 Straight 6 m

 PCA-1558836
 Right angled 2 m


 PCA-1558849
 Right angled 6 m

# Straight connector type

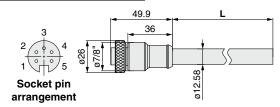

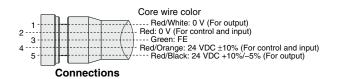

# Angled connector type

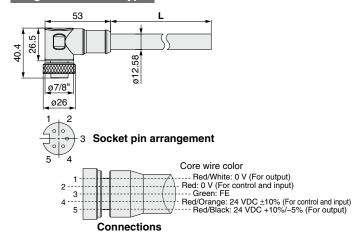

# Power Supply Field-wireable Connector (7/8 inch)

PCA-1578081

Socket [compatible with AWG22-16]



#### **Applicable Cable**

Item	Specifications
Cable O.D.	ø12.0 to 14.0 mm
Wire gauge (Stranded wire cross section)	0.34 to 1.5 mm <sup>2</sup> AWG22 to 16

# Power Supply Cable (M12 connector, For EX600-ED2) \* The shape of the M12 connector is B-coded (Reverse key).

 PCA-1564927
 Straight 2 m

 PCA-1564930
 Straight 6 m


 PCA-1564943
 Right angled 2 m


 PCA-1564969
 Right angled 6 m




SPEEDCON


#### Straight connector type

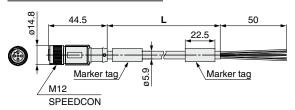

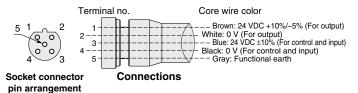

# Angled connector type

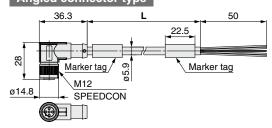

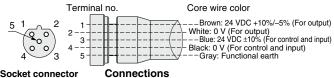

Socket connector pin arrangement B-coded (Reverse key)


Item	Specifications
Cable O.D.	ø5.9 mm
Conductor nominal cross section	0.34 mm <sup>2</sup> /AWG22
Wire O.D. (Including insulator)	1.27 mm
Min. bending radius (Fixed)	59 mm

B-coded (Reverse key)


# Accessories **EX600** Series

# **(M12 connector, For EX600-ED4/5)**

\* The shape of the M12 connector is A-coded (Normal key).

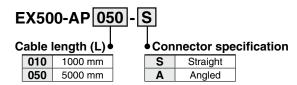


# Straight connector type

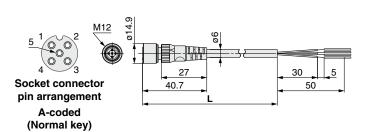


Item	Specifications
Cable O.D.	ø6 mm
Nominal cross section	0.3 mm <sup>2</sup> /AWG22
Wire diameter (Including insulator)	1.5 mm
Min bending radius	40 mm (Fixed)


# **Angled connector type**

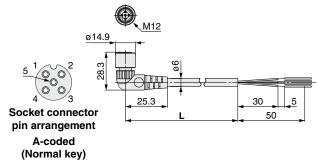


Item	Specifications
Cable O.D.	ø6 mm
Nominal cross section	0.3 mm <sup>2</sup> /AWG22
Wire diameter (Including insulator)	1.5 mm
Min. bending radius	40 mm (Fixed)

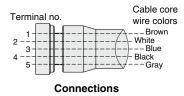

# SPEEDCON

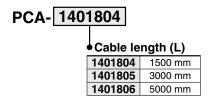



PCA- 1557769 1557769 3000 mm

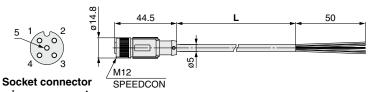


pin arrangement A-coded (Normal key)

Item	Specifications
Cable O.D.	ø5 mm
Nominal cross section	0.3 mm <sup>2</sup> /AWG22
Wire diameter (Including insulator)	1.27 mm
Min bending radius	21.7 mm (Fixed)

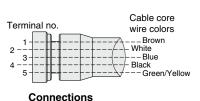

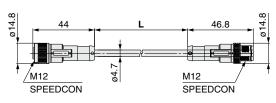

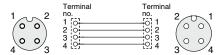


pin arrangement A-coded


Socket connector Connections (Normal key)

Plug connector pin arrangement A-coded (Normal key)




# Communication Cable

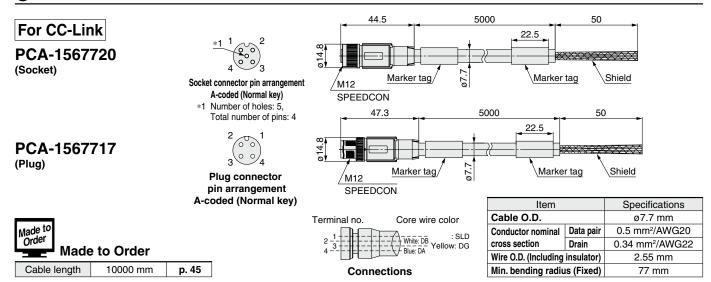

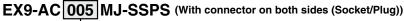


<b>Cable length (L)</b>		
005	500 mm	
010	1000 mm	
020	2000 mm	
030	3000 mm	
050	5000 mm	
100	10000 mm	


Item		Specifications
Cable O.D.		ø7.7 mm
Conductor nominal	Data pair	0.5 mm <sup>2</sup> /AWG20
cross section	Drain	0.34 mm <sup>2</sup> /AWG22
Wire O.D. (Including insulator)		2.55 mm
Min. bending radius (Fixed)		77 mm

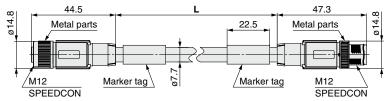


Plug connector pin arrangement

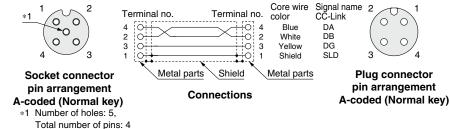


# EX9-AC 005 MJ-SAPA (With angled connector on both sides (Socket/Plug))

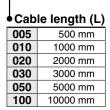

Item		Specifications
Cable O.D.		ø7.7 mm
Conductor nominal	Data pair	0.5 mm <sup>2</sup> /AWG20
cross section	Drain	0.34 mm <sup>2</sup> /AWG22
Wire O.D. (Including insulator)		2.55 mm
Min. bending radius (Fixed)		77 mm

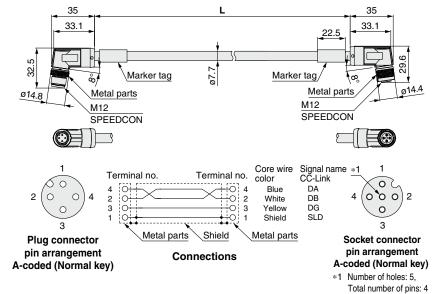


# Communication Cable

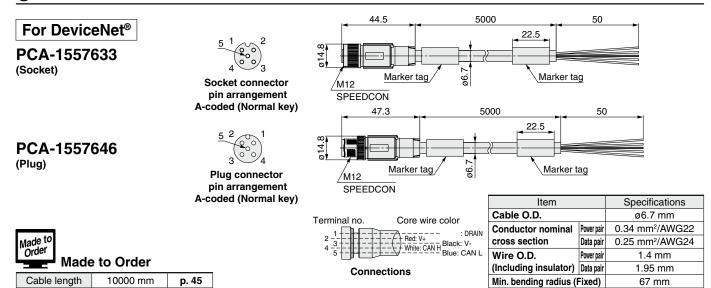


# EX9-AC 005 DN-SSPS (With connector on both sides (Socket/Plug)) Cable length (L) Metal parts


	· · · · · · · · · · · · · · · · · · ·
005	500 mm
010	1000 mm
020	2000 mm
030	3000 mm
050	5000 mm
100	10000 mm

Item		Specifications
Cable O.D.		ø6.7 mm
Conductor nominal	Power pair	0.34 mm <sup>2</sup> /AWG22
cross section	Data pair	0.25 mm <sup>2</sup> /AWG24
Wire O.D.	Power pair	1.4 mm
(Including insulator)	Data pair	1.95 mm
Min. bending radius (Fixed)		67 mm

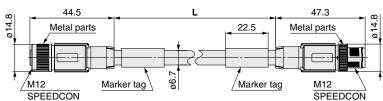


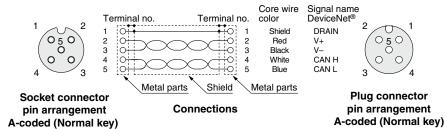


# EX9-AC 005 DN-SAPA (With angled connector on both sides (Socket/Plug))

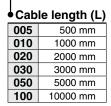

Item		Specifications
Cable O.D.		ø6.7 mm
Conductor nominal	Power pair	0.34 mm <sup>2</sup> /AWG22
cross section	Data pair	0.25 mm <sup>2</sup> /AWG24
Wire O.D.	Power pair	1.4 mm
(Including insulator)	Data pair	1.95 mm
Min. bending radius (Fixed)		67 mm

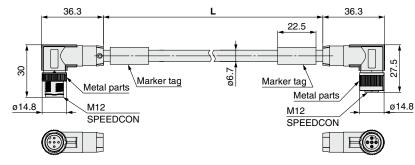

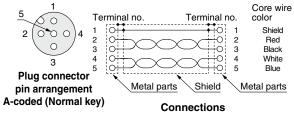

Socket connector pin arrangement A-coded (Normal key)

050


# **①** Communication Cable




PCA-1557688


(Socket)


PCA-1557691 (Plug)

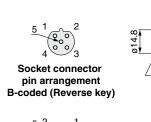

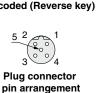

B-coded (Reverse key)

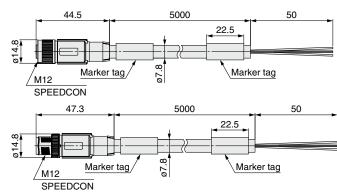

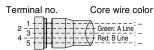


Shield line is connected to the knurl.


Connections

Item	Specifications
Cable O.D.	ø7.8 mm
Conductor nominal cross section	0.34 mm <sup>2</sup> /AWG22
Wire O.D. (Including insulator)	2.55 mm
Min. bending radius (Fixed)	78 mm

# For EtherCAT® For PROFINET For EtherNet/IP™

EX9-AC 020 EN-PSRJ (Plug/RJ-45 connector)

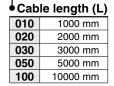

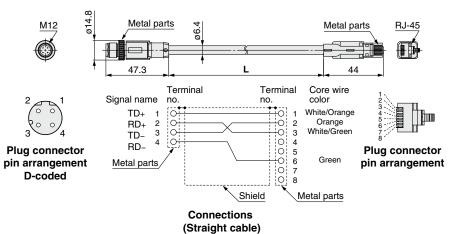

Item Specifications


Cable O.D. Ø 6.4 mm

Conductor nominal cross section 0.14 mm²/AWG26

Wire O.D. (Including insulator) 0.98 mm

Min. bending radius (Fixed) 26 mm

## PCA-1446566 (Plug)

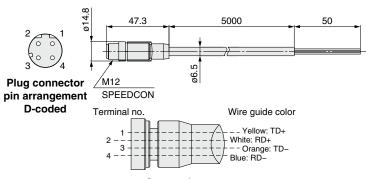

Connections


Item	Specifications
Cable O.D.	ø6.5 mm
Conductor nominal cross section	AWG22
Wire O.D. (Including insulator)	1.55 mm
Min. bending radius (Fixed)	45.5 mm



Min. bending radius (Fixed)

19.5 mm

# Communication Cable

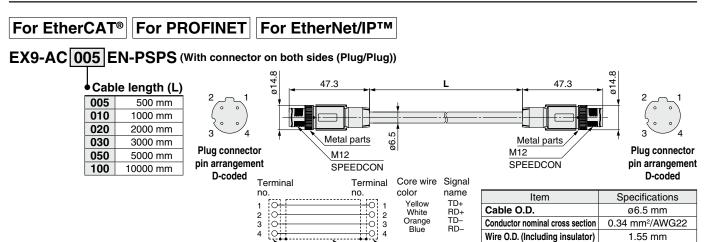


Shield

Metal parts

Connections (Straight cable)

Metal parts

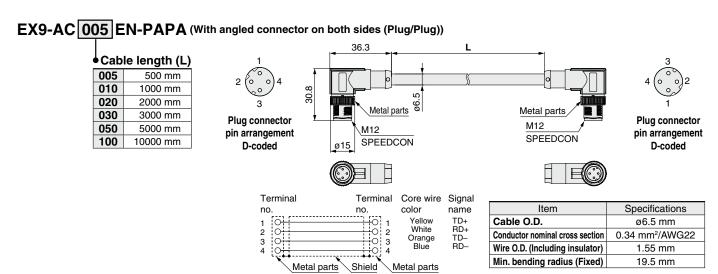


Connections (Straight cable)

# Prield-wireable Communication Connector

# Plug


For CC-Link | For DeviceNet® PCA-1075526 PCA-1075528



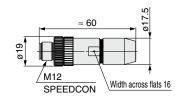

For PROFIBUS DP PCA-1075530



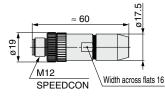


**Applicable Cable** Item Specifications Cable O.D. 4.0 to 8.0 mm 0.14 to 0.75 mm<sup>2</sup>/AWG26 to 18 Wire gauge (Solid cable/Flexible cable) (Stranded wire 0.08 to 0.5 mm<sup>2</sup>/AWG28 to 20 cross section) (With ferrule)

For EtherCAT® For PROFINET For EtherNet/IP™

PCA-1446553





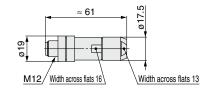

# Applicable Cable


Item	Specifications
Cable O.D.	4.0 to 8.0 mm
Wire gauge (Stranded wire cross section)	0.14 to 0.34 mm <sup>2</sup> /AWG26 to 22

\* The table above shows the specifications for the applicable cable. Adaptation for the connector may vary on account of the conductor construction of the electric wire.

#### **Socket**


For CC-Link | For DeviceNet® PCA-1075527 PCA-1075529



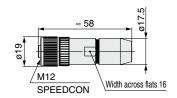

For PROFIBUS DP PCA-1075531



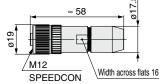

**Applicable Cable** 


Item	Specifications
Cable O.D.	4.0 to 8.0 mm
Wire gauge (Stranded wire cross section)	0.14 to 0.75 mm²/AWG26 to 18 (Solid cable/Flexible cable) 0.08 to 0.5 mm²/AWG28 to 20 (With ferrule)

# 1/O Cable with Connector, I/O Connector


For details, refer to the Web Catalog.

Name	Use	Part no.	Description
Cable with	For sensor	PCA-1557769	Cable with M12 connector (4 pins/3 m)
connector		PCA-1557772	Cable with M8 connector (3 pins/3 m)
		PCA-1557730	Field-wireable connector (M8/3 pins/Plug/Piercecon® connection)
Field-wireable connector	For sensor	PCA-1557743	Field-wireable connector
	PCA-1557756	(M12/4 pins/Plug/QUICKON-ONE connection/SPEEDCON)	
Y connector For sensor	For consor	PCA-1557785	Y connector (2 x M12 (5 pins)-M12 (5 pins)/SPEEDCON)
	Por sensor	PCA-1557798	Y connector (2 x M8 (3 pins)-M12 (4 pins)/SPEEDCON)

\* When using the Y connector, connect it to the connector on the I/O unit through the sensor cable (PCA-1557769) with the M12 connector.

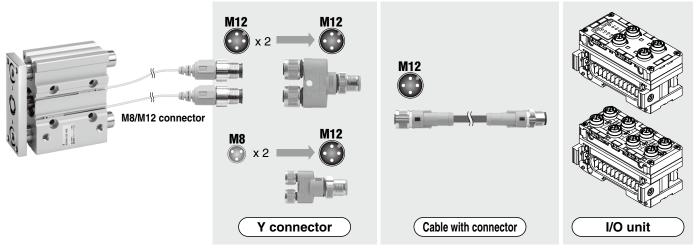

# For IO-Link Unit

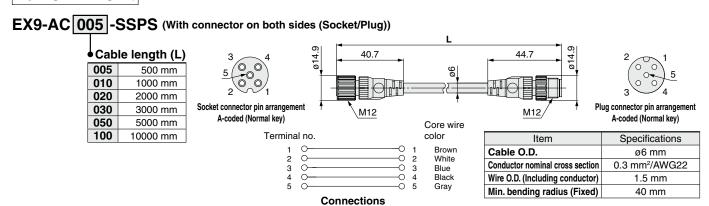

# (B) I/O Cable with Connector, I/O Connector

#### Port Class B EX260-SIL SI Unit and Port Class A IO-Link Master Connection Example Port class A Port class B SI unit **EX260-SIL** IO-Link Port class A compliant EX600-LAB1 A special wiring Y branch connector is Connect to available. the master Connect to the SI unit **IO**-Link Connect to Used when connecting to a port class A power supply type IO-Link master, which is often used **Branch Connector** when connecting to an IO-Link sensor Power supply

#### **Y Branch Connector for IO-Link** This connector is used to supply power to the valve manifold 50 by branching the IO-Link communication cable in cases 14.12 where a port class A IO-Link master is used. 10.87 EX9-ACY02-S 20.5 35 ر من<sup>2</sup> Socket connector pin arrangement M12 M12 1 M12 5-pin plug A-coded (Normal key) 10 Plug connector 2 0 Solenoid valve power supply cable side pin pin arrangement M12 5-pin socket 4 O-5 O A-coded (Normal key) arrangement when using a branch connector 0 2 0 3 Unused 2M12 5-pin plug 0 4 2 SV24V +24 V for solenoid valve

3

4

SV0V

Unused


Unused

0 V for solenoid valve

1 O 2 O 3 O 4 O

# **1**O-Link Device Tool License Key

**USB** donale **EX9-ZSW-LDT1** 

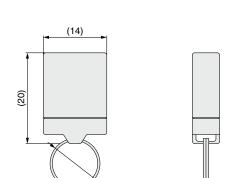



# **EX600** Series **Made to Order**


Please contact SMC for detailed specifications and lead times.





# SI Unit

Prepare the SI unit, each type of unit, and the manifold valve (without SI unit) separately, and combine them before use.

- 1) Ethernet POWERLINK compatible EX600-SPL1-X26
  - Dimensions are the same as those of the EX600-SEN3.
  - Dimensions are the same as those of the EX600-SE
- ② Modbus/TCP compatible EX600-SMT1-X25
  - Dimensions are the same as those of the EX600-SEN3.

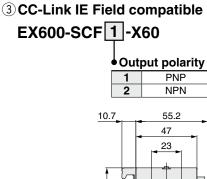

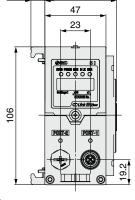

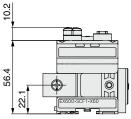

# **Communication Cable**

With connector on one side (Socket)

Cable length: 10000 mm

For CC-Link For DeviceNet®

EX9-AC100 MJ -X12

Applicable protocol


MJ CC-Link
DN DeviceNet®



Socket connector pin arrangement A-coded (Normal key)

# For CC-Link

# **Dimensions**

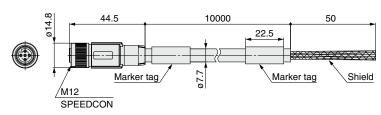

#### Connections


Terminal no.	Core wire color: Signal name (CC-Link)		
1	Shield: SLD		
2	White: DB		
3	Yellow: DG		
4	Blue: DA		

*1	Number of holes: 5, Total number of
	pins: 4

Item		Specifications
Cable O.D.		ø7.7 mm
Conductor nominal	Data pair	0.5 mm <sup>2</sup> /AWG20
cross section	Drain	0.34 mm <sup>2</sup> /AWG22
Wire O.D. (Including insulator)		2.55 mm
Min. bending radius (Fixed)		77 mm

# For DeviceNet®

# **Dimensions**

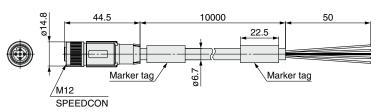



Socket connector pin arrangement A-coded (Normal key)

#### Connections

Terminal no.	Core wire color: Signal name (DeviceNet®
1	Shield: DRAIN
2	Red: V+
3	Black: V-
4	White: CAN H
5	Blue: CAN L

Item		Specifications
Cable O.D.		ø6.7 mm
Conductor nominal	Power pair	0.34 mm <sup>2</sup> /AWG22
cross section	Data pair	0.25 mm <sup>2</sup> /AWG24
Wire O.D.	Power pair	1.4 mm
(Including insulator)	Data pair	2.05 mm
Min. bending radius (Fixed)		67 mm



# **EX600** Series Specific Product Precautions

Be sure to read this before handling the products. Refer to the back cover for safety instructions. For fieldbus system precautions, refer to the "Operation Manual" on the SMC website: https://www.smcworld.com

## Mounting

# 

- 1. When handling and assembling units, do not touch the sharp metal parts of the connector or plug.
- 2. When connecting six stations or more, be sure to use the intermediate reinforcing brace (EX600-ZMB1 or EX600-ZMB2).

## **Operating Environment**

# **∧** Caution

1. Select the proper type of enclosure according to the operating environment.

IP65/67 is achieved when the following conditions are met.

- Provide appropriate wiring between all units using electrical wiring cables, communication connectors and cables with M12 connectors.
- 2) Appropriately mount each unit and valve manifold.
- 3) Be sure to mount a seal cap on any unused connectors.

If using in an environment that is exposed to water splashes, please take measures such as using a cover.

When the enclosure is IP40, do not use in an operating environment or atmosphere where it may come in contact with corrosive gas, chemical agents, seawater, water, or water vapor. When connected to the EX600-DDD or EX600-DDDF, manifold enclosure is IP40.

Also, the handheld terminal conforms to IP20, so prevent foreign matter from entering inside, and water, solvent or oil from coming in direct contact with it.

## **Adjustment / Operation**

# **⚠** Warning

<Handheld Terminal>

1. Do not apply pressure to the LCD.

There is a possibility of the crack of LCD and injuring.

The forced input/output function is used to change the signal status forcibly. When operating this function, be sure to check the safety of the surroundings and installation.

This may cause injuries or equipment damage.

 Incorrect setting of parameters can cause a malfunction. Be sure to check the settings before use.

This may cause injuries or equipment damage.

# **⚠** Caution

<Handheld Terminal>

1. Do not press the setting buttons with a sharp pointed object.


This may cause damage or equipment failure.

Do not apply excessive load and impact to the setting buttons.

This may cause damage, equipment failure or malfunction.

When the order does not include the SI unit, a valve plate which connects the manifold and SI unit, is not mounted. Use attached valve holding screws and mount the valve plate.

(Tightening torque: 0.6 to 0.7 N·m)

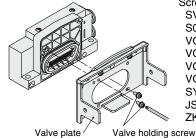

Screw tightened parts
SV series: 2 places
S0700 series: 2 places
VQC1000 series: 2 places
VQC2000 series: 3 places
VQC4000 series: 4 places
VQC5000 series: 4 places
SY series: 2 places
JSY series: 2 places
ZK2\(\text{L}\) A series: 2 places

■Trademark



# **⚠** Safety Instructions

These safety instructions are intended to prevent hazardous situations and/or equipment damage. These instructions indicate the level of potential hazard with the labels of "Caution," "Warning" or "Danger." They are all important notes for safety and must be followed in addition to International Standards (ISO/IEC)\*1), and other safety regulations.

Caution: Caution indicates a hazard with a low level of risk which, If not avoided, could result in minor or moderate injury.

⚠ Warning: Warning indicates a hazard with a medium level of risk which, if not avoided, could result in death or serious injury.

⚠ Danger: Danger indicates a nazaru wiun a nigin level on the first avoided, will result in death or serious injury. **Danger** indicates a hazard with a high level of risk which, \*1) ISO 4414: Pneumatic fluid power - General rules relating to systems.

ISO 4413: Hydraulic fluid power – General rules relating to systems. IEC 60204-1: Safety of machinery - Electrical equipment of machines.

(Part 1: General requirements)

ISO 10218-1: Manipulating industrial robots - Safety.

# **⚠Warning**

1. The compatibility of the product is the responsibility of the person who designs the equipment or decides its specifications.

Since the product specified here is used under various operating conditions, its compatibility with specific equipment must be decided by the person who designs the equipment or decides its specifications based on necessary analysis and test results. The expected performance and safety assurance of the equipment will be the responsibility of the person who has determined its compatibility with the product. This person should also continuously review all specifications of the product referring to its latest catalog information, with a view to giving due consideration to any possibility of equipment failure when configuring the equipment.

2. Only personnel with appropriate training should operate machinery and equipment.

The product specified here may become unsafe if handled incorrectly. The assembly, operation and maintenance of machines or equipment including our products must be performed by an operator who is appropriately trained and experienced.

3. Do not service or attempt to remove product and machinery/ equipment until safety is confirmed.

- 1. The inspection and maintenance of machinery/equipment should only be performed after measures to prevent falling or runaway of the driven objects have been confirmed.
- 2. When the product is to be removed, confirm that the safety measures as mentioned above are implemented and the power from any appropriate source is cut, and read and understand the specific product precautions of all relevant products carefully.
- 3. Before machinery/equipment is restarted, take measures to prevent unexpected operation and malfunction.

4. Contact SMC beforehand and take special consideration of safety measures if the product is to be used in any of the following conditions.

- 1. Conditions and environments outside of the given specifications, or use outdoors or in a place exposed to direct sunlight.
- 2. Installation on equipment in conjunction with atomic energy, railways, air navigation, space, shipping, vehicles, military, medical treatment, combustion and recreation, or equipment in contact with food and beverages, emergency stop circuits, clutch and brake circuits in press applications, safety equipment or other applications unsuitable for the standard specifications described in the product catalog.
- 3. An application which could have negative effects on people, property, or animals requiring special safety analysis.
- 4. Use in an interlock circuit, which requires the provision of double interlock for possible failure by using a mechanical protective function, and periodical checks to confirm proper operation.

# **⚠** Caution

1. The product is provided for use in manufacturing industries.

The product herein described is basically provided for peaceful use in manufacturing industries.

If considering using the product in other industries, consult SMC beforehand and exchange specifications or a contract if necessary. If anything is unclear, contact your nearest sales branch.

# Limited warranty and Disclaimer/ **Compliance Requirements**

The product used is subject to the following "Limited warranty and Disclaimer" and "Compliance Requirements".

Read and accept them before using the product.

# **Limited warranty and Disclaimer**

- 1. The warranty period of the product is 1 year in service or 1.5 years after the product is delivered, whichever is first.\*2)
  - Also, the product may have specified durability, running distance or replacement parts. Please consult your nearest sales branch.
- 2. For any failure or damage reported within the warranty period which is clearly our responsibility, a replacement product or necessary parts will be provided. This limited warranty applies only to our product independently, and not to any other damage incurred due to the failure of the product.
- 3. Prior to using SMC products, please read and understand the warranty terms and disclaimers noted in the specified catalog for the particular products.
  - 2) Vacuum pads are excluded from this 1 year warranty.

A vacuum pad is a consumable part, so it is warranted for a year after it is delivered.

Also, even within the warranty period, the wear of a product due to the use of the vacuum pad or failure due to the deterioration of rubber material are not covered by the limited warranty.

#### Compliance Requirements

- 1. The use of SMC products with production equipment for the manufacture of weapons of mass destruction (WMD) or any other weapon is strictly prohibited.
- 2. The exports of SMC products or technology from one country to another are governed by the relevant security laws and regulations of the countries involved in the transaction. Prior to the shipment of a SMC product to another country, assure that all local rules governing that export are known and followed.

# **⚠** Caution

#### SMC products are not intended for use as instruments for legal metrology.

Measurement instruments that SMC manufactures or sells have not been qualified by type approval tests relevant to the metrology (measurement) laws of each country. Therefore, SMC products cannot be used for business or certification ordained by the metrology (measurement) laws of each country.

#### **Revision History**

RS

- Edition B \* The EtherNet/IP™ communication protocol has been added.
  - An analog output unit and an input/output unit have been added.
  - \* A D-sub connector and a spring type terminal block have been added. \* SY3000/5000 series valves have been added as applicable solenoid valves.
    - OW
  - Number of pages has been decreased from 64 to 60. on C \* The EtherCAT® communication protocol has been added.
- Edition D \* The PROFINET communication protocol has been added. Edition E ∗ A dual port EtherNet/IP™ product has been added.

- SY7000 series valves have been added as applicable solenoid valves.
- Edition F \* The IO-Link unit has been added. \* JSY series valves have been added as connectable valves.
  - \* The "How to Order" and "Dimensions" pages of the connectable valves have been deleted.
  - An end plate (D side) and M12 (4/5 pins) A-coded power supply connectors have been added.
  - Number of pages has been decreased from 68 to 48

Edition G \* An IO-Link unit compatible SI unit has been added (PROFINET).

A Safety Instructions Be sure to read the "Handling Precautions for SMC Products" (M-E03-3) and "Operation Manual" before use.

# **SMC** Corporation

Akihabara UDX 15F.

4-14-1, Sotokanda, Chiyoda-ku, Tokyo 101-0021, JAPAN Phone: 03-5207-8249 Fax: 03-5298-5362

https://www.smcworld.com